User Operating Manual
M10

Contents

Contents ..... - 1 -
1 Introduction 1
1.1 Acknowledgements 1
1.2 Precautions 1
1.3 Safety Notice 2
1.4 Abbreviation/term 3
2 Brief introduction for Tablet product 3
2.1 Diagram for Tablet complete machine 3
2.2 Introduction to accessories of Tablet 5
2.3 Use and preparation of Tablet 5
2.4 Tablet state and notice 6
3 Quick start 7
3.1 Key function 7
3.2 Starting up and turning off 7
3.3 Unlocking and closing of the screen 7
3.4 Use of touch screen 8
3.5 Homepage interface 9
3.6 Access to application program 12
3.7 USB connection 12
3.8 Memory card 13
3.9 Character input 14
3.10 Application Technique 15
4 Connection Establishment 17
4.1 WIFI Connection 17
5 Communication 18
5.1 E-mail 18
6 Multi-media 20
6.1 Supported File Format 20
6.2 Music 20
6.3 Camera 22
6.4 HDMI 23
6.5 Media Browser 23
7 Internet ..... **Error! Bookmark not defined.**
7.1 Browser ..... **Error! Bookmark not defined.**
8 Other Applications 25
8.1 Alarm clock 25
8.2 Calculator 26
8.3 File Management 27
9 Basic Settings 28
9.1 Sound and Display 28
9.2 Security and Location 29

9.3 Storage 30
9.4 Date and Time.....30
9.5 Language and Input Method 31
9.6 About Tablet PC 31
10 Installation and Management of Program ..... **Error! Bookmark not defined.**
10.1 Installation ..... **Error! Bookmark not defined.**
10.2 Management and Uninstall ..... **Error! Bookmark not defined.**
10.3 Update Approach ..... **Error! Bookmark not defined.**
11 System Upgrade 32
11.1 System Upgrade Preparation.....32
11.2 Restore Factory Settings 32
11.3 System Upgrade..... **Error! Bookmark not defined.**
12 Troubleshooting ..... **Error! Bookmark not defined.**
Appendix……..36

1 Introduction

1.1 Acknowledgements

Many thanks for you choosing this product. The product belongs to Tablet (Mobile Internet Device), which is a kind of mobile internet device, delicate, small and exquisite, and also portable. It is also equipped with a piece of touch LCD of high definition, which can be used to watch vedios and pictures of high definition. It supports installation of multiple application programs on office and entertainment. The fantastic operation interface will give you a brand-new user experience.

This manual systematically introduces diversified functions, using skills and matters needing attention of this Tablet, please read this manual carefully before using it.

1.2 Precautions

Maintenance and Curing

- Please keep the device dry. Please don't let the device, battery and charger contact water and water vapor or operate device or charger with wet hand, so as not to result in short circuit of the device, breakdown caused by corrosion and electric shock of personnel.

- Please don't let the device, battery and charger receive strong impact or shock, for fear of bringing about breakdown, catching fire or explosion of device, battery and charger.

- Please don't place the device, battery and charger in regions with too high or too low temperature, otherwise, breakdown, catching fire or explosion of device, battery and charger may be led to.

- Please don't strike, throw or pinprick the Tablet, and falling, extrusion and bending of Tablet must be avoided.

- Please don't dismantle the device and its accessories on yourself, otherwise, the device and its accessories will be out of warranty scope by our company.

1.3 Safety Notice

Before using Tablet, please read information in this section, and make your children learn about the information. About more detailed information, please refer to safety instructions and matters needing attention.

- Please don't use Tablet when you are driving, for fear of hindering safe driving.
- In medical places, please observe relevant stipulations and regulations. And in regions near the medical devices, please shut down Tablet.
- Please shut down Tablet or enable the airplane mode when boarding, so that the wireless signals will not interfere control signal of the airplane.
- Please shut down Tablet neighboring electronic equipments with high accuracy, otherwise, breakdown of electronic equipments may be brought about.
- Please don't dismantle the Tablet and its accessories on yourself, and only the authorized agency can maintain this Tablet.
- Please keep Tablet far away from magnetic equipment, radiation from Tablet will erase information stored on the magnetic equipment.
- Please don't use Tablet in places with high temperature and inflammable gas (such as nearby gas station).
- Please put Tablet and its accessories in places beyond children's touch, please don't let children use Tablet without supervision.
- During using of this Tablet, please observe related laws and regulations, respect privacy and legitimate rights of others.
- Please strictly abide by relevant explanations in this manual when using USB data line, otherwise, Tablet or personal computer may be damaged.
- Please don't use the Tablet in humid environment such as bathroom, etc., and the Tablet being soaked or rinsed by liquid must be avoided.

1.4 Abbreviation/term

Abbreviation/term	Full name	Explanations
Tablet	Mobile Internet Device	Mobile internet terminal
WIFI	Wireless Fidelity	Wireless Local Area Network based on IEEE 802.11b standard
TF	TransFlash	Alternate name Micro SD, superminiature storage card
HDMI	High Definition Multimedia Interface	High definition multi-media interface
GPS	Global Positioning System	Navigation Satellite Timing And Ranging Global Position System
HIFI	Bluetooth APTX	Bluetooth 4.0+APTX=HIFI
BT	Blue tooth	

2 Brief introduction for Tablet product

2.1 Diagram for Tabled complete machine

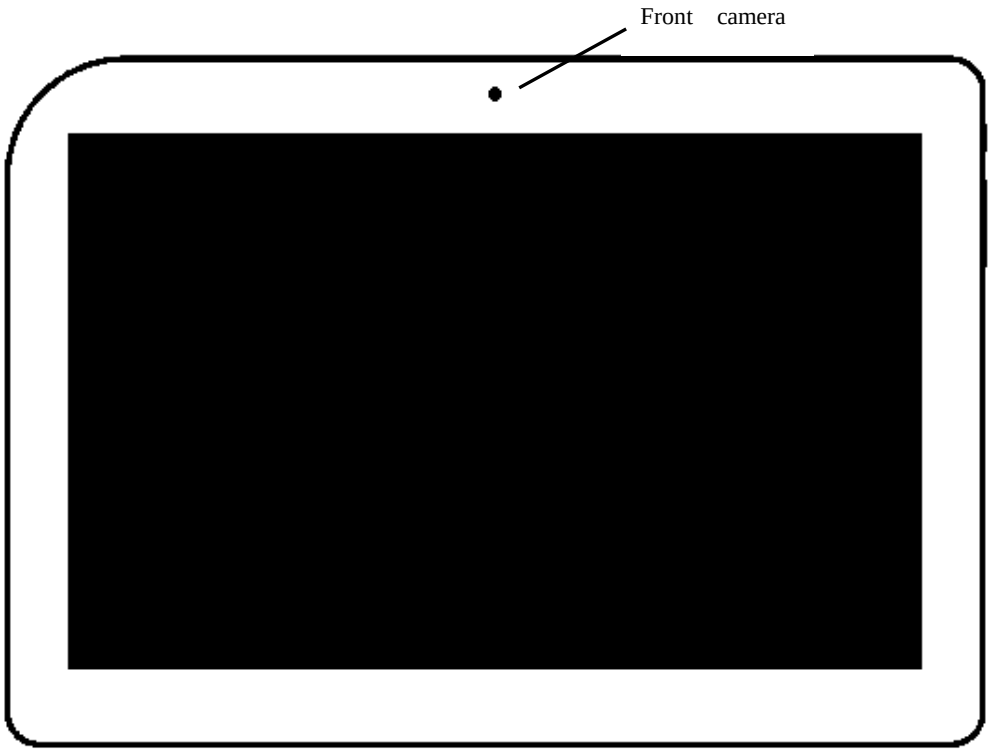

Figure 2-1

M10 side view;

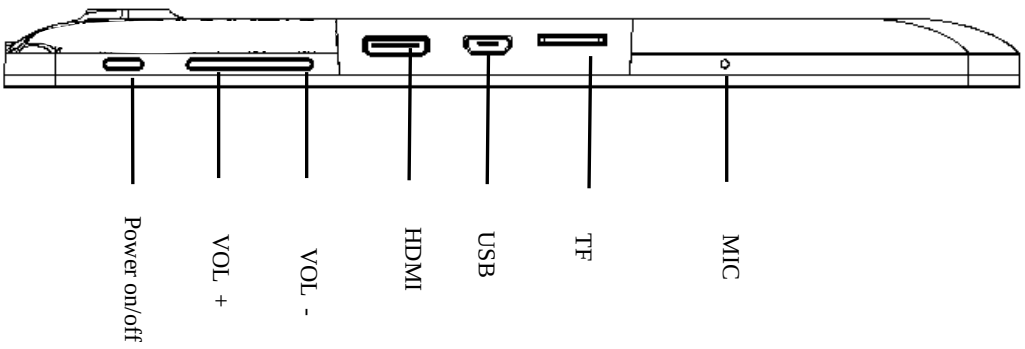

Figure 2-2

M10 underside view

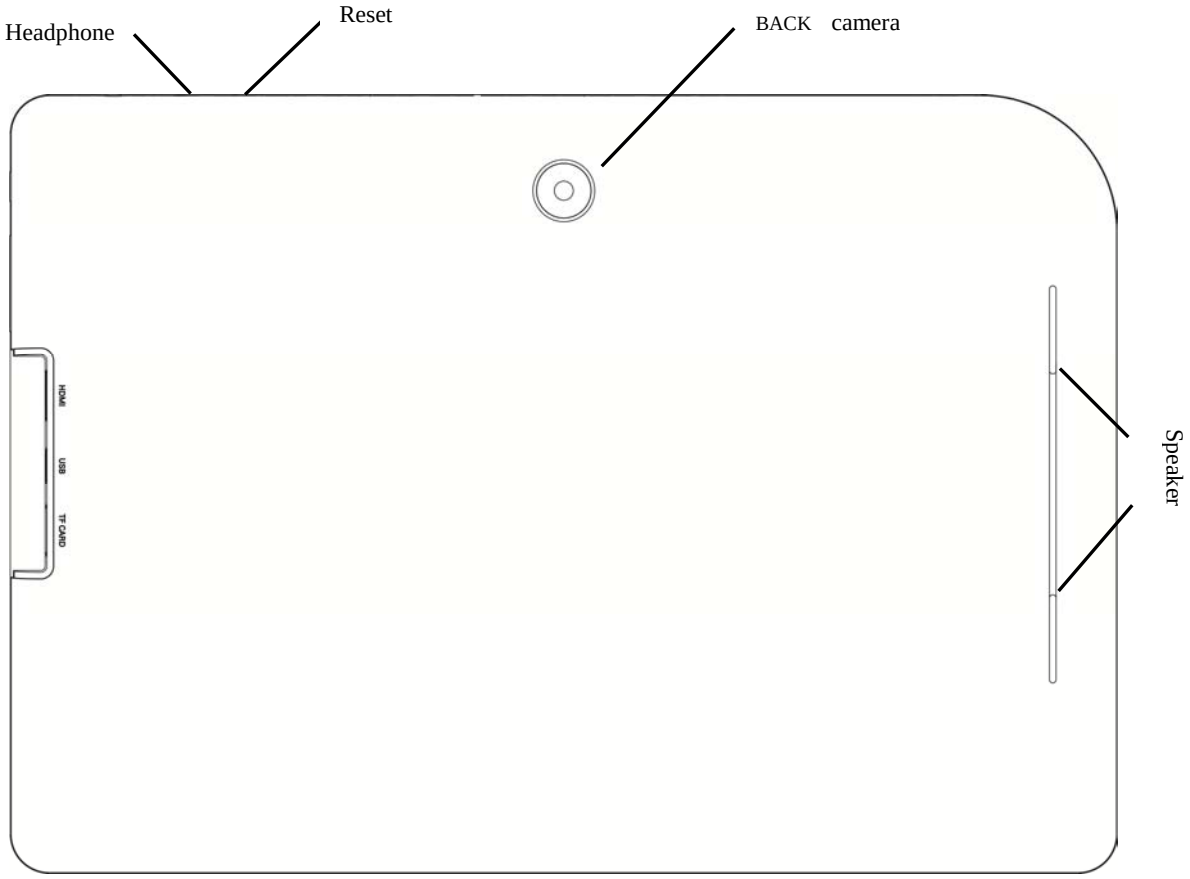

Figure 2-3

2.2 Introduction to accessories of Tablet

Packing list

The following articles are included in your packing box of Tablet:

- Complete machine of Tablet
- Power adaptor
- Micro USB cable
- OSG

2.3 Use and preparation of Tablet

Battery charging

Before using Tablet for the first time, the battery must be charged firstly.

Use power adaptor to charge Tablet.

In order to guarantee full battery, please charge for over 4 hours.

2.4 Tablet state and notice

Iconograph for notification

When a prompt message shows on your notice panel, please click the column box and slide on the screen with your finger to open the notice list. Click options needing to check to see detailed information. Then you may click the message box and slide upwards to close the message window. The following are iconography for icons in status bar:

	Mail notice		Mute
	Gmail notice		Without SD card
	Computer and Tablet are connected through USB line		WIFI service is connected, netwrk is available
	Events waiting to be done		Downloading finished
	Alarm clock opening		General notice (for example: synchronous error)
	Playing music		
	In data synchronism		Insufficient space of SD card
	Airplane mode		More
	Charging		Battery symbol

Notice panel

Notice iconograph will show when receiving new message, setting the alarm clock and hodometer as well as inserting SD card, you can open the notice panel to check detailed information

Unlock notice panel

When new notice iconograph shows on the notice column, please press the notice column with your finger, then slide downwards to unlock the notice panel.

3 Quick start

3.1 Key function

Descriptions for key function:

Power key	● Press this key for a long time to start up ● Under starting up state, press this key for a long time to pop up shutdown option ● Under starting up state, press this key to close the screen ● Under starting up state or when breakdown appears, press the power key for 7 seconds to make your device enter into shutdown state

3.2 Starting up and turning off

Starting up

Press the power key for 3 seconds, you can see the starting up picture. After the system is started, the machine enters into screen lock state, please unlock according to direction indication of sliding icon on the interface.

Turning off

1. After pressing the **power key** for a long time, the shutdown option will pop up.
2. Click **OK**.

3.3 Unlocking and closing of the screen

The machine will close automatically when the screen is left unused

1. After the screen being left unused for a period of time, the machine will close screen automatically, so as to save battery power.

2. Under screen on state, press the power key, the screen will close immediatey.

Prompt: if you want to inquire how to set turn-off time of screen, please refer to chapter 9.1.

Turninng on under screen off state

If the screen is in off state, you can unlock the screen by pressing power key for a short time or the return key for a long time. After opening, the screen will enter lock state, press “lock” icon by your finger and slide rightwards, the screen will be unlocked, press “lock” icon and slide leftwards, you can enter the camera function.

3.4 Use of touch screen

Figure 3-1

Operating mode in Tablet

There are various ways to skim the main screen, menu and application program, etc. on your Tablet.

Click to select

When you want to use screen keyboard entry, and you want to select items on the homepage interface such as aplication program, you only use your finger to click.

Press on

If you want to unlock the available option of a certain item (such as textbox or interlinkage in the webpage), or move shortcut on the homepage interface and menu of main program, only press the item.

Slide quickly or slide

Quick sliding or sliding means doing rapid vertical or horizontal drag movement by using finger on the picture.

Drag

Before you starting to drag, you must press it with your finger and impose a certain pressure, and don't loosen the finger before draging to the wanted position.

Rotate

Aiming at most of pictures, only turn the Tablet in side direction, the screen direction can be shifted from cross direction to vertical direction. For example, when you input characters, watch cinema, etc.

3.5 Homepage interface

All application programs on the machine will be displayed on the main menu screen. You may use application program, shortcut and user-defined mode to set wallpape of your homepage interface.

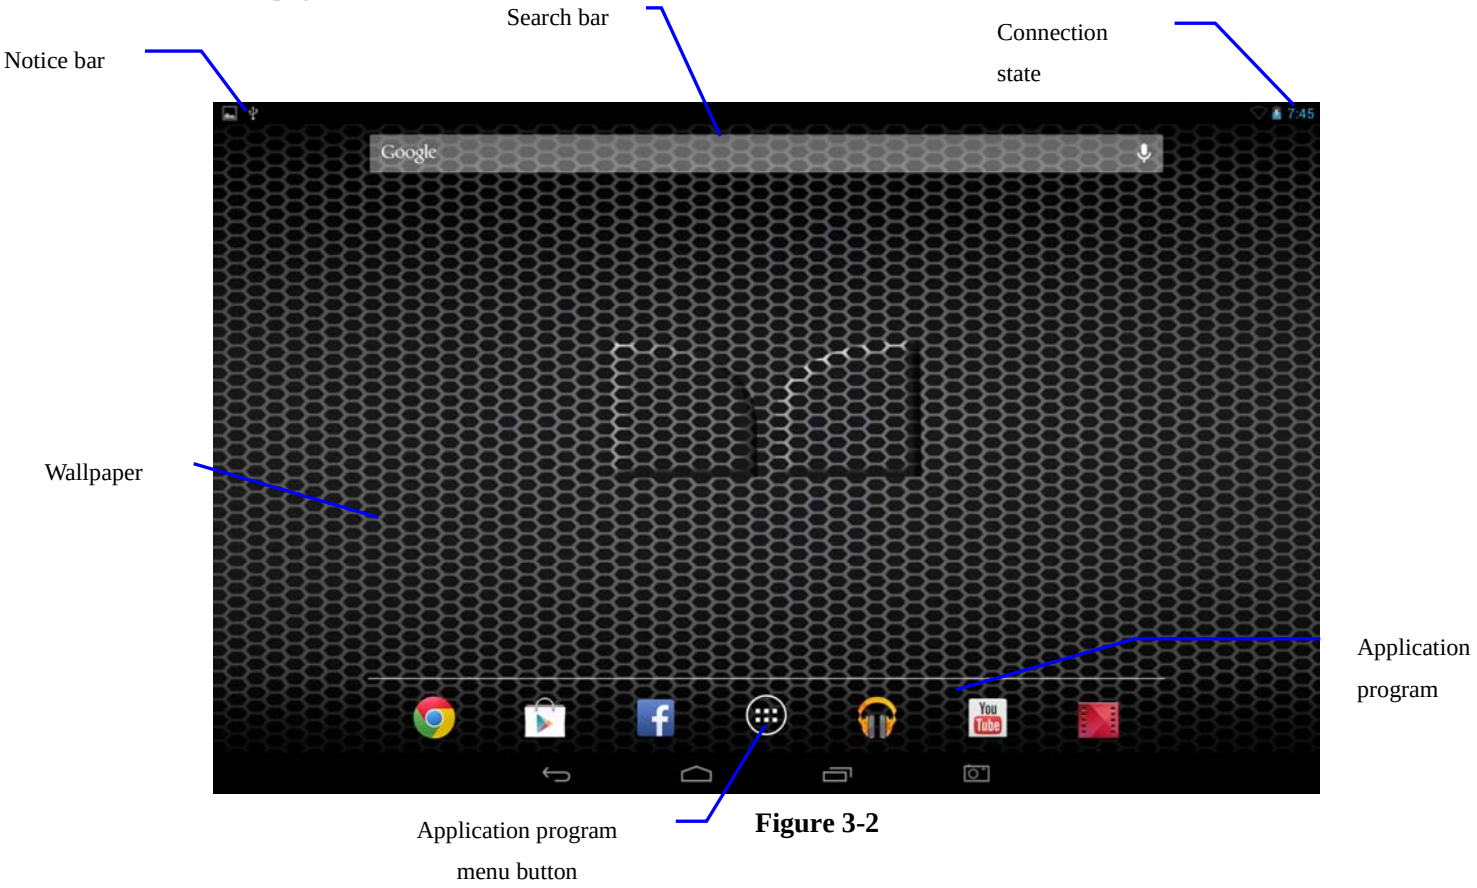

Figure 3-2

Skill: in any application programs, you can press homepage key to return homepage interface.

Outstretched homepage interface

Homepage interface may extend beyond the width of screen, so as to provide more space, so that you can place the newly increased shortcut, widget, etc. Press blank of homepage interface, then slide around quickly in vertical direction by finger to jump to left side or right side outside the screen. There are more than 2 stretched pictures on the homepage interface.

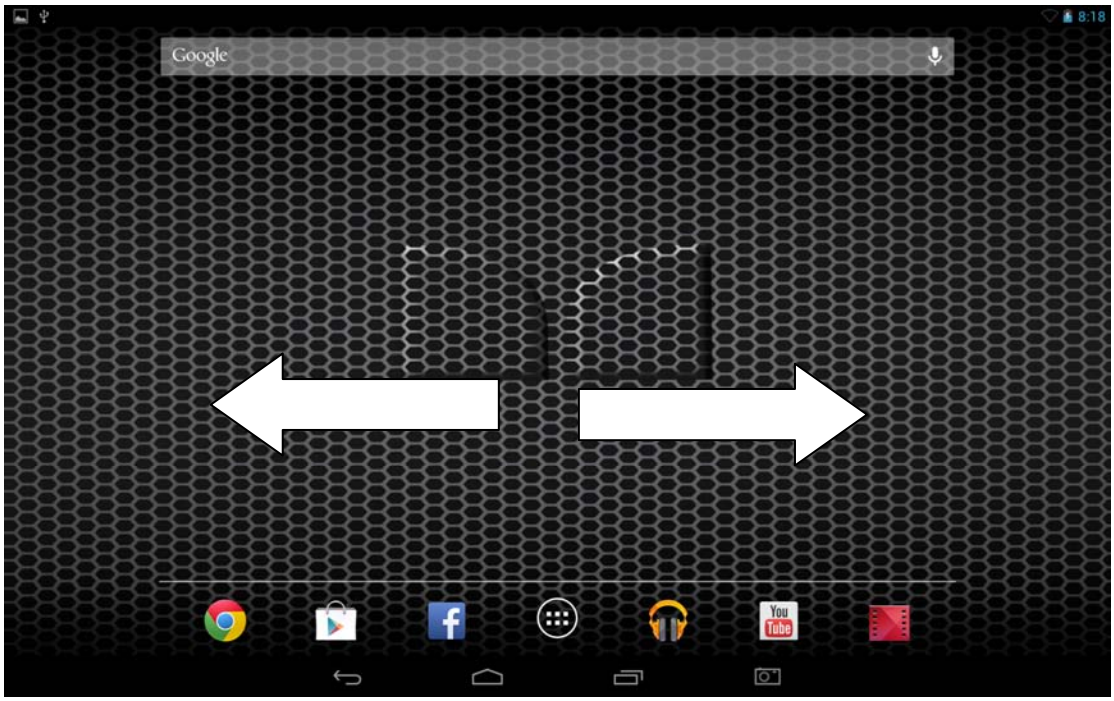

Figure 3-3

Custom homepage interface

Change desktop wallpaper

1. Press blank region on the homepage interface to pop up the menu.
2. When the menu popping up, choose source of homepage interface wallpaper you want to change.
3. After clicking source of wallpaper, click picture you want, and then select “setting wallpaper”.

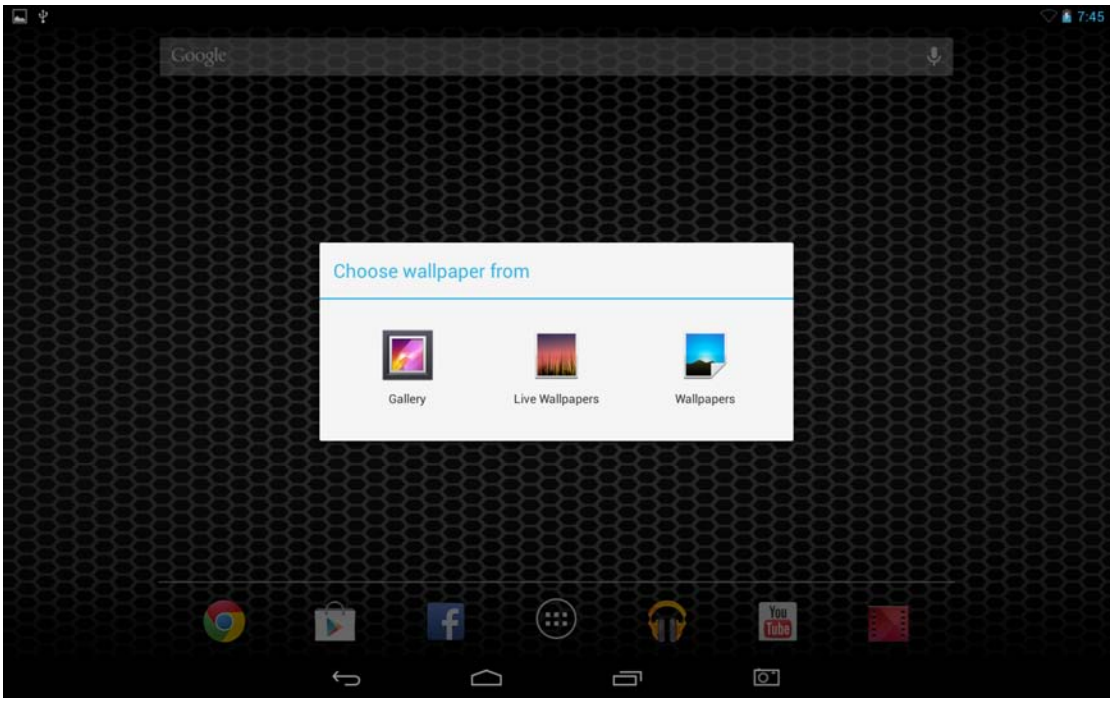

Figure 3-4

Add widgets

1. Please click application program menu. As shown in Figure 3-5.
2. After entering application program menu, click “WIDGETS” button on the top left of interface.
3. After pressing the desktop widgets you want, the system will return back main interface, put the selected widget to the wanted place, then loose.

Figure 3-5

3.6 Access to application program

How to visit aplication program of Tablet:

1. Please click application program menu. As shown in Figure 3-5.
2. Select the application program you want to visit.
3. If you want to exit the program interface, press the return key to the last interface, or press the homepage key to return homepage interface directly.

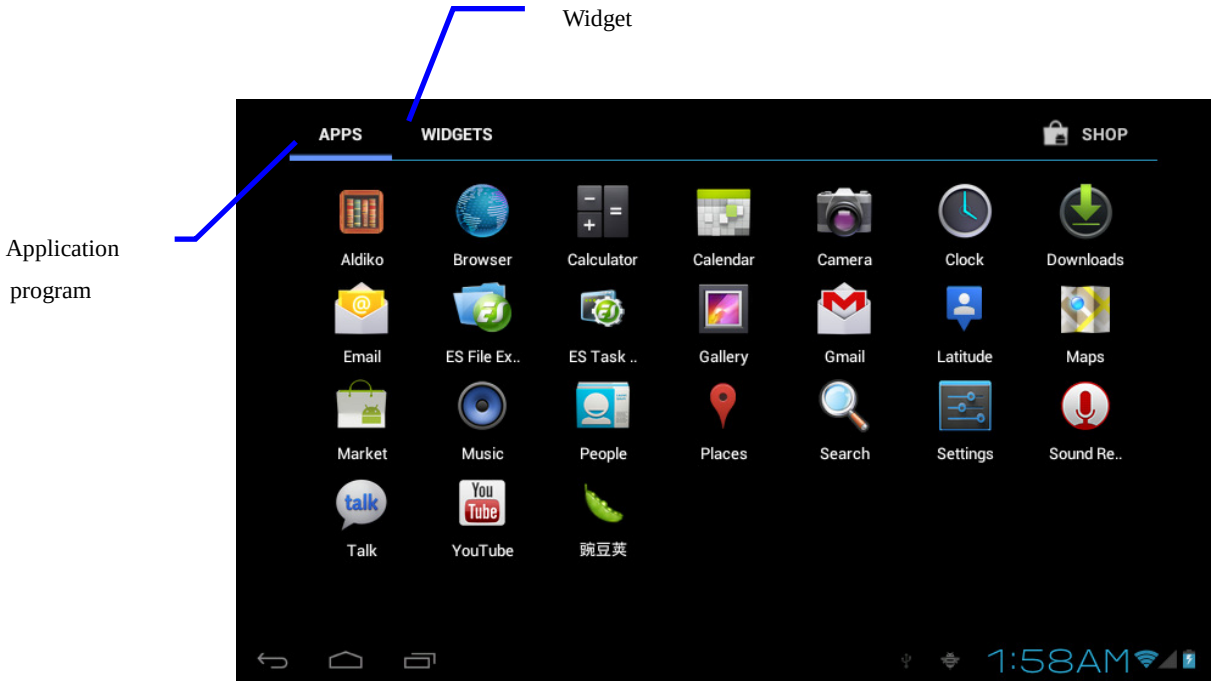

Figure 3-6

3.7 USB connection

Storage setting of Tablet

Before transmitting document, you must set storage mode for your Tablet firstly:

1. Connect Tablet with computer by using USB transmission line. Notice bar will show the notice prompt.
2. Click status bar, options of status bar show.
3. Among options of status, click to choose **USB connected**, then click to **open USB storage device.**
4. At this time, USB has already been connected.

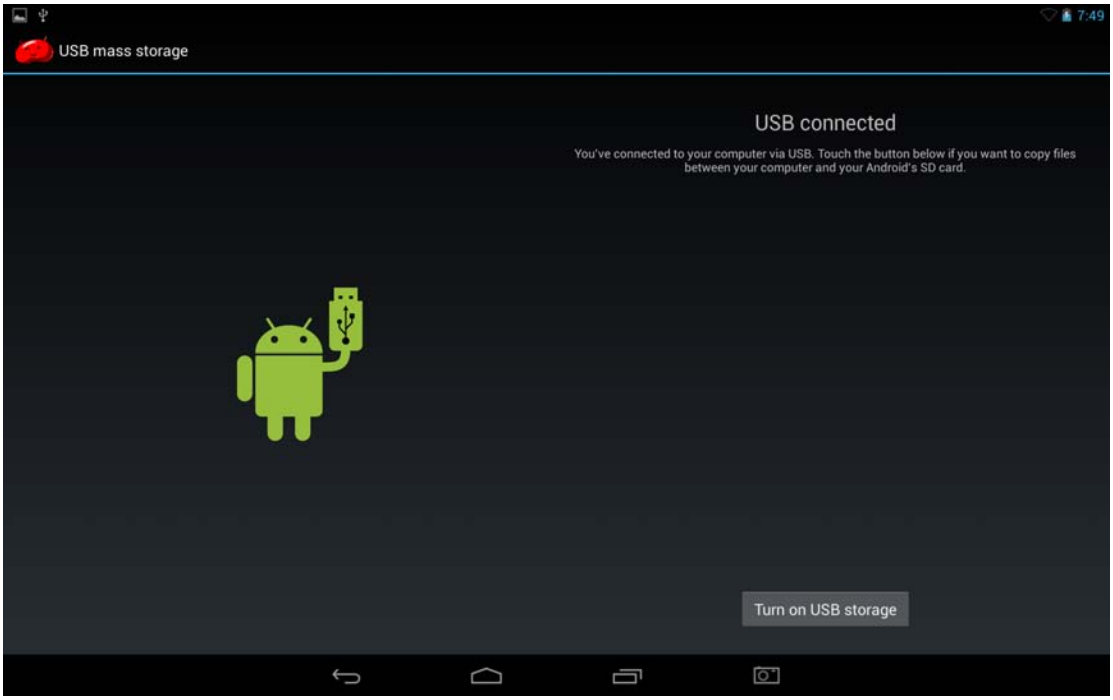

Figure 3-7

Copy the document to storage card

1. Connect Tablet and computer together with USB cable.
2. After **setting** according to **storage of Tablet**, connect with computer successfully.
3. Open your computer, in **my computer**, examine content in “removable disk (x)”.
4. Find the document you want to copy, copy it to “removable disk(x)”.
5. After completion of copying, click “safely remove hardware” in taskbar of your computer to unload.

Content of Tablet storage device

1. NAND FLASH storage device, space for Tablet to store document itself.
2. TF removable memory card.
3. The two above-mentioned storage devices both can be visited through connection with your computer with USB.

Attention: when your Tablet is connected with USB cable, if you start up USB storage device, you will cannot visit the memory card through Tablet, if you want to visit memory card in Tablet, only disconnect USB cable.

3.8 Memory card

Copy the document to storage card

You can transmit document between Tablet and computer, such as music and picture, etc. If you want to see documents in Tablet, only click the file browser to look through content in

the SD card.

Delete documents on the storage card of Tablet

1. Find document you want to delete.
2. Press the document name you need to delete, a file menu will pop up.
3. Click **delete**.

Removing storage card when the Tablet is in starting up state

If need to remove storage card under starting up state of Tablet, you must unload the storage card firstly, for fear of failure or damage of the storage card.

1. In the homepage interface, press the mennu key, then click **setting**.
2. Pull the setting menu downwards, then click **storage**.
3. Click **SD card setting**.
4. Click to **uninstall the SD card**.

3.9 Character input

Use screen keyboard

When you start the program or select text edit box needing to input characters or numbers, screen keyboard will show. The following input methods are provided for the keyboard to select.

1. Android keyboard
2. Input method of a third party (user can install them by himself)

Select the input method you need to use

According to presetting, Tablet will display Android keyboard when you want to inut characters.

1. Press menu key in homepage interface, then click **setting**.
2. **Click language** and **keyboard**.
3. All of the input methods already installed on your Tablet will be listed in the text setting region.
4. Select the input method you want..

Use and switch input method

1. In the character input interface, click keyboard icon under the status bar, until popping up of editing text menu.
2. Select input method you need.

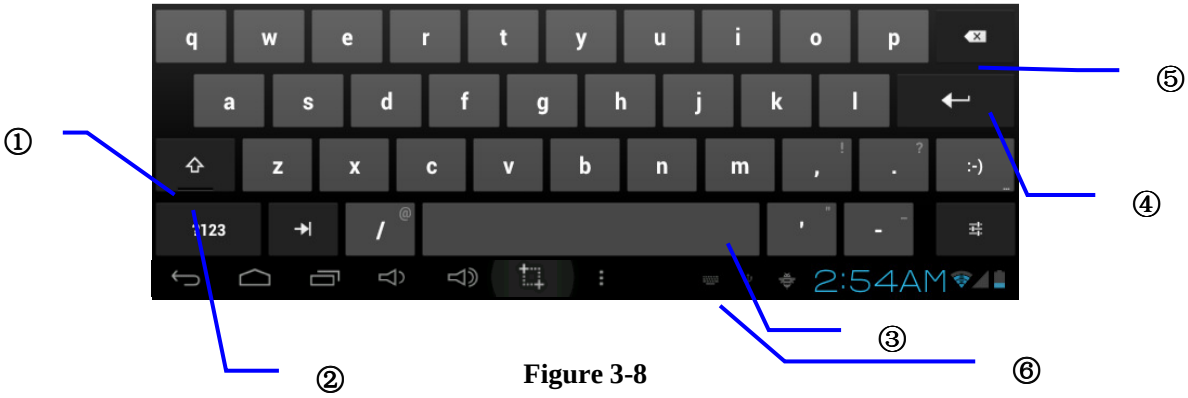

Figure 3-8

1	Switch input capital and small letters
2	Switch character input mode and symbol/figure input mode
3	Click to insert space
4	Click to execute carriage return
5	Click and press on to delete characters on the left of the cursor
6	Click here to switch input method

3.10 Application Technique

Open the application procedure that is employed recently.

Click the third button under the lower left side at any procedure interface, pop up the procedure windows on the screen, the application procedure that is used recently can appear in the windows, referring to Figure 3-9.

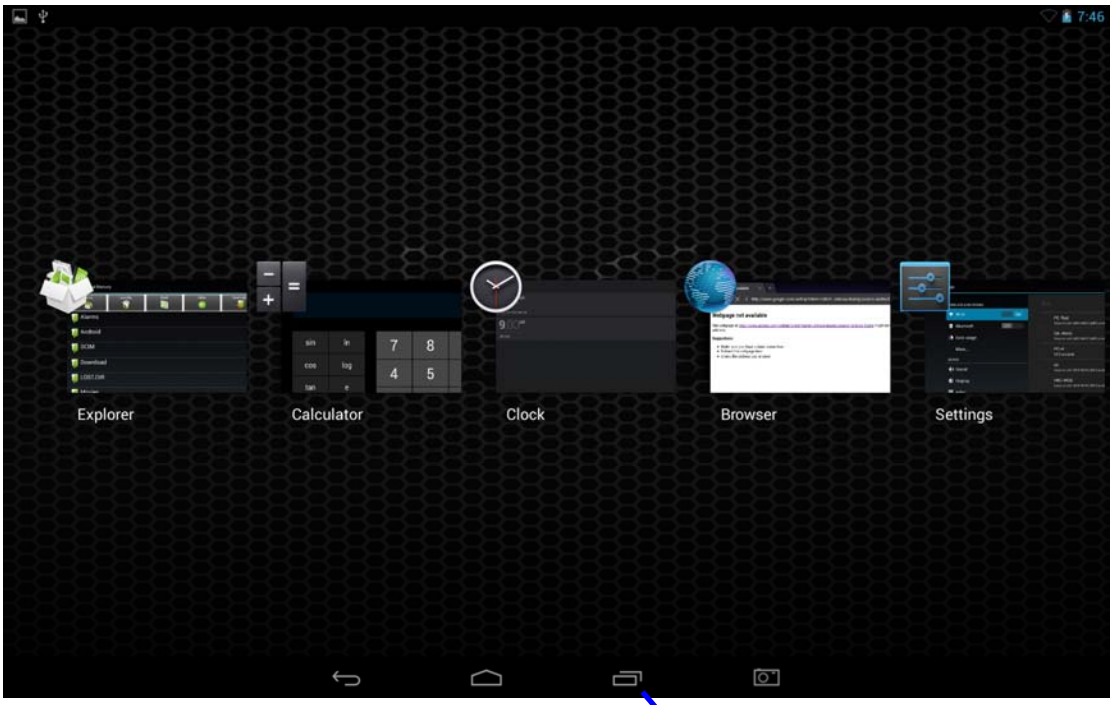

Figure 3-9

Application procedure used recently

Add the small tool on the desk

On the application procedure menu, click **"WIDGETS"**button and enter into the interface of small parts, the icon and name for added small parts can appear on this interface, such as: music, photo frrame, clock and searching.

Switch of Input Language

Click the keyboard icon at the lower right corner of interface for input box; after clicking, pop up all input methods installed on this equipment by you, click and **select the Input method**.

Rapidly shut off the procedure

Click the **Back Key** to return to the superior interface, or click the **Homepage key** to return to homepage interface.

Factory Default

Whe your MD produces the major error or the unlocking password is forgetten, the **Factory Default** can be employed to return to the ex-factory status. There are two kinds of methods of setting the **Factory Default**:

1. On the homepage interface, click the menu key and pop up the setting menu.
2. Click and select the **Setting**
3. Click and select the **Backup and Reset**
4. lick and select the **Factory Default**
5. Click and select the **Tablet Computer Resetting**
6. Wait for system resetting

Rapid Screenshot

When you are located on such any interface as Game or Movies and intend to serve the wonderful picture as the commemoration, the desired pictures can be reserved only by pressingVolume **Down key and Power key** simultaneously.

Speedily Set Such Functions as Fly Mode

Click the status bar on the lower right corner of interface, pop up two windows, there are some prompt messages for your equipment on the windows below. Click the windows above and enter into the setting for **Fly Mode,WIFI, G-sensorSwitch, Volume Control and Backlight Regulating** and speedy operation for **Setting Function** .

4 Connection Establishment

4.1 WIFI Connection

Your Tablet can be connected onto Wi-Fi network to connect the operation:

1. On the homepage interface, click and select the meun key and pop up the meun setting;
2. Click and select the **System Setting**;
3. Click Wi-Fi and open wi-fi switch;
4. After openingWi-Fi, the searched Wi-Fi network can be scanned automatically from the equipment in the windows on the right.
5. Select the Wi-Fi network required to be connected, if the password is added, pop up the password input windows and input the corresponding password.
6. Click the **Connection**

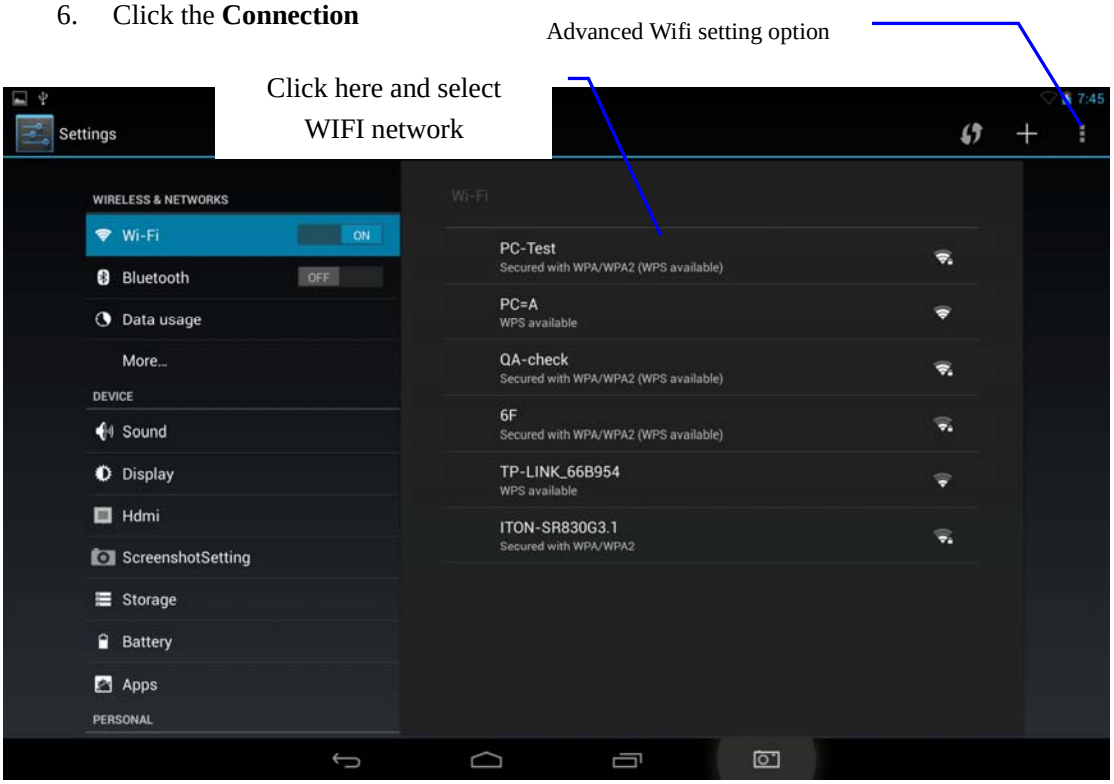

Figure 4-1

5 Communication

5.1 E-mail

Setting for E-mail

The E-mail application procedure is attached with the setting guide for E-mail, the external POP3 or IMAP E-mai account for common Web E-mail service provider can be added.

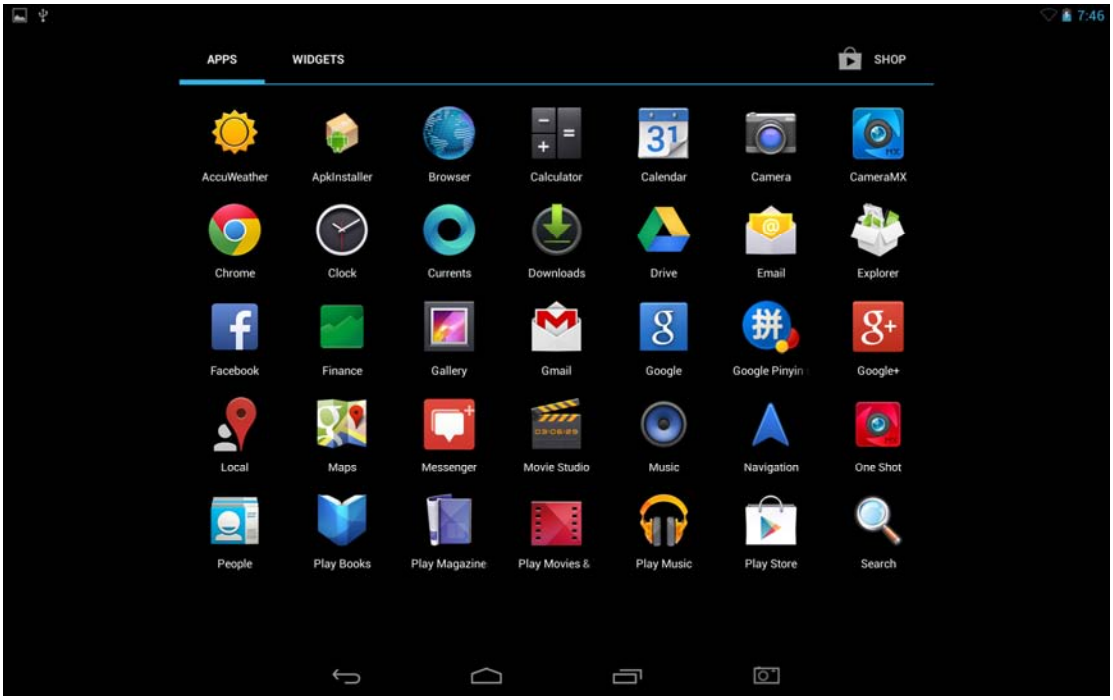

Figure 5-1

Setting guide for E-mail

1. After clicking and selecting the E-mail icon, the produced E-mail setting guide will help you perfom the setting;
2. Click and select **Next** button;
3. Input **E-mail address and password** of your E-mail account;
4. Click and select **Next** button to select that your E-mail type either is POP3 or IMAP.
5. Click and select **Next** button again to inspect whether the send-receive server of E-mail is available.
6. Input the name of account and display the name of E-mail to be sent, and then, click and select **OK**.
7. If the E-mail is available, automatically enter into your inbox.

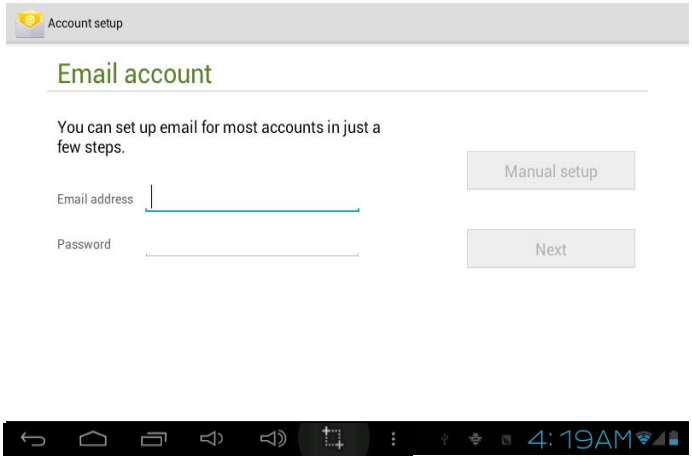

Figure 5-2

Delete the E-mail account

You can delete the account of POP3 or IMAP E-mail that is set properly from your mobile phoe.

1. Click and select the **E-mail**;
2. Enter into your inbox;
3. Click the menu key;
4. Click and select the **Account**;
5. Press the account that you want to delete.
6. Pop up the menu list; click and select the **Deleted Account**.
7. **Click OK** to remove it.

Send E-mail information

1. Click and select the **E-mail** to show your inbox.
2. Click inbox to enter, automatically refresh the new e-mail, click and read it.
3. Press down the menu key and pop up the menu.
4. Click and select the **Composing** to enter into the new E-mail interface;
5. Input the E-mail address of your recipient in the recipient bar;
6. Input the theme and information contents;
7. If want to add the attachment, press the menu kay and pop up the menu option.
8. Click and select the **Add Attachment**.
9. Select the attachment that you will send (such as: picture and video).
10. After clicking and selecting the **" Send"**, send out the E-mail.

Notice: **if you have more than one account and hope to send out a E-mail in certain account, prior to clicking the main menu and composing the E-mail, click that account name in advance.**

6 Multi-media

6.1 Supported File Format

Your Tablet can play the following formats:

Music File Format

- MP3
- AAC(AAC、AAC+、AAC-LC)
- OGG
- MIDI
- WAV
-

Video Play Format

- AVI(H.264、DivX、XviD)
- RM/RMVB
- MKV
- WMV
- MP4
- VOB
- FLV
- 3GP

6.2 Music

Your music can be divided into such 4 types as Artist, **Special Edition, Songs, Play List and Playing**. select a classification to view the contents in the list therein. If enter into one classification, always perform the selection until appear the songs that you want to play. For example, if you select **Artist** classification, you will see the name list of artists ranked according to A-Z sequence. If select an artist, the special edition of artist and song list for special edition will be presented in the list.

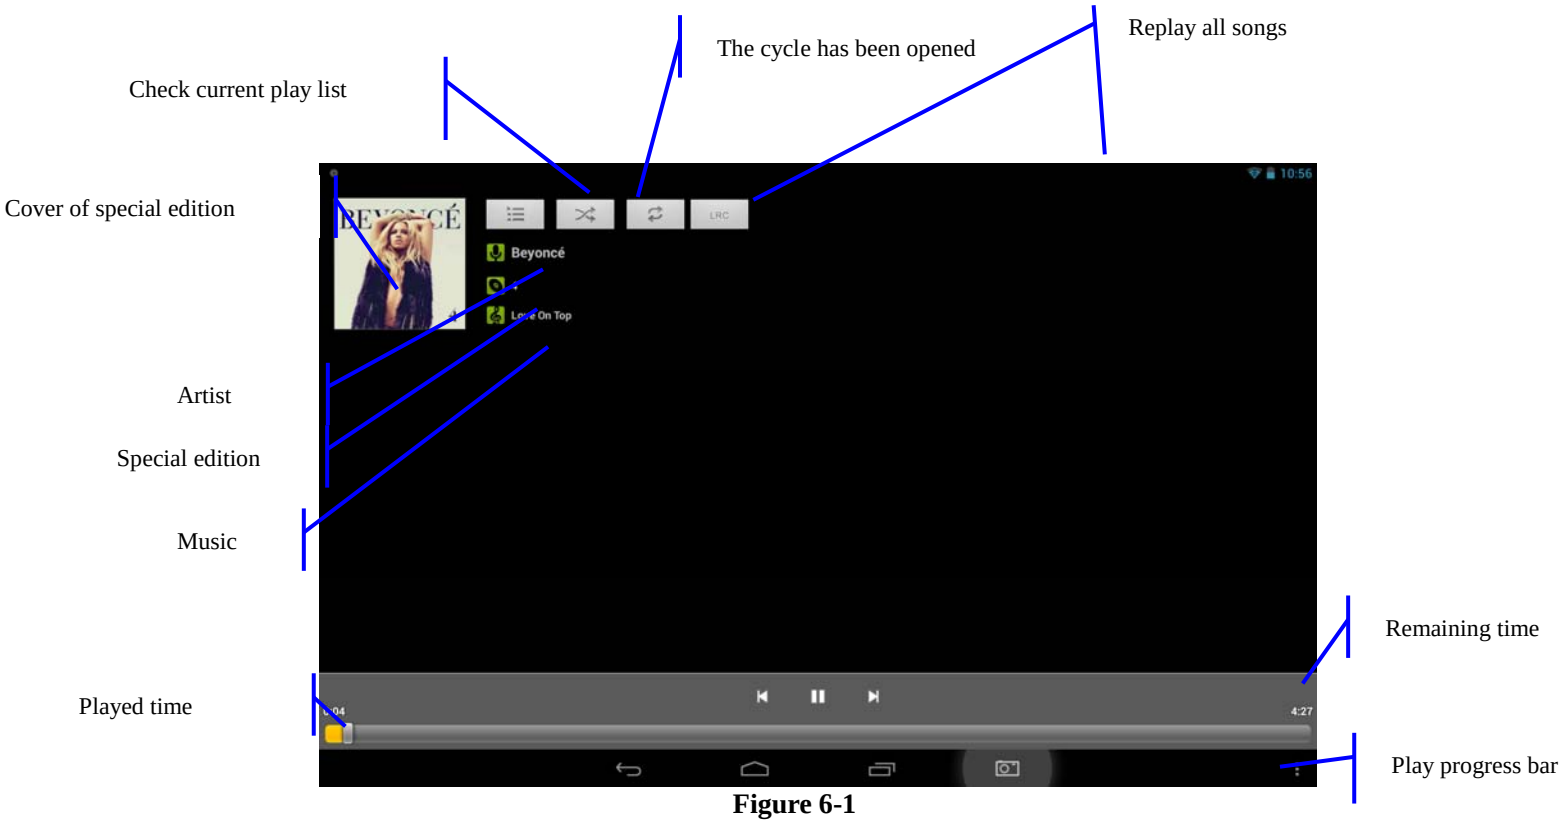

Figure 6-1

Visit and play the music

1. Click and select the music;
2. Click and select the **songs**, click and select the **Artist, Special Edition and Song** List.
3. Select one of songs for play.

Add the songs onto the new play list

1. Click and select the music;
2. Click and select the **songs**,
3. Press the songs that you will add onto the play list ;
4. Pop up the music setting menu, click and select **add onto the play list**.
5. Click and select the **Newly-established**;
6. Input the name of play list;
7. Click and select the **Save**;
8. Click and select certain song, serve this song as the ring to be added.

Delete the play list

1. Click and select the music;
2. Click and select the **songs**,
3. Press the songs that you will add onto the play list ;
4. Pop up the music setting menu, click and select **Delete**.

6.3 Camera

Camera functions

1. Click and select the **camera**;
2. The system enters into the camera interface;
3. Click and select the Photo button and easily take the photos;
4. Set such functions as photo sixe, storage location, white balance and focal length regulating;
5. After completion of taking photo, there is the display for previewed minimap.

Figure 6-2

Photo function

Videotape function

Videotape function

1. Click the videotape icon and convert it as video recorder mode;
2. Click and select the red videotape button to take video ;
3. Set such setting functions as color effect, white balance and video quality;
4. Switch 720P and 480P high-definition videorecording.
5. Click and select the videorecording button, end the videorecording, and observe the previewed video.

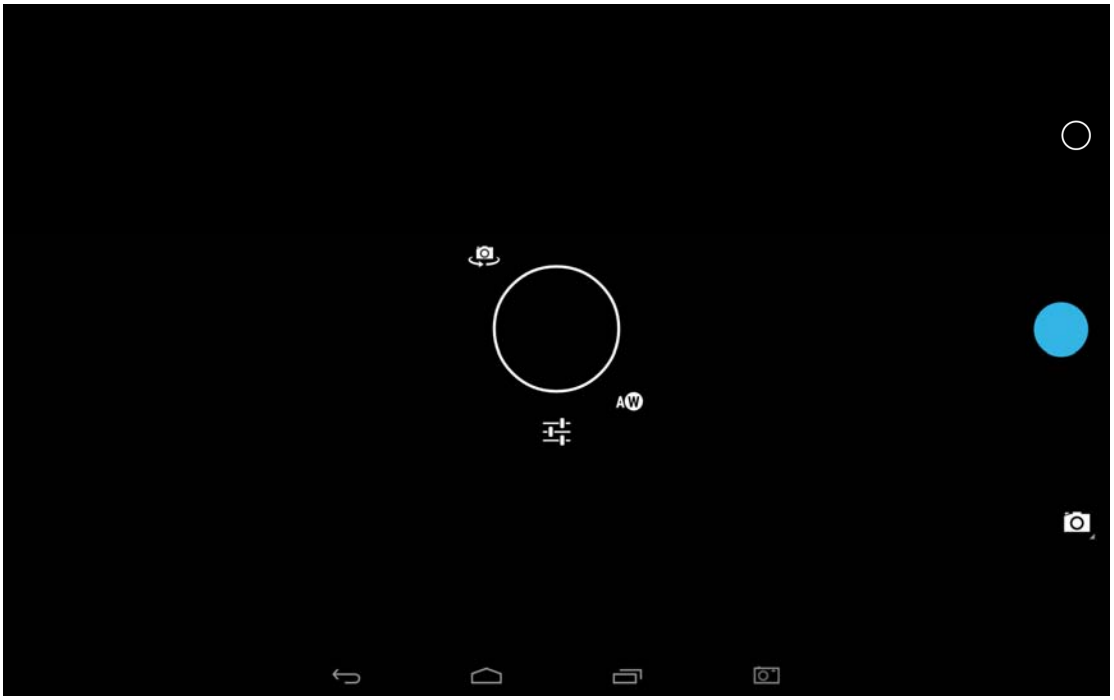

Figure 6-3

6.4 HDMI

HDMI High-definition video interface

The Tablet and the high-definition television are connected by a standard HDMI cable. This interface supports the picture with highest quality of 1080p resolution ratio.

4. Tablet is in the boot status.
5. The Tablet and the high-definition television are connected by a standard HDMI cable.
6. The system interface on Tablet is automatically synchronized with the high-definition TV screen.
7. Click **Display** in the settings menu.
8. Click **Output Select** to switch HDMI mode.
9. Click **Resolution** to set the resolution ratio of HD TV.

6.5 Media Browser

The media browser application capable of automatically searching and classifying all photos and video files in the Tablet and the TF card in accordance with the folder can be used to view and edit photos, to use photos as desktop and to watch videos.

View pictures

1. Click the folder containing the pictures that you want to see.
2. Select the picture you want to see, and the system will automatically view in full screen mode.
3. Drag the picture to left or to right to browse the previous or the next picture.

4. Doubld-click the picture to zoom in or zoom out the picture.

Tips: the picture browser is capable of automatic rotation. When the Tablet is rotated, the picture will automatically adjust along with the rotation direction.

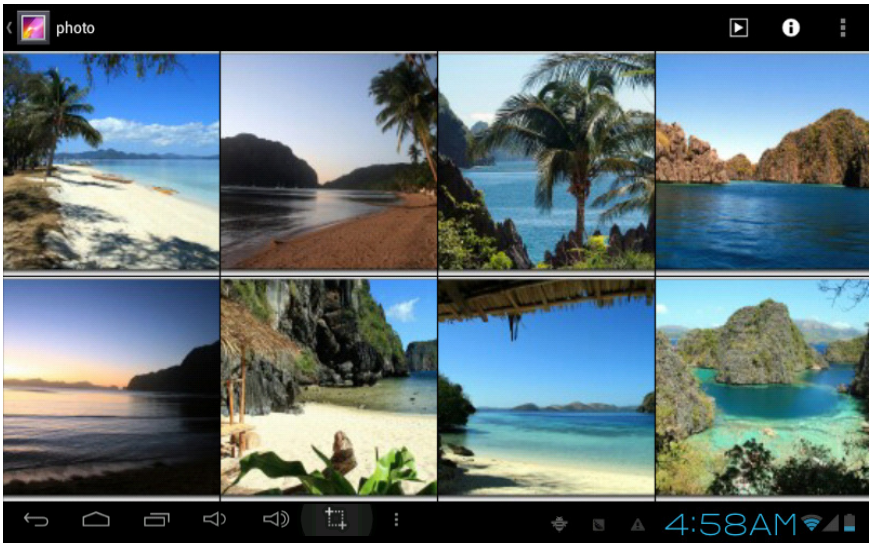

Fig. 6-4

Edit and set the picture

When view the pictures in full screen mode, press the Menu key to show the menu options, through which the pictures are edited and set.

- **Slide show**

  Press the Menu key to show the menu options, and then click **Play slideshow**, which shows the pictures in all folders.

- **Share**

  1. Press the Menu key to show the menu options, and then click **Share**.
  2. The picture will be shared with your friends through the attachments in the **E-mail** and **Bluetooth**.

- **Rotation**

  1. Press the Menu key to show the menu options, and then click **Rotation**.
  2. Click **Rotate to left** or **Rotate to right**.

- Cut

  1. Press the Menu key to show the menu options, and then click **Cut**.
  2. Click and drag relevant area to adjust the cutter.
  3. Click and drag the cutter to adjust the size.
  4. Adjust the size and click **Save**.
  5. Click **Return** to go back to the picture browse.

Video preview and playback

The Media Browser will scan all video files in the Tablet and TF card, and preview the playable ones. Click one to play the video files.

In the video preview interface, press the Menu key, and the function window of editing video files appears, as in Fig. 6-5

Fig. 6-5

7 Other Applications

7.1 Alarm clock

1. Click clock icon in the main interface.
2. Enter program interface. (Fig. 8-2)
3. Click the time periods need to set, and the alarm setup menu pops up.
4. After setup, click **Done** on the corresponding clock.

Fig. 8-2

7.2 Calculator

1. Click **Calculator**.
2. Enter the basic panle of the calculator to operate. (Fig. 8-3)

Fig. 8-3

7.3 File Management

Browse files

Slide the desktop to locate the **File browser**.

You can use the file browser to manage, edit and delete the files and folders, or to create sharing and FTP server to achieve resource sharing.

Fig. 8-4

Cut and copy files

1. In the file browser, press and select the file you want to operate.
2. Pop up operating menus, including **Cut, Copy, Delete, Rename, Move to, Copy to, Play music, Select all, Set home directory and Attributes**, etc.
3. Click **Cut** or **Copy** file or folder.
4. Click into the folder you want to paste, and pop up menu by pressing the Menu key.
5. Click **Operate** and then click **Paste**.

Delete files

1. In the file browser, press the file you want to delete.
2. Click **Delete**.
3. Click **OK** to delete file.

Folder setup

1. In the file browser, pop up menu by pressing the Menu key.
2. Click **Create**.
3. Click **Folder**.
4. Click pop-up window and input the name of the new folder in the text box.
5. Click **OK** to create the folder.

Quick search

1. In the toolbar of the file browser
2. Click **Search icon**.
3. Pop up the search panel and enter the keywords you need to find.
4. Click **OK** and the search progress bar will appear in the notification bar.
5. When the search is completed, pop up the dialog box to confirm whether to show the results.
6. Click **OK** to show the search results.

Create sharing

1. Load ES file browser. (Fig. 8-5)
2. Click **'Local'** at the upper left corner and select **'Share'** in the pop-up window.
3. Click the menu bar 'Create', and select **'Search'** in the pop-up window .
4. The system will automatically search all the computers within the LAN, and each drive of your computer can be seen by clicking OK.
5. You can **Copy, Delete, Rename** here.

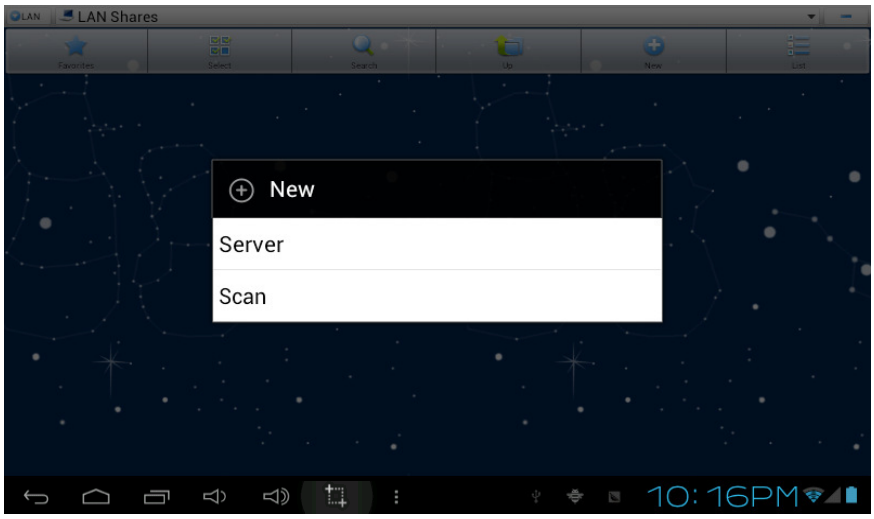

Fig. 8-5

8 Basic Settings

8.1 Sound and Display

Volume setting

1. Click the application icon to enter the settings application on the Homepage.
2. Click **Sound**.
3. Click **Volume** to control the volume of the ringtones, media, alarm clock and

notification.

4. Pop up volume setup panel, and control it by dragging the progress bar to left or to right.

Screen key tone and screen lock alert tone

You can set the Tablet to emit sound when you use the soft keyboard or touch screen as well as lock the screen.

1. Click the application icon to enter the settings application on the Homepage.
2. Click **Sound**.
3. Click **the Screen key tone and screen lock alert tone**.

Display settings

- **Adjust screen brightness**

1. Click the application icon to enter the settings application on the Homepage.
2. Click **Display**.
3. Click **Brightness**.
4. Pop up the brightness setup panel, and drag the brightness bar to left or to right to adjust the brightness.
5. Click **OK**.

- **Adjust screen standby time**

1. Click the application icon to enter the settings application on the Homepage.
2. Click **Display**.
3. Scroll down the screen and then click **Sleep**.
4. Pop up screen standby time settings and choose the standby time you want.

8.2 Security and Location

1. Set unlock pattern

You can set your own unlock pattern (equivalent to the password) to protect the privacy of your Tablet.

1. Click the application icon to enter the settings application on the Homepage.
2. Click **Security**.
3. Click **Set screen lock**.
4. Click **Pattern**.
5. Pop up unlock pattern panel with 9 contacts, at least four of which are connected vertically, horizontally or diagonally. Put fingers away from the screen upon completion and the system will record the pattern you set.
6. Click **Continue**.
7. Draw the screen unlock pattern again when the prompt appears and click OK.

Tips: If you do not want the unlock graphics display on the screen while unlocking, please clear the check box of Use visible pattern.

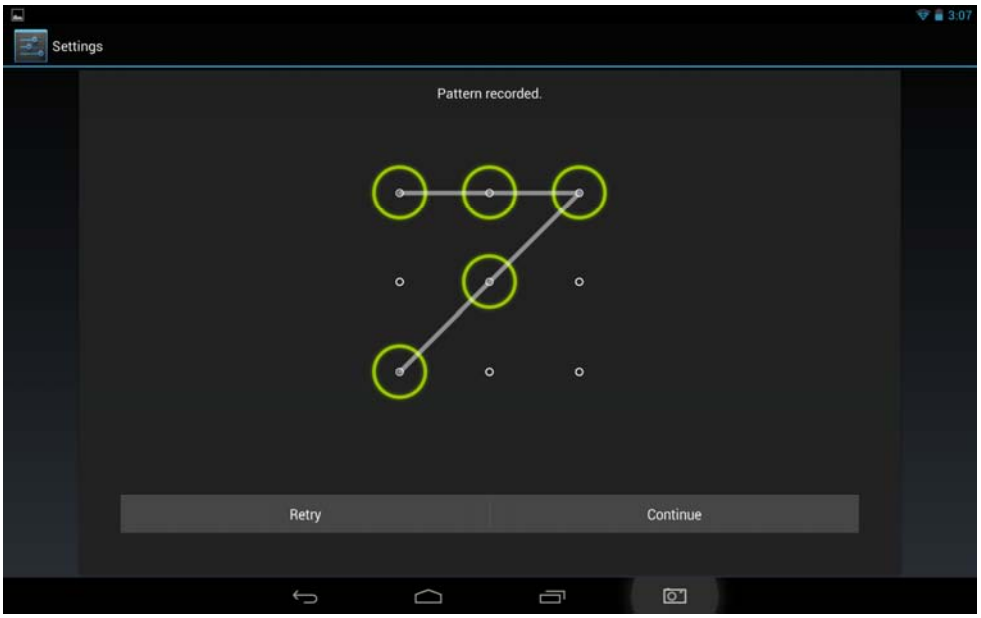

Fig. 9-1

2. Other settings

In the security settings, functions such as encryption setup, equipment management and credential storage can be added to the tablet PC.

8.3 Storage

View storage settings

1. Click the application icon to enter the settings application on the Homepage.
2. Click **Storage**.
3. View storage space of SD card.
4. View storage space of NAND FLASH.
5. View Scsi setup, which is the storage space of U disk.

Safe uninstall of SD card

Safe removal of the SD card can effectively protect and prolong the service life of the SD card.

1. Click the application icon to enter the settings application on the Homepage.
2. Click **Storage**.
3. Click **Uninstall SD card**.
4. The system prompts that the SD card is safely removed.

Tips: the uninstall method for Scsi is as described above.

8.4 Date and Time

Adjust the date, time and time zone

1. Click the application icon to enter the settings application on the Homepage.
2. Scroll down the screen and then click the **Date and time settings**.
3. Click **Select time zone** to select the one you want. Scroll down the list to see more time zones.
4. Click **Set date**, then click the up button or the down button to adjust the date, month and year, and click **Settings** when finish.
5. Click Set time, then click the up button or the down button to adjust hours and minutes, click AM or PM to change between morning and afternoon. Click Settings to complete.
6. Select 24-hour check box to switch between 12-hour and 24-hour. Selected time format will be applied to the alarm clock.
7. Click **Select date format** and then select the date format to be displayed on the Tablet.
8. You can choose **Automatically determine date and time**, which automatically uses the time from the network, so effective network is required.

8.5 Language and Input Method

Select language for the device

1. Press the Menu key to pop up Settings menu on the Homepage.
2. Click **Settings**.
3. Click **Language and Input Method**
4. Click **Select language areas** and choose the language you need.

Keyboard and input method

The default input keyboard is the Android keyboard, and you can select your favorite keyboard and input method by installing third-party software.

8.6 About Tablet PC

View Tablet status

1. Click the application icon to enter the settings application on the Homepage.
2. Click **About Tablet PC**.
3. Click **Status Message** to view the B**attery status, Network status, Bluetooth address, Serial number and Running time**, etc.

System Update

1. Click the application icon to enter the settings application on the Homepage.
2. Click **About Tablet PC**.
3. Click **System Update**.
4. If the window shows this is the latest version, there is no need to update.
5. If the window prompts to download the new version, click **Download. (Ensure the device is equipped with the TF card before download, the system automatically downloads the update package into TF)**

View system version

1. Click the application icon to enter the settings application on the Homepage.
2. Click **About Device**.
3. View **Tablet model, Android version, Firmware version** and **Build-in version**, etc.

9 System Upgrade

9.1 System Upgrade Preparation

Download upgrade program

You can download the software upgrade package from websites, which is used to upgrade the system version of the Tablet.

System Upgrade Preparation:

1. Download the system upgrade package from relevant websites to your computer.
2. Prepare the system upgrade tool: a TF card with storage capacity ≥512MB.

9.2 Restore Factory Settings

When significant error occurs or the unlock password is forgotten, factory settings can be restored by resetting. The restore of the factory settings will lead to the **lost of** downloaded applications and user setups, so do remember to **back up** your data.

1. Press the Menu key to pop up Settings menu on Homepage.
2. Click **Settings**.
3. Click **Backup and Reset**.
4. Click **Restore Factory Settings**.
5. Click **Restore Tablet PC**.
6. Wait for system rebooting.

Cautionary note

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body

Warnings：

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.