HEADRUSH

WIRELESSPARTY SPEAKER

HRSP
5043PARTYB
ASE

Bluetooth

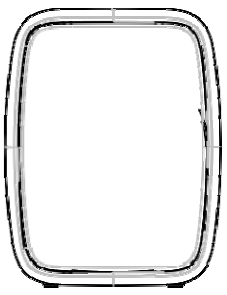

8092992
INSTRUCTIONMANUAL

WHAT'SINCLUDED:

- Speaker
- USB-Cchargingcable
- 3.5mmaudiocable
- Instructionmanual

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The Source (Bell) Electronics Inc. isunder license. Other trademarks and trade names are those of their respectiveowners.

COMPONENTIDENTIFICATION

1. MIC/guitarbutton
2. Power/modebutton
3. Bluetooth®button
4. Lightmodebutton
5. Party/Broadcastbutton
6. Bassboostbutton
7. MIC/guitarvolume button
8. MICechobutton
9. Volume-
10. Play/Pause
11. Volume+
12. MICbassbutton
13. MICtreblebutton
14. Guitarjack
15. MIC jack
16. ResetHole
17. Aux inJack
18. USB-C port

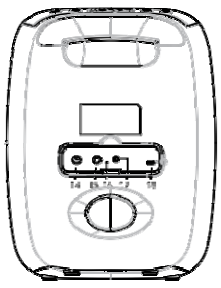

PRODUCTOVERVIEW

Youcanusethisitemwithanycompatible,Bluetooth®-enableddevicetostreammusicand enjoyhands-freecalling.Pleasereadthismanualfirstbeforeusing.
ThisspeakerhasanIPX4rating:Protectedagainstsplashingwater.

OPERATION

TO	DOTHIS
PowerON	Press the button.
PowerOFF	Press the button. OFFwillappearontheLEDdisplay.
Play/pause	Press the buttontoplay,presstopause,pressagaintoresume.
Nexttrack	Pressandholdthe button.
Previoustrack	Pressandholdthe button.
Increasevolume	Pressthe button.
Decreasevolume	Pressthe button.
SwitchtoAUXmode	Press the button，.
Changelightmode	Press thebutton.
Switch to Microphone/karaoke/Guitarmode	Plug in 6.35mm Microphone input.
Bassboost	Press theBass boostbutton toturnONwhenplayingmusic. PressagaintoturnOFF.
Increase/decrease mic treble in microphone/karaokemode	Press the button.
Increase/decrease bass in microphone/karaokemode	Press the button.
Increase/decreasemicechoin microphone/karaokemode	Press the button.
Increase/decreaseMicvolumeinmicrophone/karaokemode	Press the button.
PairviaBluetooth®	Press the button.
Factoryreset	In any modes, press the Power On and Play/Pause key for 3 seconds at the same time

STATUS INDICATOR

LEDdisplay	flashing	Pairingmode
	AUXON	AUXmode
	flashing	Broadcastmode
	A-00	Speakervolume
	L-00	MICvolume
	G-00	Guitarvolume

CHARGING

Usetheincludedchargingcabletofullychargethespeakerbeforefirstuse.Itwilltake approximately5hourstofullycharge.

- TheredLEDwillbeONwhilethespeakerischarging
- TheredLEDwillturnOFFoncechargingiscomplete

TIP: When the battery is low, the speaker will beep every few seconds, please charge thespeaker.Ifitisnotpluggedintochargewithinapproximately10minutes,itwillturnOFF.Thespeakerwillautomaticallypowerofffifnotinusefor30minutes.

PAIRING

1. Pressthebuttontoturnthespeaker ON.ThespeakerwillchimeandtheLEDdisplaywillshowA– and2digitsindicatingthevolumelevel,forexampleA-08.
2. Thebuttonwillflashtoindicatethespeakerisreadytopair.
3. TurnBluetooth®ONinyourdevicesettingsandselect"HRB5043".Thespeakerwillchime.Oncepairedsuccessfully,theiconontheLCDdisplaywillbeON.

NOTE: Ifthereisnodevicepairedwithin**30minutes**thespeakerwillturnOFF.Toun-pair,disconnectinyourdevicesettings.ThespeakerwillautomaticallypairwithpreviouslypaireddevicesprovidedBluetooth®isONandwithinrange.Thespeakerwillchimetoindicatethatithassuccessfullyre-paired.IfyourdevicedoesnotdiscovertheHRSP5043speaker,pressthebutton andrepeatthe pairingprocess.

MICROPHONEANDKARAOKEMODE

PlugyourmicrophoneintotheMICjack.ThewillappearontheLEDdisplay.

1. Toturnthevolumeupordown,pressthe button.Volumelevelscanbeadjusted,fromL– 01 to L – 16.
2. ForKaraoke,choosemusicfromyourdeviceandsingalong.
3. Pressthe buttontoincreaseordecreasetheecho.TheLEDdisplaywillbrieflydisplay E–00uptoE–16andthenrevertbacktoshowthevolumelevel.
4. Pressthe buttontoincreaseordecreasebass.
5. Pressthe buttontoincreaseordecreasetreble.

NOTE:Afteryoupluginthemicrophone,L-00willshowontheLEDdisplayfor10seconds.Itwillthenrevertbacktothevolume A-00.Alwayssetthevolumetoaminimumlevelbeforeplugginginorunpluggingamicrophone.

GUITARMODE

Ifusinganelectricguitar,plugitintotheguitarjack.TheIconwillshowintheLEDdisplay.DONOTpluggthisintothemicrophonejack.
NOTE:Afteryoupluginaguitar,G-00willshowontheLEDdisplayfor10seconds.ItwillthenrevertbacktothevolumeA-08.

LEDLIGHTEFFECT

- Pressthebuttontoselectfromthe4availablelightmodes.
  1. Multi-colourlightrotation
  2. Lightdancing
  3. Half light rotation
  4. Halflightdancing
  5. OFF
- Pressandholdthe buttontochangetoasinglecolourandthenpress buttontochange colours (choosefrom 7colour options)
- Pressandholdthe buttontoreturntothedifferentlightmodeoptions

HARDWARE RESET

Toresetthespeakerifitbecomesunresponsive,insertaneedleintotheresethole.ThespeakerwillturnOFFthenturnbackON

FACTORYRESET

In any modes, press the Power On and Play/Pause key for 3 seconds at the same time.

LINE-IN(AUXIN)MODE

1. Usethesupplied3.5mmaudiocabletoconnectthespeakerdirectlywithyourdevice.
2. AUXwillshowinthedisplay.

NOTE: LINE-IN will take priority over the Bluetooth® connection. To switch to Bluetooth®mode,pressthe button.

IPX4RATING

ThisproducthasanIPX4rating,itisprotectedfromsplashingwater.Toavoidwaterdamageto the speaker please:

1. Thoroughlydrythechargingportdrybeforeconnectingacpower.
2. Keepthepotectivecoversclosedsecurelybeforeexposingthespeakertosplashingwater.

PARTY/BROADCASTPAIRING

1. Turn the speakers on and Bluetooth ON, then select one HRSP 5043 from your Bluetooth device list as primary speaker.
2. Turntheother speakersON,press and holdthebuttononallspeakerstoenterparty/broadcastmode.
3. Thespeakerswillpairautomatically,and'A'willshowintheLEDdisplayontheprimaryspeakerand'B'willshowintheLEDdisplayfortheotherspeakers.
4. Toexitparty/broadcastmode,pressandholdthebutton.

NOTE: Audiocontrolcanonlybeadjustedontheprimaryspeaker.Iftherearetwodevicesconnectedtothespeaker,pressthe(useparty/broadcasticon)buttontodisconnectonedevice.TWSpairingwillnotworkwhenspeakersarebeingusedinbroadcastmode.

TWSPAIRING

1. Turn ON two HRSP 5043 Party Base speakers and press and hold the button on bothspeakerssimultaneously.
2. Thespeakerswillenterstereopairingmodeandthe iconontheLEDdisplaywill flashwhite.
3. Whenpairedsuccessfully,'A'willlightupontheLEDdisplayontheprimaryspeaker,andthe'B'willli ghtupontheLEDdisplayonthesecondaryspeaker.
4. TurnBluetooth®ONinyourdevicesettingsandselectHRSP5043.
5. The willlightupintheLEDdisplayonbothspeakersafteryourdevicehaspaired.

NOTE: Pressandholdthe buttonsagaintoexitTWSpairingmode

TROUBLESHOOTING

NoSound:

- Ensurethespeakerischargedandhasenoughbatterypowerforoperation
- Ensure the speaker isswitched ON
- EnsureBluetooth®deviceisON
- Thevolumeofthespeakeristoolow,adjustthevolumetoanappropriatelevel

NOTE: Ifthespeakerbeepseveryfewseconds,thebatteryislow.Pleaserechargethespeaker.Nopow er/Lowbatterypromptton e

- Batterymaybeinprotectionmodeordrained.Chargethespeakerfor6hoursPoors oundquality/buzzingsound
- Ensuretherearenoobstaclesbetweenthespeakerandthedeviceandthattheyarewithinan effectiverange
- Checkyournetworkonyourdevice
- Connect with another deviceSpeakerdoesnotpair/discon nect
- Movethespeakeranddevicesotheyarecloser(within1m)
- TurnOFFallotherBluetooth®devicesordisabletheirBluetooth®
- Clearthespeakermemoryorpairittoanewdevicebypressingthe buttonandholdthe buttonfor3seconds.
- ClearyourphonepairinglistandpairtheBluetooth®devicewiththespeakermanually.

Nosound/lowvolume

- Increasethespeaker/devicevolumeandensurethatthesoundonyourdeviceisnot muted
- Ensurethespeakerandthedevicearewithin1mofeachother
- Turn OFF your speaker and reconnect your device
- Connectwithadifferentdevice
- Chargeyourspeaker for6hoursMicrophoneisencounteringfe edback
- Turntheechoeffectdown
- Orientthemicrophonesothatitisnotpointingdirectlyatthespeaker
- Tryadifferentmicrophone
- Tryadifferentpositionforthespeakerand/orvocalistonstage
- Increasethedistancefromthespeakertothemicrophone
- Ifusingavocaleffectsprocessor,makesureitisnotcontributingtothefeedbackproblem

TECHNICALSPECIFICATIONS

Outputpower:	60W
Bluetooth version:	Bluetooth®5.2B
atterycapacity:	7.4V/5200mAh
Chargingtime:	Around 5-6 hours
Frequencyresponse:	50Hz-18kHz
Operationdistance:	Upto10m(33ft.)TWS
distance:	10m (33ft.)
Playtime:	8hours

NOTE: This speaker is in compliance with the specified Bluetooth®version. It does notguaranteecompatibilitywithallthefunctionsoneveryBluetooth®-enableddevice.Pleasecheckyourmobilephone'susermanualforcompatibilityandfunctionality.

WARNING: Changes or modifications to this unit notexpressly approved by the party responsibleforcompliancecouldvoidtheuser'sauthoritytooperatetheequipment.

RSS247

INDUSTRYCANADANOTICE

Thisdevicecontainslicence-exempttransmitter/receiver(s)thatcomplywithInnovationScienceandEconomicDevelopmentCan ada'slicence-exemptRSS(s).Operationissubjecttothe followingtwoconditions:

(1) This devicemay notcause interference;and
(2) Thisdevicemustacceptanyinterference,includinginterferencethatmaycauseundesi redoperationofthedevice.

IC:255A-8092992

FCC ID:ZHW-8092992

THESOURCE-WARRANTY

TheSourcewarrantsthatthisproductwillbefreefromdefectsinmaterialsandworkmanshipforaperiodoftwelve(12)monthsfromthedateofpurchase.Withinthisperiod,simplytaketheproductandyourproofofpurchasetoanyTh eSourcestoreorparticipatingdealerandtheproductwillbereplaced(whereavailable)withoutcharge.Anyproductwhichhasbeensubjecttomisuseoraccidentaldamageisexcludedfromthiswarranty.

Thiswarrantyisonlyapplicabletoaproductpurchasedthrough TheSourcecompany-ownedstoresorparticipatingdealersinCanadawherethewarrantyisincludedwiththeproduct.Whilethiswarrantydoesnotconferanylegalrightsotherthanthosesetoutabove,youmayhaveadditionalstatutoryrightswhichwillvary underthelawsofthevariouscountries,states,provincesandothergovernmentalentitiesinwhichThe Source operates. This warranty is subject toall statutory rights you may have in Canada.

Importedby:

TheSource,Barrie,Ontario,Canada,L4M4W5Manufactured in China
www.thesource.ca
©2021TheSource.Allrightsreserved.

PleaseRecycle

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

－－ Reorient or relocate the receiving antenna.

－－ Increase the separation between the equipment and receiver.

－－Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

－－ Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.