



1.1 Set-up for Conducted Emissions on AC Mains

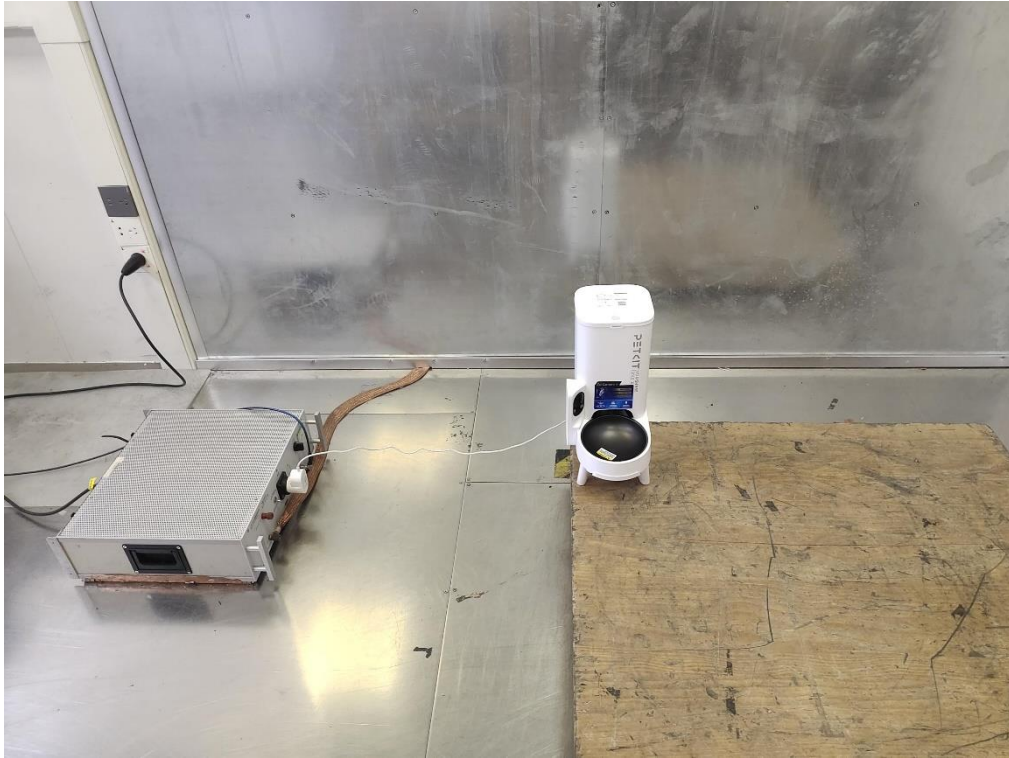

1.2 Set-up for Conducted RF test at Antenna Port




BLE

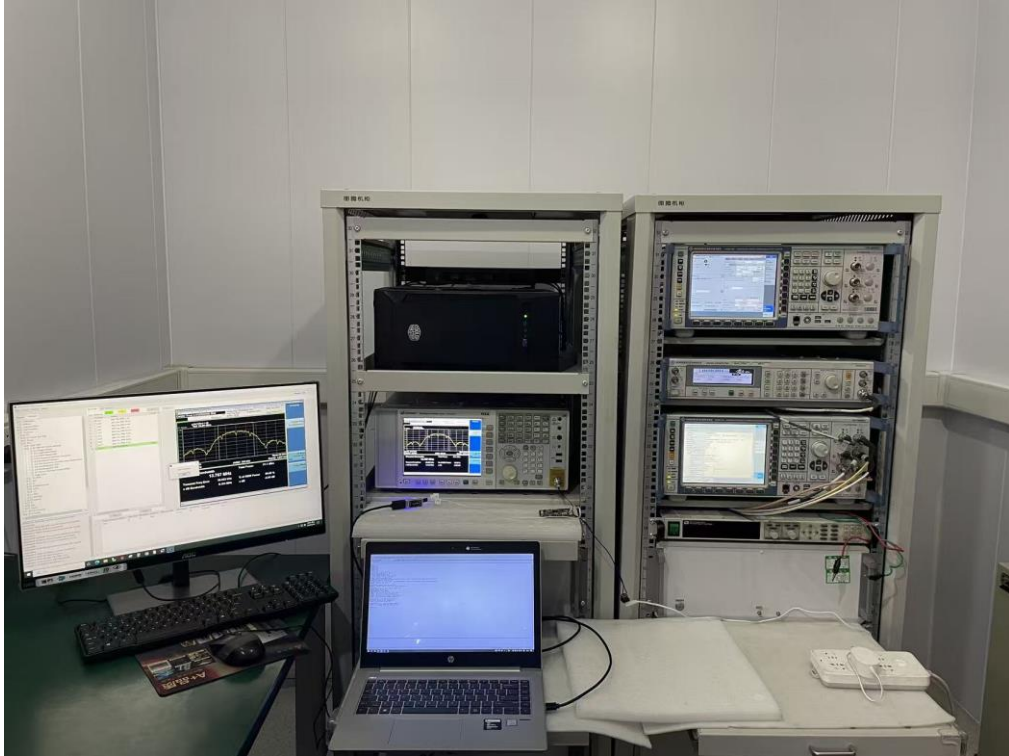

WIFI


1.3 Set-up for Spurious Emissions below 1GHz

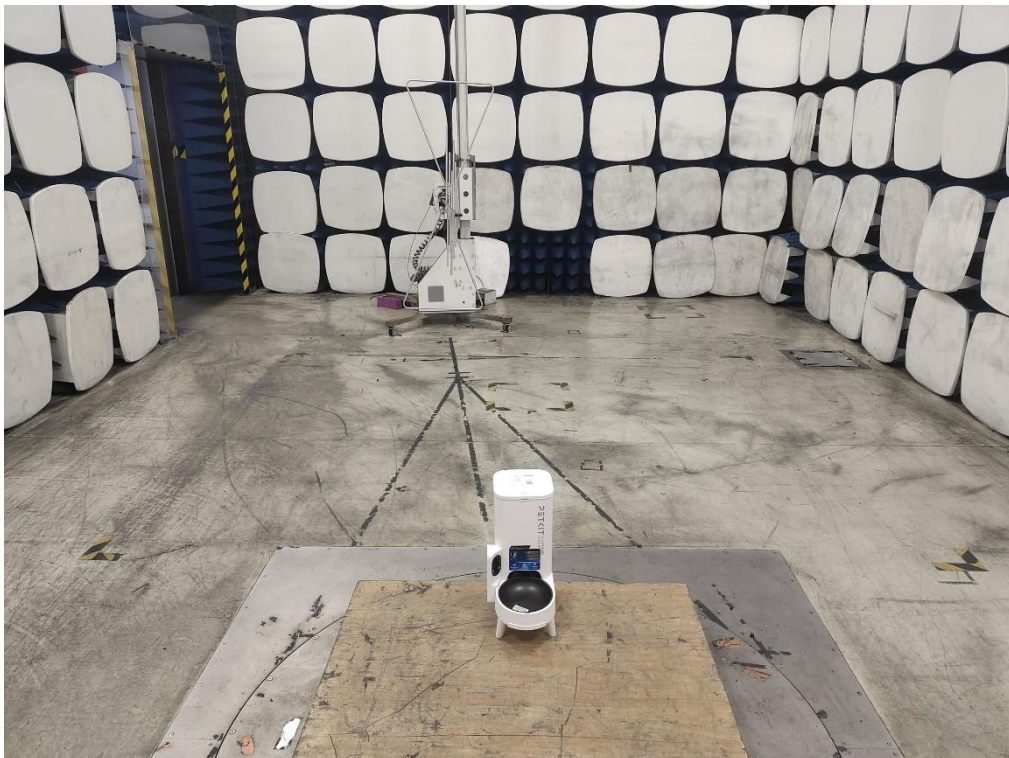

1.4 Set-up for Spurious Emissions above 1GHz



BLE

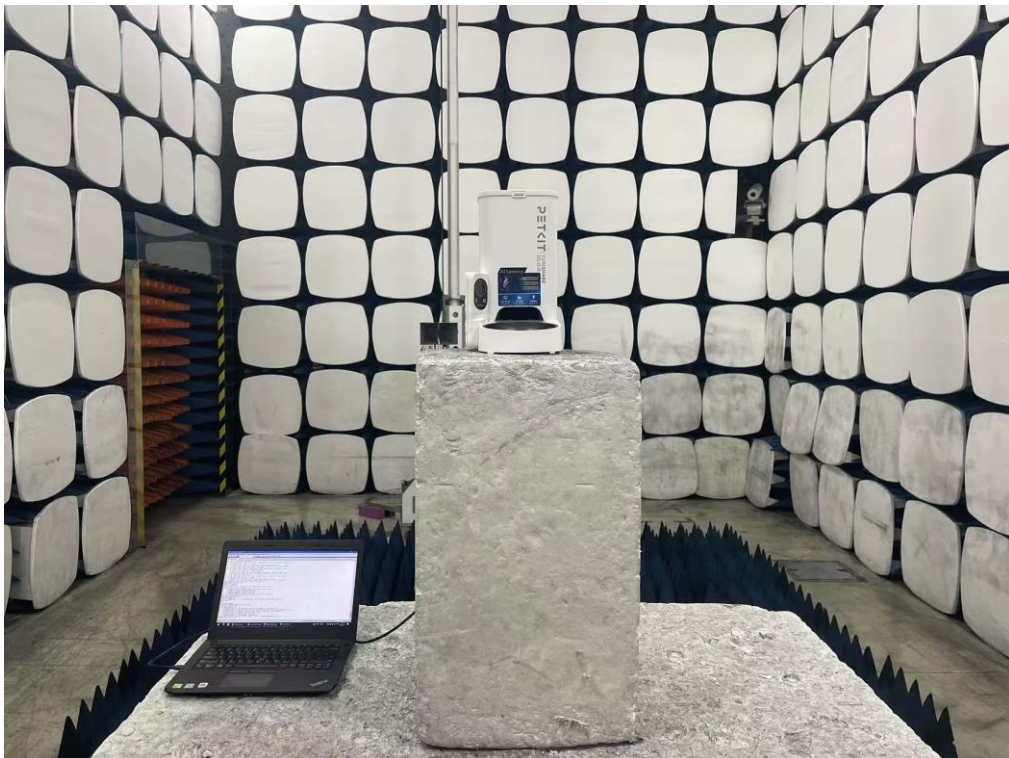

WIFI