




1.1 Set-up for Conducted Emissions

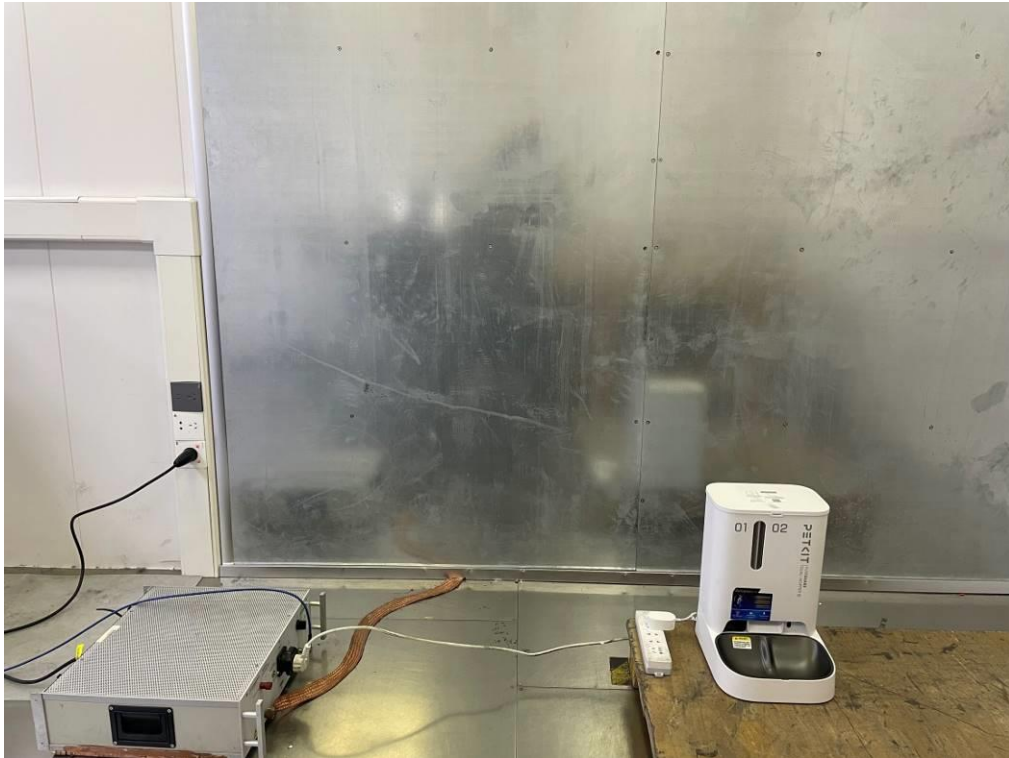

1.2 Set-up for Conducted RF test at Antenna Port

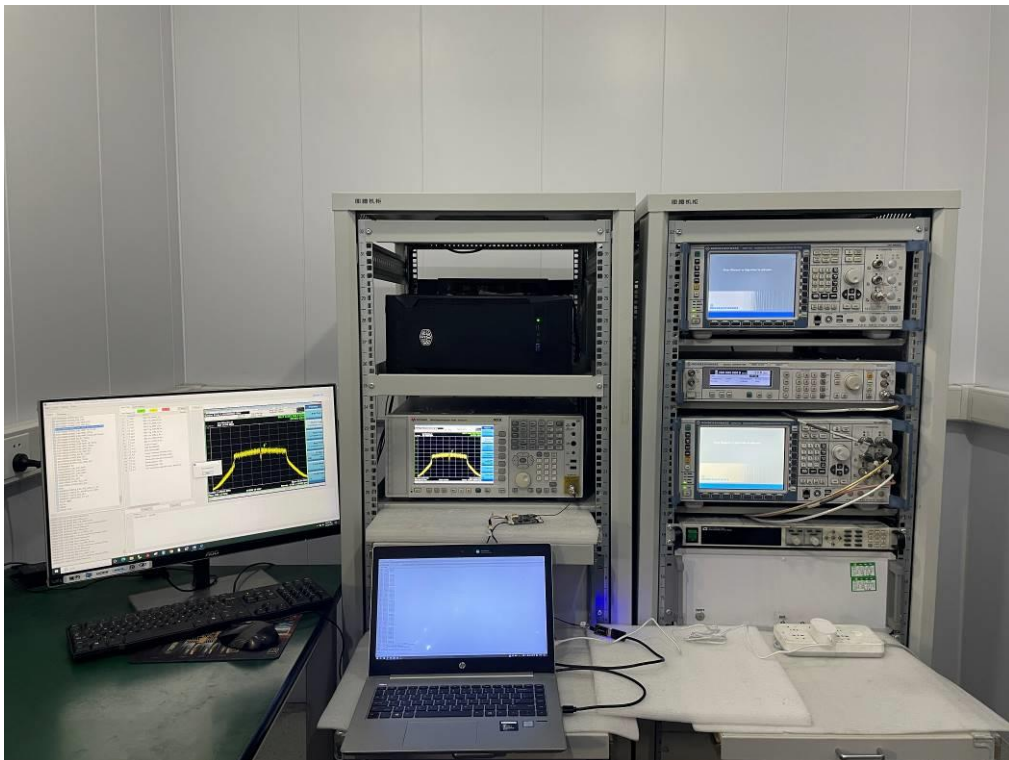

WIFI

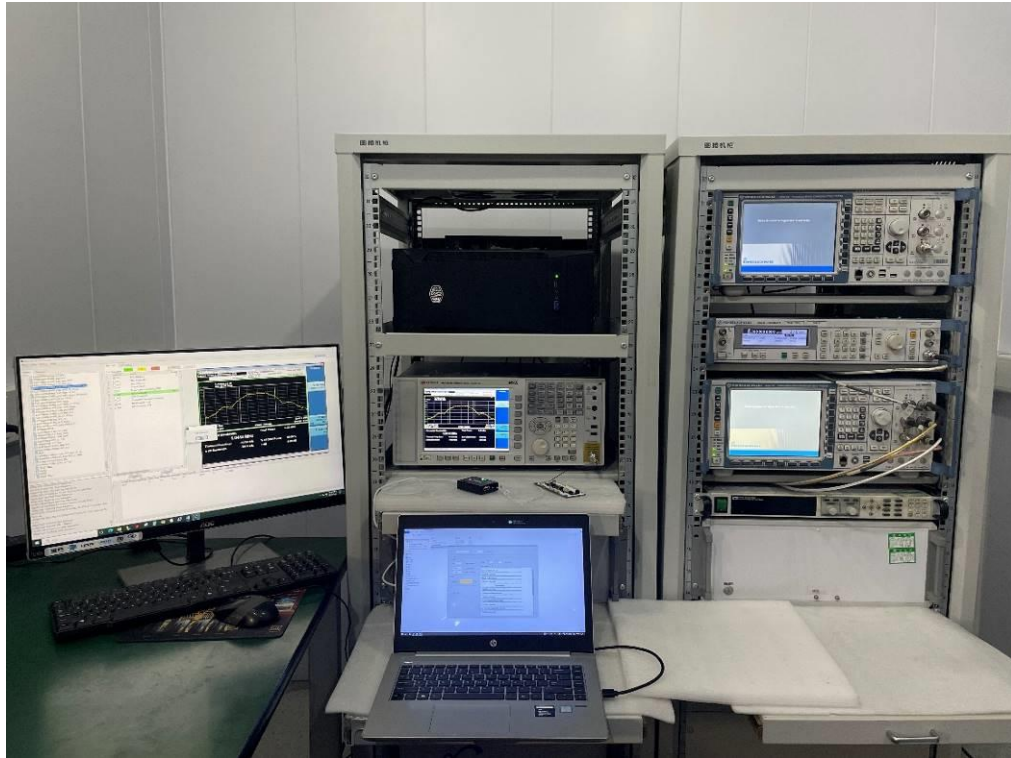

BLE

1.3 Set-up for Spurious Emissions below 1GHz



