



1.1 Set-up for Conducted Emissions

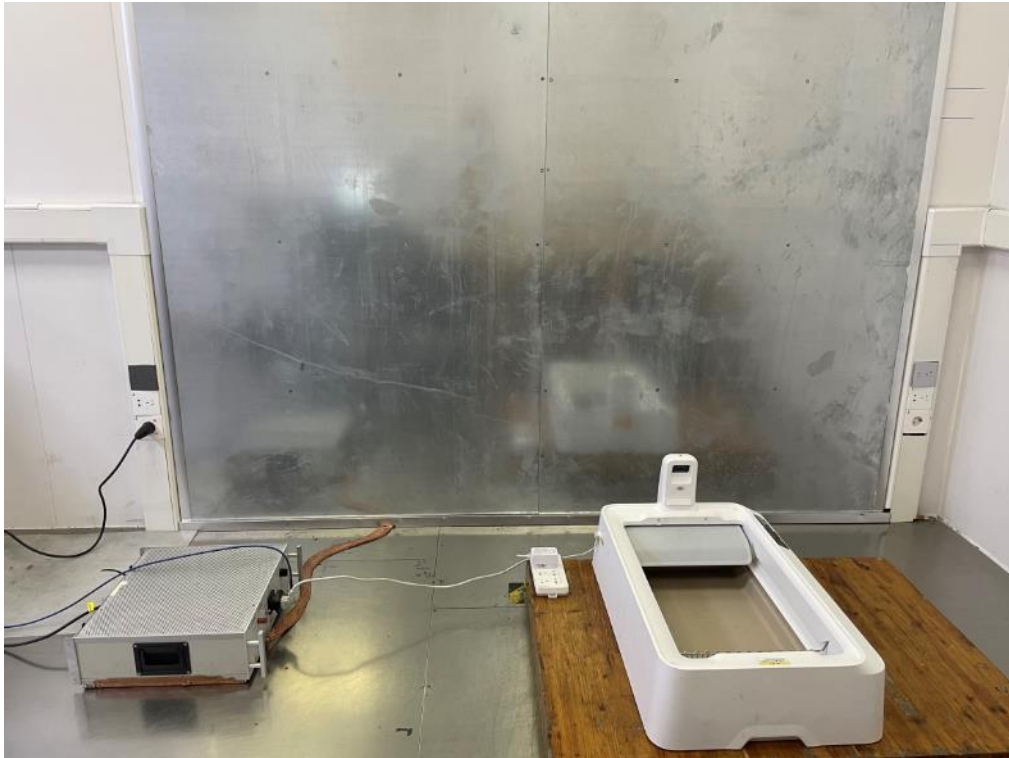

1.2 Set-up for Conducted RF test at Antenna Port

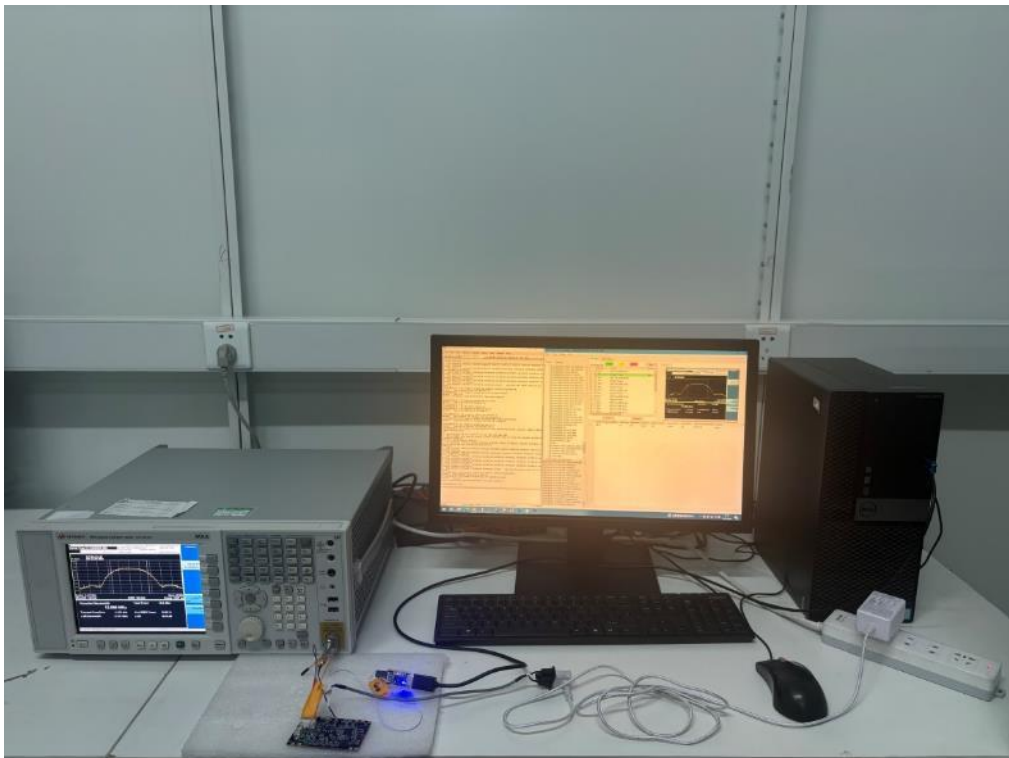


WIFI



BLE

1.3 Set-up for Spurious Emissions below 1GHz

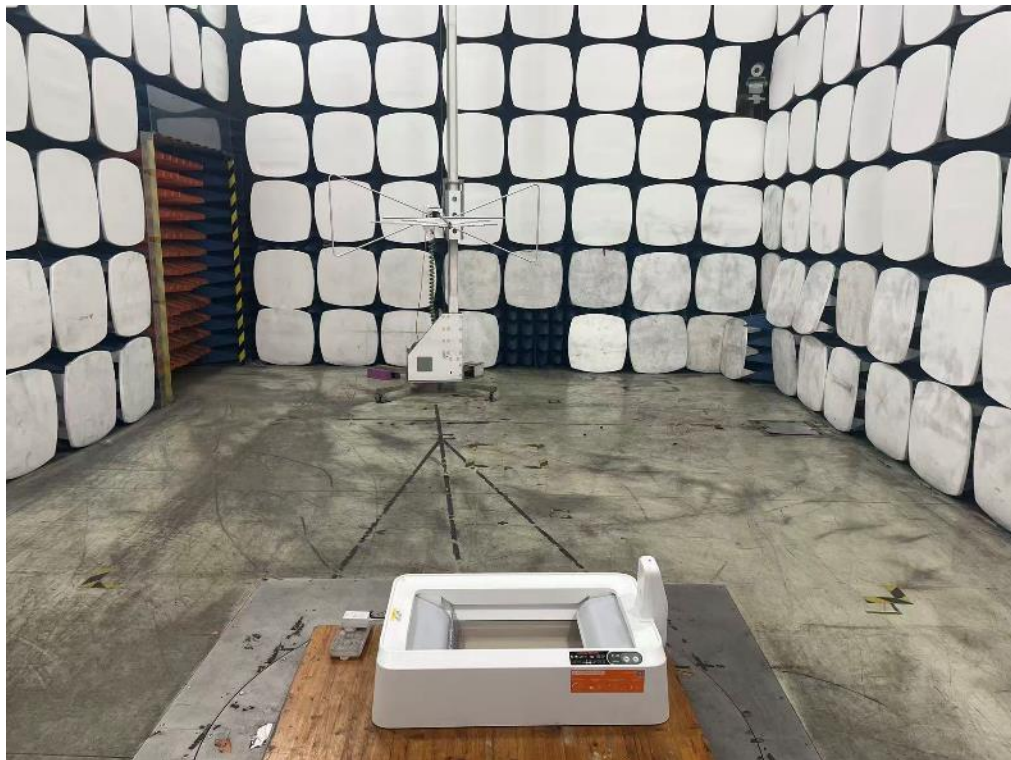



NFC(Below 30MHz)

1.4 Set-up for Spurious Emissions above 1GHz

