




Assembling Yarbo

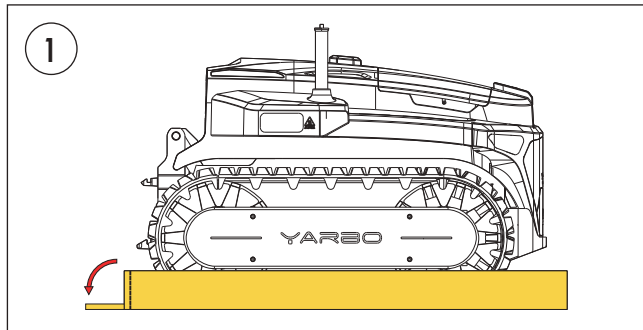


Cut the box along the line on the box.

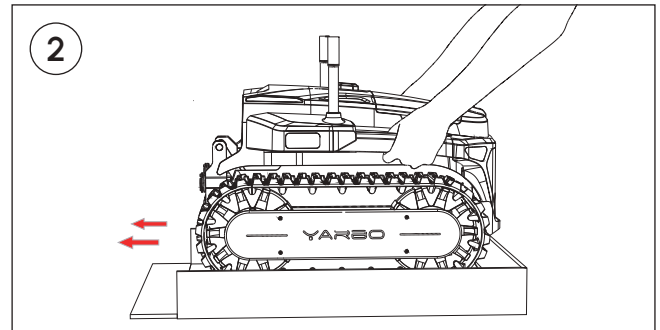


Push the Universal Body out from the packaging box.
DO NOT grab on the antenna poles.

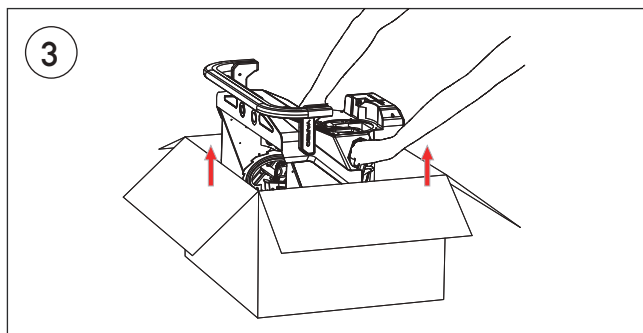


Lift the Snow Blower S1 out from the packaging box.
DO NOT pull on the Bumper.

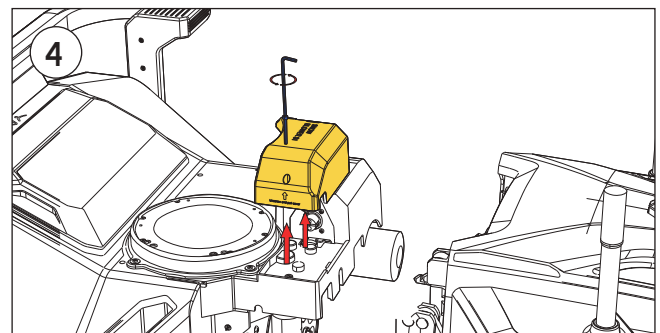

Remove this cover, with Allen Key #1.

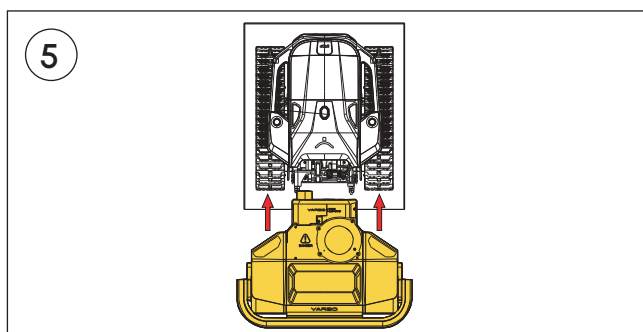


Position the Snow Blower Module next to the Universal Body closely.
DO NOT connect these two parts now.

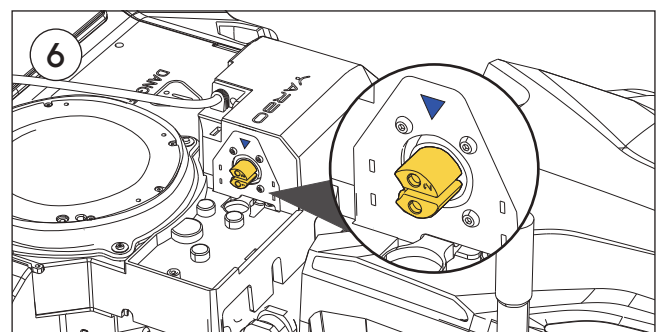


Locate this port on Snow Blower Module.


Assembling Yarbo

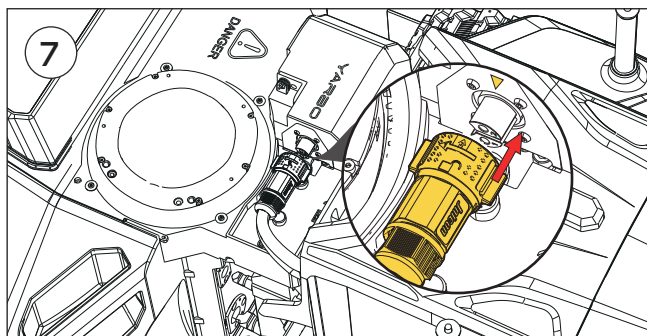


Locate the cable inside the Universal Body.
Forcefully insert until you hear or feel a click.

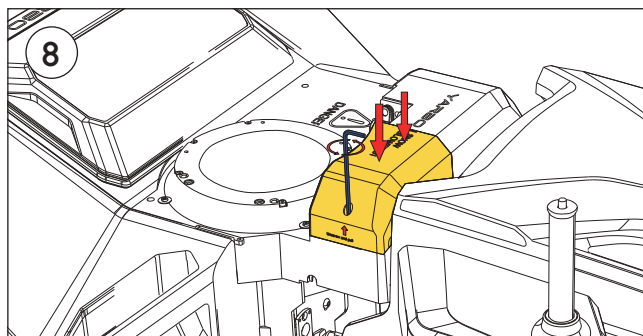


Place the cover removed in step 4 back to its original position.
Tighten the bolt*.
*DO NOT skip this step.

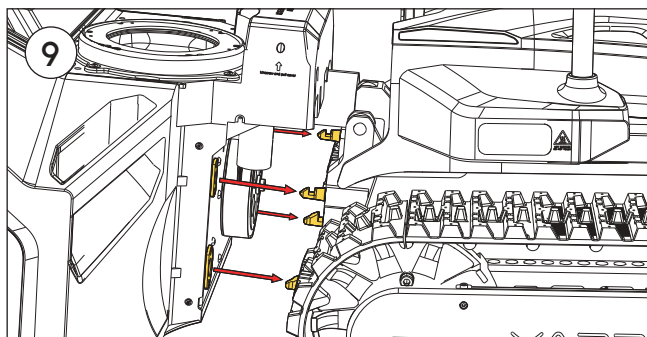


Locate the holes and shafts.
Raise the 2 locks on the Snow Blower Module

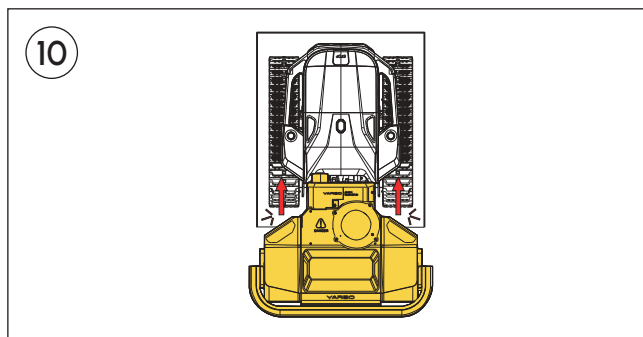

Slightly lean the Snow Blower Module backward.
Gently push together, until you hear or feel a click.
Press down the locks on the Snow Blower Module.

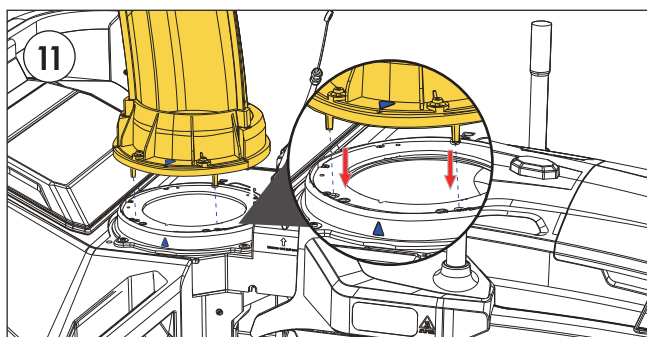

Align two engraved triangle signs.
Place the discharge chute on the module.

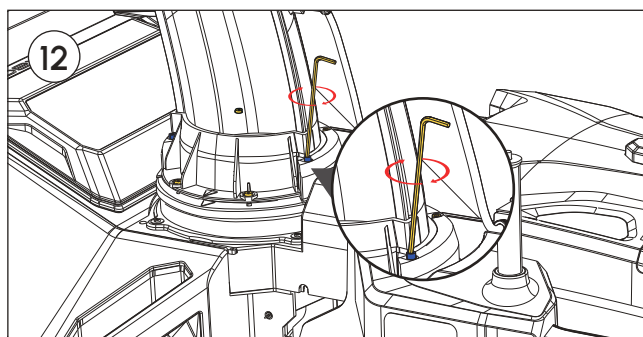

Tighten the 2 bolts on the edge first with Allen Key #2
Then tighten the remaining 4 bolts.