
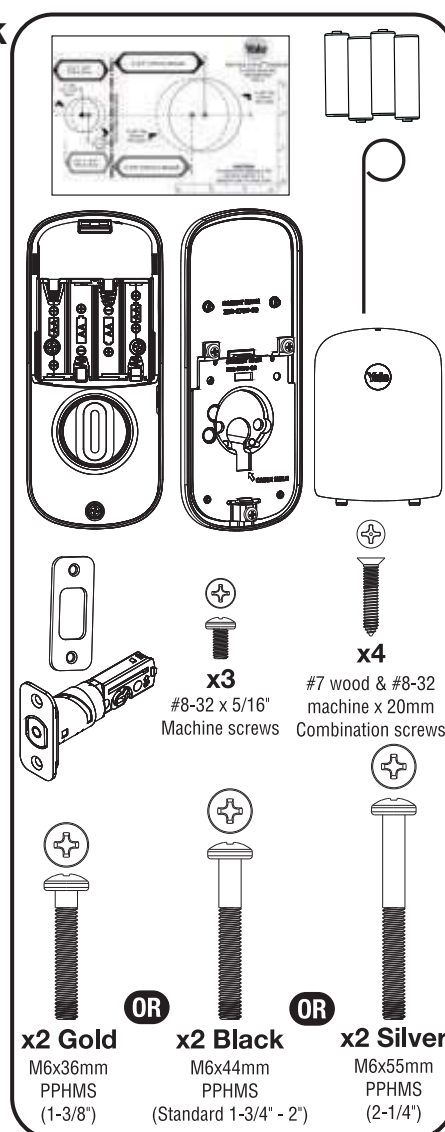


Digital Door Lock

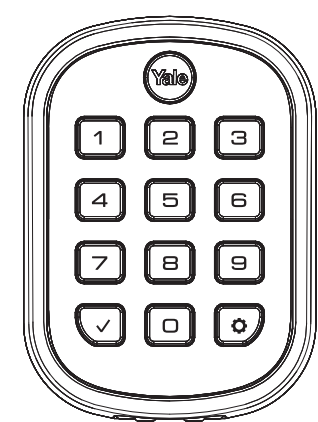

Before you begin

**DOWNLOAD
THE BILT APP**

for step-by-step installation
instructions & to register
your product




FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DAMAGE TO
THE PRODUCT AND VOID THE FACTORY WARRANTY
ISL-2021-00-004 Ver.2
An ASSA ABLOY Group brand P/N YRD137-MNL-0008 Rev A

An ASSA ABLOY Group brand


P/N YRD137-MNL-0008 Rev A

ASSA ABLOY


Preparing Door and Keypad Escutcheon

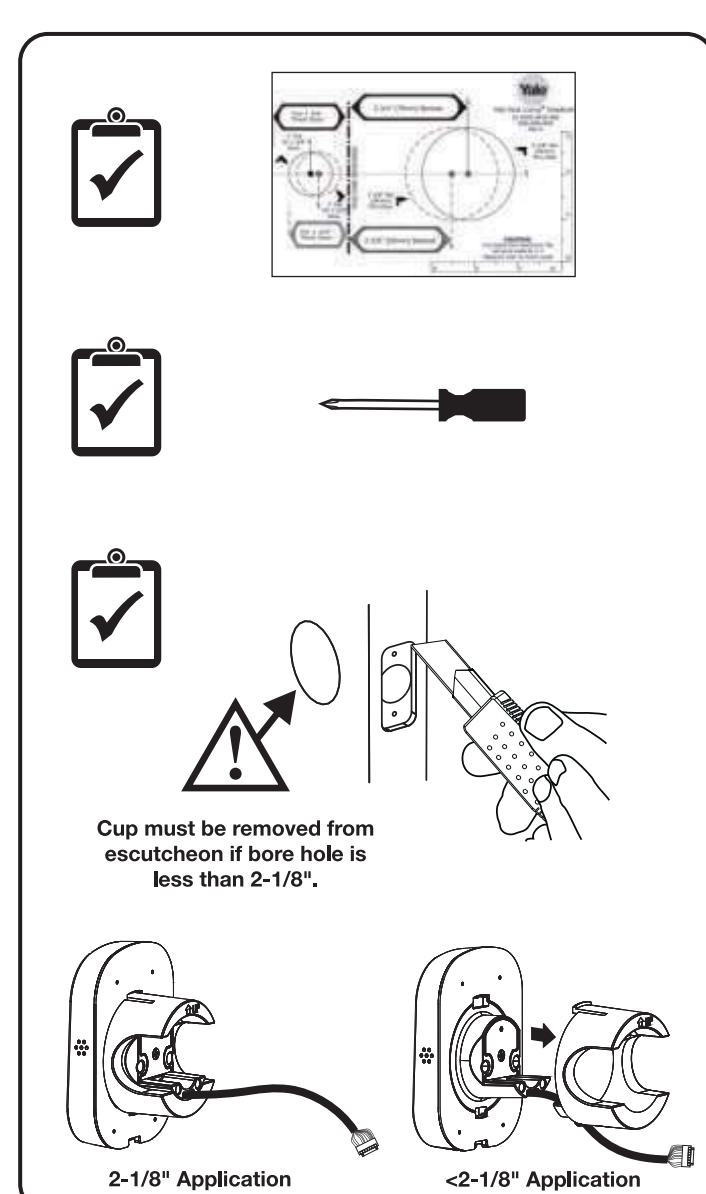


1 Installing Latch & Strike Plate

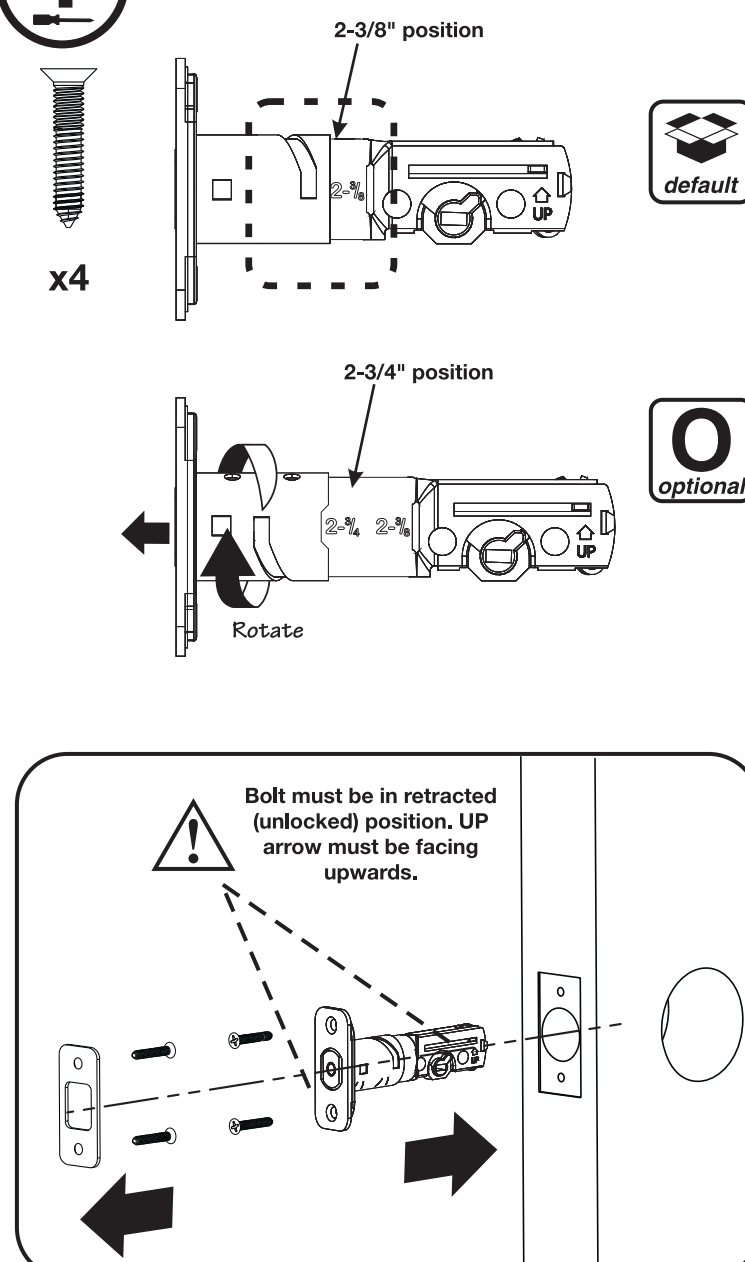


2 Installing Keypad Escutcheon

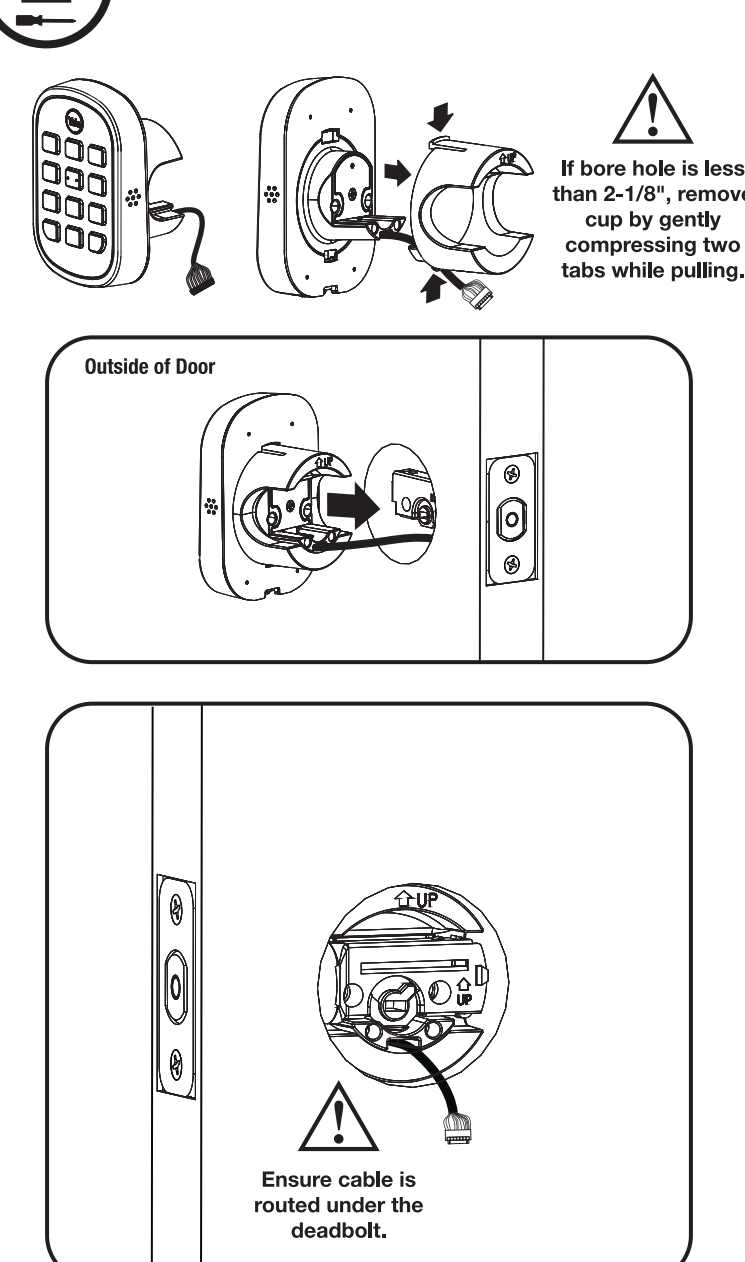


3 Installing Interior Mounting Plate

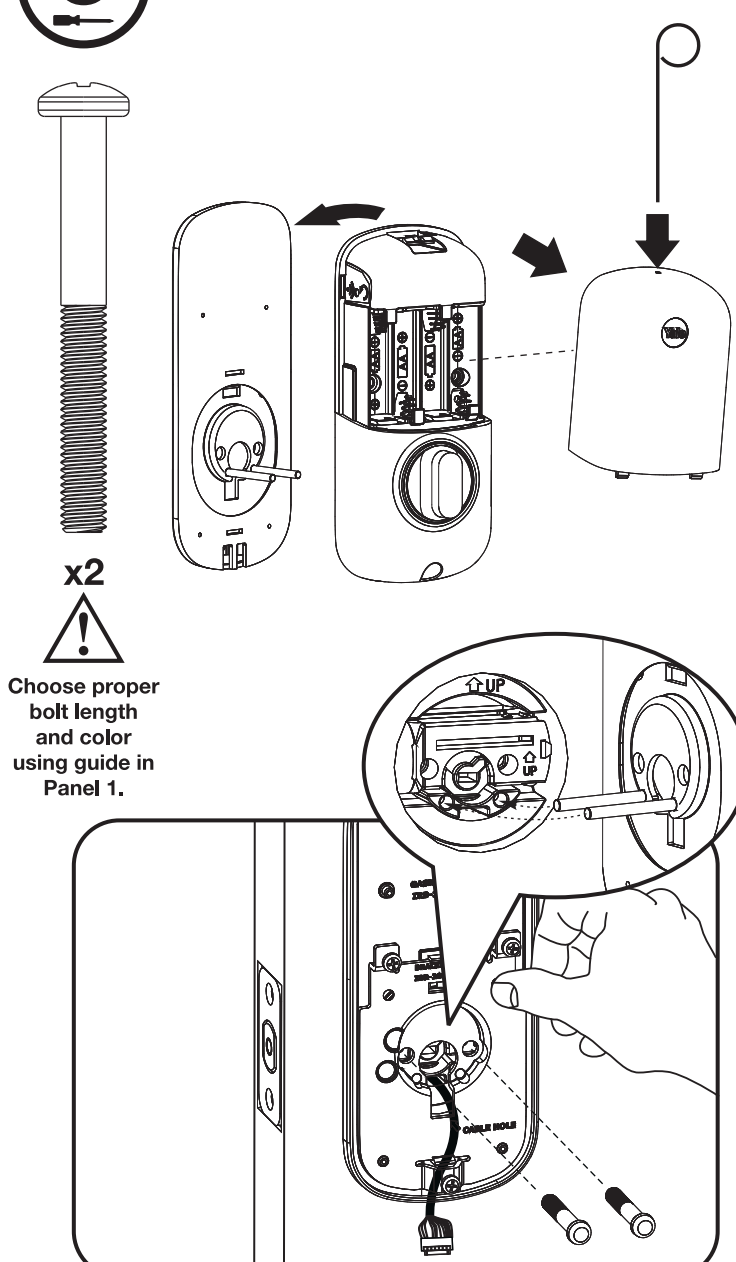


4 Attaching the Cable Assembly

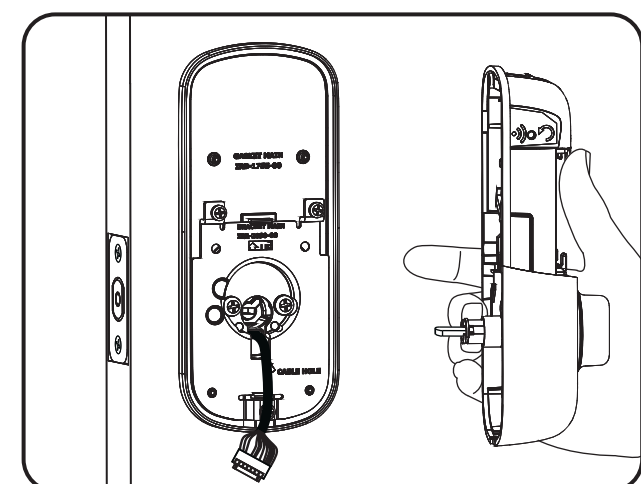


5 Installing Interior Escutcheon

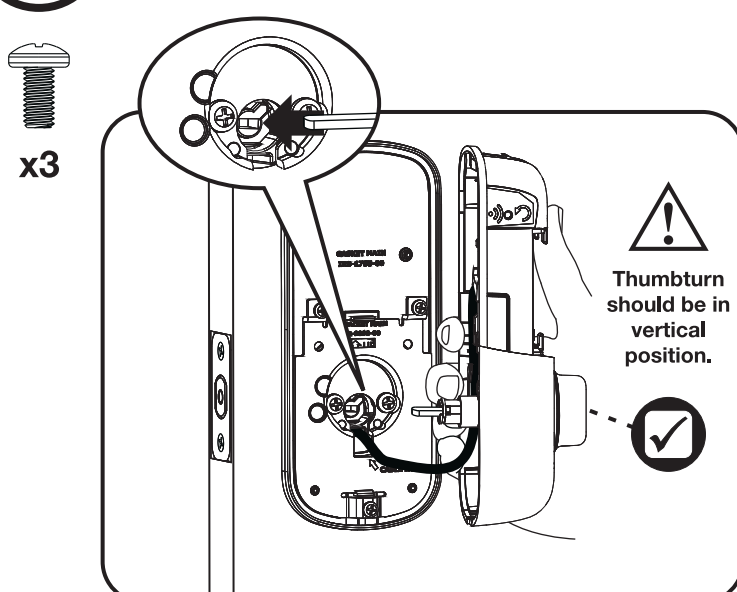






Testing Operation

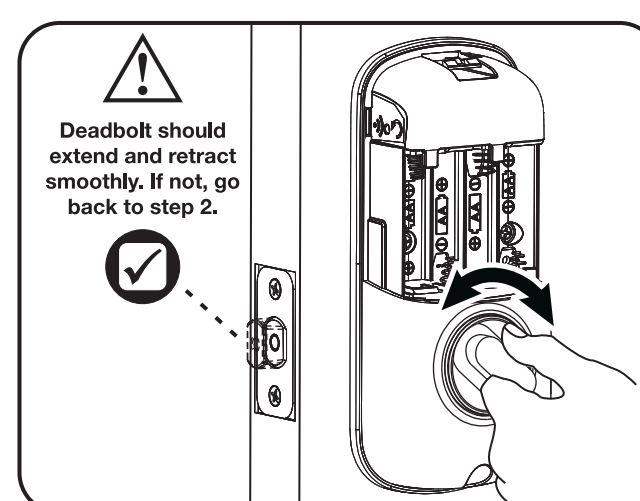

Initial Programming

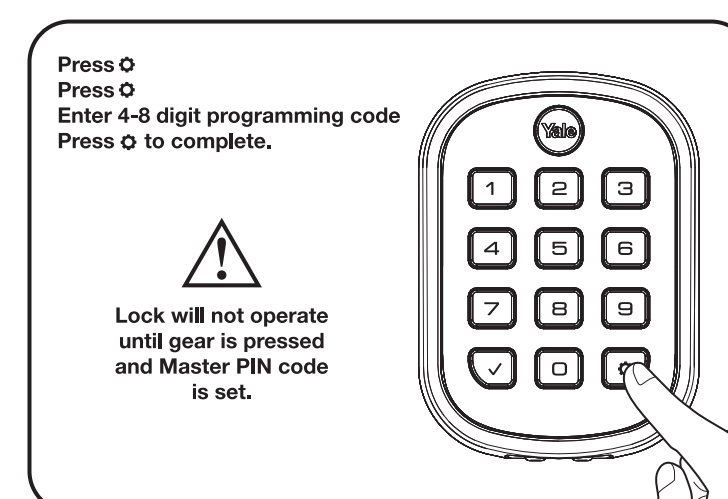

6 Installing Cover

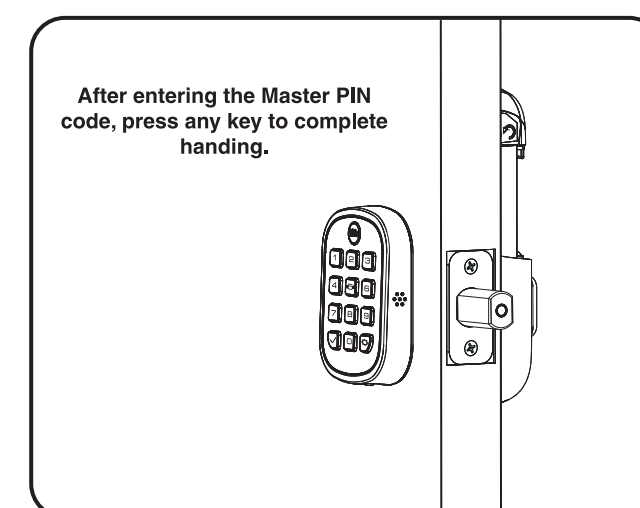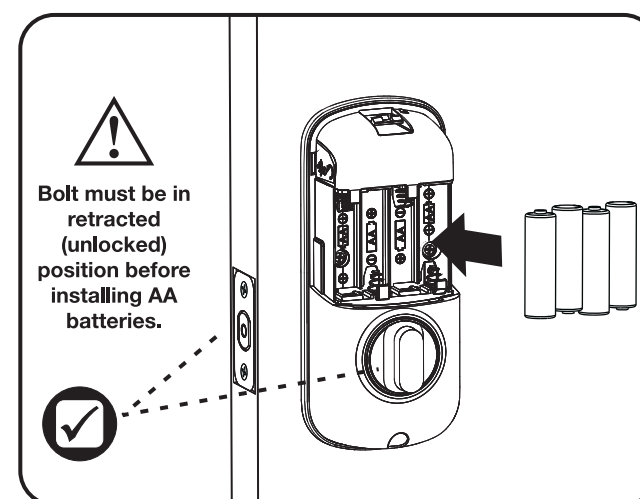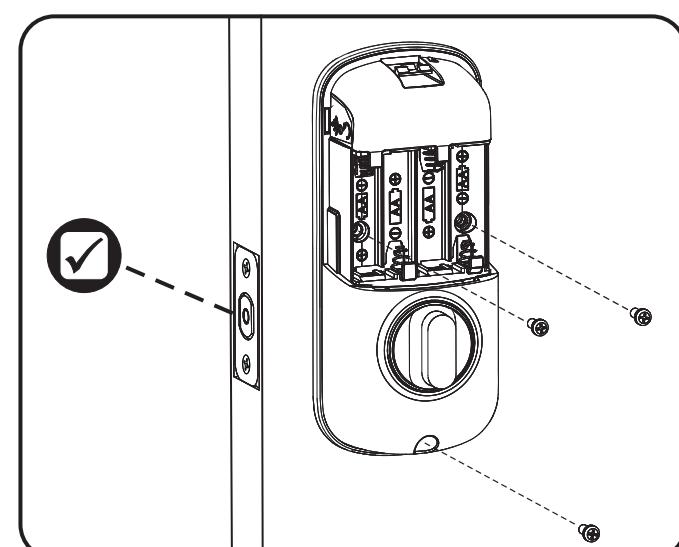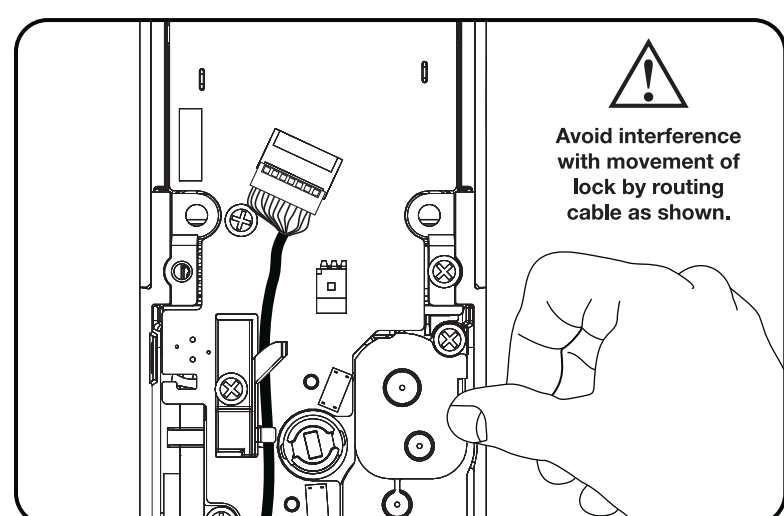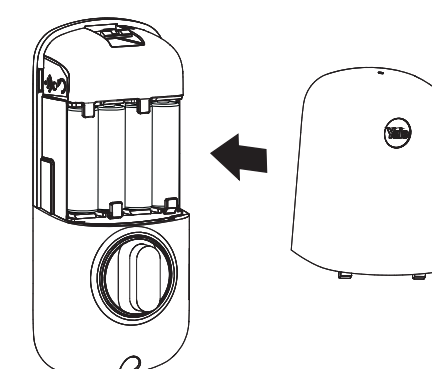

Congratulations, you've installed the Yale® ProSL Key Free Keypad Deadbolt with Z-Wave Plus! Turn sheet over for Programming Instructions to customize your product.

