
Yale real Living

Yale Real Living® YRD 156 Key Free Touchscreen Deadbolt with Z-Wave Plus Installation and Programming Instructions



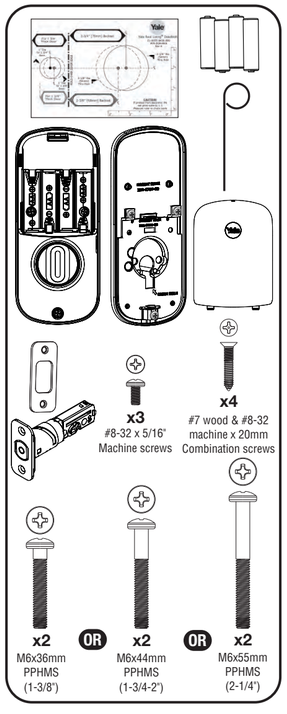

Before you begin

DOWNLOAD THE BILT APP

for step-by-step installation instructions & to register your product



BILT.


FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT AND VOID THE FACTORY WARRANTY


An ASSA ABLOY Group brand

P/N AYRD-156-INST-FUL Rev A


ASSA ABLOY

Preparing Door and Touchscreen Escutcheon

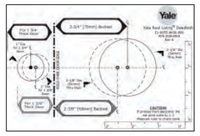

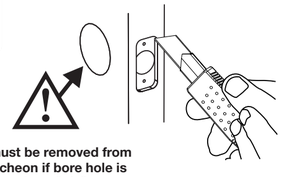

Cup must be removed from escutcheon if bore hole is less than 2-1/8".

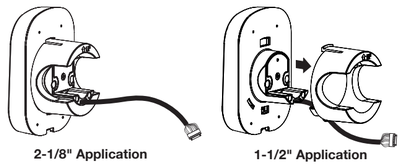


2-1/8" Application

1-1/2" Application

1 Installing Latch & Strike Plate




x4

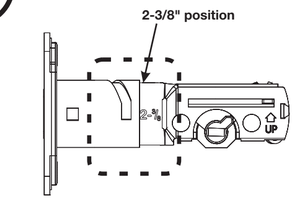


default


optional

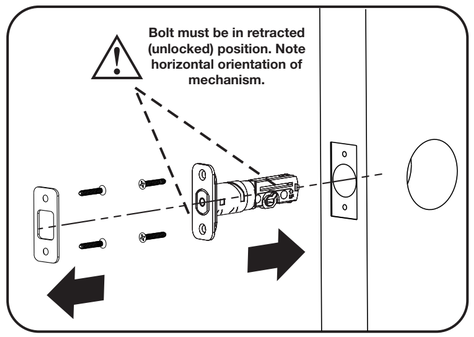


2 Installing Touchscreen Escutcheon

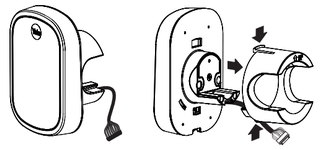

If bore hole is less than 2-1/8", remove cup by gently compressing two tabs while pulling.

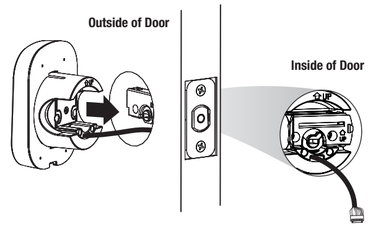


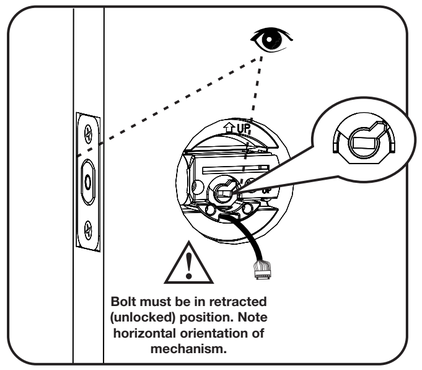


3 Installing Interior Mounting Plate





x2

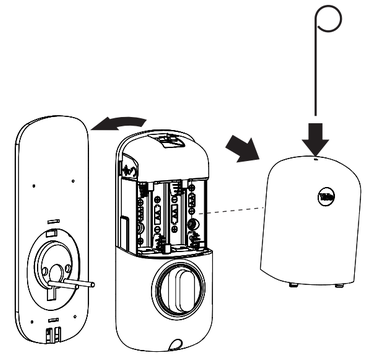

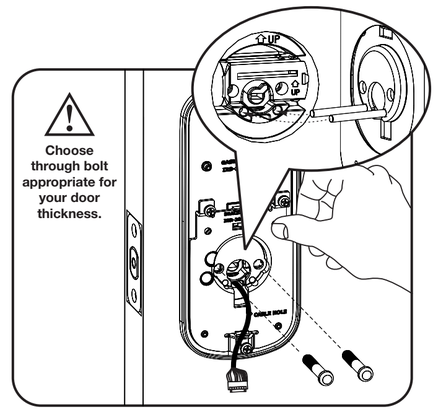

4 Attaching the Cable Assembly

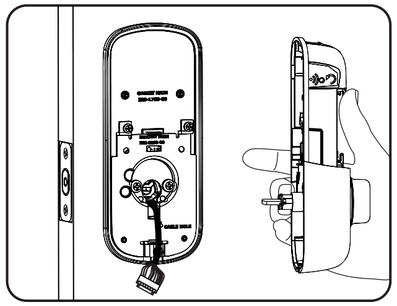


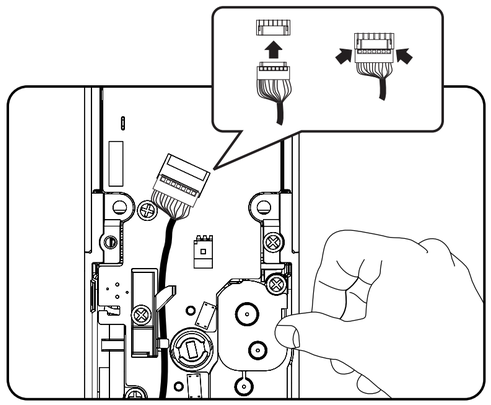


5 Installing Interior Escutcheon





x3

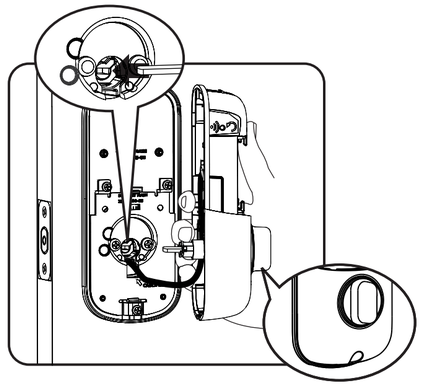

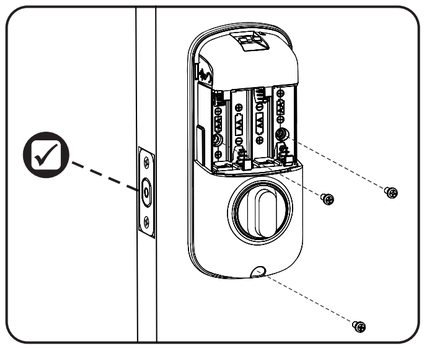



Testing Operation

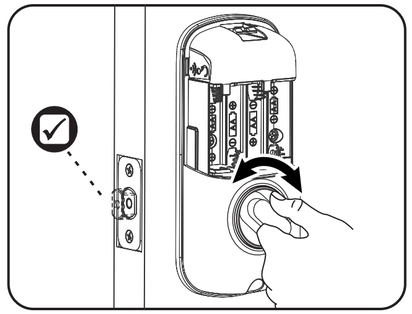

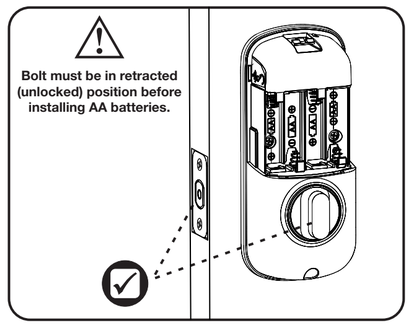


Handing the Lock

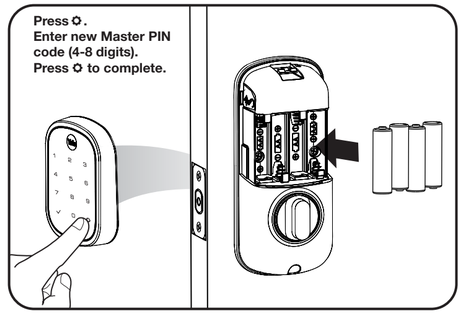

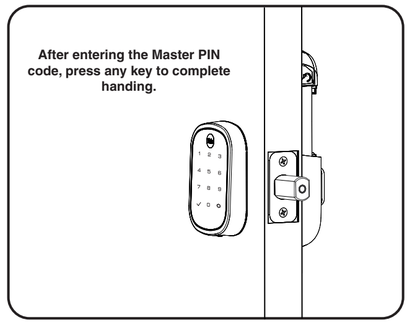

6 Installing Cover

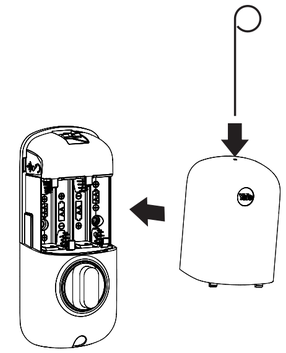

Congratulations, you've installed the Yale Real Living® YRD 156 Key Free Touchscreen Deadbolt with Z-Wave Plus!
Turn sheet over for Programming Instructions to customize your product.

DRAFT