


Yale

*nex*Touch®
Touchscreen and Push-Button Access Mortise
Installation and Programming Instructions

Need a separate instructions for PB from TS. PB wake up is different.

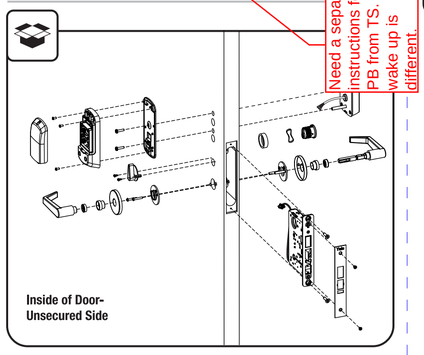

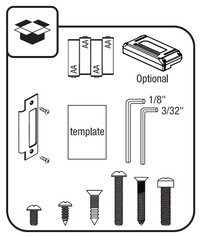

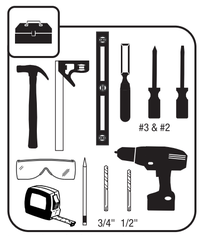


Retrofitting or modifying this product may impact fire rating, safety features and warranty. Consult with code specifications to ensure compliance with all codes and ratings.


An ASSA ABLOY Group brand
P/N 80-9086-0030-010 (05-17)
ASSA ABLOY

Determining Handing


The hand of a door is determined from the secure side of the door. The term "secure" means the side from which you initially unlock and enter.

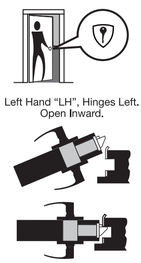


Left Hand "LH", Hinges Left. Open Inward.

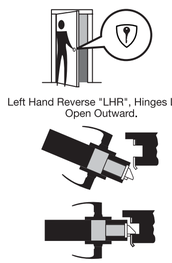

Left Hand Reverse "LHR", Hinges Left. Open Outward.

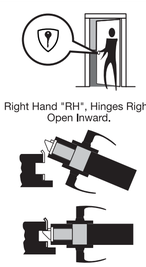



Right Hand "RH", Hinges Right. Open Inward.

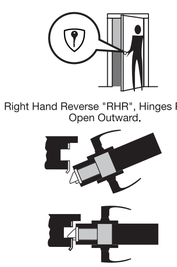


Right Hand Reverse "RHR", Hinges Right. Open Outward.


1 Handing Latchbolt & Hubs

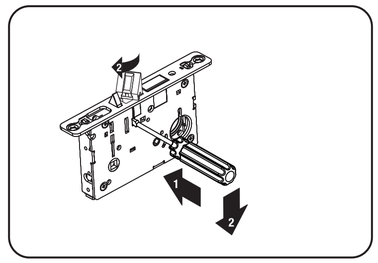

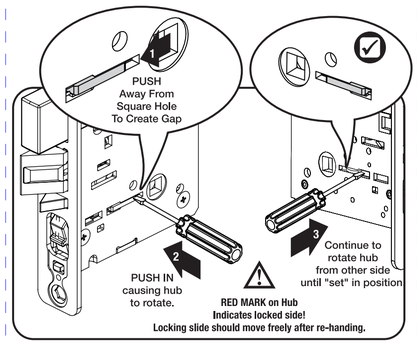

2 Preparing Door

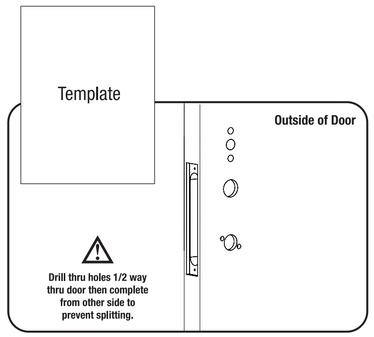


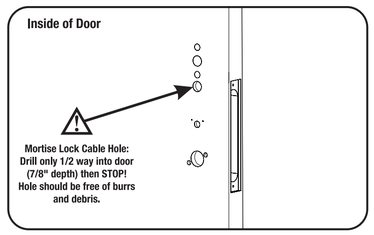

3 Preparing Frame & Installing Strike

#12-12-24 x 1" WS


x2

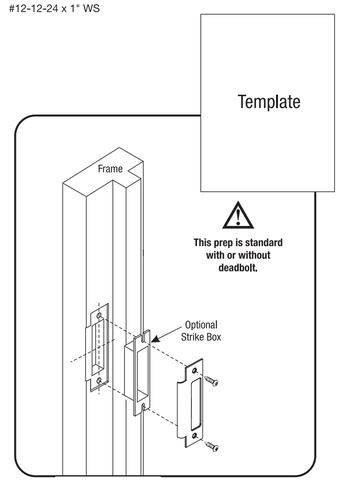


4 Installing Lockbody

#12-24UNC-2A

x2

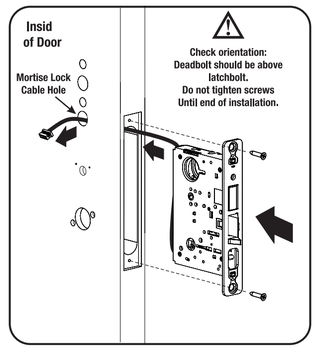

5 Installing Cylinder (if applicable)

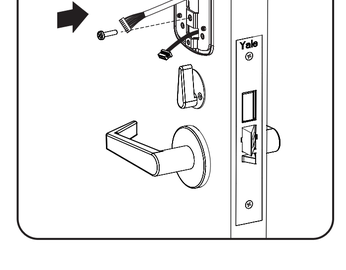


STOP **Test cylinder operation before continuing.**

6 Installing Rose Trim - all types (if applicable)

8x32 x 1" PH with Thread Locker

x2

Choose fasteners appropriate for your door thickness.

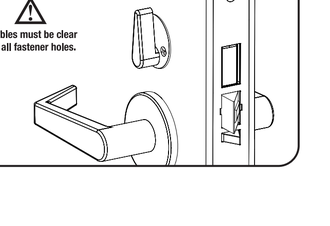


7 Installing Thumbturn

#6 3/8" OH PH SM


x2

8 Preparing Levers Not Including SL Trim

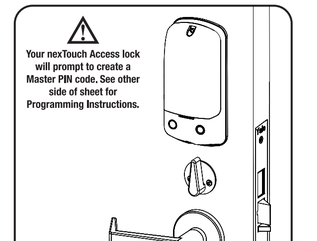

9 Installing Levers Not Including SL Trim

STOP Test Operation

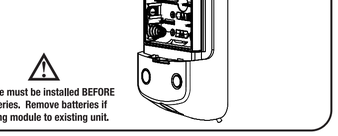

10 Installing Armor Front

8x32-1/4" FHPMS

x2

STOP **Test Operation Again**

11 Installing Exterior Escutcheon

12 Installing Interior Mounting Plate

#10x32 UNF

Choose fasteners appropriate for your door thickness.

x2

13 Attaching Cables

14 Installing Interior Escutcheon

#8x32 UNF

x3

15 Installing Batteries & Cover

Installation Options

Adjusting for Doors Larger than 1-3/4" *(if necessary)*

Use screw pack for thicker door at step 6.
Use appropriate fastener lengths for your door to ensure proper installation.

Network or Yale Accentra Key Module

Congratulations, you've installed the Yale nexTouch® Access Mortise Lock!

Turn sheet over to customize your product.

DRAFT

Space for layout tweaking.