




Photograph 1: Set-up for Conducted Emission on AC Mains

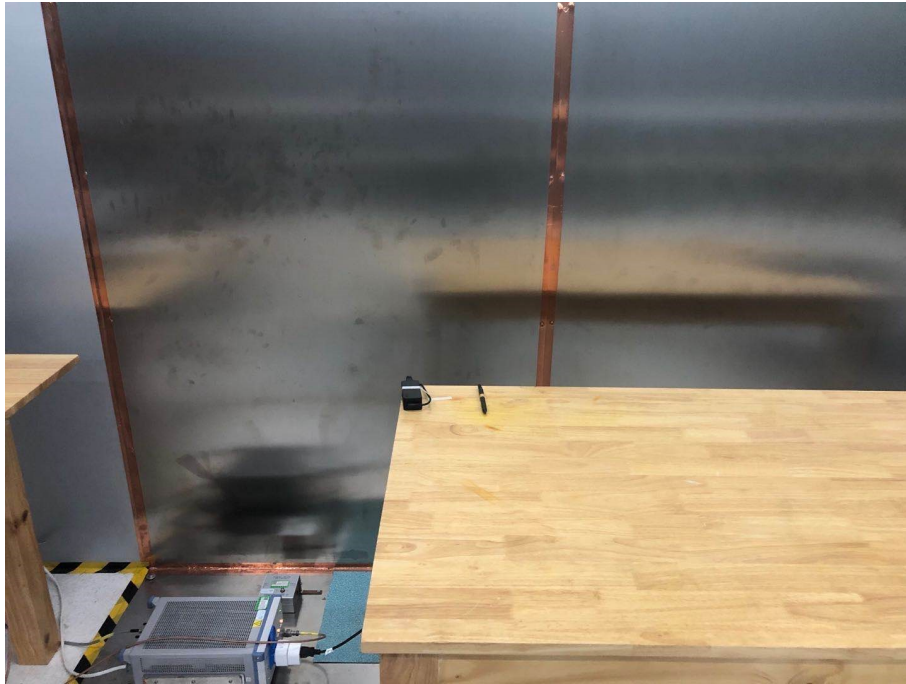


Photograph 2: Set-up for Radiated Emission, below 1GHz

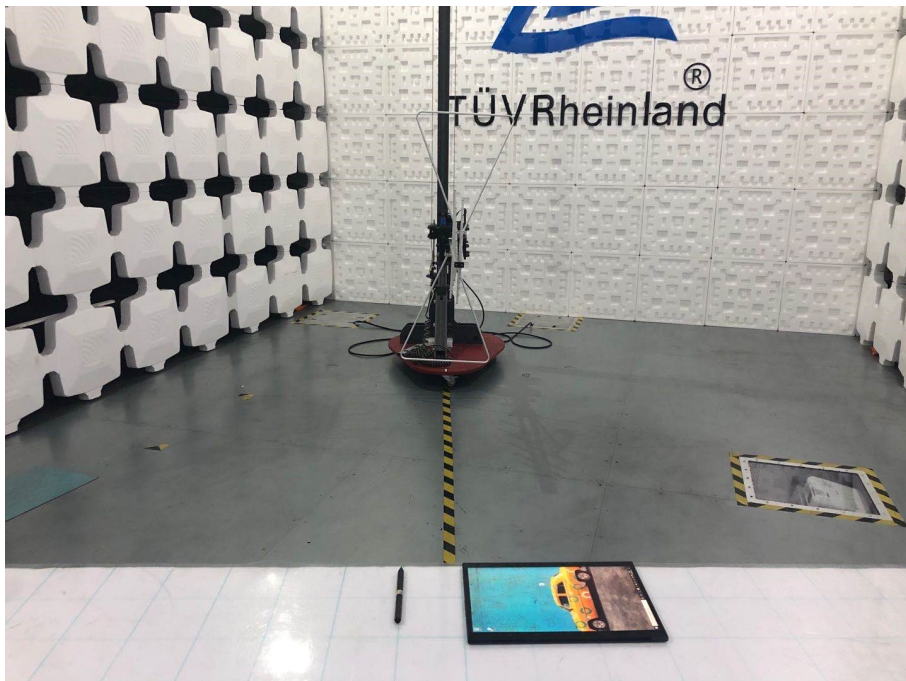


Photograph 3: Set-up for Radiated Emission, above 1GHz

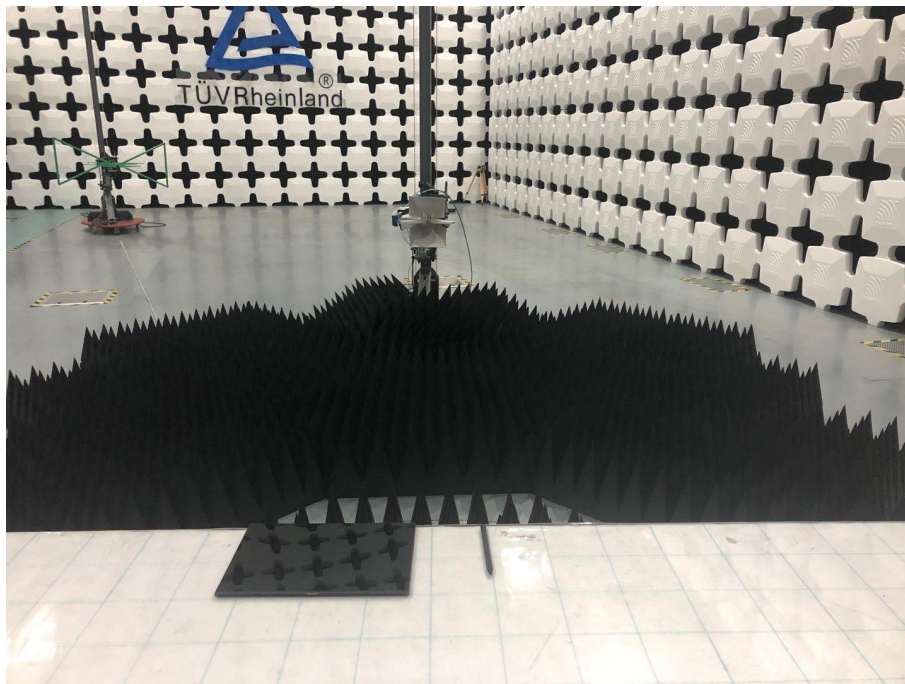

Photograph 4: Set-up for Radiated Spurious Emission, below 30MHz

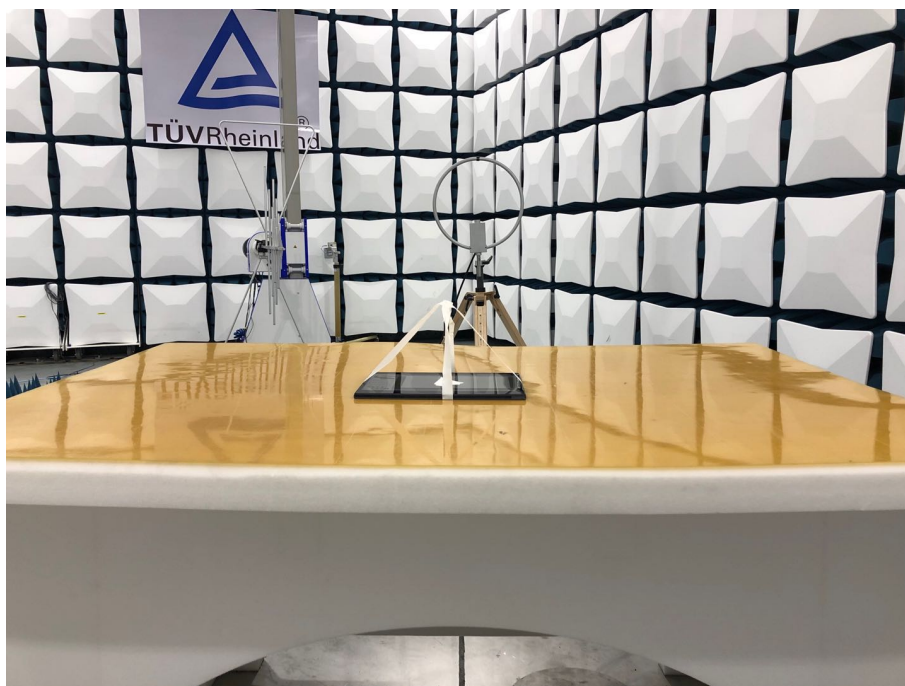

Photograph 5: Set-up for Radiated Spurious Emission, below 1GHz

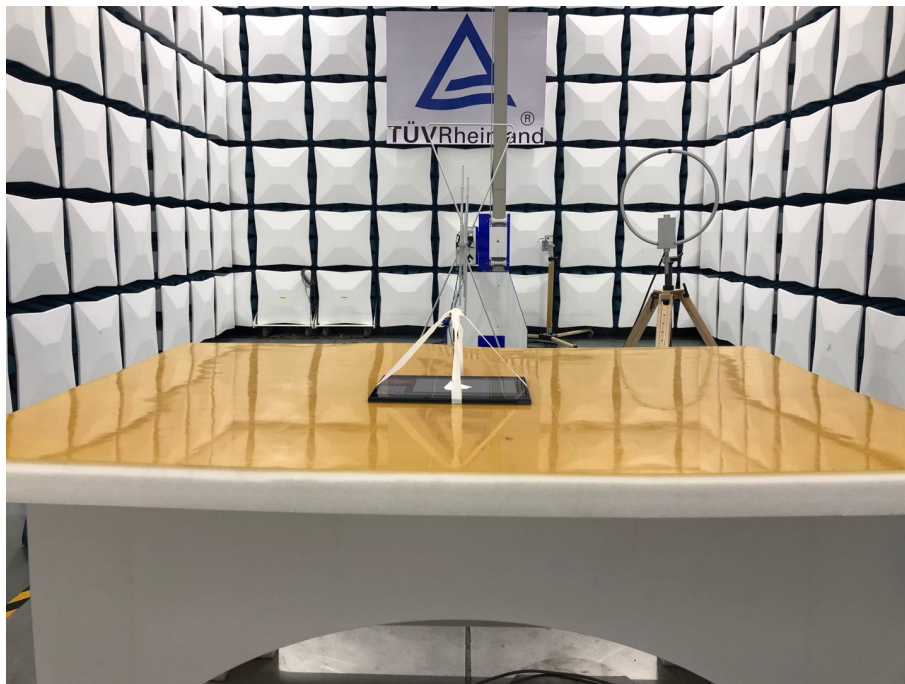

Photograph 6: Set-up for Radiated Spurious Emission, above 1GHz

