


REV	DESCRIPTION	DATE	SIGN	APP.
A	ECO#14693	10/23/17	AO	JM

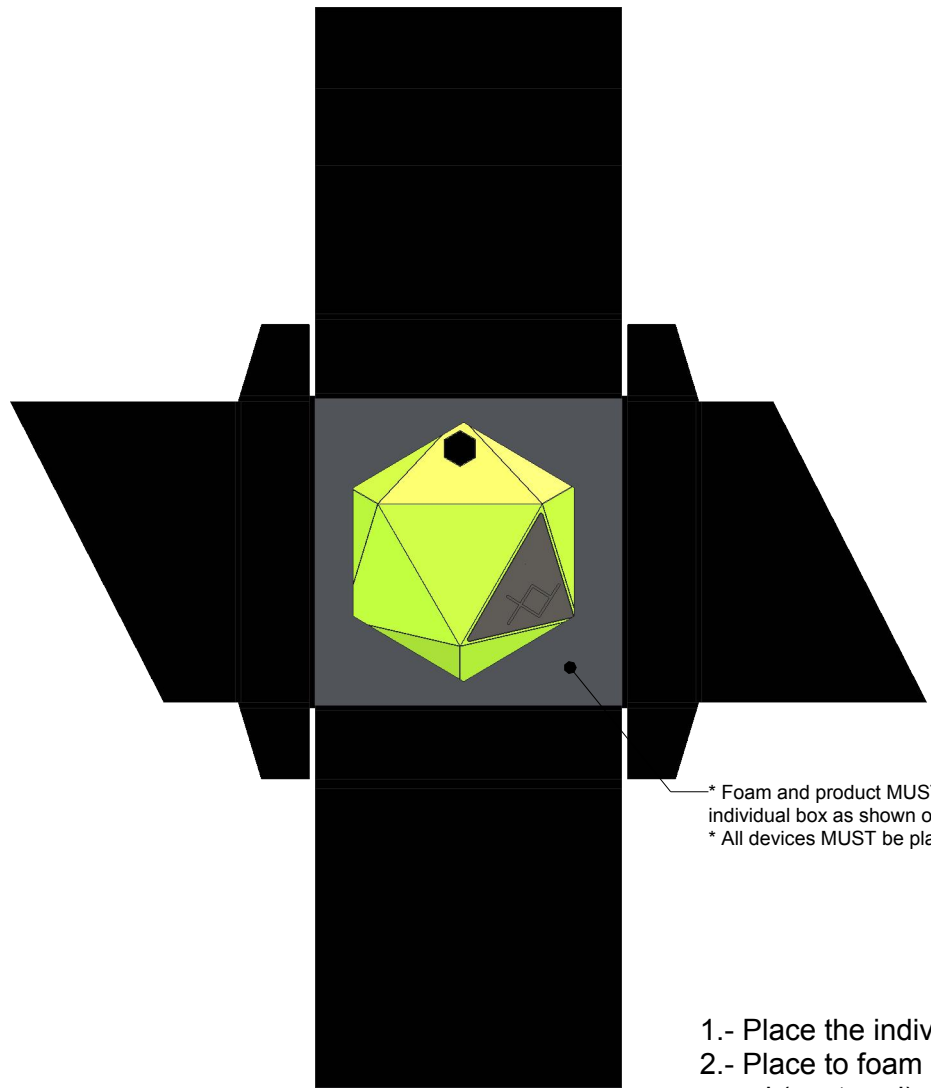

Label Bottom QR Code
FCC: 2ADLNXY4D1
IC: 12506A-XY4D1
XY4D

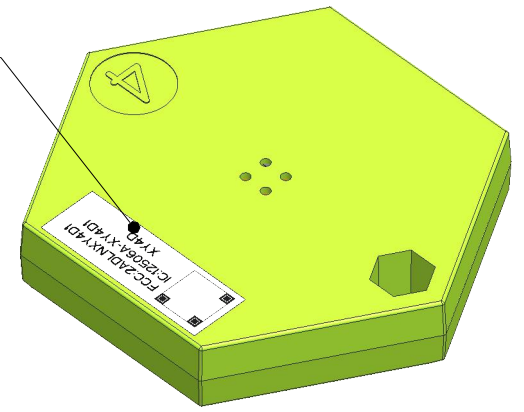



Figure # 3.- FCC & IC label location on product.

—* Foam and product **MUST** be placed into the individual box as shown on this picture.
* All devices **MUST** be placed in the same position.

- 1.- Place the individual box over a flat surface.
- 2.- Place to foam individual XY4 over larger individual box panel (centered).
- 3.- Stick the label bottom QR code over final assy device (see picture above with the proper label location).
 - Make sure to use a fixture to place all the labels in the same device location.
 - Label MUST be stick it over device surface.
 - Label should not exceed the top device edge.
- 4.- Insert the device into the foam cavity.
 - Make sure to put all the devices in the same orientation.
- 5.- Place the insert card over top foam surface.
- 6.- Proceed to fold the flaps of individual box as show on page # 2.

UNIT: mm		SCALE: NONE	DESCRIPTION	ISSUED
APPROVED Jose Moranchel 10/23/17	CHECKED Jose Moranchel 10/23/17	DESIGNED Alejandro Osuna 10/23/17	XY4 Candy box packaging Assy	
			DRAWING NO.	
			RXX9000N5001EB	
SMK Manufacturing, Inc.			SIZE: B	SHEET: 1 OF 5
				REV. A