



1.1 Set-up for Conducted RF test at Antenna Port

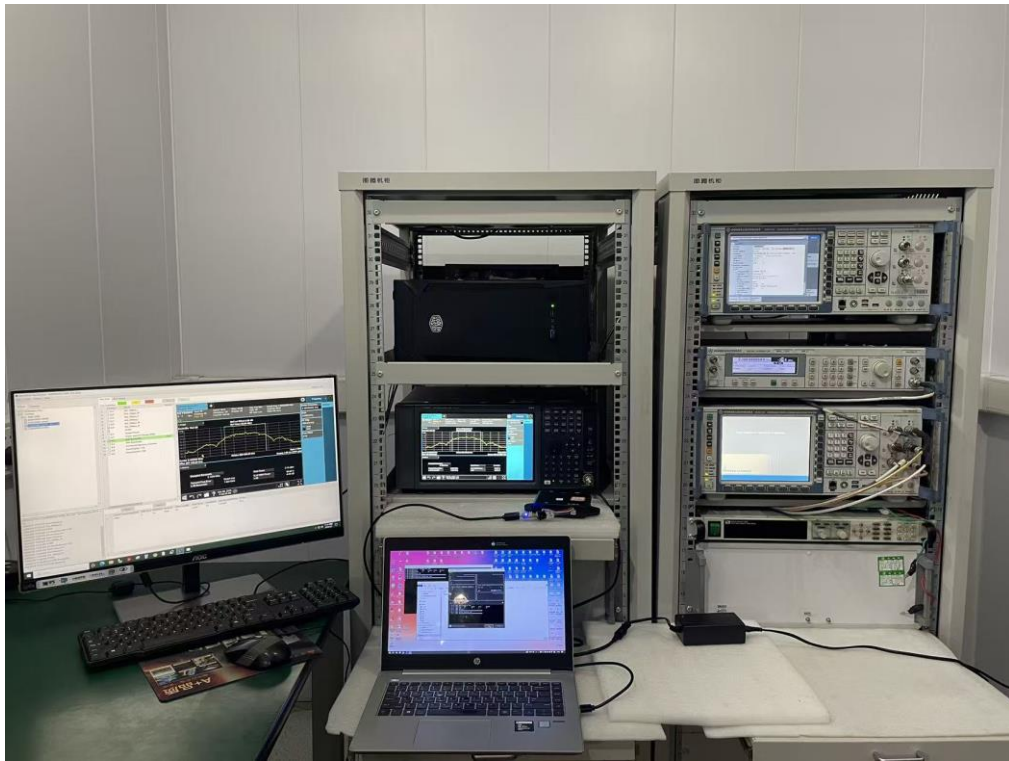


BLE

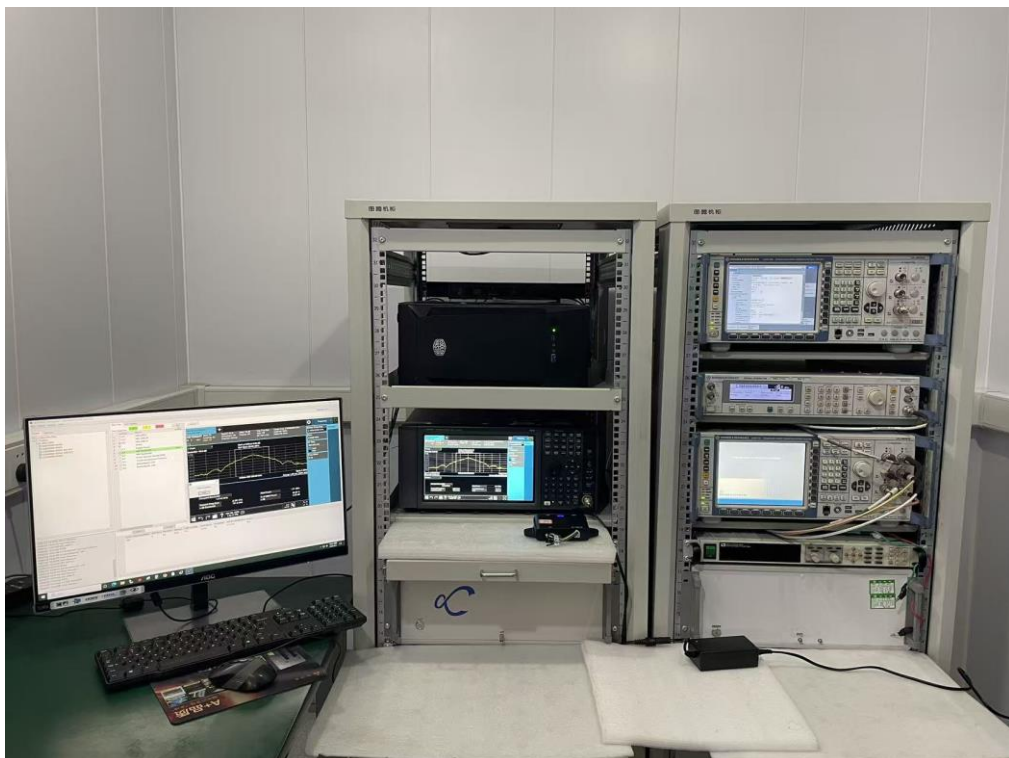


SRD

1.2 Set-up for Conducted Emissions on AC Mains

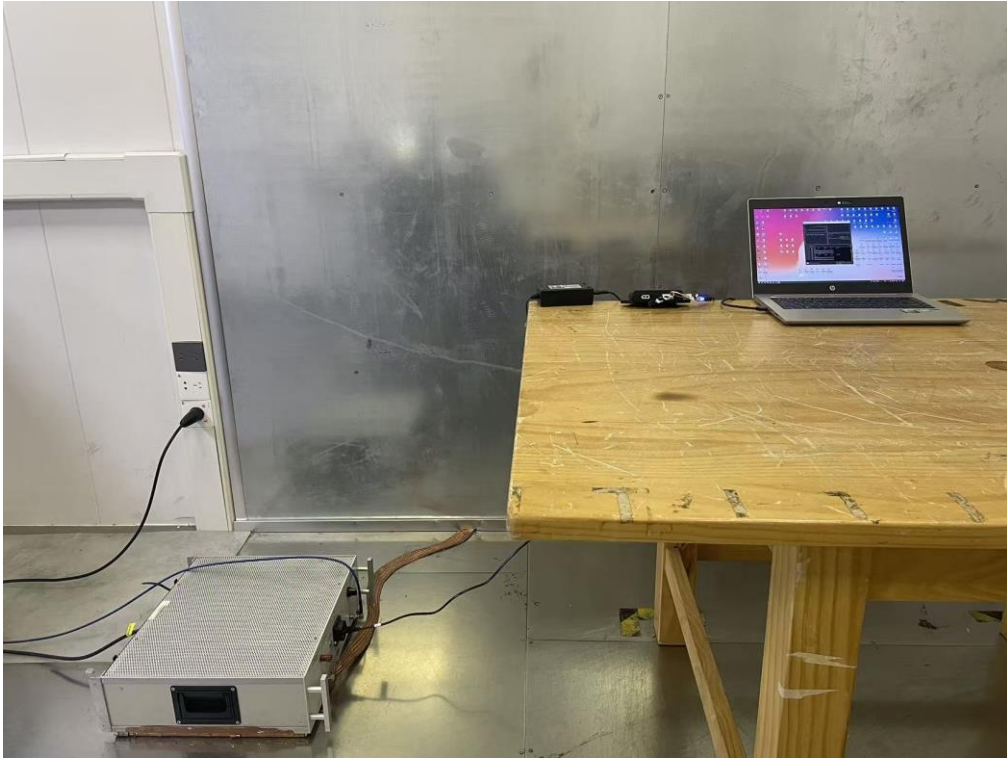


BLE

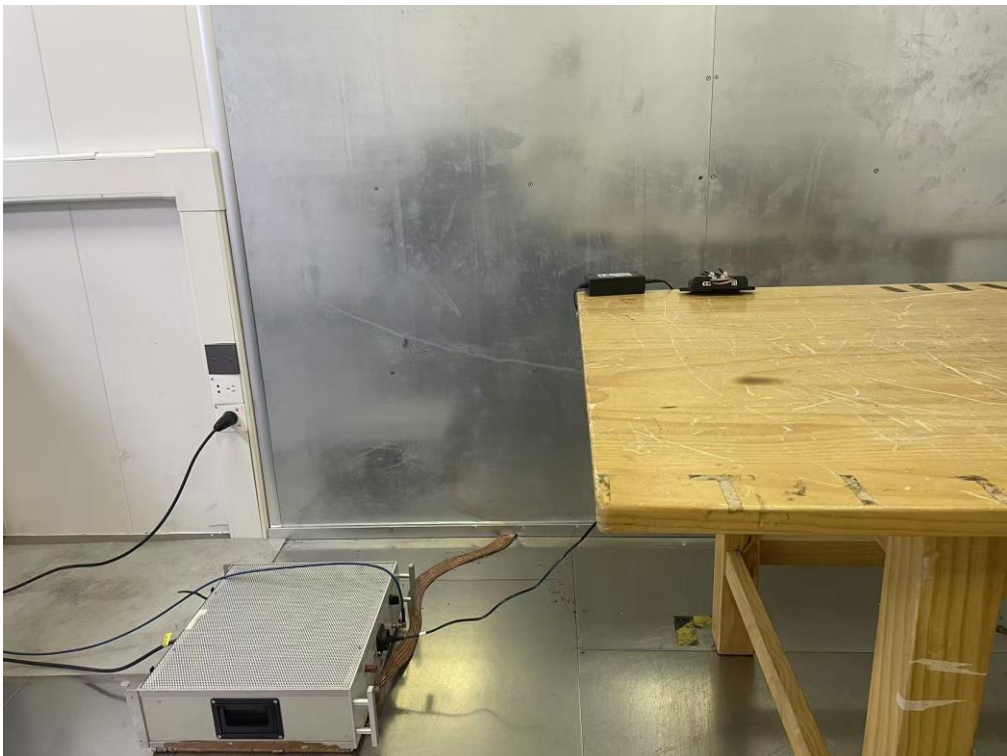


SRD

1.3 Set-up for Spurious Emissions below 1GHz

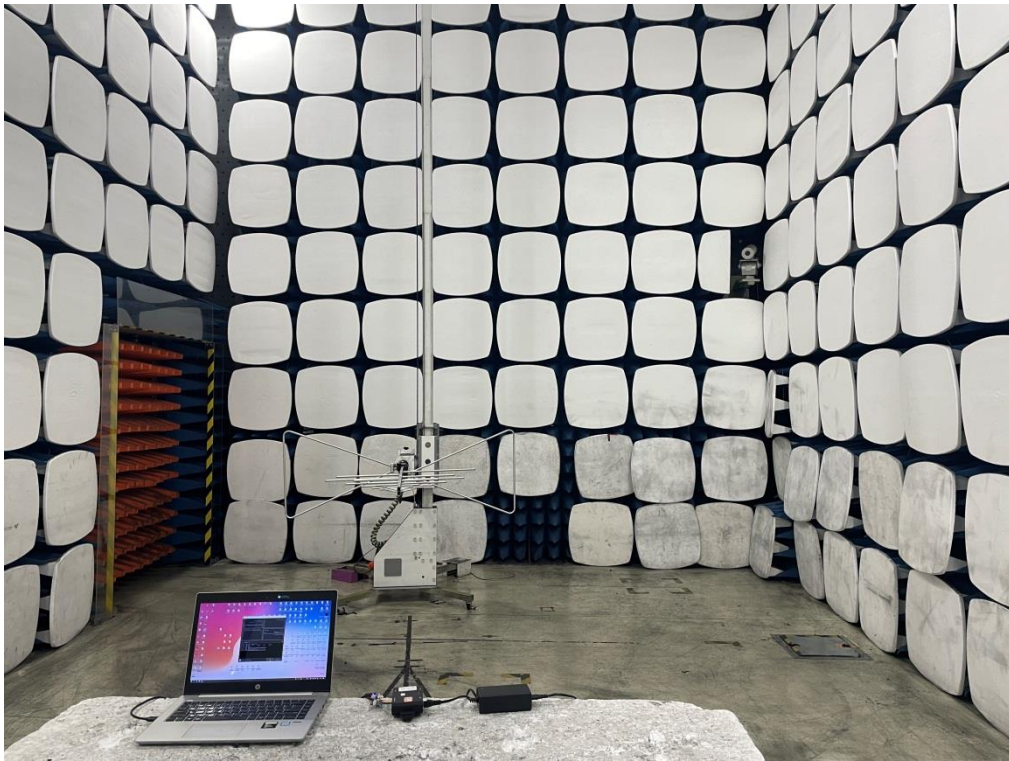


BLE

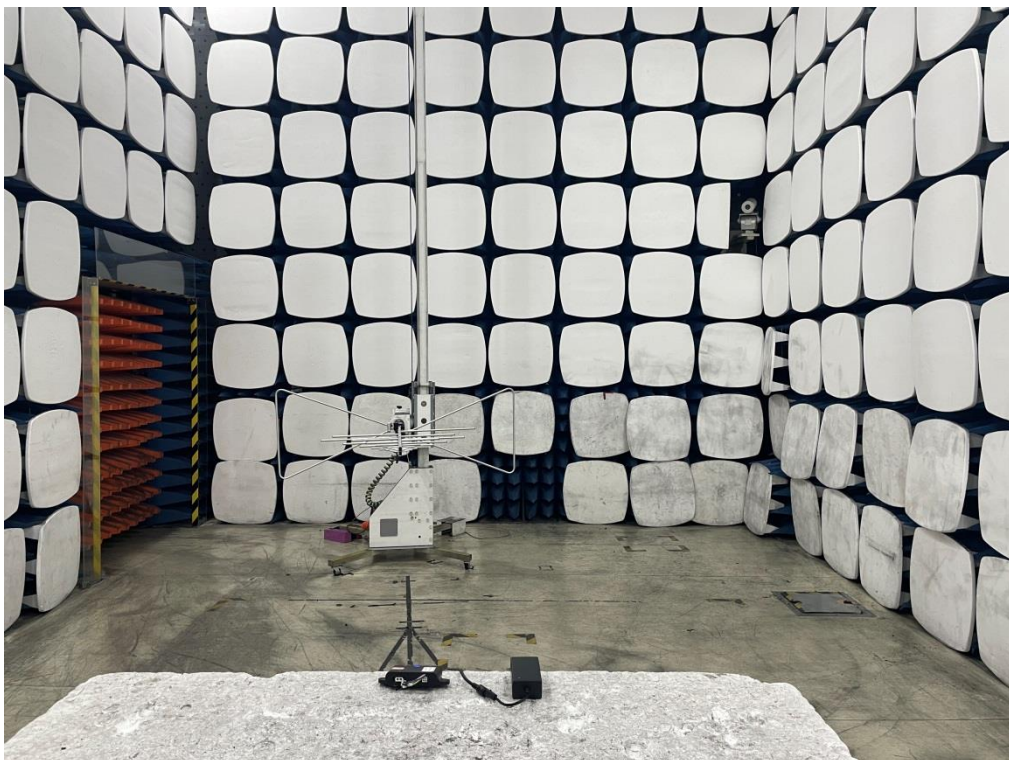


SRD


1.4 Set-up for Spurious Emissions above 1GHz

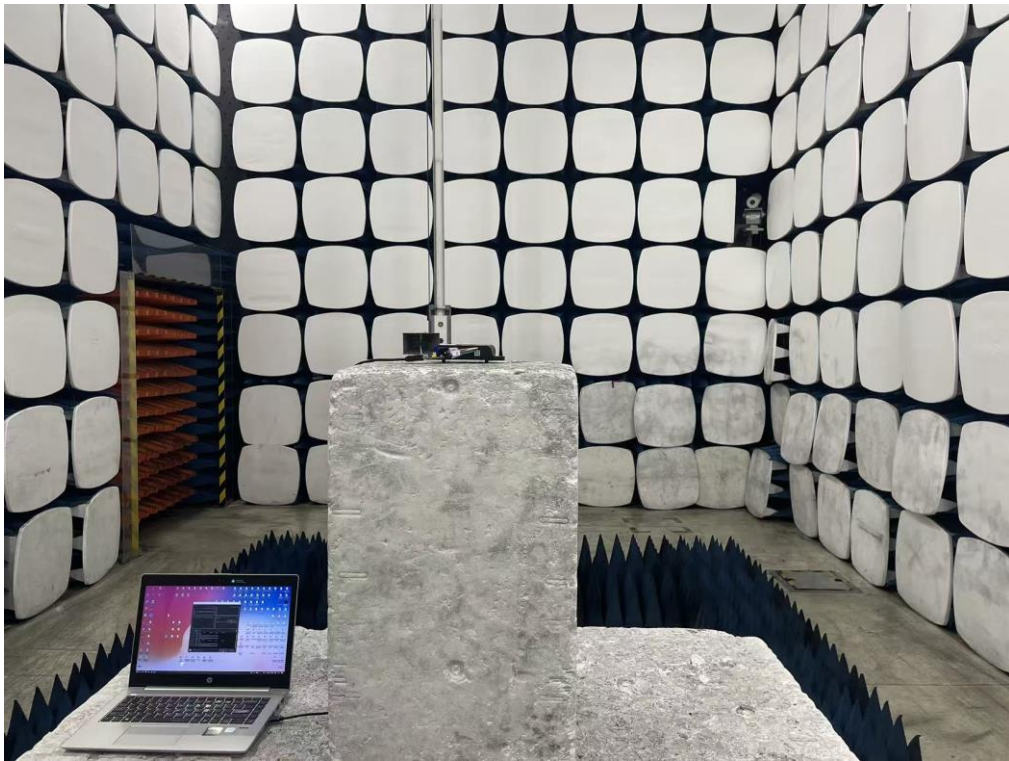


BLE(1G-18G)

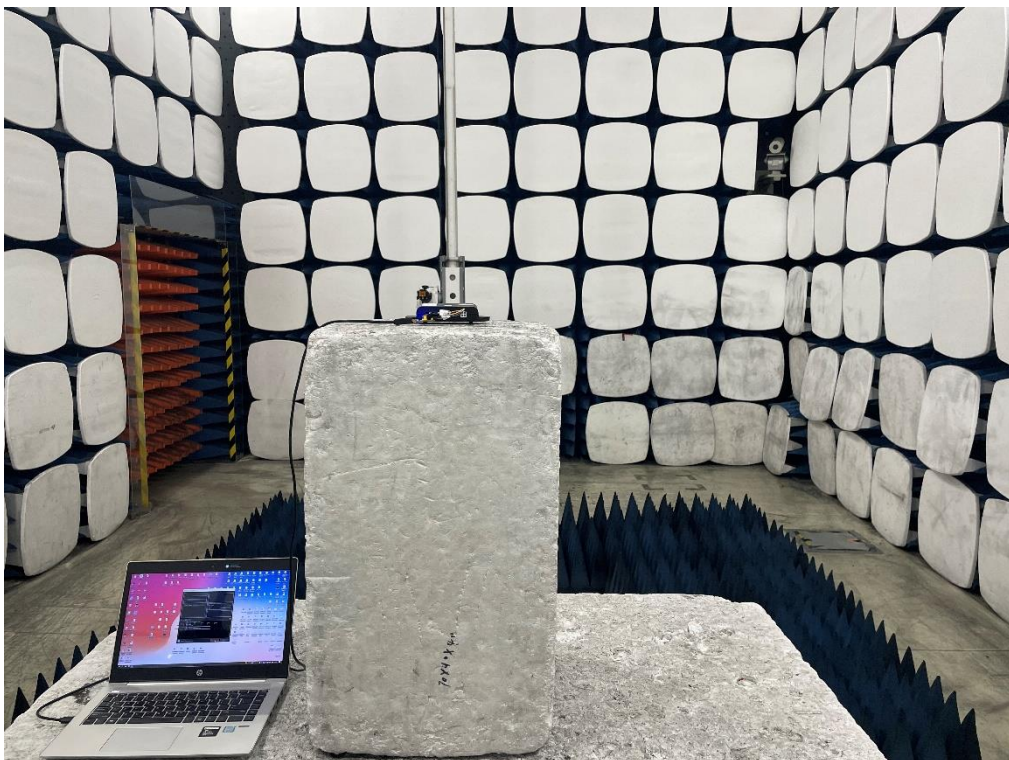

BLE(18G-25G)

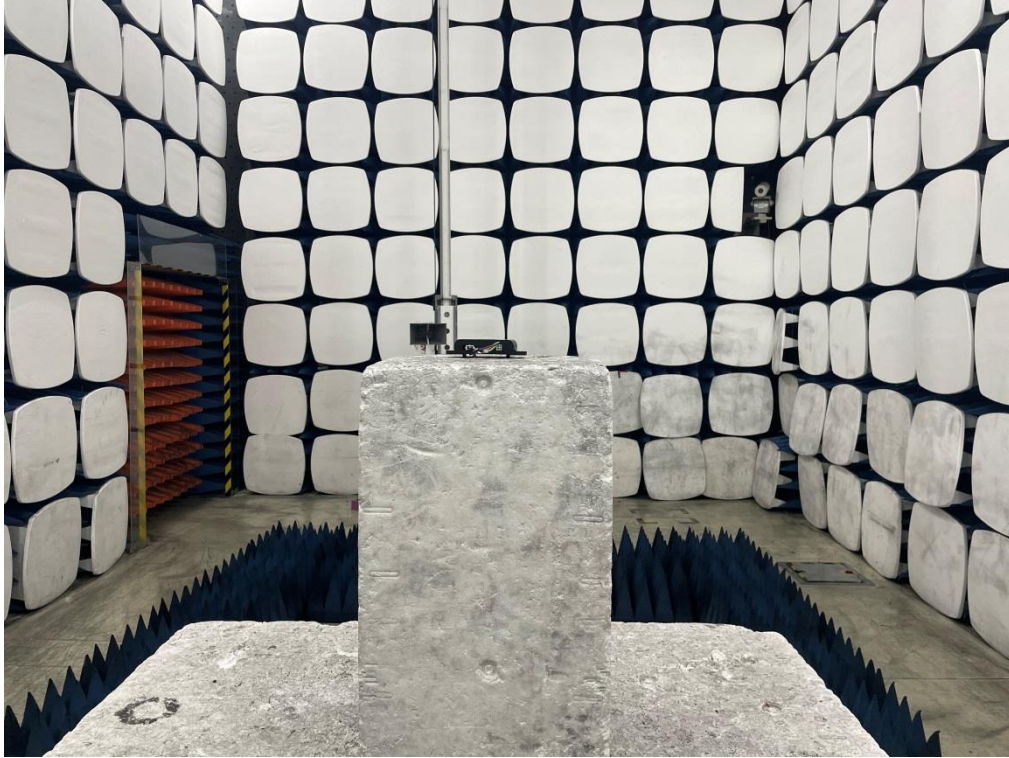

SRD(1G-18G)

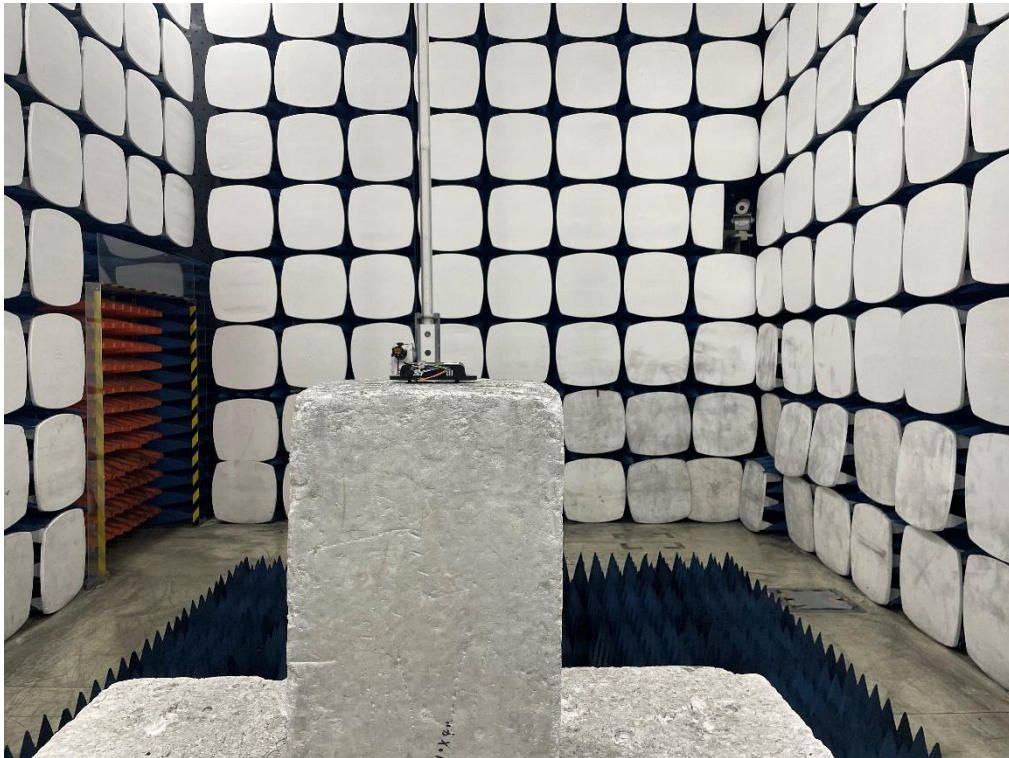

SRD(18G-25G)