


Test setup

Conducted Emission at AC power line



Emissions in frequency bands (below 1GHz)

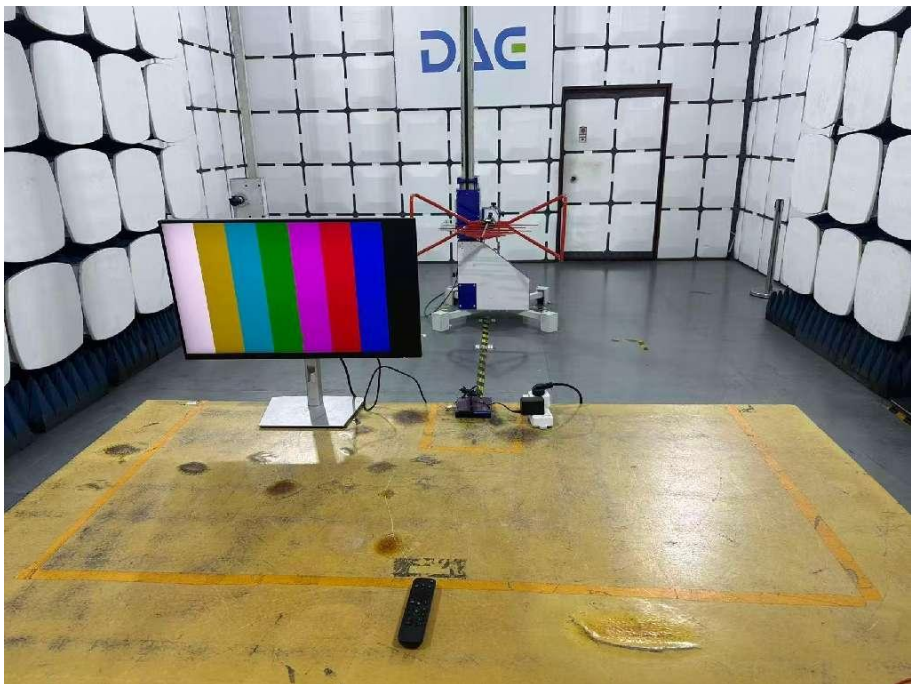

Emissions in frequency bands (above 1GHz)
Band edge emissions (Radiated)

