
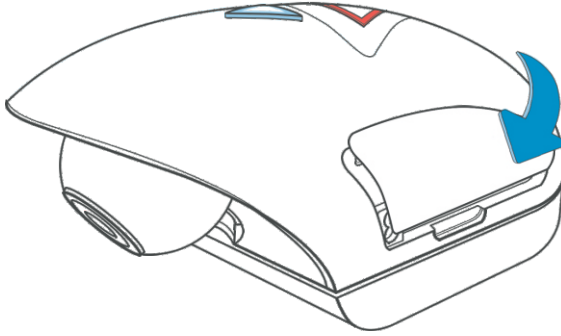


IN VEHICLE INSTALLATION (CONTD.)**3. Replace side cover**

Click the side cover back in to place, with the curved edge engaging firstly.


**4. Remove camera from mount**

Slide the mount towards the camera lens to disengage the mount.

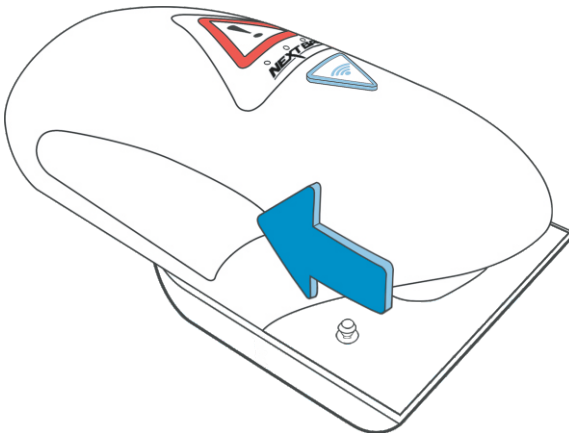

IN VEHICLE INSTALLATION (CONTD.)**5. Remove cable lock**

The cable lock is in the corner of the mount and can be twisted away from the mount itself and then disengaged completely from the mount.

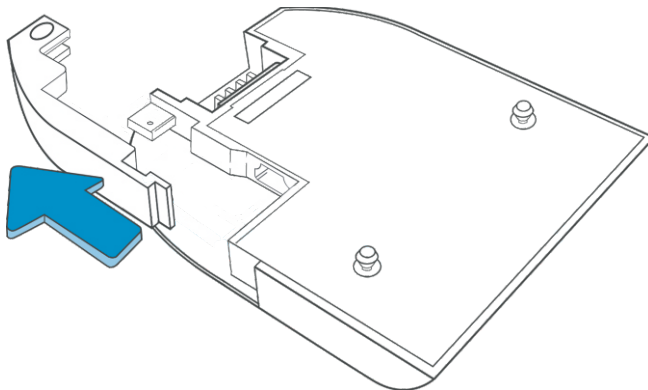**6. Connect power**

Connect the supplied Car Power cable in to the Mini USB socket marked 'For use with 90° connector'.

Note:

- The Nextbase hardwire kit connector will utilize the mini USB socket marked 'For use with straight connector'.

