


ASSEMBLY INSTRUCTIONS

Step 1 (A)

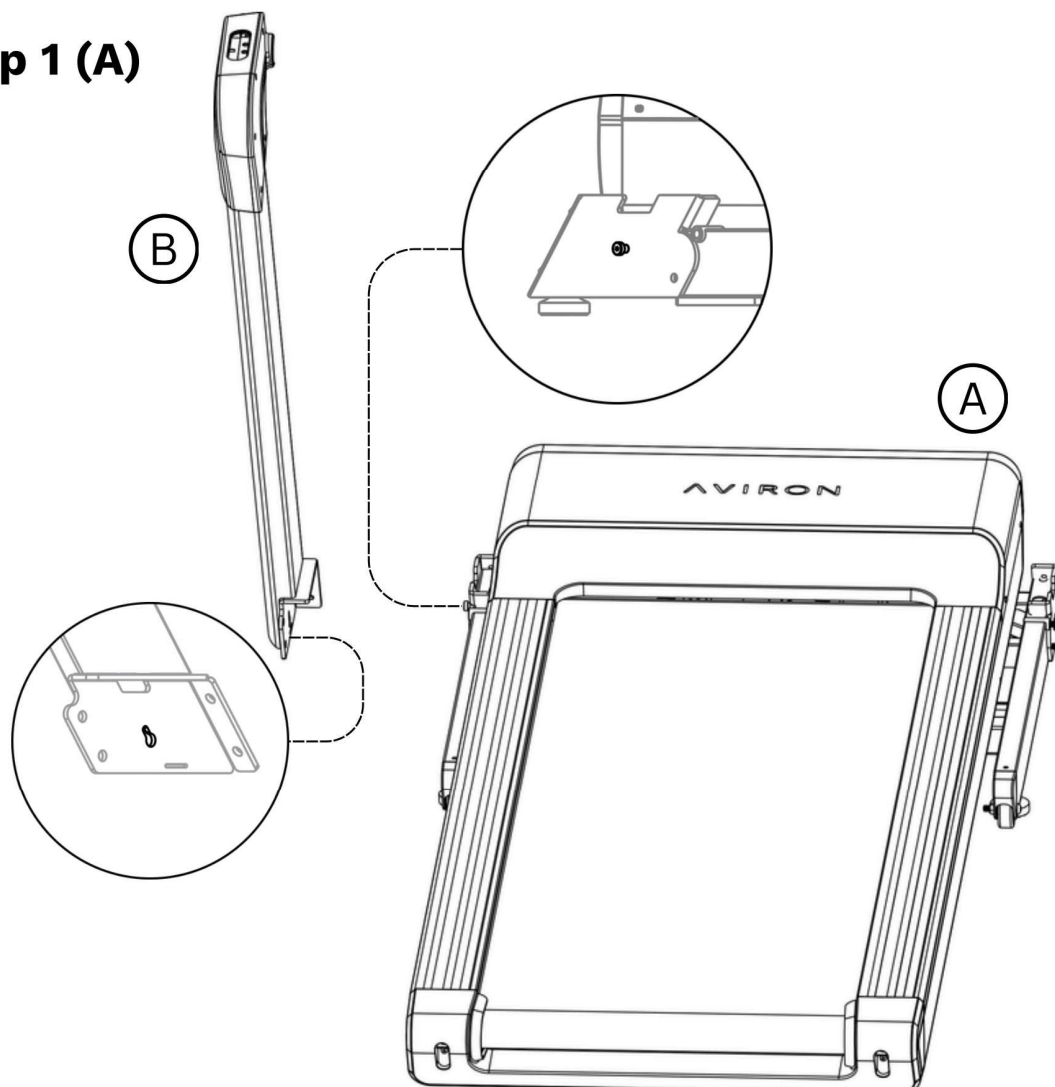

Parts:




Tools:

Fasteners:

Place the Main Frame (A) on a flat and stable ground surface. Bring the Left Upright Post (B) close to the frame, align the screw holes, and hook the Upright Post onto the protruding support bolt located at the Main Frame.

ASSEMBLY INSTRUCTIONS

Step 1 (B)

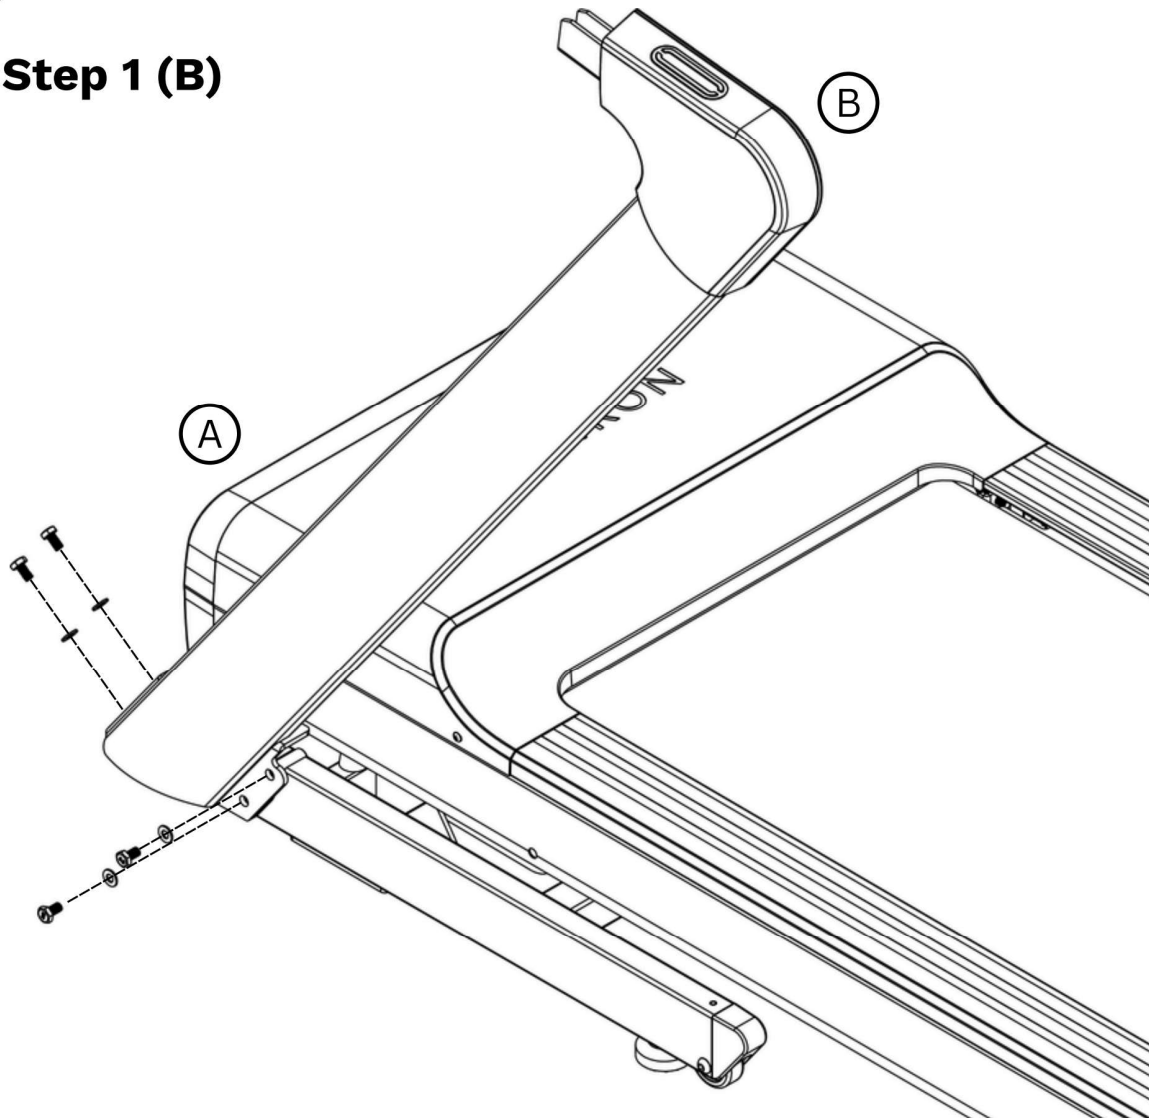

Parts:

(A) (B)

Tools:

(6)

Fasteners:


(F1) (F2)

Secure the assembly with 4x washers (F2) and 4x M10 screws (F1) using the M17 Socket Wrench.

NOTE: Start by loosely fastening the screws, then tighten them evenly in an X-pattern to ensure the strain is properly distributed.

ASSEMBLY INSTRUCTIONS

Step 2 (A)

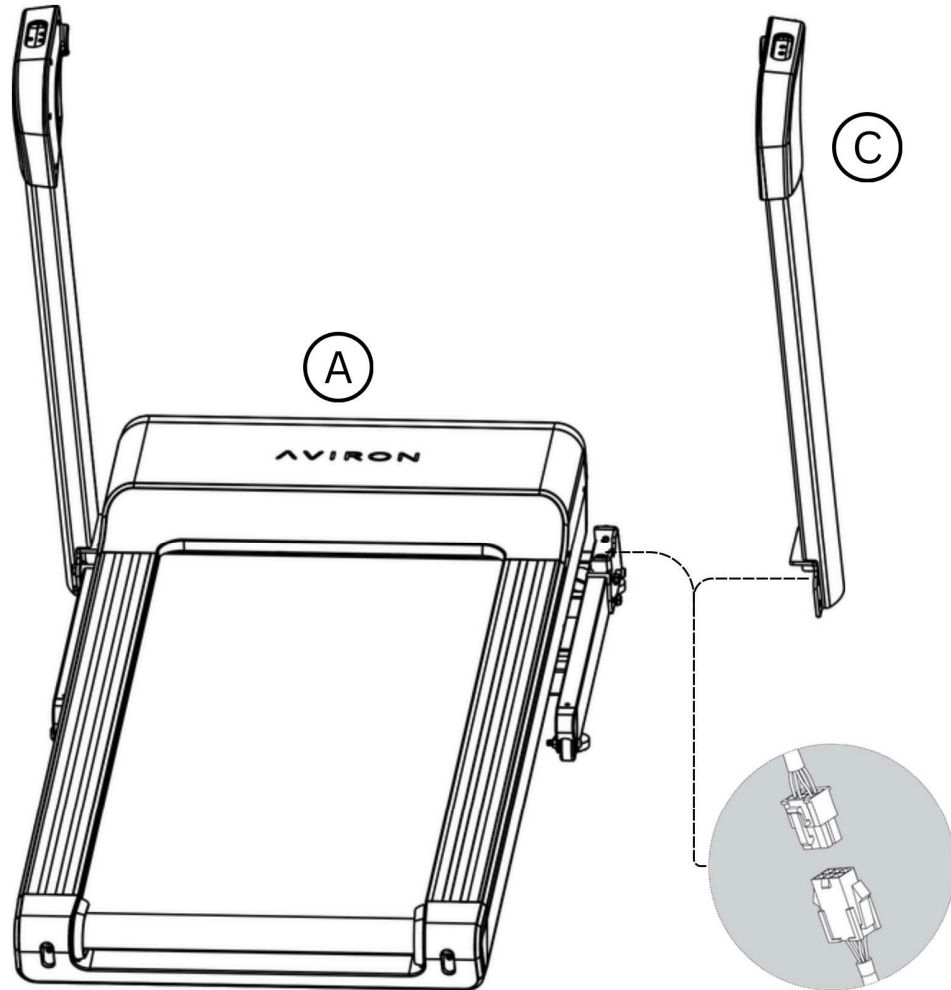

Parts:




Tools:

Fasteners:

Bring the Right Upright Post (C) close to the Main Frame (A) and connect the internal wires. Ensure the wires are properly adjusted inside the post groove to prevent pinching. Similarly to the left side, align the screw holes, and hook the Upright Post onto the protruding support bolt located at the Main Frame.

ASSEMBLY INSTRUCTIONS

Step 2 (B)

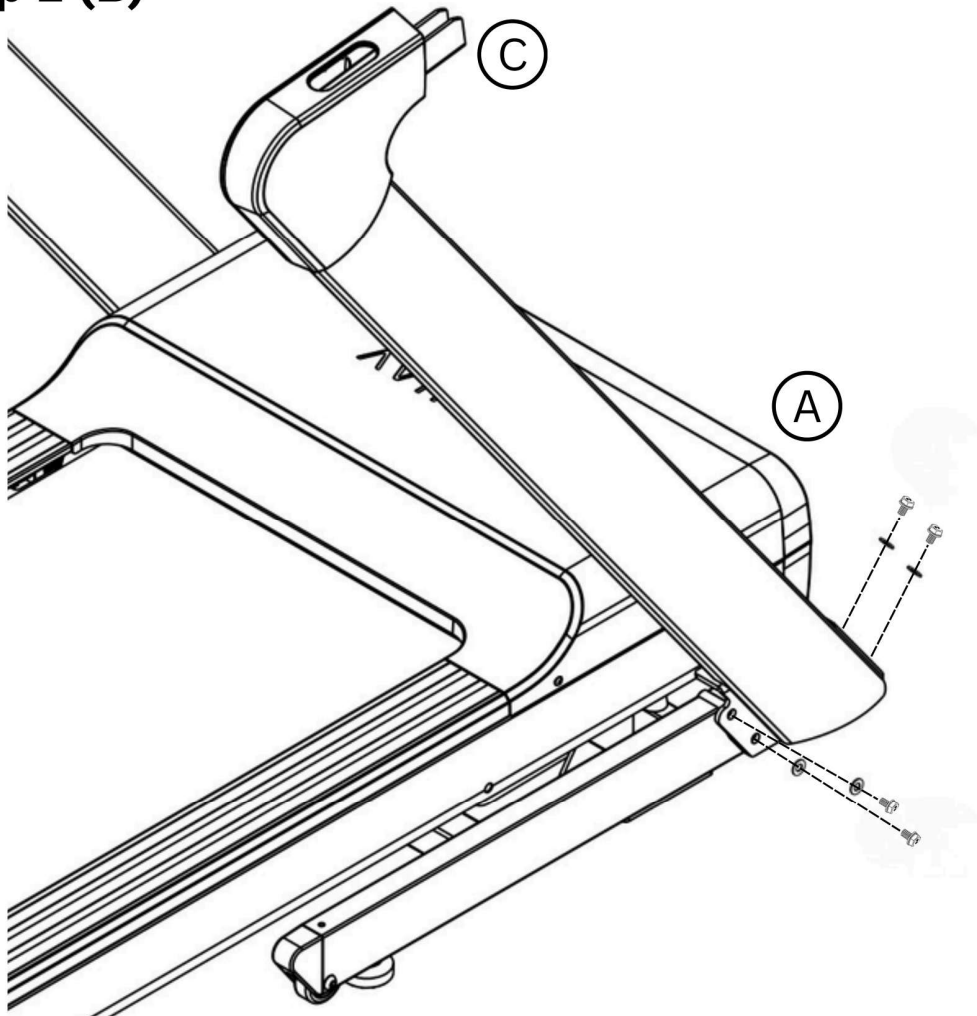

Parts:

(A) (C)

Tools:

(6)

Fasteners:


(F1) (F2)

Secure the assembly with 4x washers (F2) and 4x M10 screws (F1) using the M17 Socket Wrench.

NOTE: Start by loosely fastening the screws, then tighten them evenly in an X-pattern to ensure the strain is properly distributed.

ASSEMBLY INSTRUCTIONS

Step 3 (A)

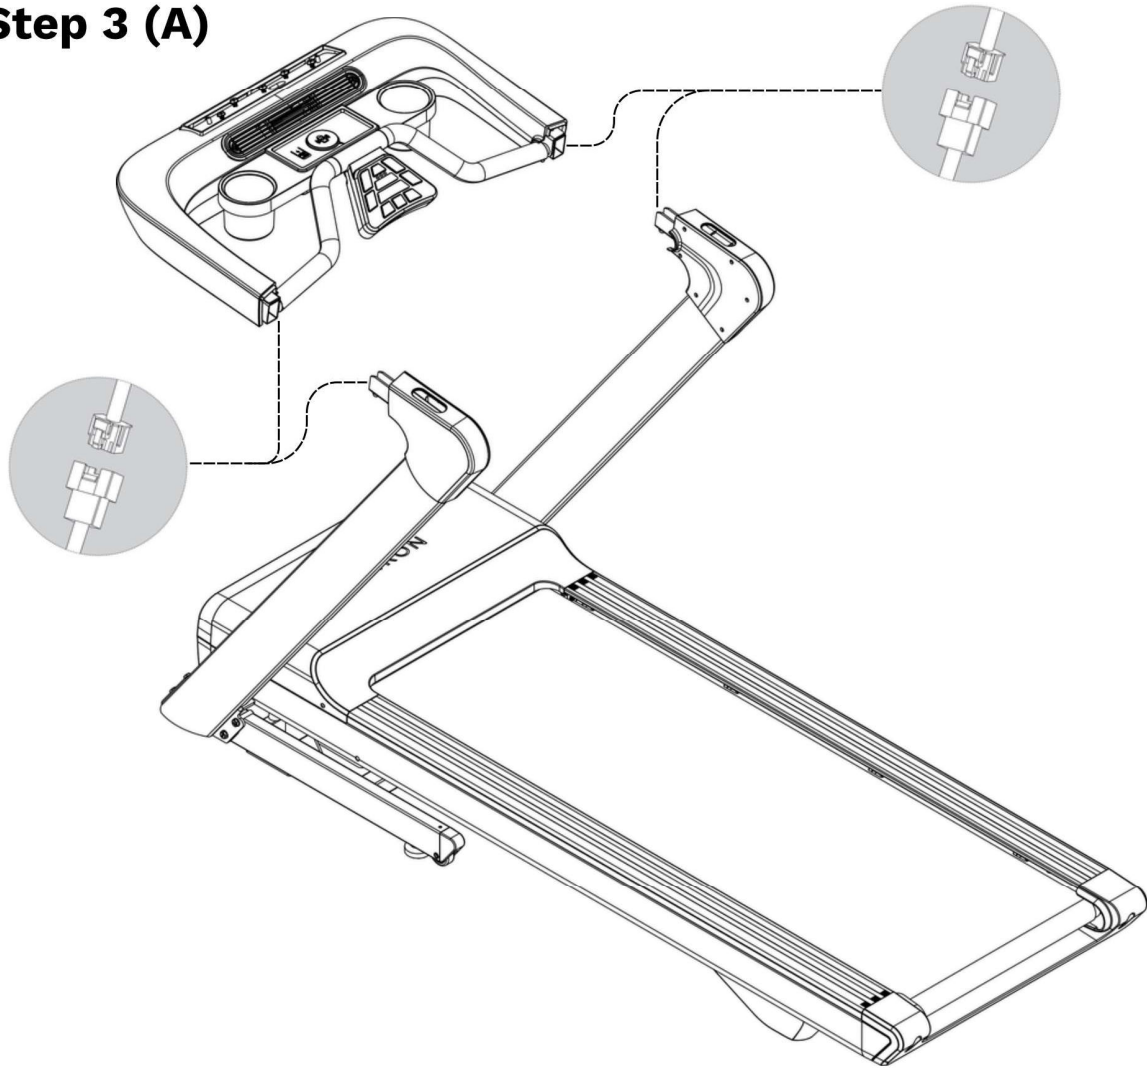

Parts:

(B) (C) (D)


Tools:

Fasteners:

Bring the Console Base (D) close to the Upright Posts (B) and (C). Connect the internal wires and route the excess into the slots of the Console Base to prevent pinching or cable damage. Slide the Console Base onto the posts until it seats firmly. Once in place, adjust as needed to align the screw holes. NOTE: The Upright Posts may lean slightly inward when standing alone. For easier assembly, gently pull the posts outward to align them correctly with the console base.

ASSEMBLY INSTRUCTIONS

Step 3 (B)

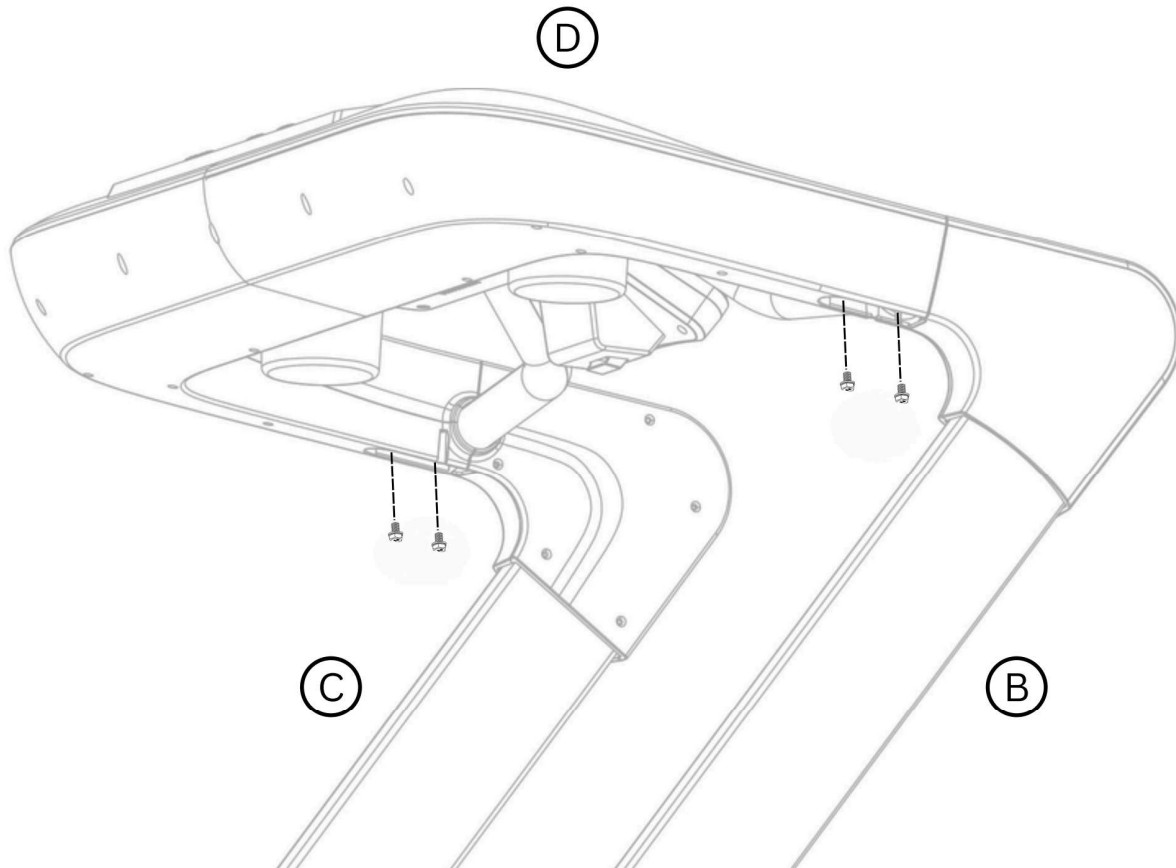

Parts:

(B) (C) (D)

Tools:

(2)


Fasteners:

(F3)

Secure the assembly with 4x M8 screws (F3) using the M6 Allen Key.
NOTE: Start by loosely fastening the screws, then tighten them evenly in an X-pattern to ensure the strain is properly distributed.

ASSEMBLY INSTRUCTIONS

Step 3 (C)

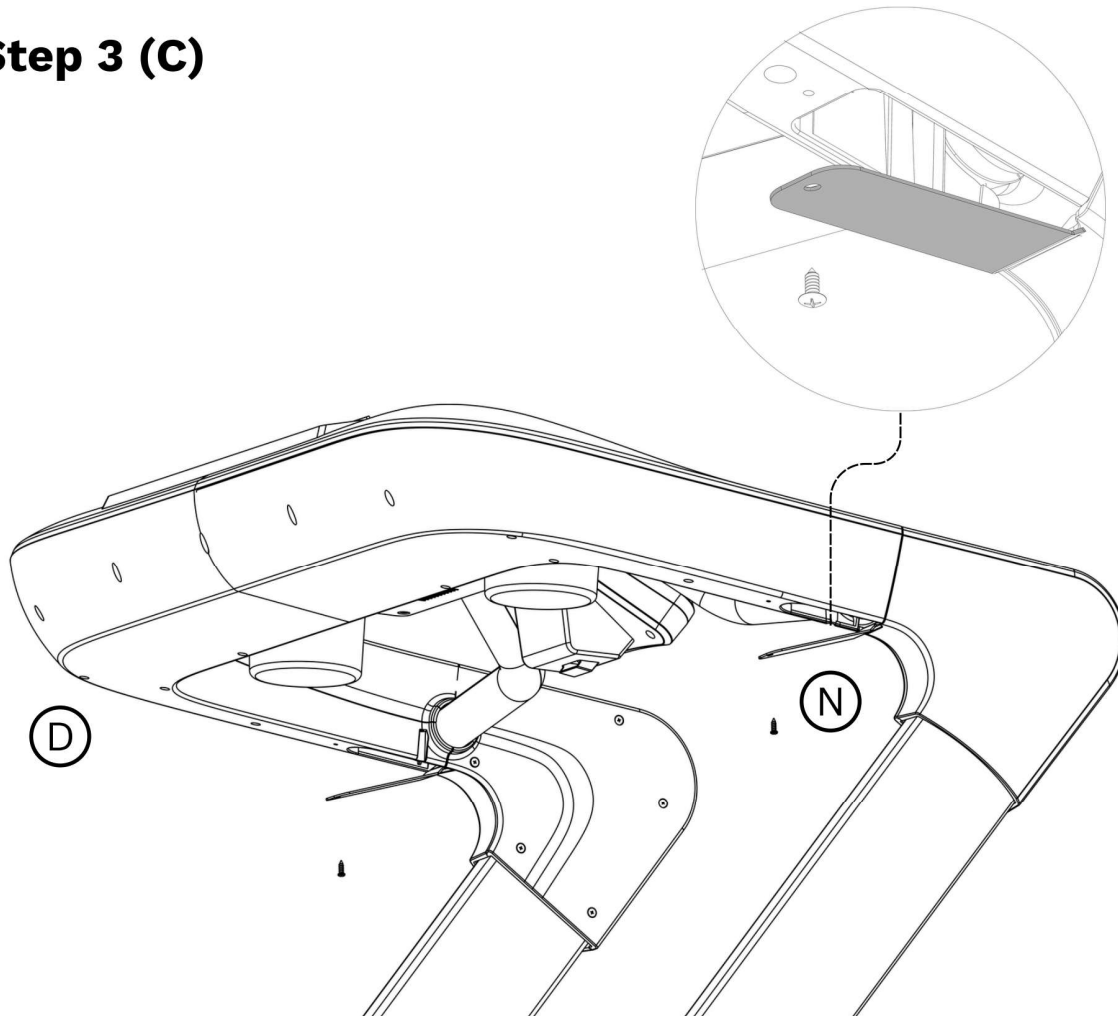

Parts:

(D) (N)

Tools:

(5)


Fasteners:

(F5)

Position the Console Base Connector Cover (N) beneath the Console Base (D). Align the curved edge of the cover with the rear lip of the Console Base and hook it into place. Confirm the cover sits flush against the base, then secure it with 1x M4 screw (F5) each using the Phillips screwdriver.

ASSEMBLY INSTRUCTIONS

Step 4 (A)

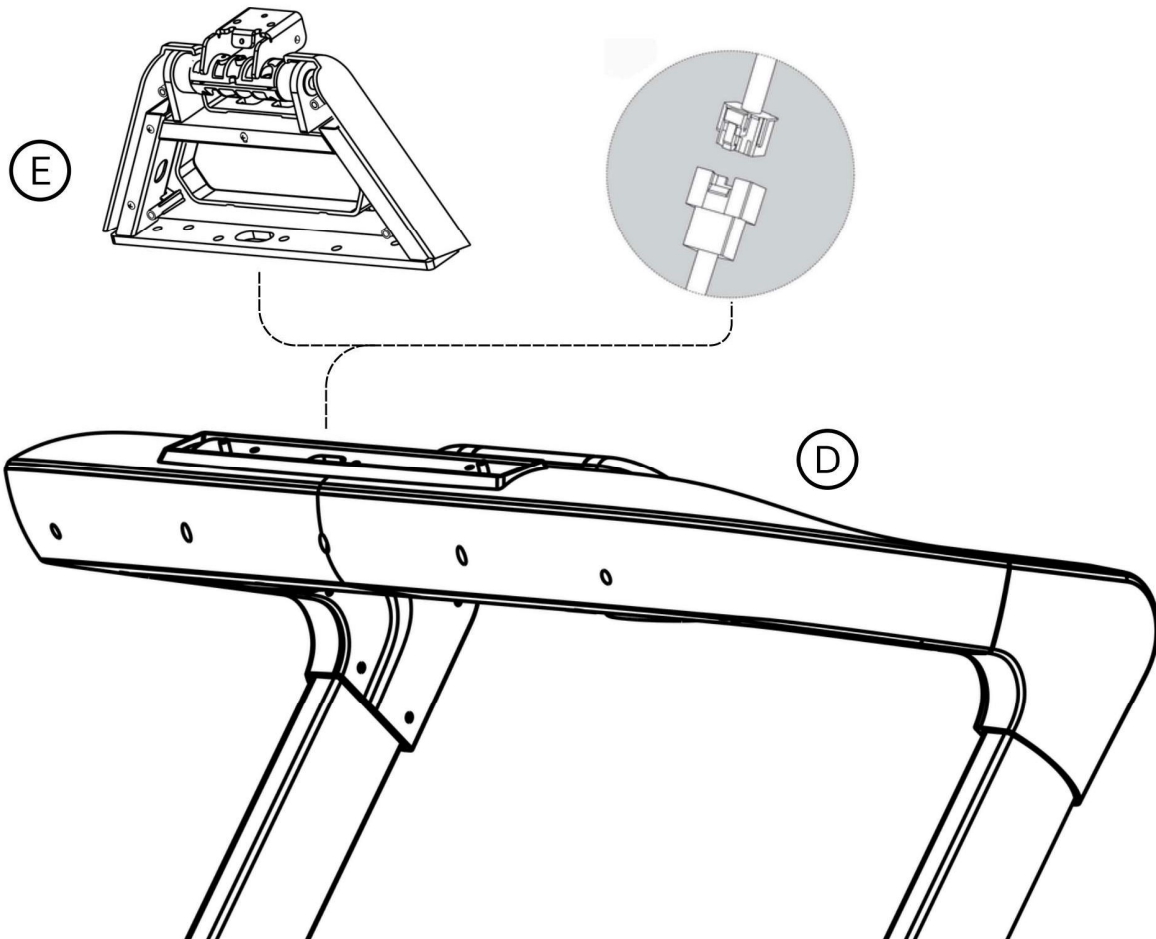

Parts:




Tools:

Fasteners:


Position the Console Bracket (E) on top of the Console Base (D). Route the internal wire through the hole in the Console Bracket (E), then connect the wire ends. Adjust the excess wire and connection inside the Console Base groove to prevent pinching.

ASSEMBLY INSTRUCTIONS

Step 4 (B)

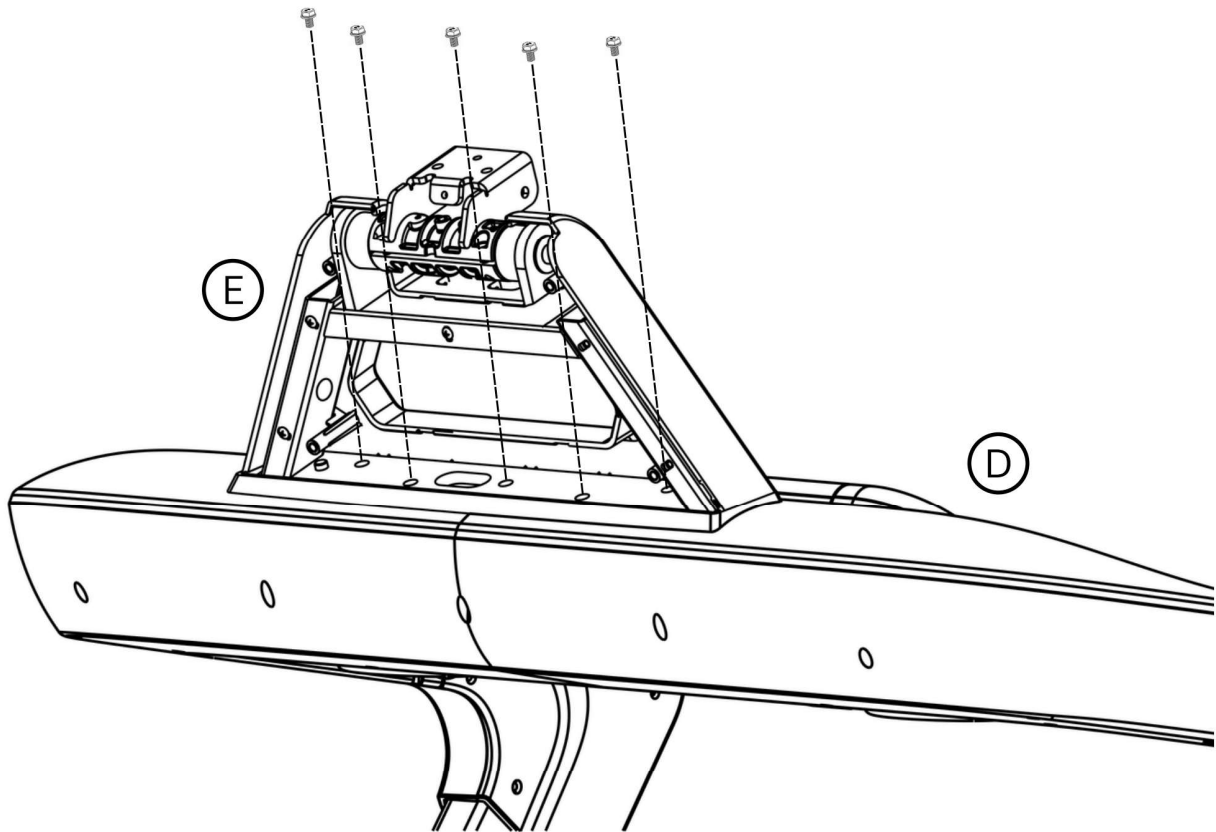

Parts:



Tools:



Fasteners:



Align the Console Bracket (E) screw holes to the Console Base (D) and secure it with 5x M8 screws (F4) using the M17 Open-end Wrench.

NOTE: Start by loosely fastening the screws, then tighten them evenly in an alternating pattern to ensure the strain is properly distributed.