


Handset Go


Installation Guide




You will need:

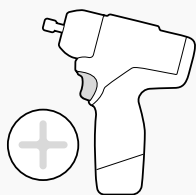


Cordless Screwdriver

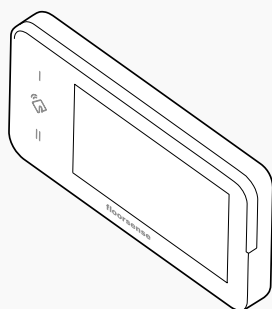

Handset Go

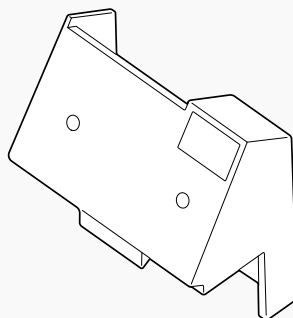


Rear-Desk Clamp

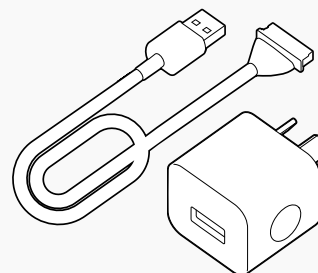

Power Cable + USB Adaptor

1

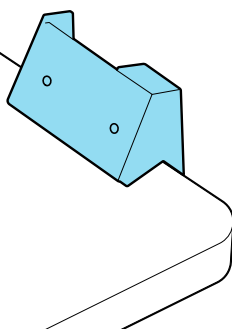


Position the Rear-Desk Clamp at the desired location at the back of the desk.




When positioning the Rear-Desk Clamp, check that the power supply cable will be able to reach the Handset Go, and that the device will be visible and readily accessible.

2

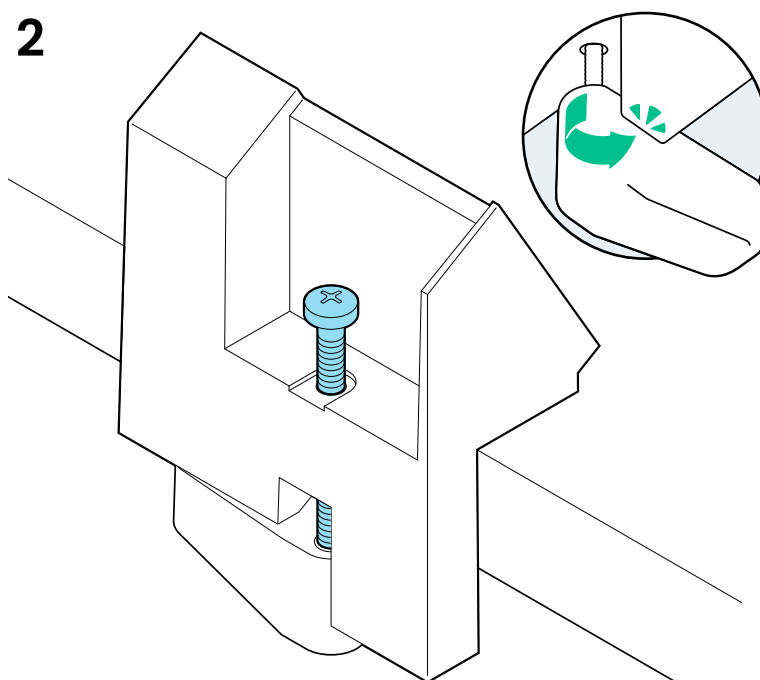


Hold the clamp in place as you secure the clamp screw with a cordless screwdriver. The clamp arm will rotate to the correct position as it tightens.


3

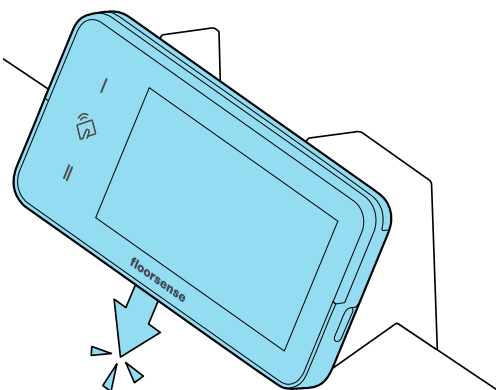

a.

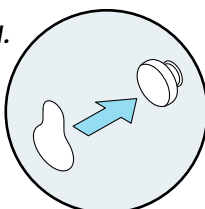


b.

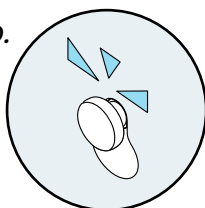

Affix the Handset Go to the Rear-Desk Clamp using the keyhole connectors. Apply a **firm downward pressure** to engage the connectors. They will audibly click when the device is secured.

4

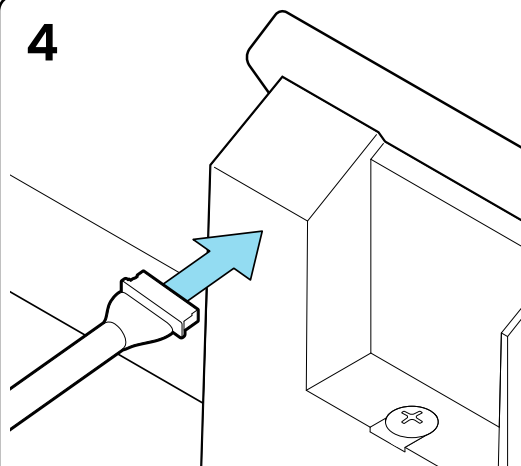

Connect the power cable to the rear of the Handset Go, and plug the USB adaptor into a power outlet.