



TEST SETUP PHOTOS (MPE)


WPT mode

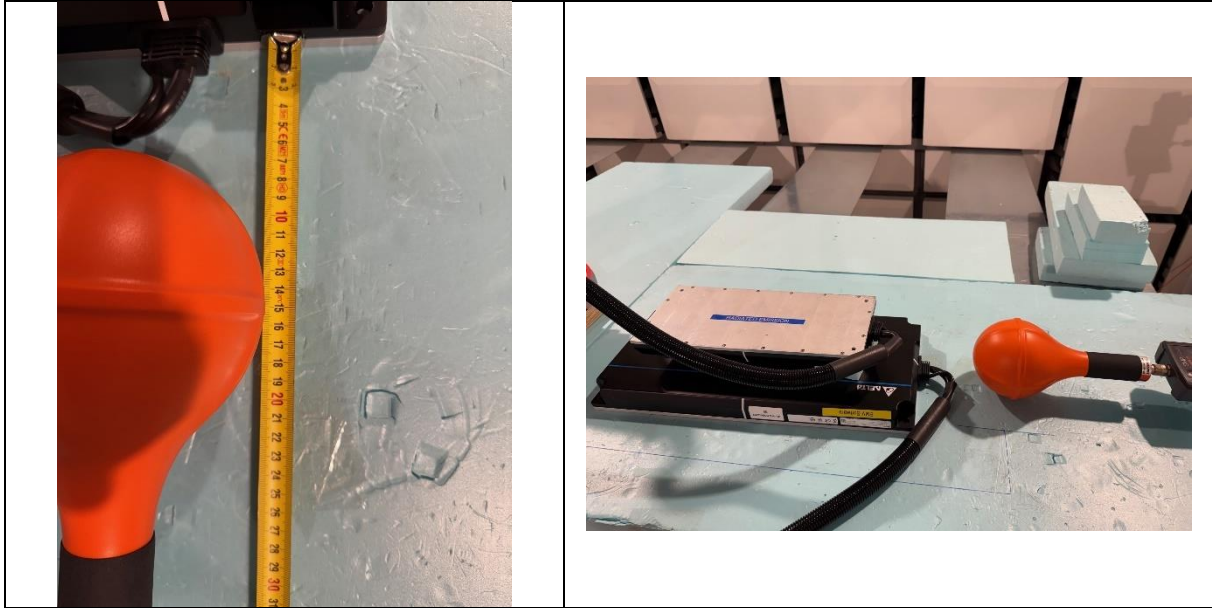

Left of WPP

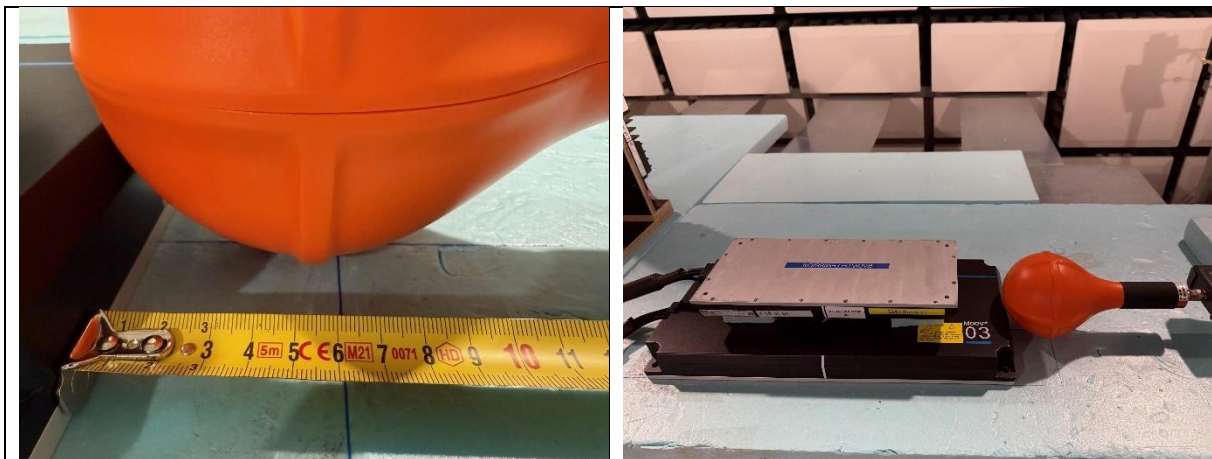


Right of WPP

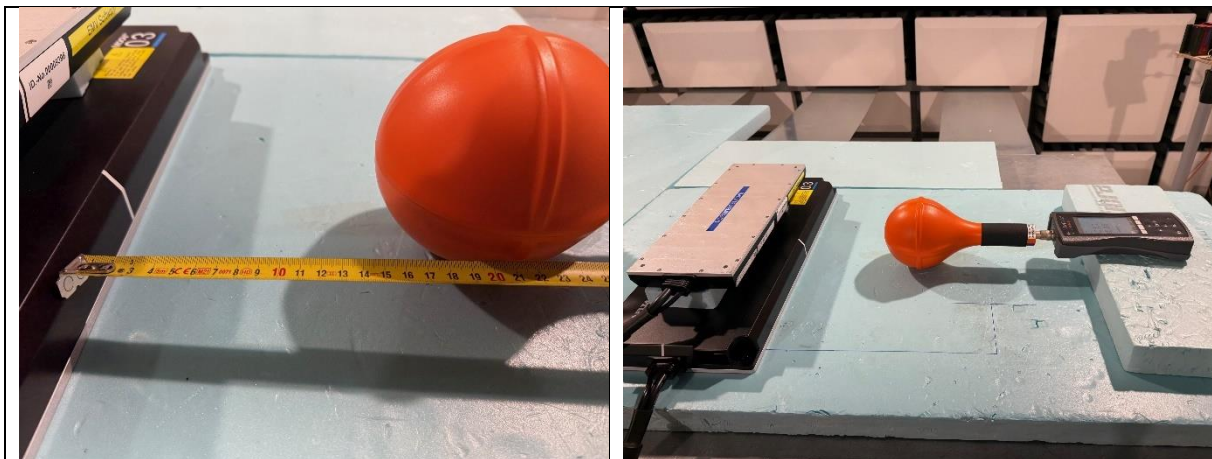


Below WPP



Above WPP

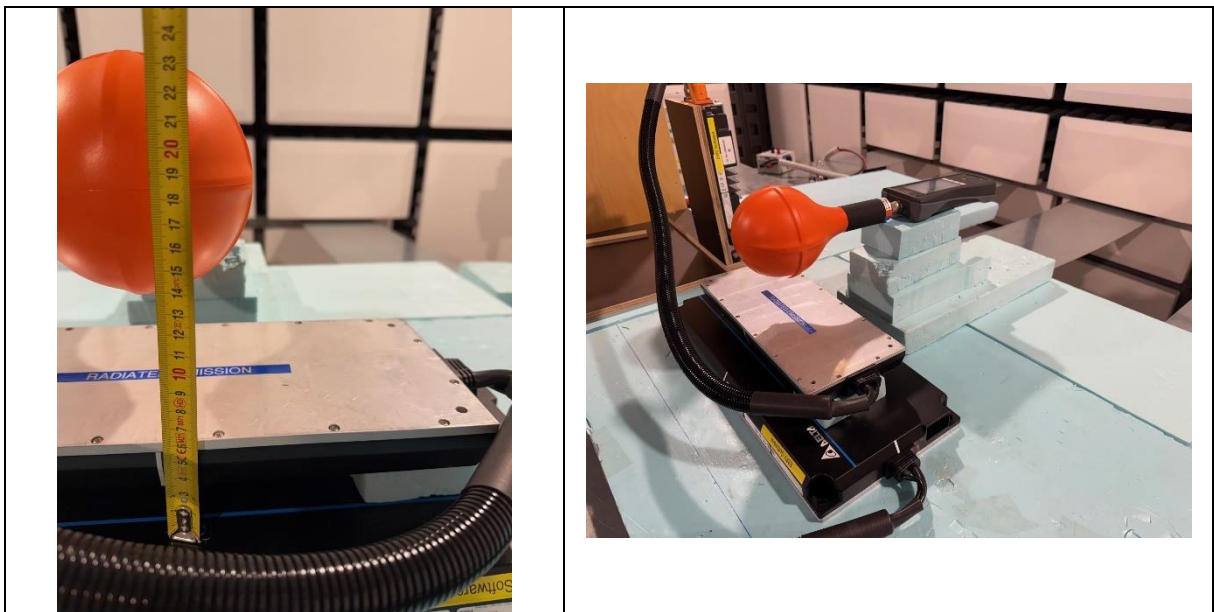


Back of WSP

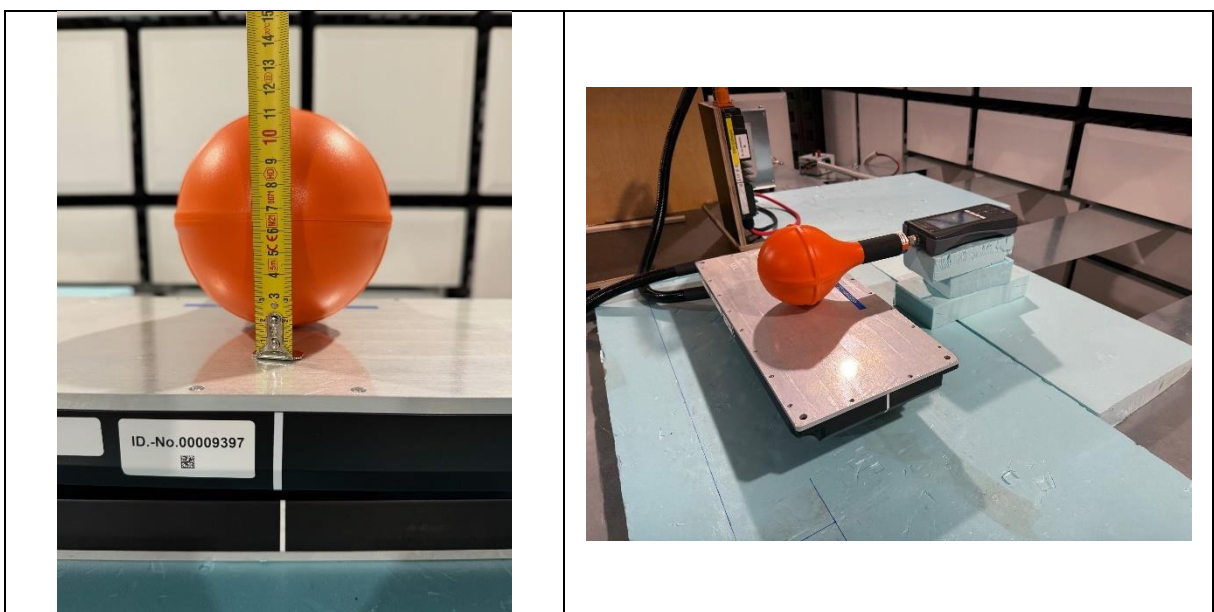


Back of WPP

RFID mode with WPT turned off


E-field WPP

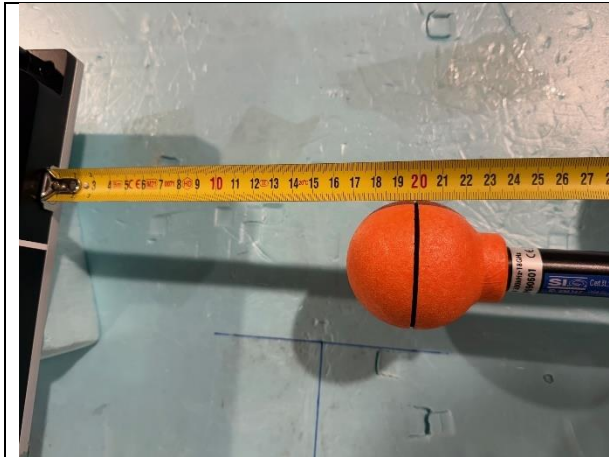

Right of WPP

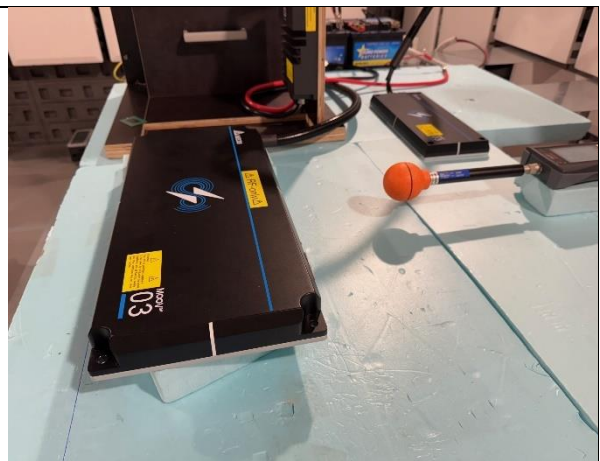


Above of WPP

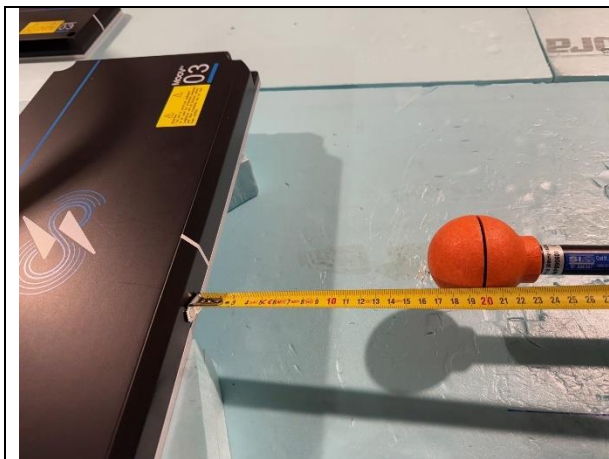



Below of WPP



Left of WPP

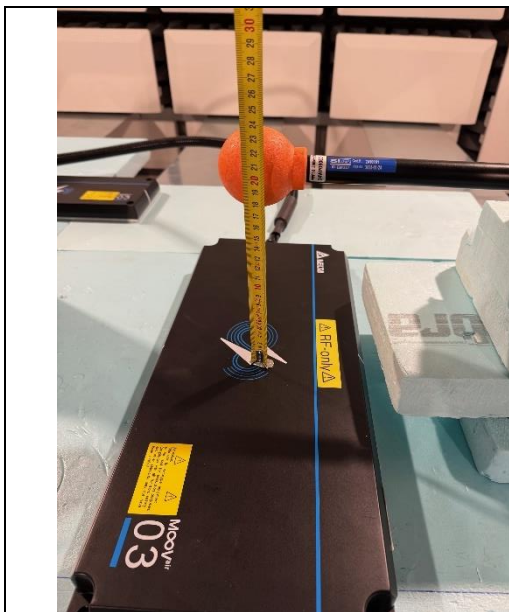


Top of WPP

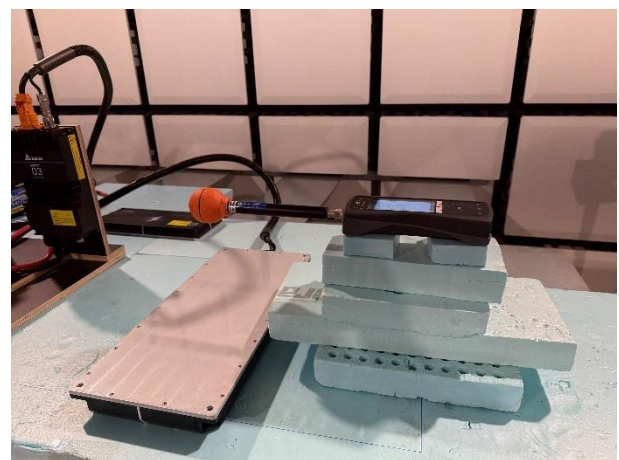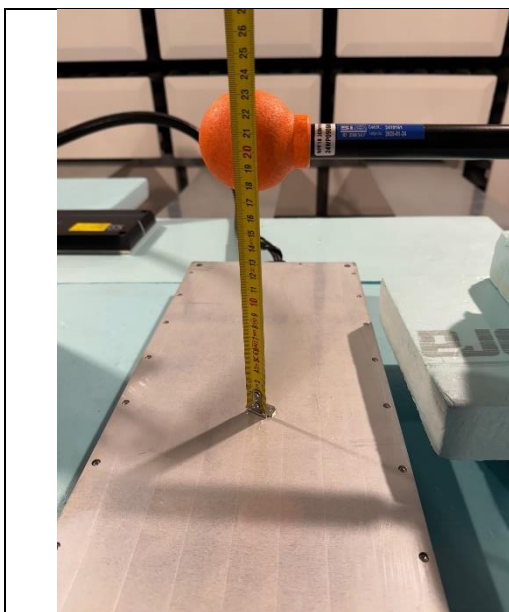


Back of WPP



B/H-field WPP

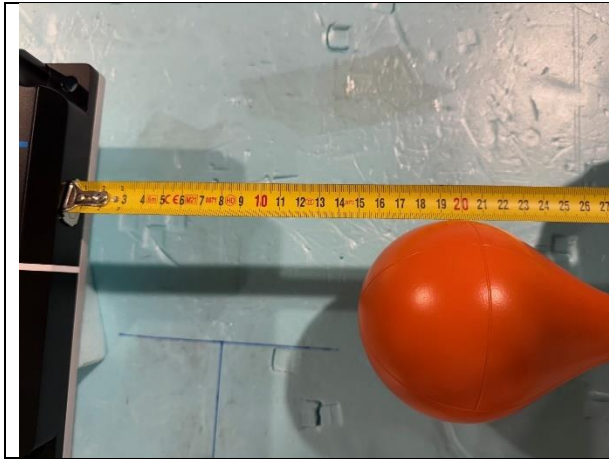


Right of WPP

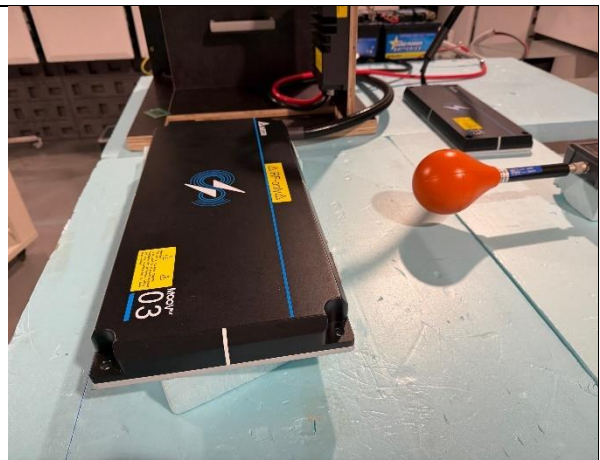


Above of WPP

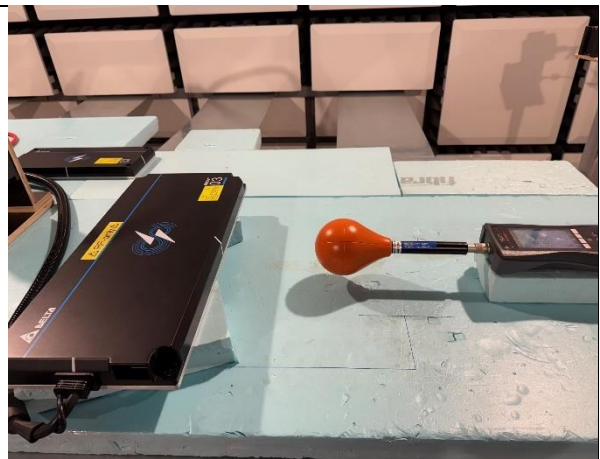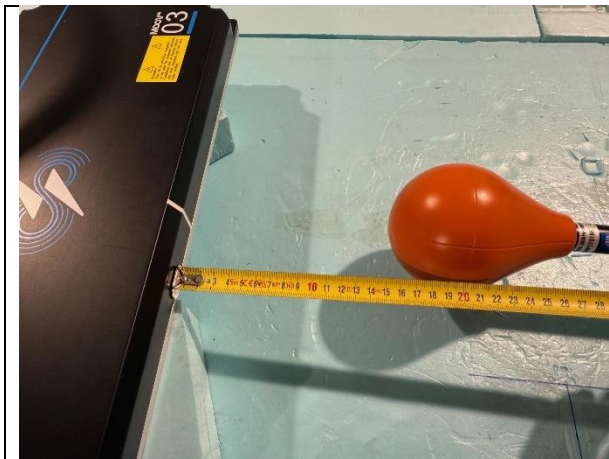



Below of WPP

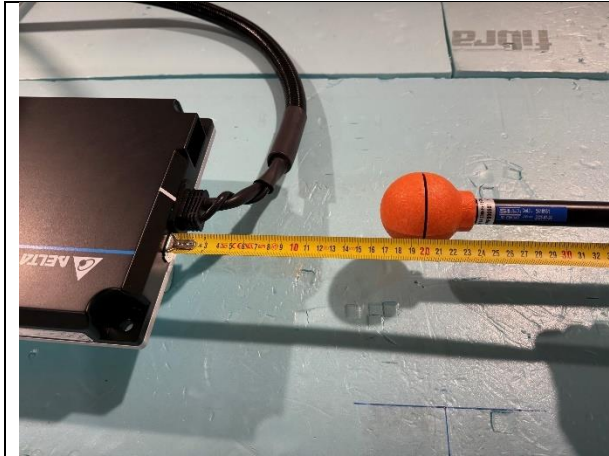

Left of WPP

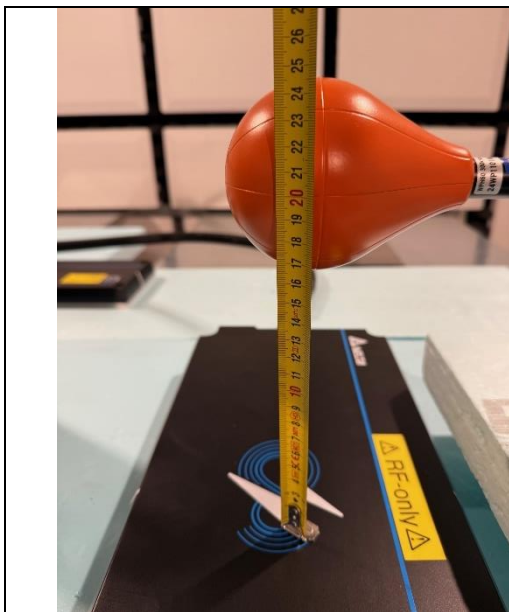


Top of WPP

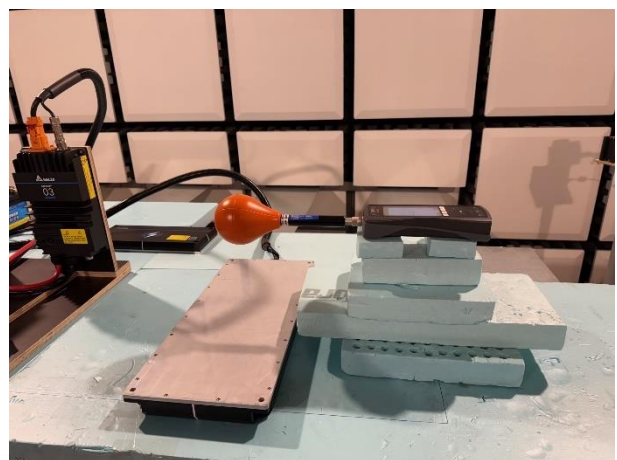
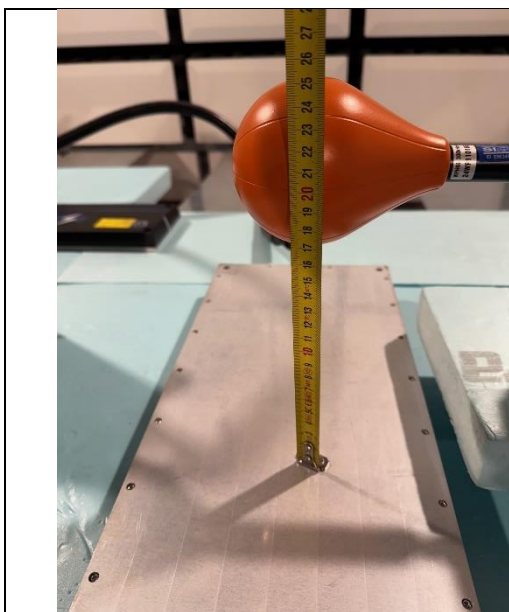


Back of WPP

E-field WSP

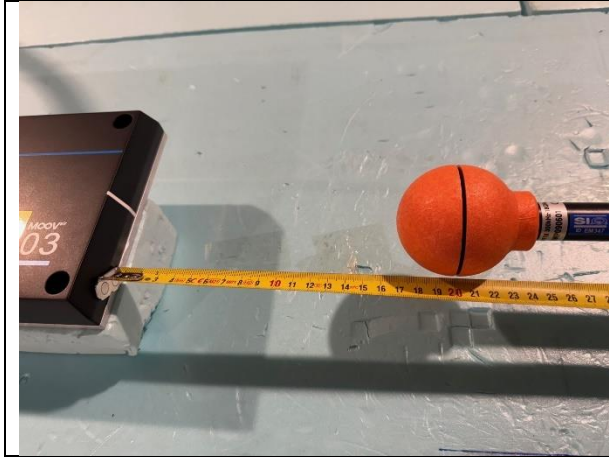


Right of WSP

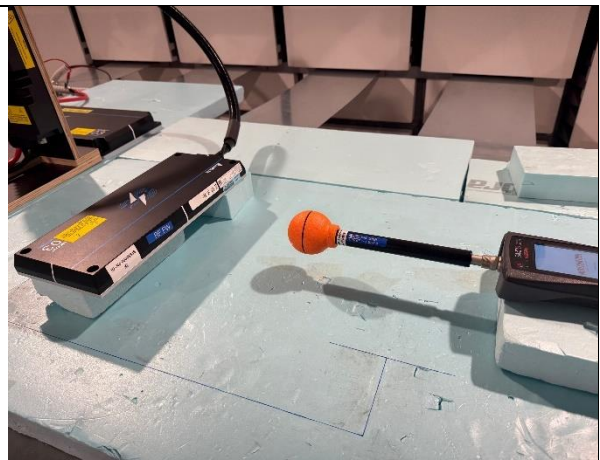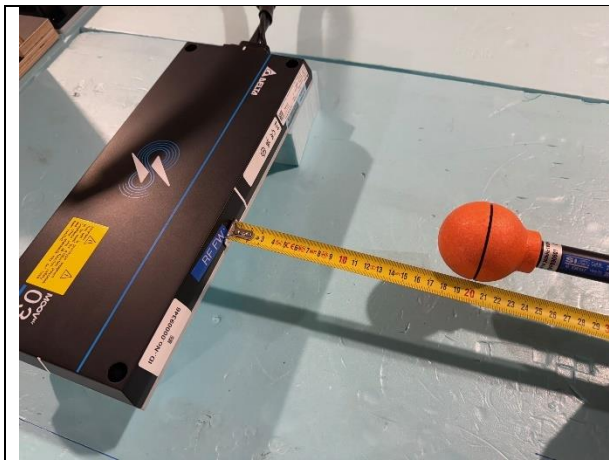


Above of WSP





Below of WSP

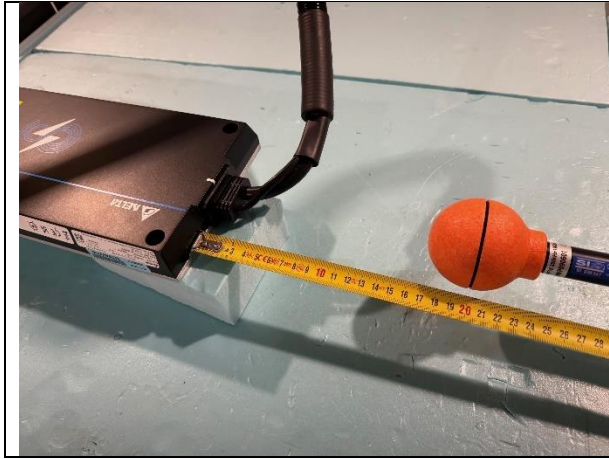

Left of WSP

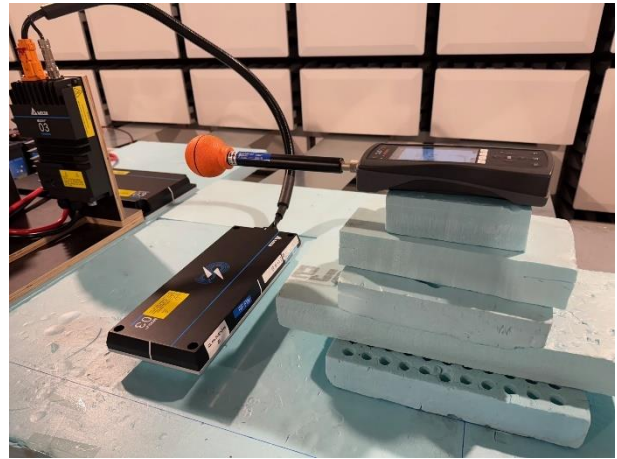

Top of WSP

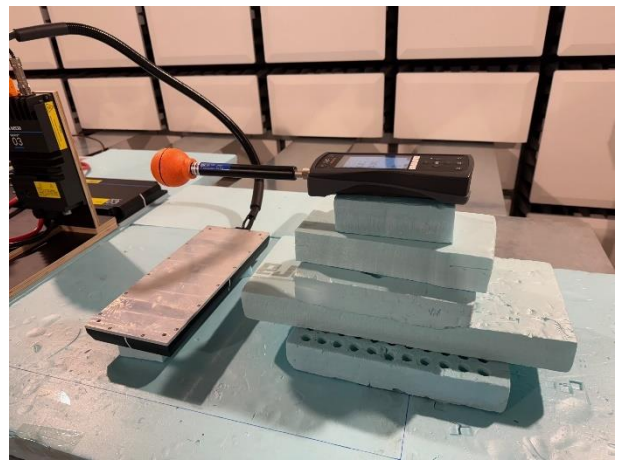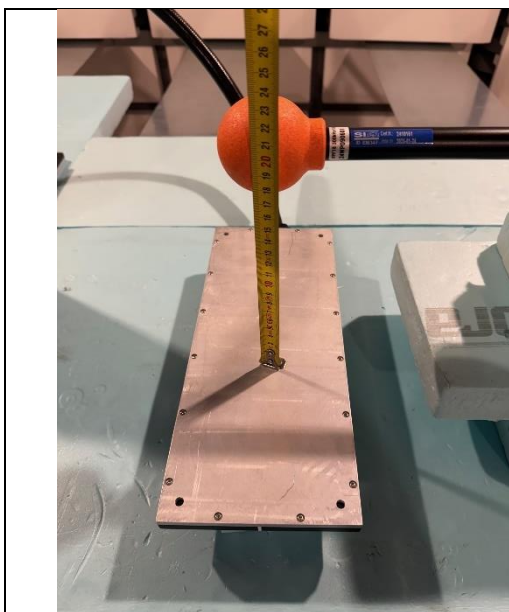


Back of WSP


B/H-field WSP



Right of WSP

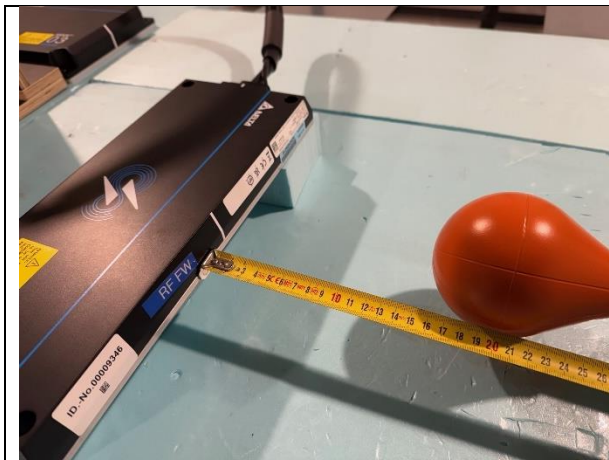

Above of WSP

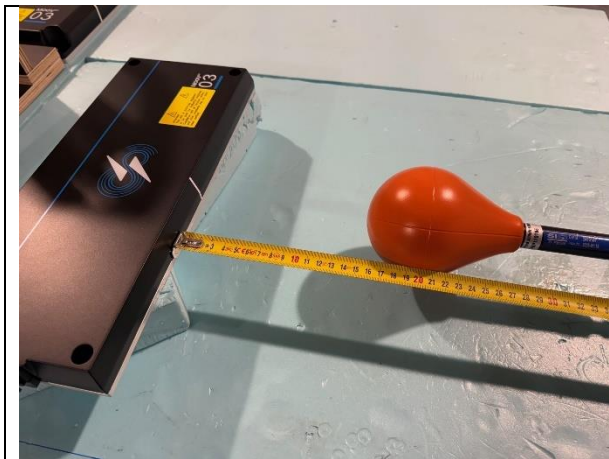



Below of WSP



Left of WSP



Top of WSP

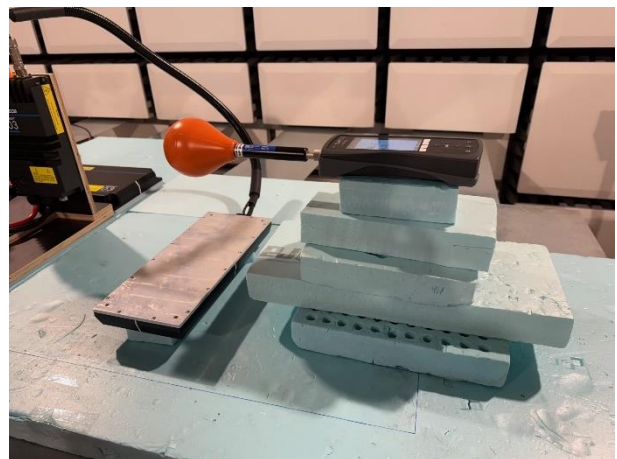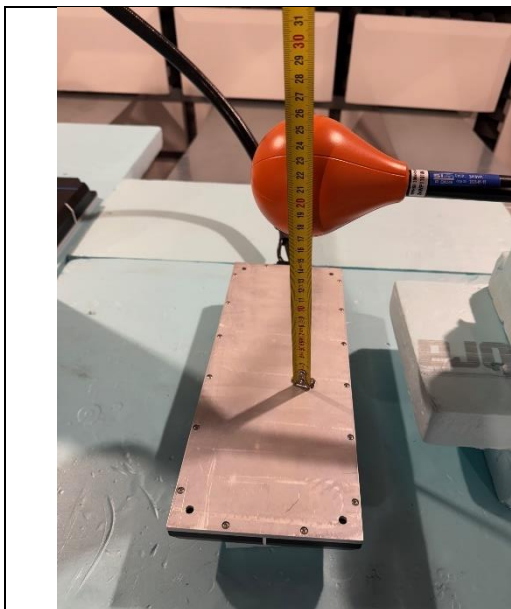

Back of WSP