

XTLITE[®] SOFTWARE SETUP GUIDE

NOTE: MUST ASSIGN TAG IN AUTONOMOUS RANCHER APP PRIOR TO APPLYING ON EAR

IF YOUR ANIMALS ARE NOT IN THE APP

1. Open the Autonomous Rancher app on your device.
2. Select the “Quick Create” button  > “New Animal” and fill in required fields.
3. When you are ready to assign the tag, tap the QR code icon  to scan the tag located beneath the “701x Device #” Field **OR** Tap “Select Device” and select the tag with the matching 701x Device # from the list.

Note: 'Device not in your inventory' means you are signed in to an account that has not purchased tags. Please ensure you are logged in as the individual who purchased the tags.

4. Make sure all required fields (signified by *) are filled out, then tap “Save” in the top right corner of your screen. Your 701x device is now assigned to your animal.

IF YOUR ANIMALS ARE IN THE APP

1. Open the Autonomous Rancher App on your device.
2. Tap the menu button  > Select “Working Cattle” > You will see a default working cattle station already created, named “Assign 701x Device.” Click on it.
3. Tap “Station: Station 1”
4. When you are ready to assign the tag, type in the visual ear tag number in the search bar and select the animal.
5. Tap the QR Code Icon  **OR** tap “Select a Tag” and select the tag with the matching 701x Device # from the list.

Note: 'Device not in your inventory' means you are signed in to an account that has not purchased tags. Please ensure you are logged in as the individual who purchased the tags.

6. Tap “Save”. Your 701x device is now assigned to an animal.

Regulatory Information:

Regulatory information on the device can be found in the 701x app.

To view: Start from the device's menu → Step 1: Tap the three-bar menu (top left) → Step 2: Tap “Support” → Step 3: Tap “Legal and Regulatory”


Ear tagging instructions on reverse side.



xTLite® APPLICATION INSTRUCTIONS

NOTE: MUST ASSIGN TAG IN AUTONOMOUS RANCHER APP PRIOR TO APPLYING ON EAR

STEP 1: LOAD APPLICATOR

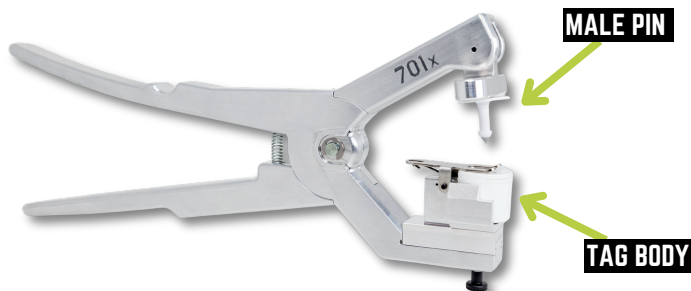

Ensure the applicator is in its single-pin configuration with the xTlite® attachment included in your applicator kit.

Please Note:

- xTlite® tags are designed for one-time use.
- You **must** use the 701x Applicator with xTlite® tags.




STEP 2: POSITION APPLICATOR & APPLY TAG



Position the applicator with the male pin directly on top of the ear and the tag on the inside of the ear.

Tip: Place the tag against the ear first, then bring the buttons to it.

EAR FRONT VIEW

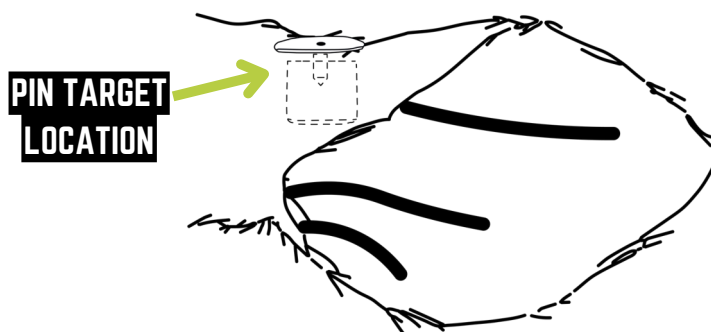

- **The tag should be applied in the top-middle of the ear through the top cartilage, as shown.**
- Squeeze the handles of applicator to apply tag.

STEP 3: CONFIRM FITMENT



Inspect the tag to ensure proper positioning and confirm it is securely attached to the ear.