



V3 Ultra Wireless Mechanical Keyboard User Manual

Knob
Version

Fully Assembled Version

Keyboard

1x Fully Assembled Keyboard

Including

1x Case

1x PCB

1x PC Plate

1x Sound Absorbing Foam

1x PET Foam

1x EPDM Foam


1x PET Film

1x Case Foam

5 Sets x Stabilizers

1 Set x Keycaps (PBT Double-shot)

1 Set x Switches

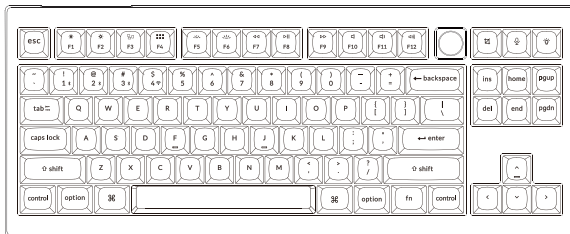

Cable

1x Type-C Cable

1x Type-A to Type-C Adapter

1x Extension Adapter For Receiver

Receiver


1x Type-A 2.4GHz Receiver

Tools

1x Keycap & Switch Puller

1x Screwdriver

1x Hex Key

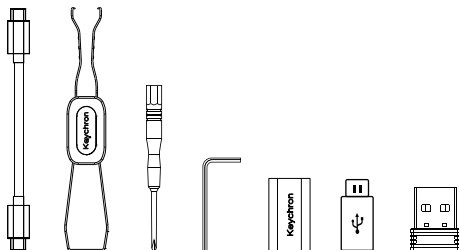

Barebone Version

Keyboard Kit

1x Keyboard Kit (Without Keycaps & Switches)

Including

1x Case

1x PCB

1x PC Plate

1x Sound Absorbing Foam


1x PET Foam

1x EPDM Foam

1x PET Film

1x Case Foam

5 Sets x Stabilizers

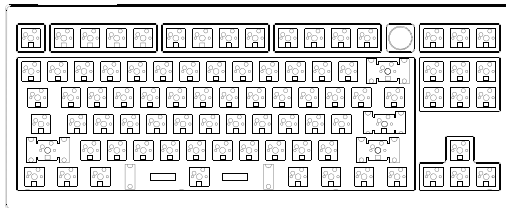

Cable

1x Type-C Cable

1x Type-A to Type-C Adapter

1x Extension Adapter For Receiver

Receiver


1x Type-A 2.4GHz Receiver

Tools

1x Keycap & Switch Puller

1x Screwdriver


1x Hex Key

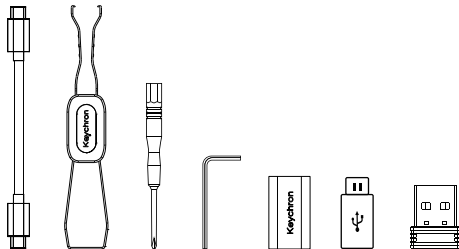

Quick Start Guide


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Mac / Windows

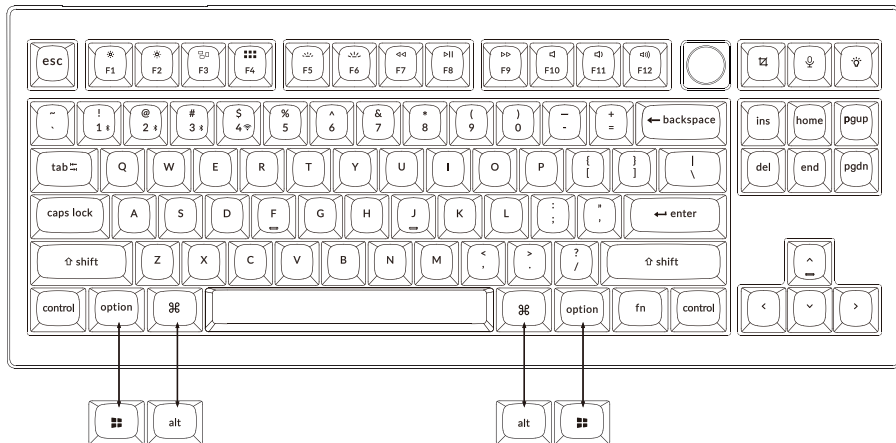


1 Connect 2.4GHz Receiver


Switch toggle to 2.4GHz mode





Press Fn + 4 (for 4 seconds)

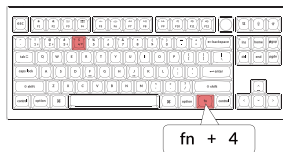


Connect the 2.4GHz receiver to the device USB port.




Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.

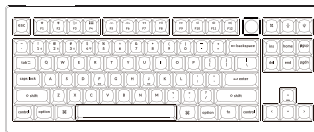


2 Connect Bluetooth

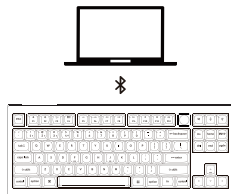

Switch toggle to Bluetooth



Press Fn + 1 (for 4 seconds) and pair with device named Keychron V3 Ultra 8K.

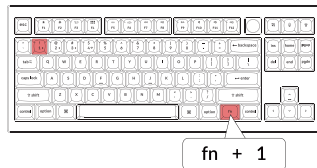

3 Connect Cable



Switch toggle to Cable

