

RF Test Setup Photograph

Description: BLE Radiated Spurious Emissions Test Setup for 9 kHz ~ 30 MHz
(WJ-AC1)




Description: BLE Radiated Spurious Emissions Test Setup for 30 MHz ~ 1 GHz
(WJ-AC1)



Description: BLE Radiated Spurious Emissions Test Setup for 1 GHz ~ 18 GHz
(WJ-AC1)




Description: 2.4G WIFI Radiated Spurious Emissions Test Setup for 9 kHz ~ 30 MHz
(WJ-AC1)

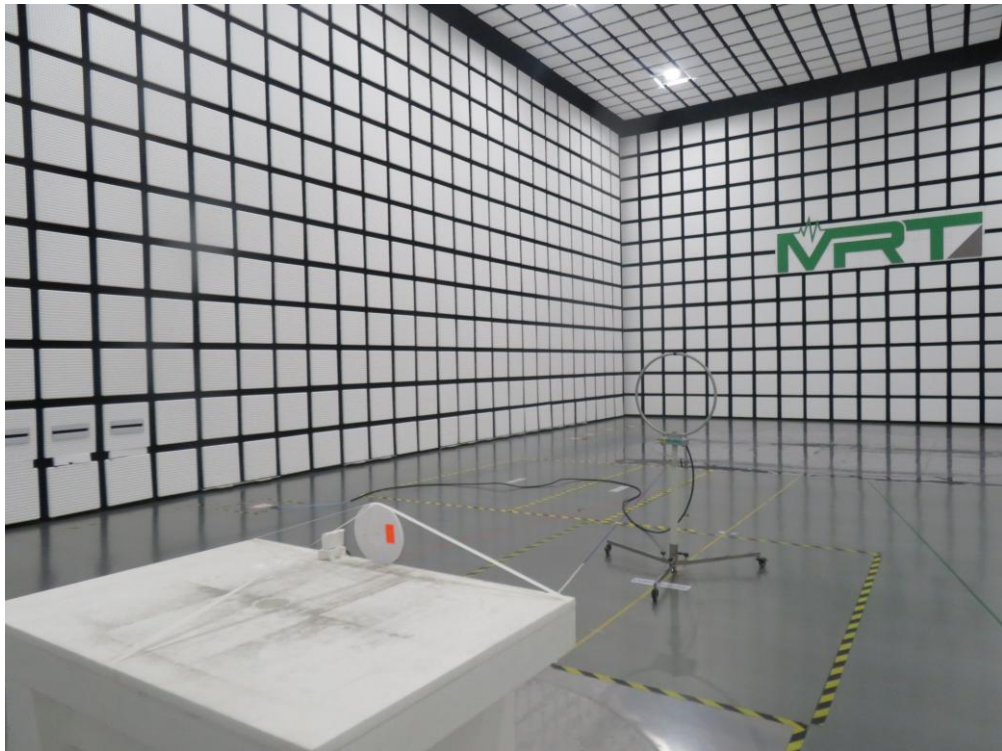

Description: 2.4G WIFI Radiated Spurious Emissions Test Setup for 30 MHz ~ 1 GHz
(WJ-AC1)




Description: 5G WIFI Radiated Spurious Emissions Test Setup for 9 kHz ~ 30 MHz
(WJ-AC1)

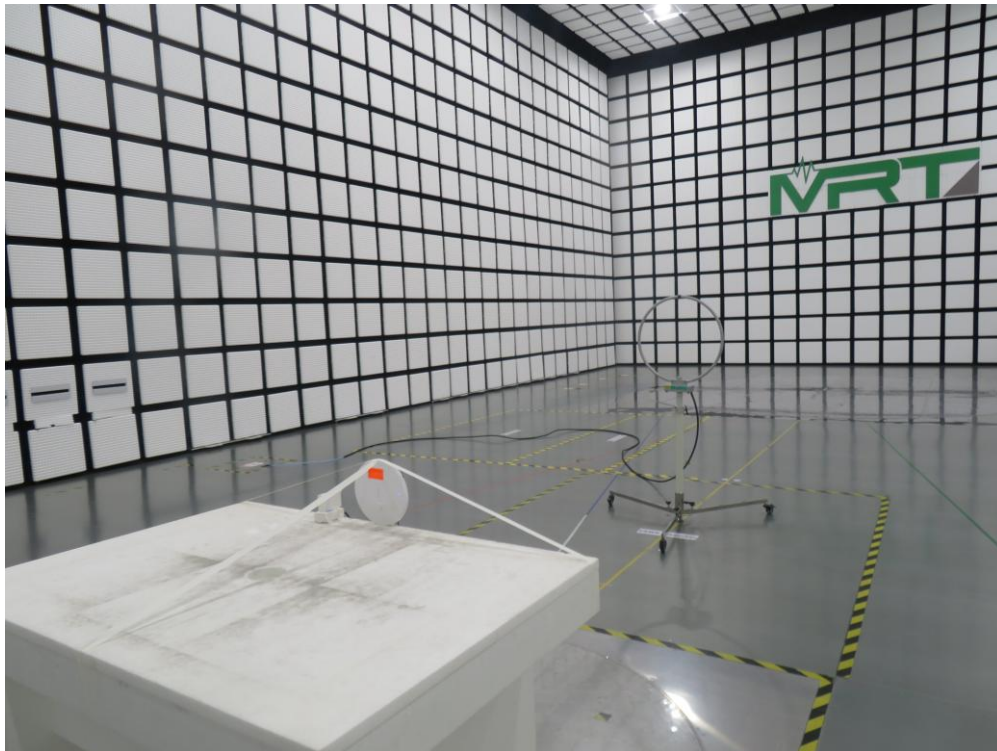

Description: 5G WIFI Radiated Spurious Emissions Test Setup for 30 MHz ~ 1 GHz
(WJ-AC1)



Description: 6G WIFI Radiated Spurious Emissions Test Setup for 9 kHz ~ 30 MHz
(WJ-AC1)

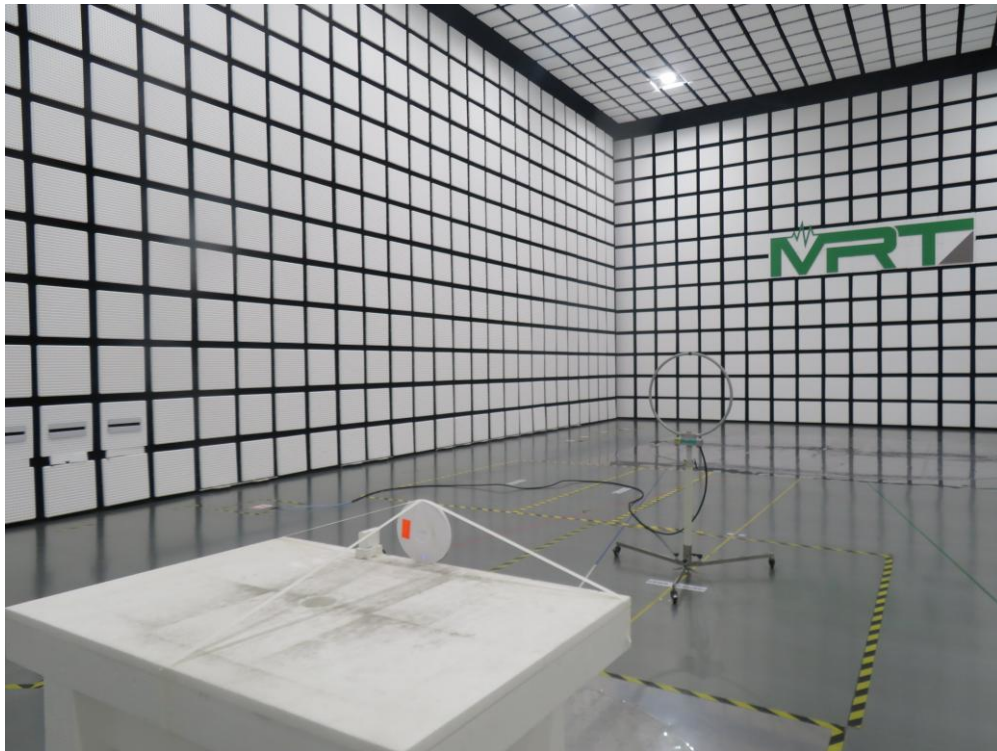

Description: 6G WIFI Radiated Spurious Emissions Test Setup for 30 MHz ~ 1 GHz
(WJ-AC1)



Description: 6G WIFI Radiated Spurious Emissions Test Setup for 1 GHz ~ 18 GHz
(WJ-AC1)




Description: 6G WIFI Radiated Spurious Emissions Test Setup for 18 GHz ~ 40 GHz
(WJ-AC2)



Description: 2G Bandedge Test Setup (WJ-AC2)



Description: 5G Bandedge Test Setup (WJ-AC2)

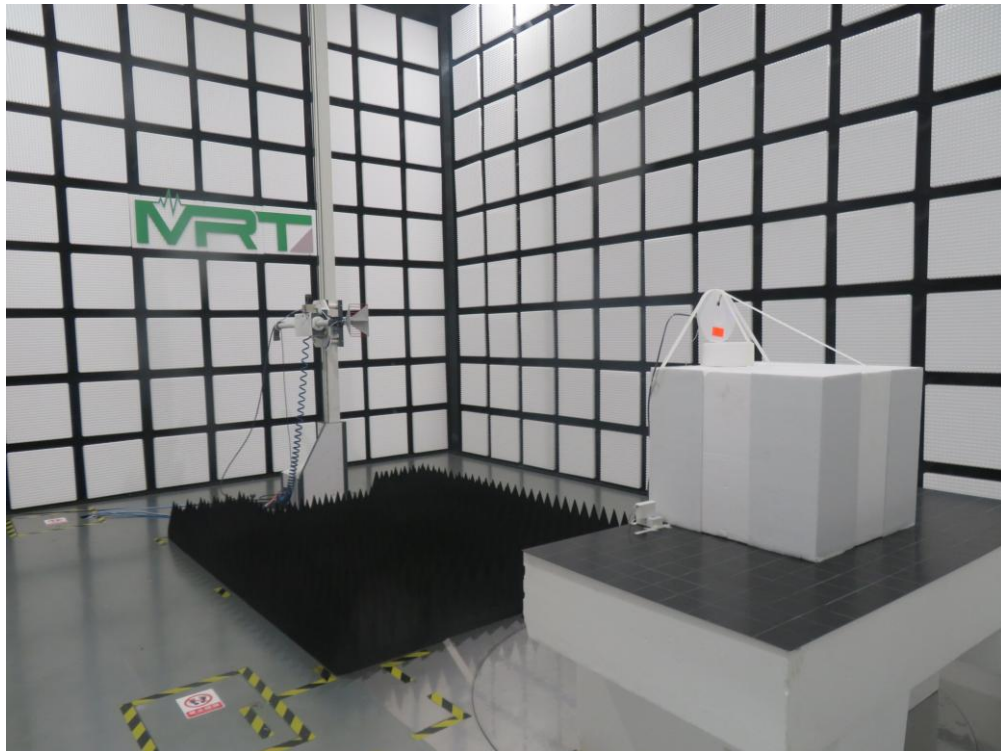

Description: Conducted Emissions Test Setup (WJ-SR5)



Description: Conducted Emissions Test Setup (WJ-SR5)



Description: Dynamic Frequency Selection Test Setup (WJ-SR8)

