




■ GSM850 MODE (251 CH.) Occupied Bandwidth

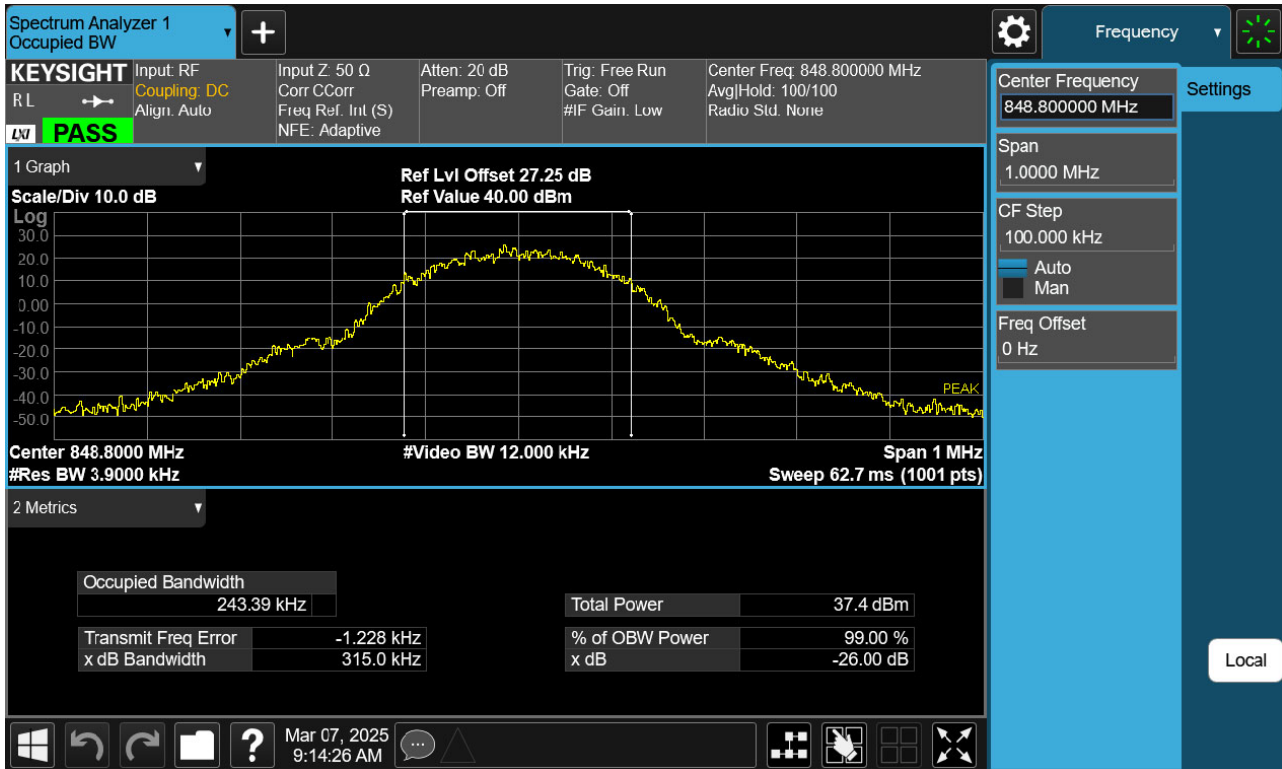


■ GSM850 EDGE (190 CH.) Occupied Bandwidth

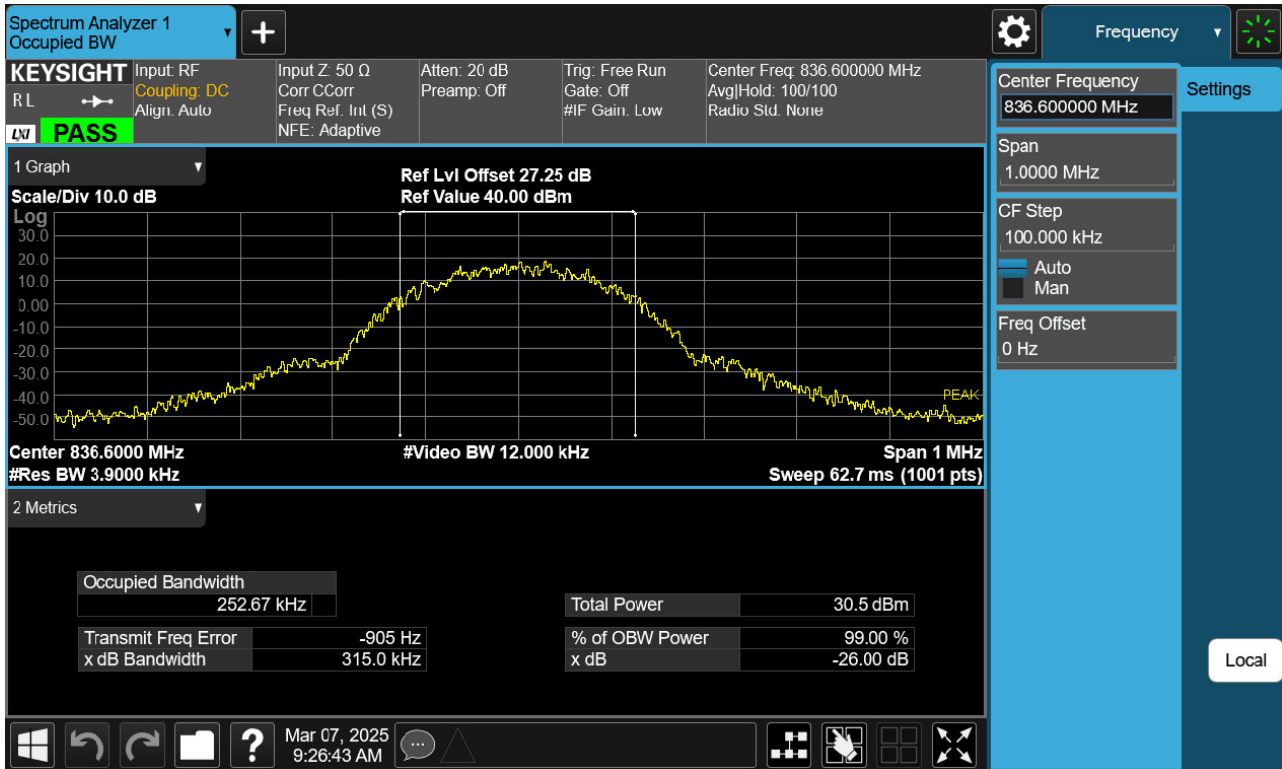


■ WCDMA850 MODE (4132 CH.) Occupied Bandwidth

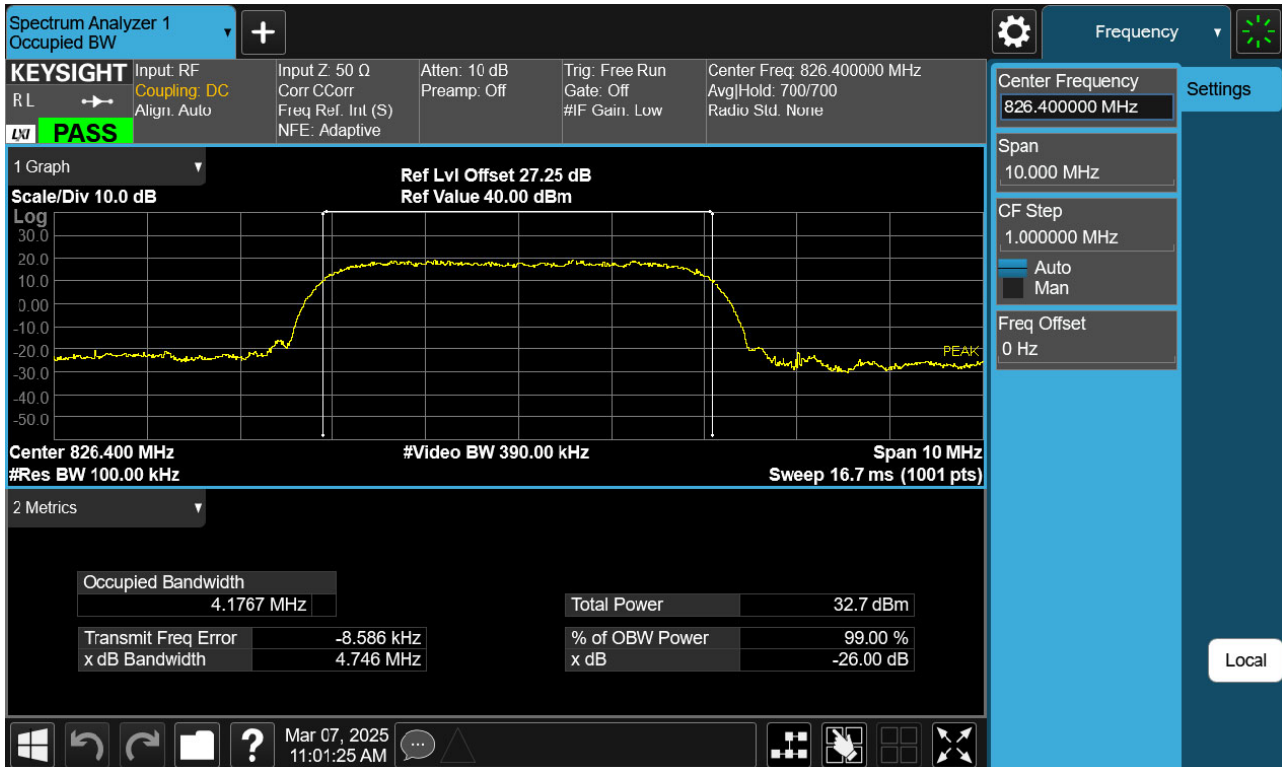


■ WCDMA850 MODE (4183 CH.) Occupied Bandwidth

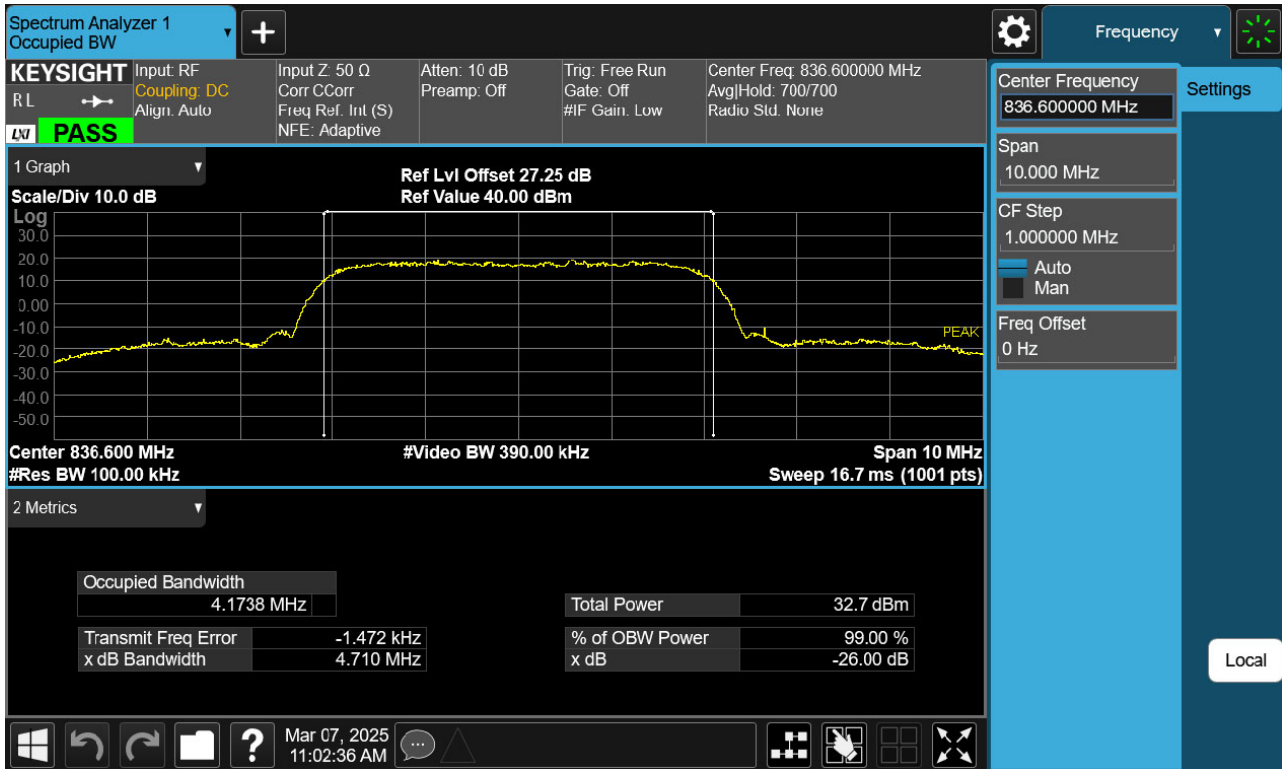


WCDMA850MODE (4233 CH.) Occupied Bandwidth

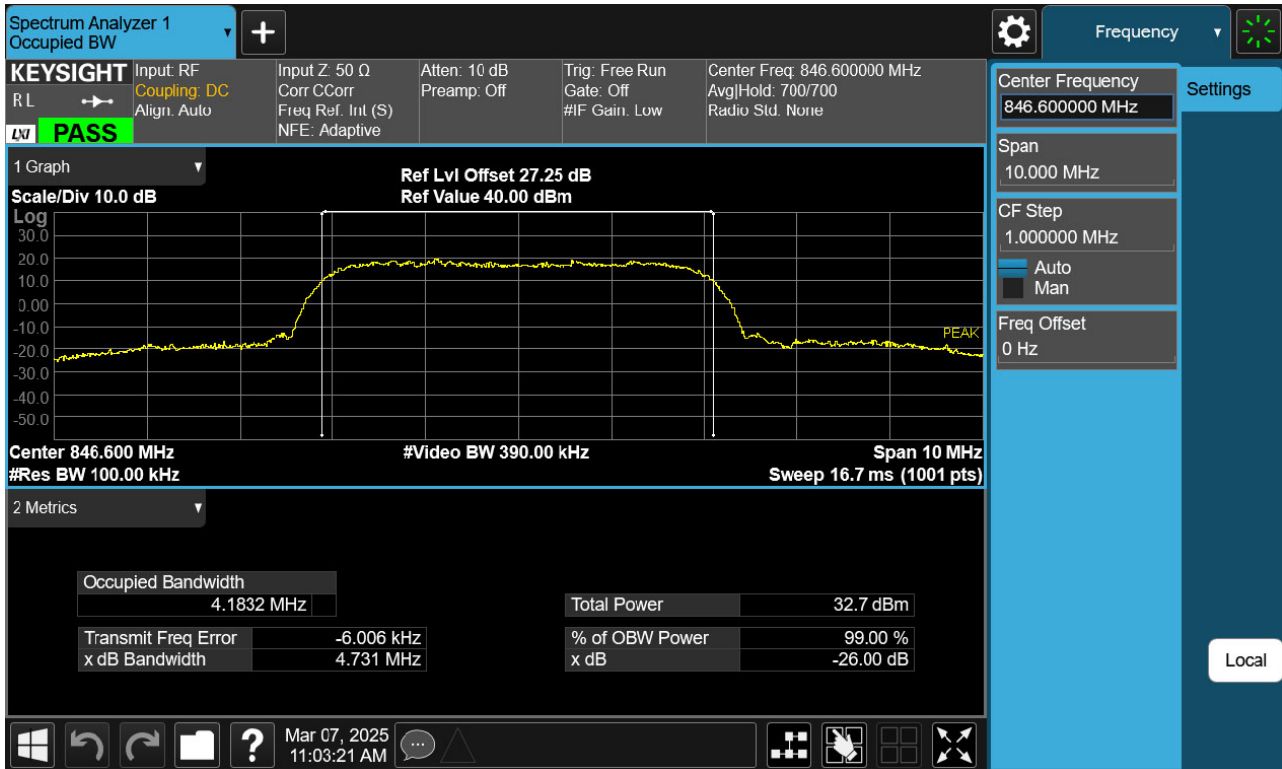

WCDMA1900 MODE (9262 CH.) Occupied Bandwidth

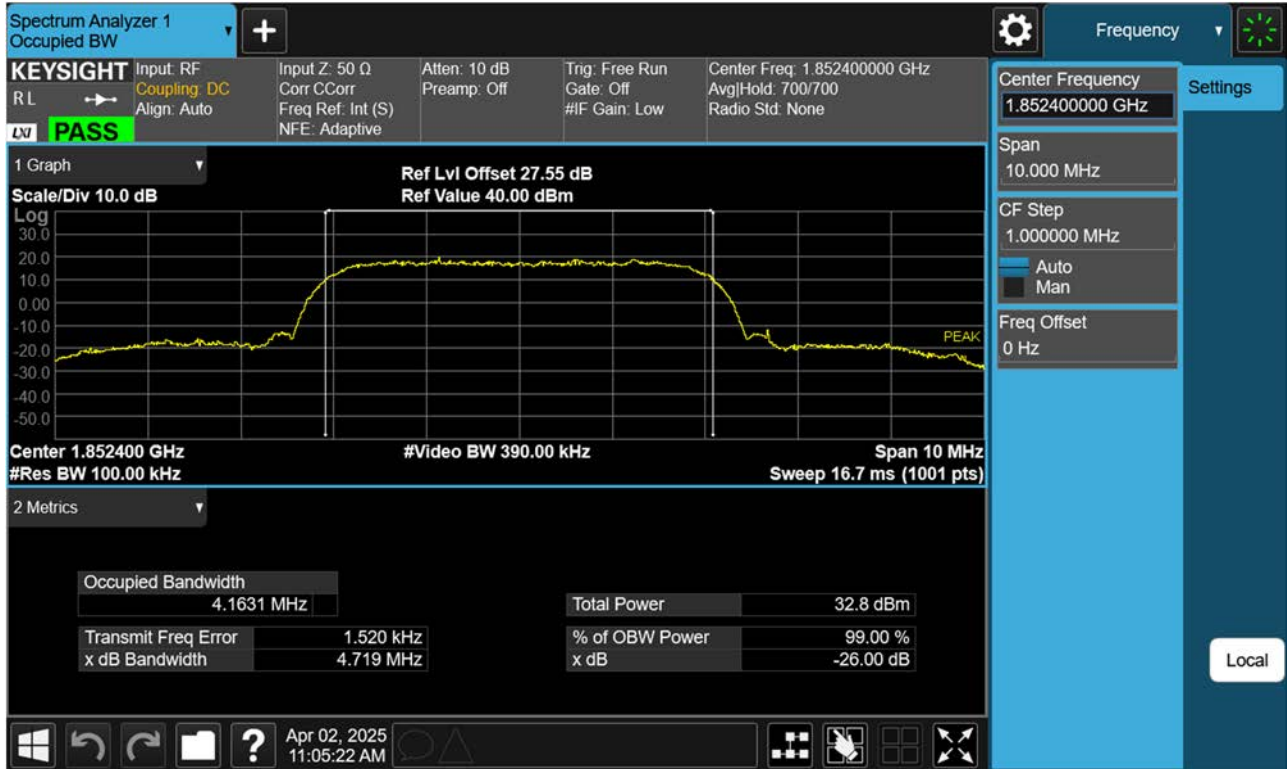


WCDMA1900 MODE (9400 CH.) Occupied Bandwidth

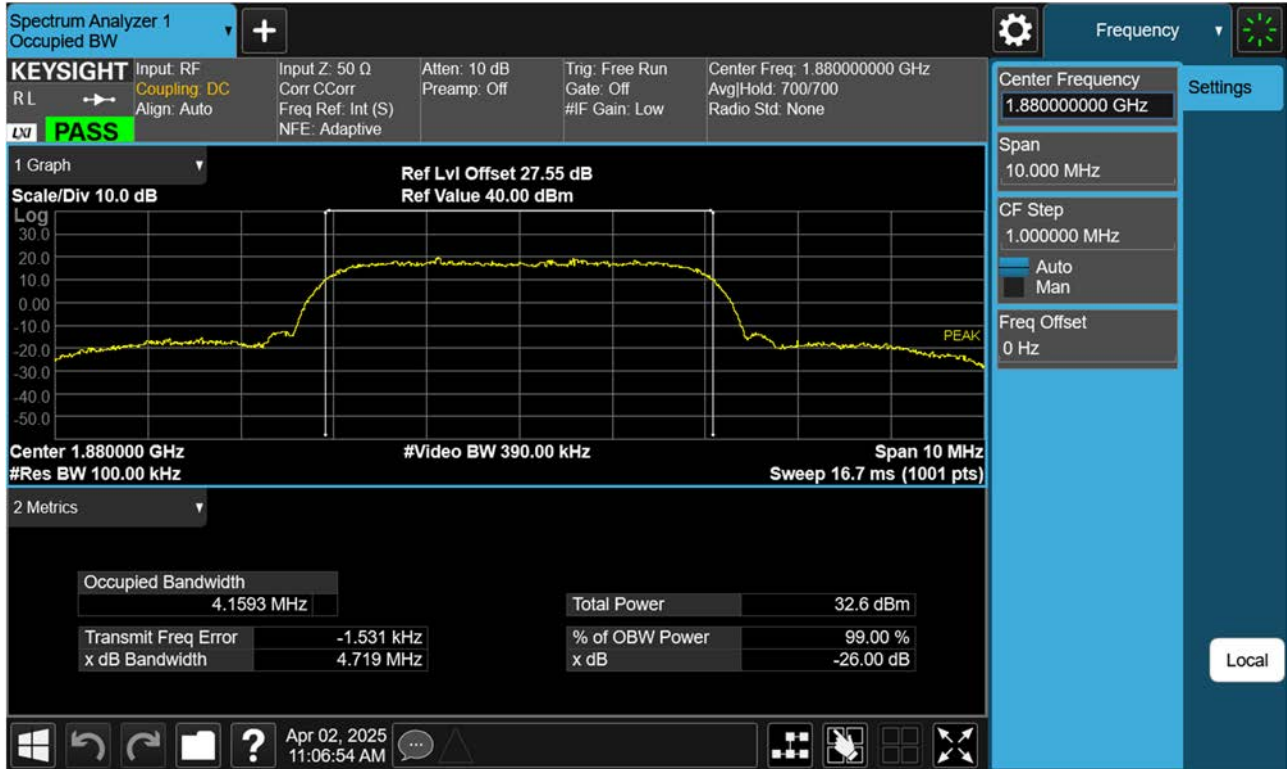


■ WCDMA1900 MODE (9538 CH.) Occupied Bandwidth




■ WCDMA1700 MODE (1312 CH.) Occupied Bandwidth

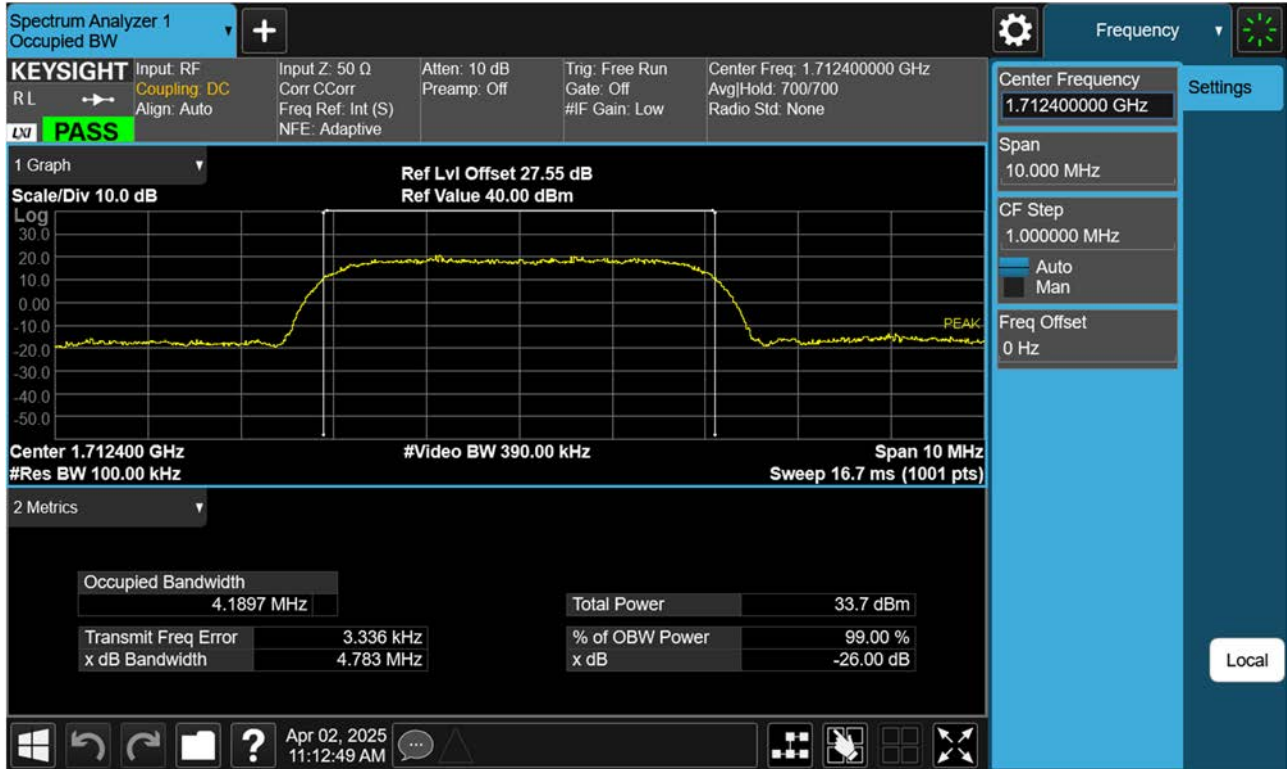


■ WCDMA1700 MODE (1412 CH.) Occupied Bandwidth

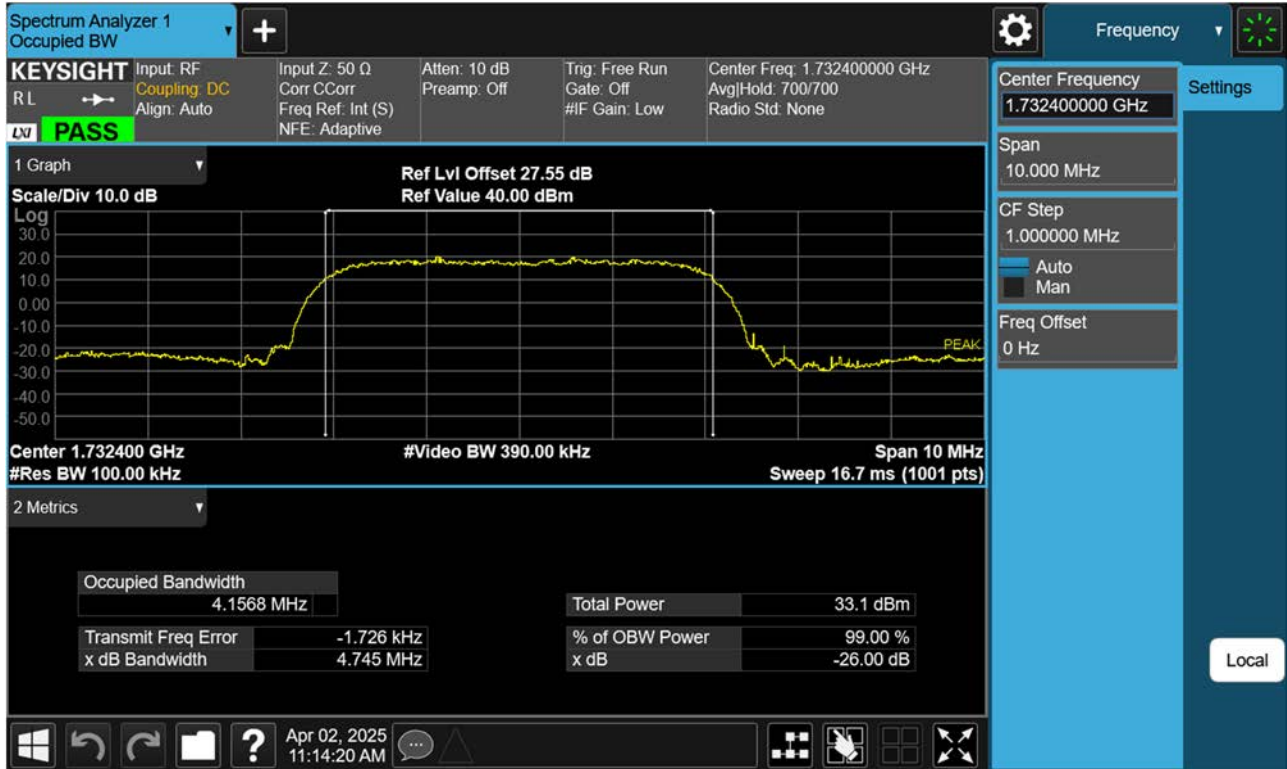


■ WCDMA1700 MODE (1513 CH.) Occupied Bandwidth

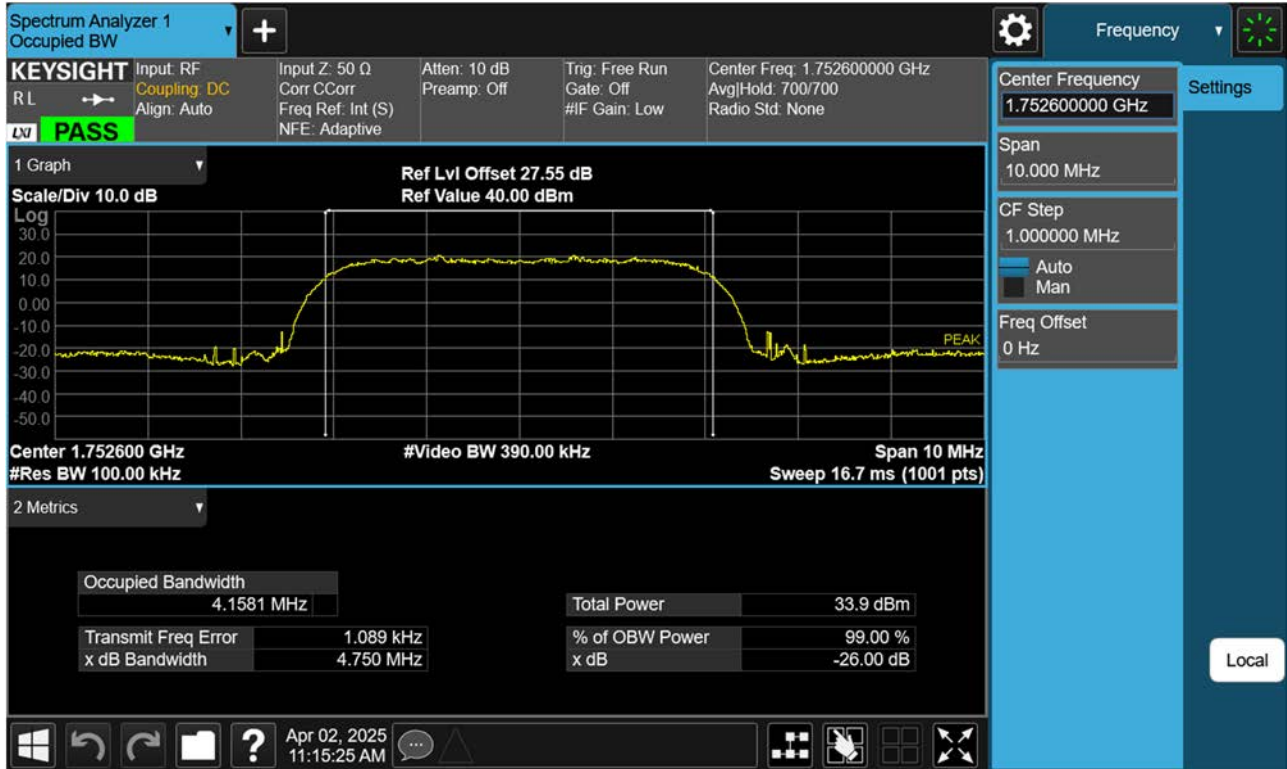


■ GSM850 MODE (190 CH.) Peak-to-Average Ratio

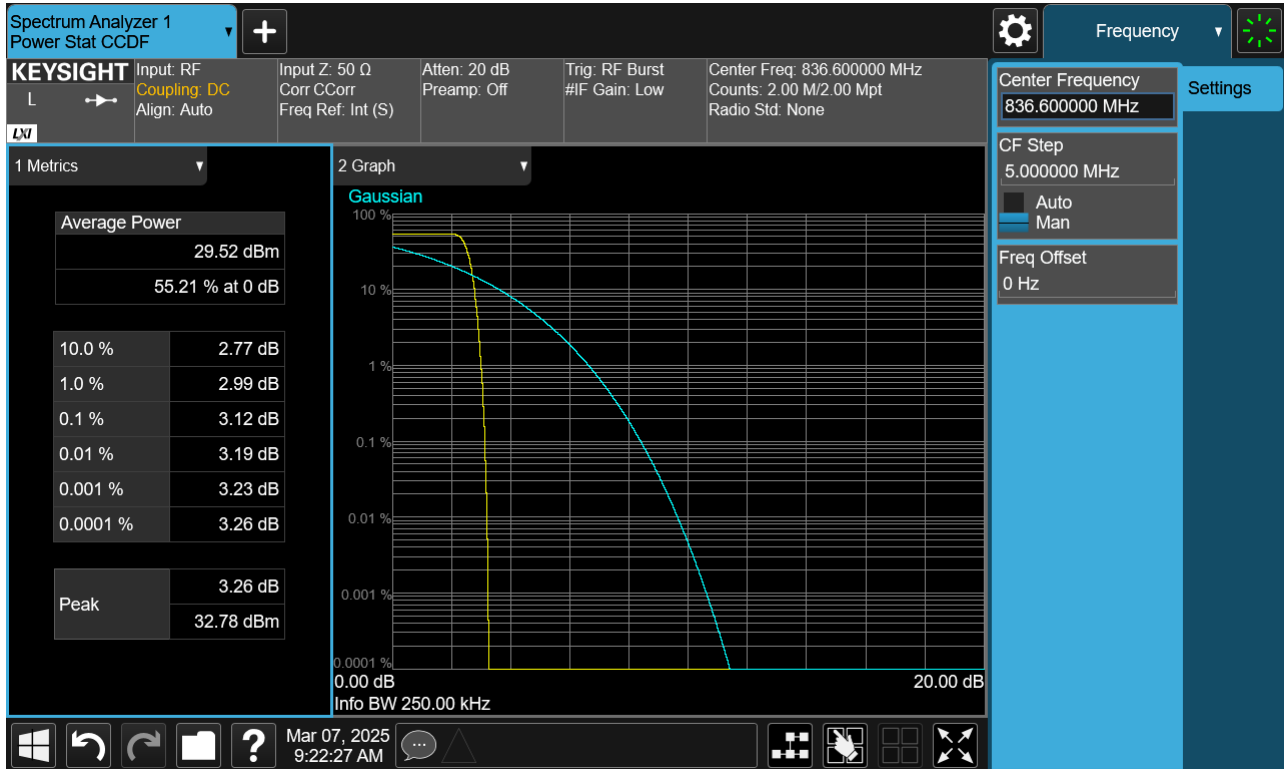


■ GSM850 EDGE (190 CH.) Peak-to-Average Ratio

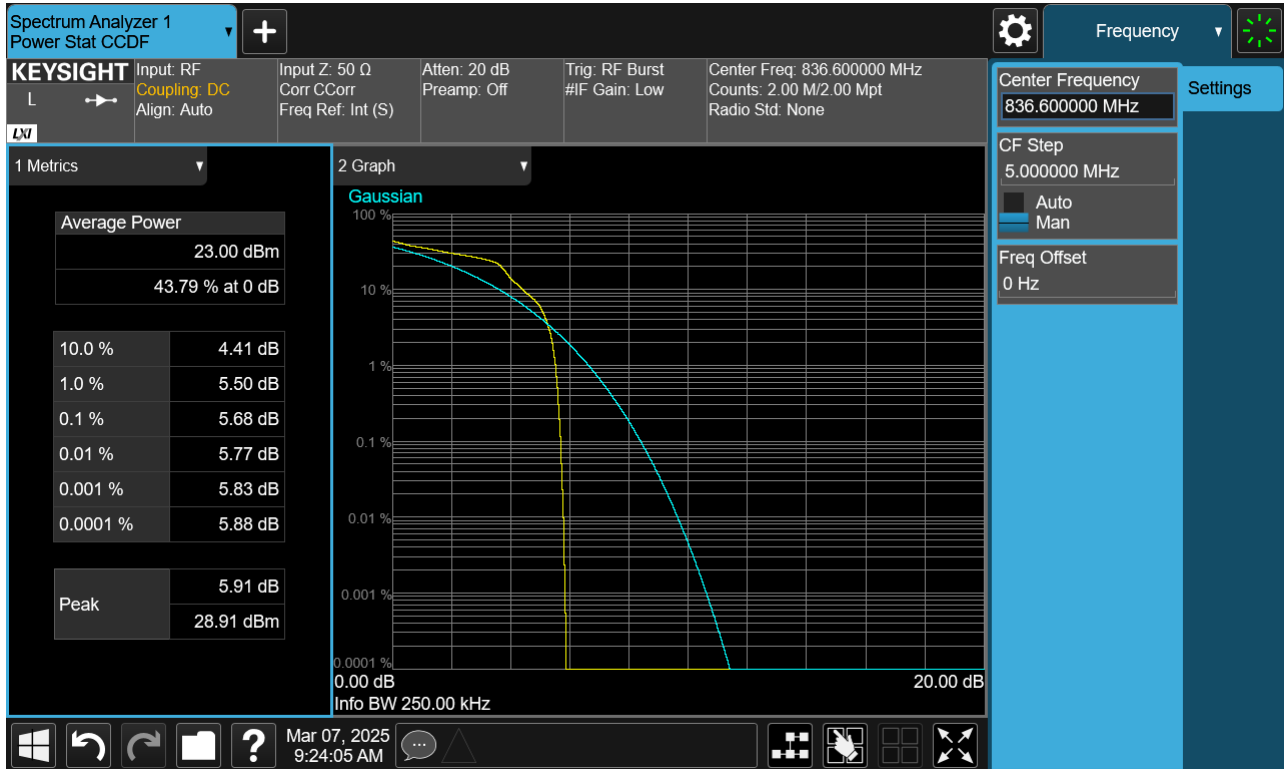


■ WCDMA850 MODE (4408 CH.) Peak-to-Average Ratio

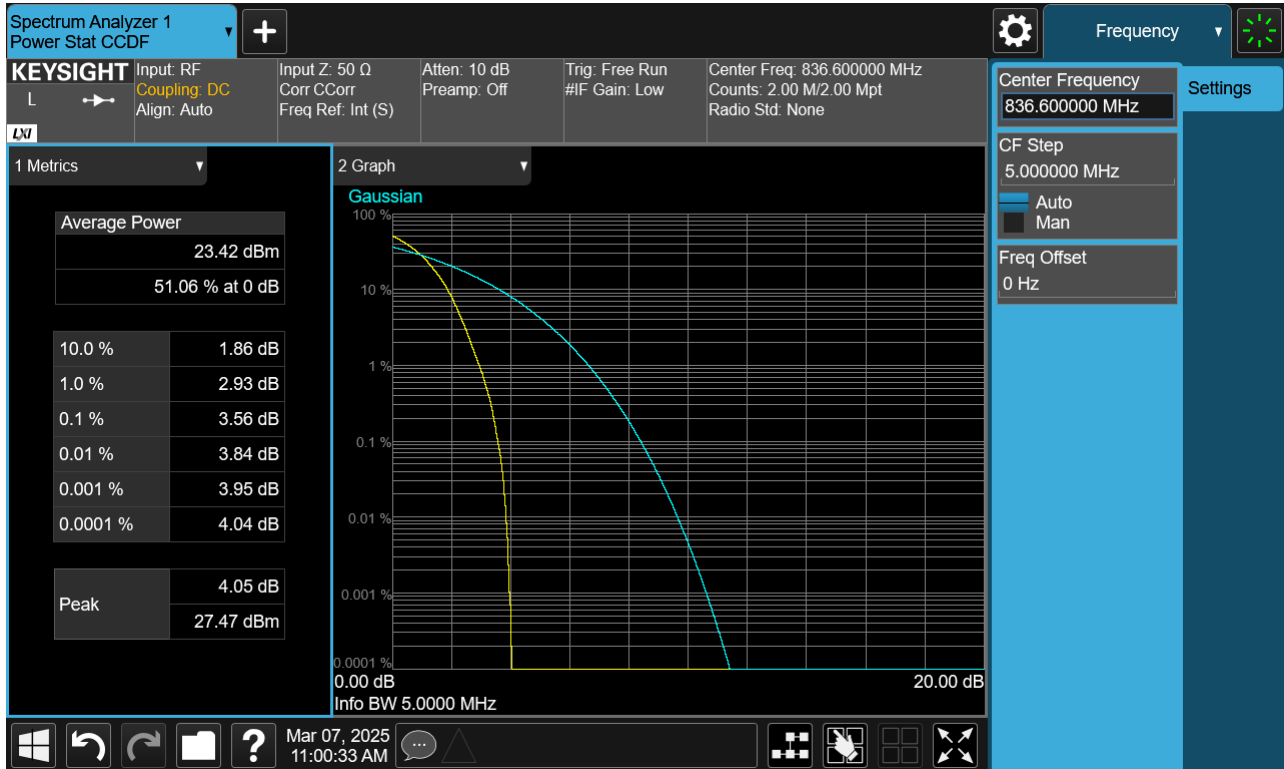


WCDMA1900 MODE (9400 CH.) Peak-to-Average Ratio

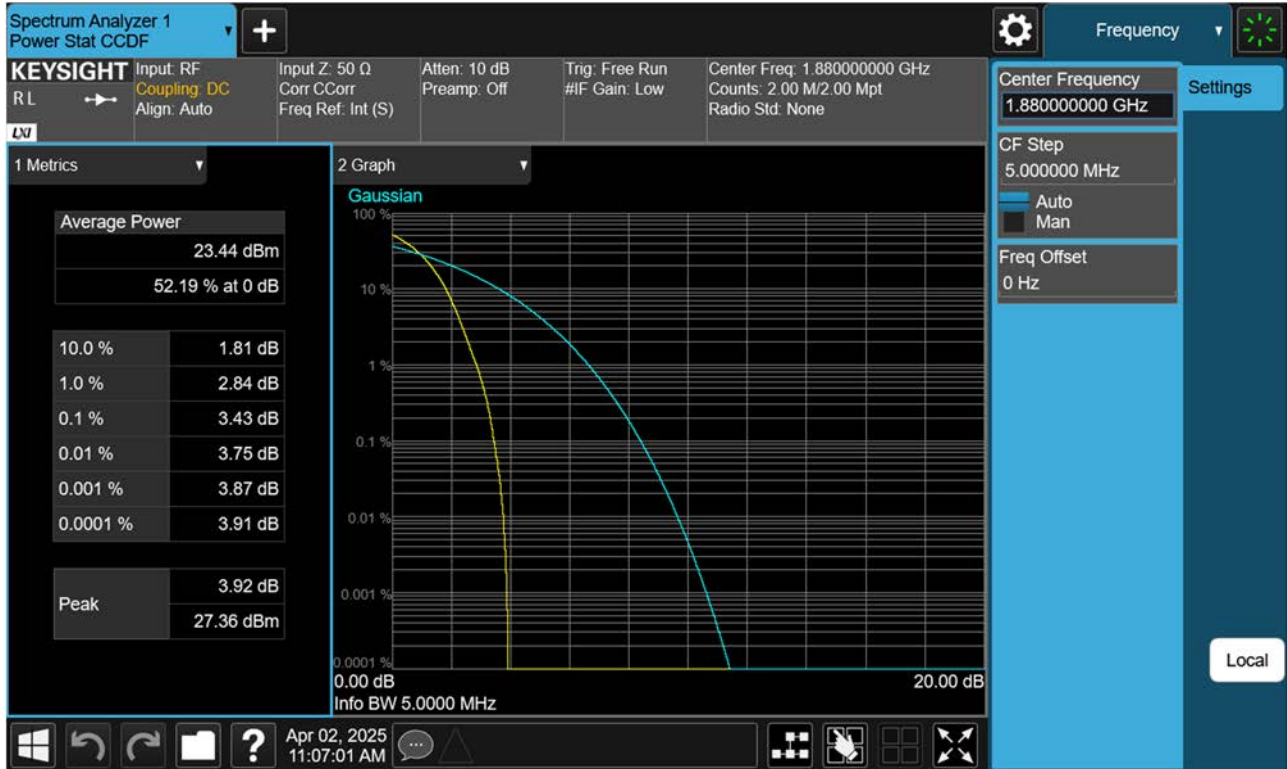


■ WCDMA1700 MODE (1412 CH.) Peak-to-Average Ratio

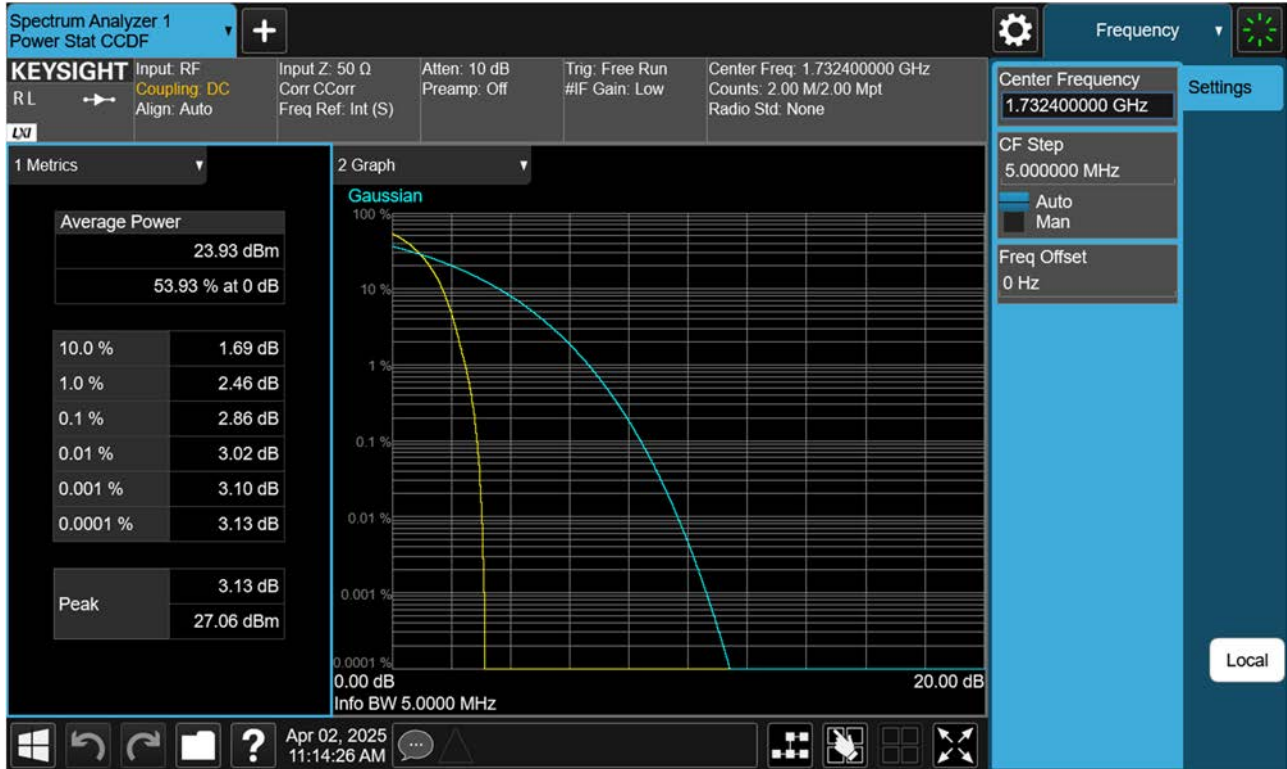


■ GSM850 MODE (128 CH.) Block Edge 1

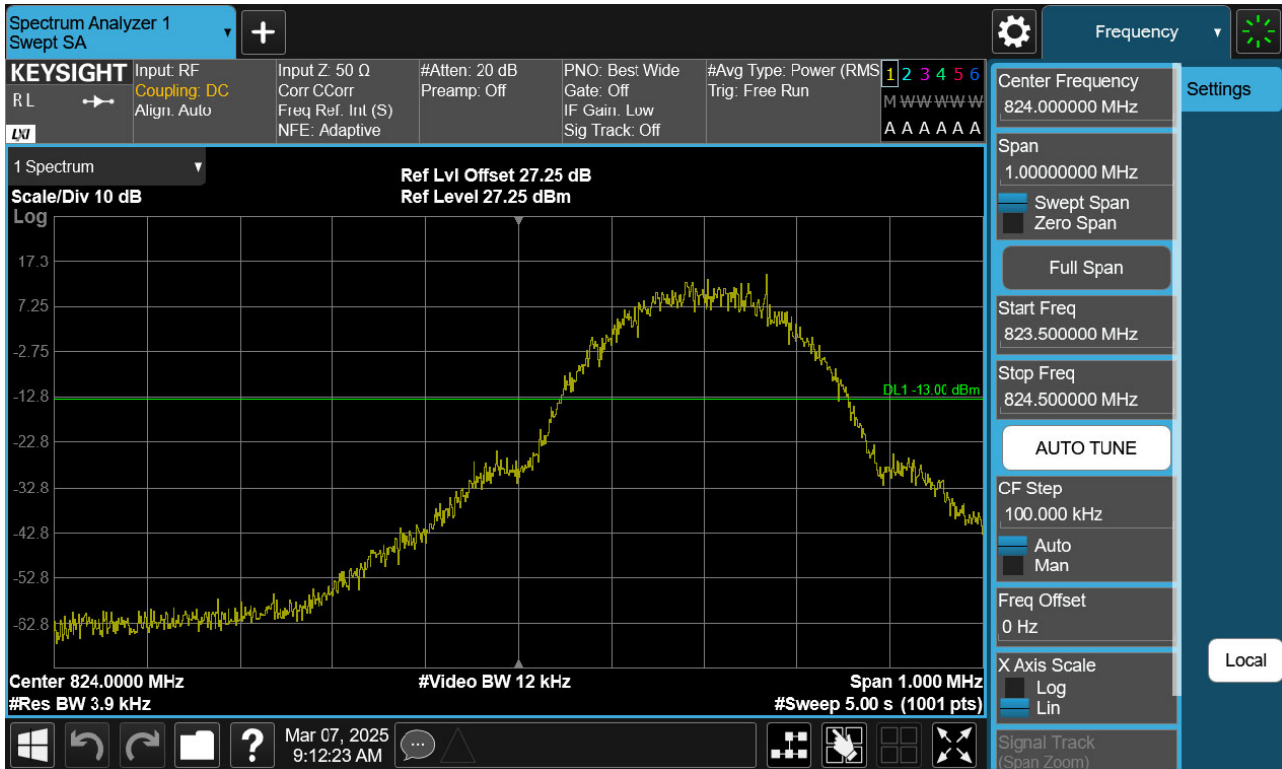


■ GSM850 MODE (128 CH.) Block Edge 2

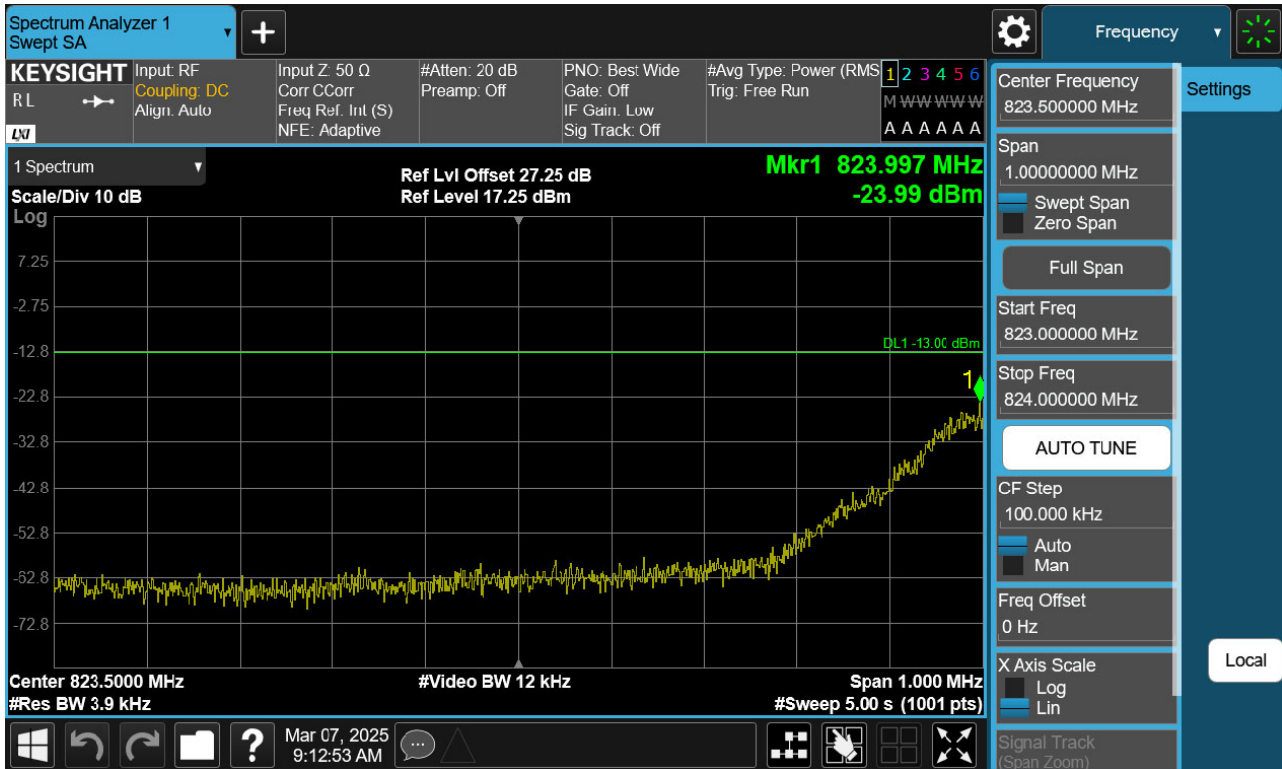


■ GSM850 MODE (128 CH.) Block Edge 3

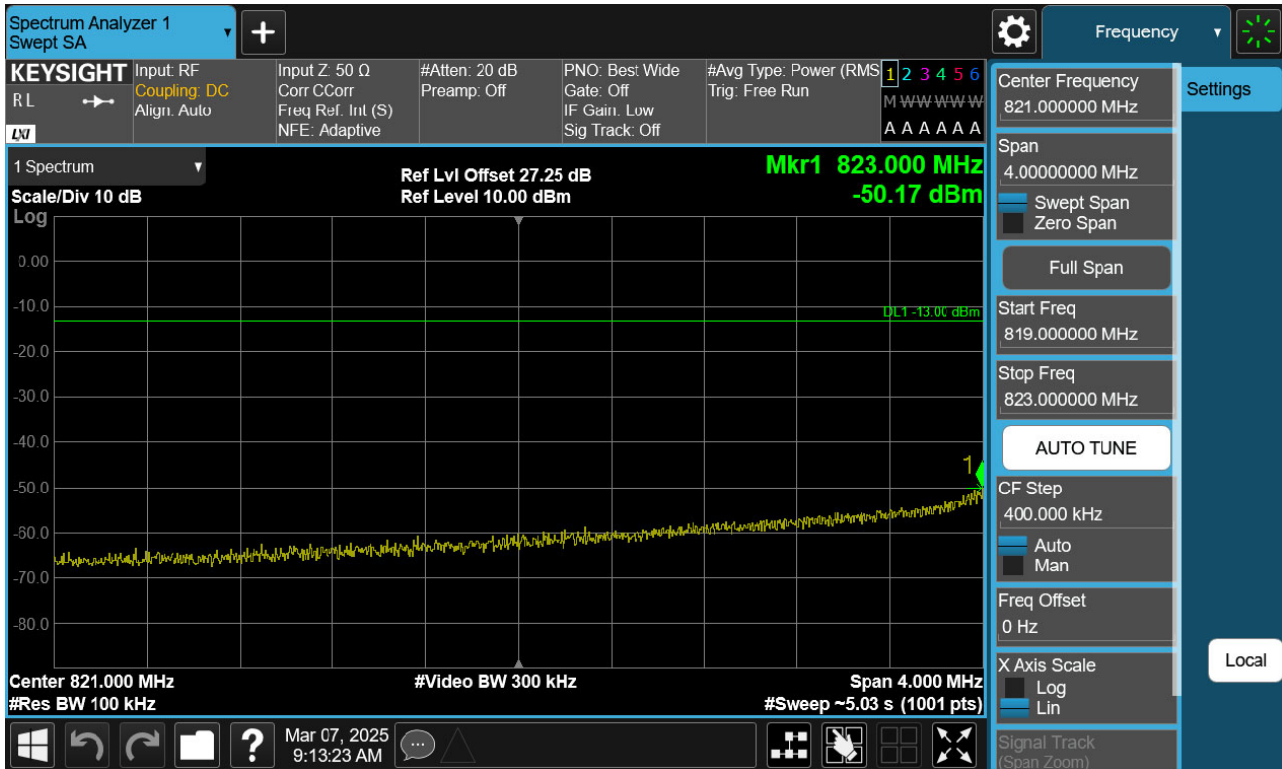


■ GSM850 MODE (251 CH.) Block Edge 1

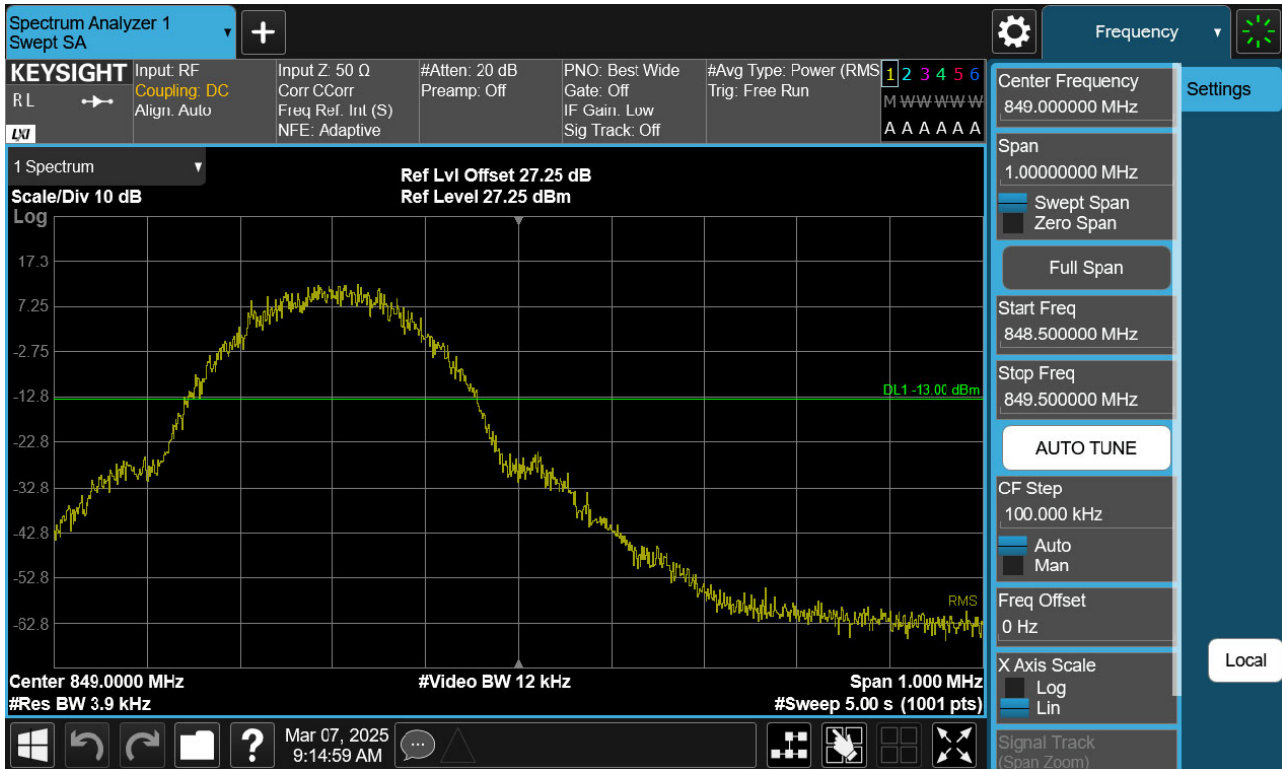


■ GSM850 MODE (251 CH.) Block Edge 2

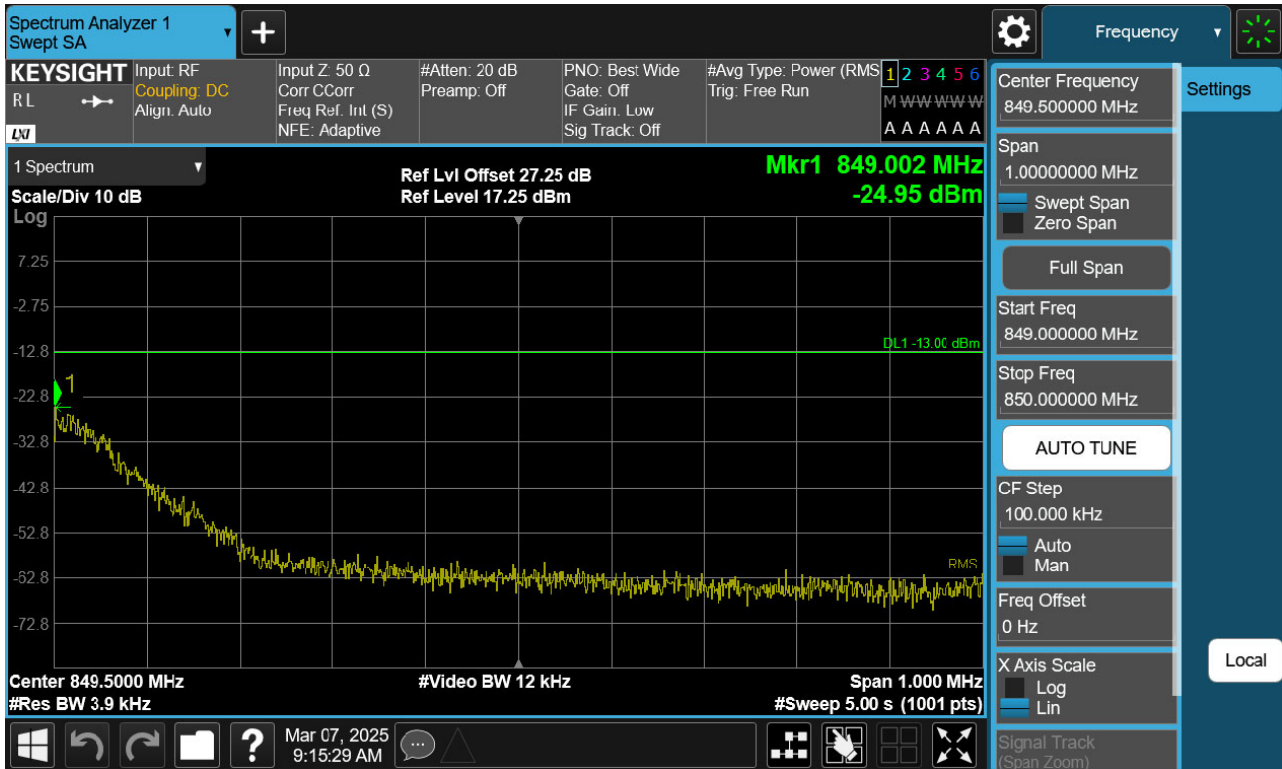


■ GSM850 MODE (251 CH.) Block Edge 3

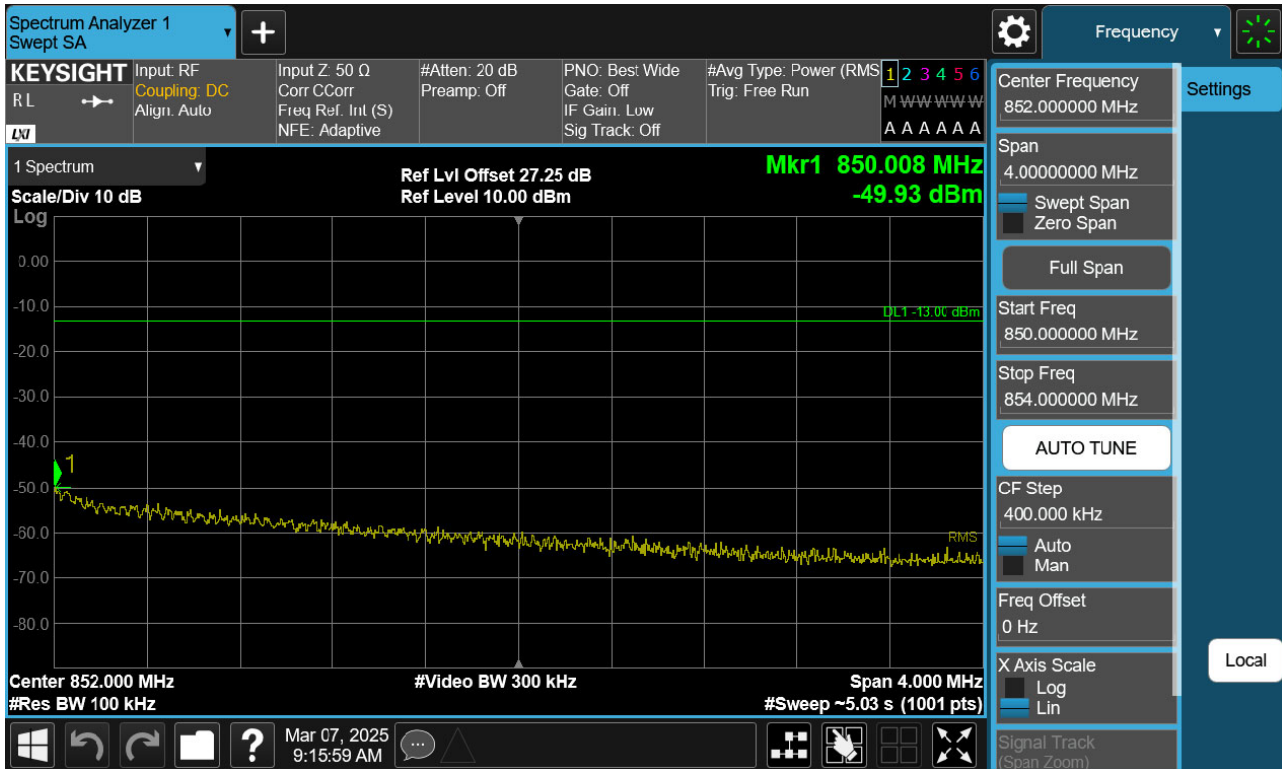


■ EDGE MODE (128 CH.) Block Edge 1

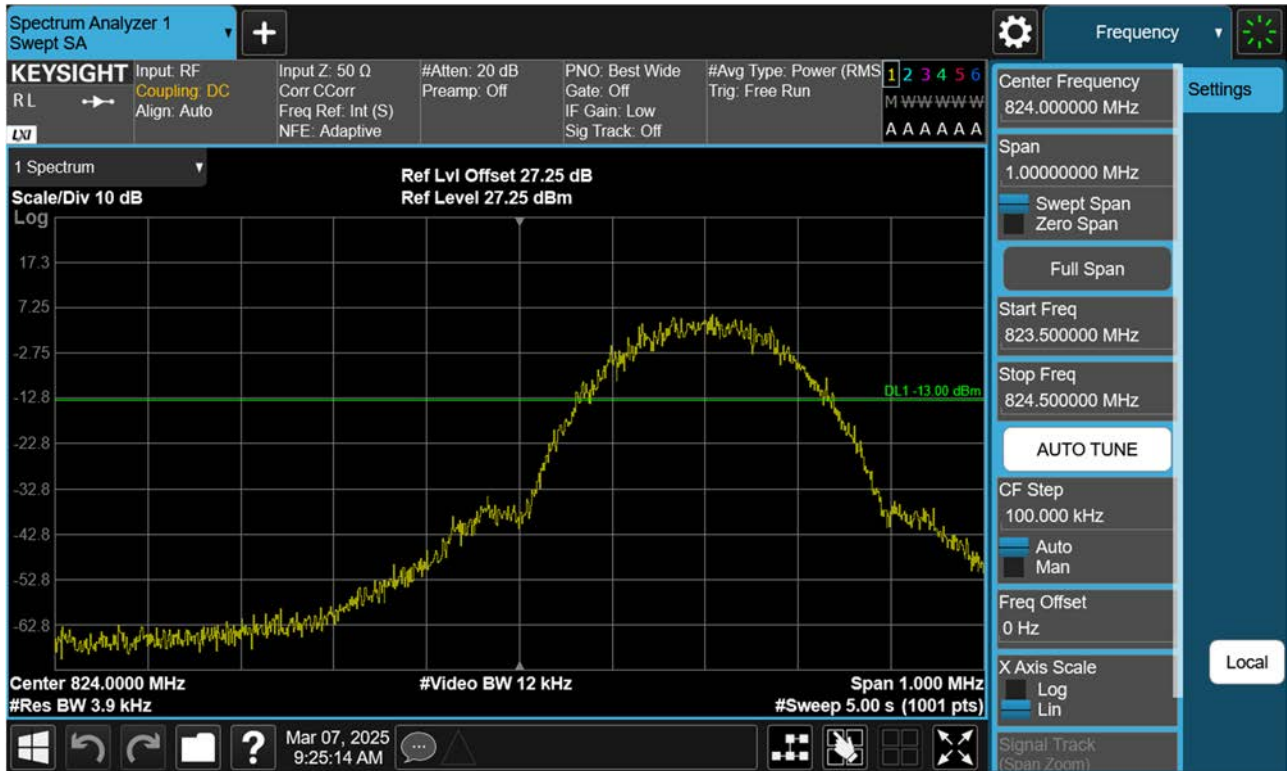

■ EDGE MODE (128 CH.) Block Edge 2

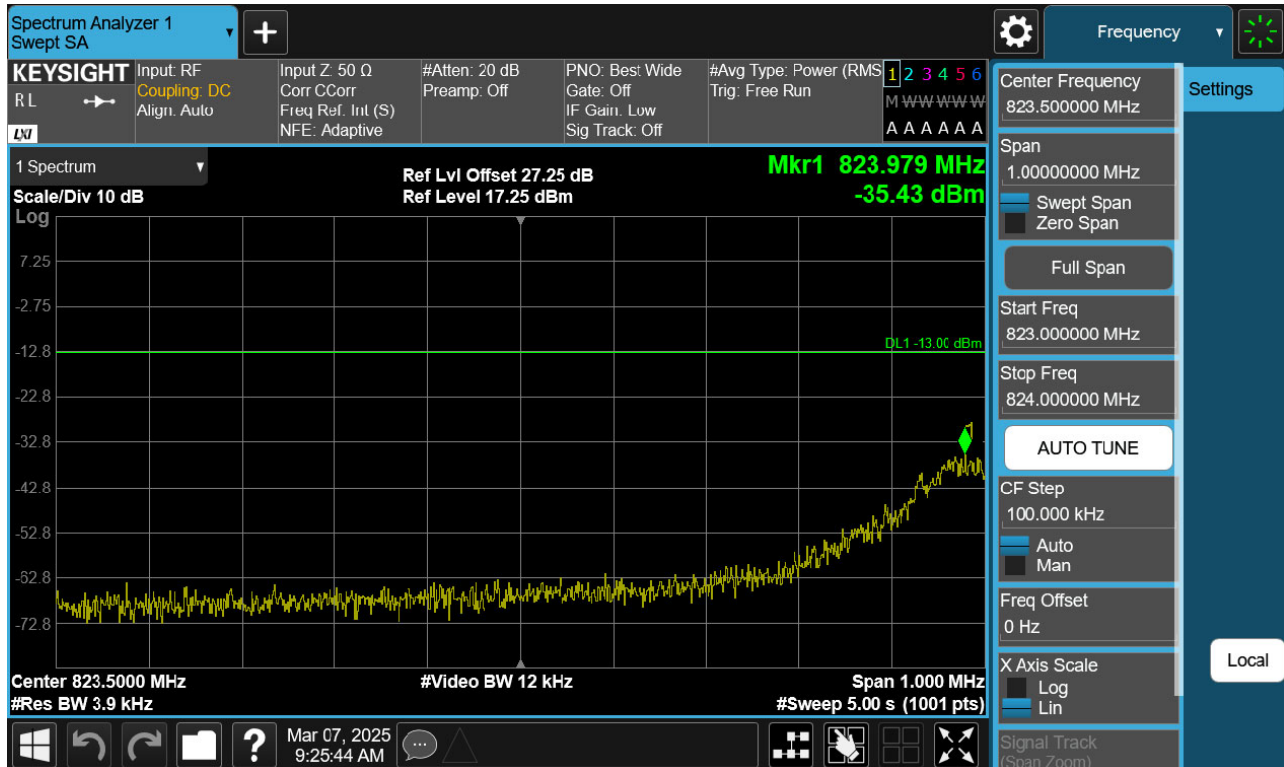


EDGE MODE (128 CH.) Block Edge 3

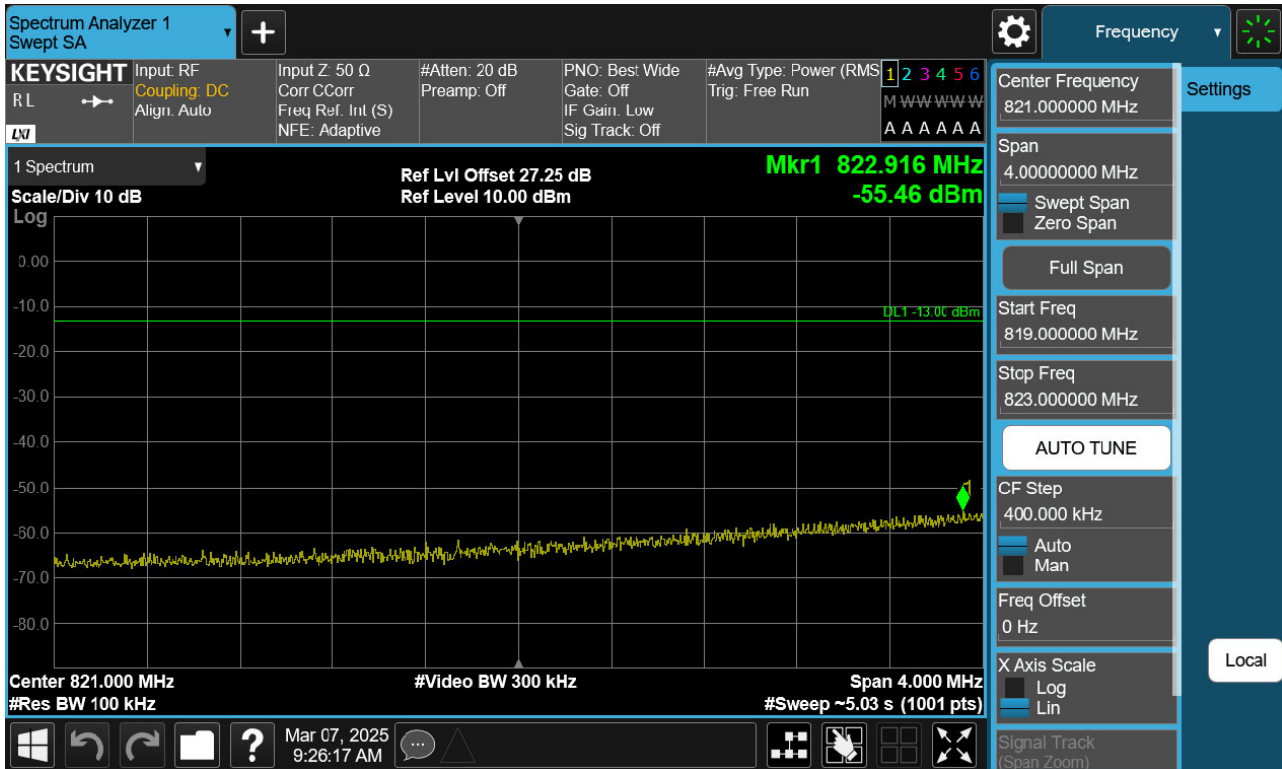


EDGE MODE (251 CH.) Block Edge 1




■ EDGE MODE (251 CH.) Block Edge 2

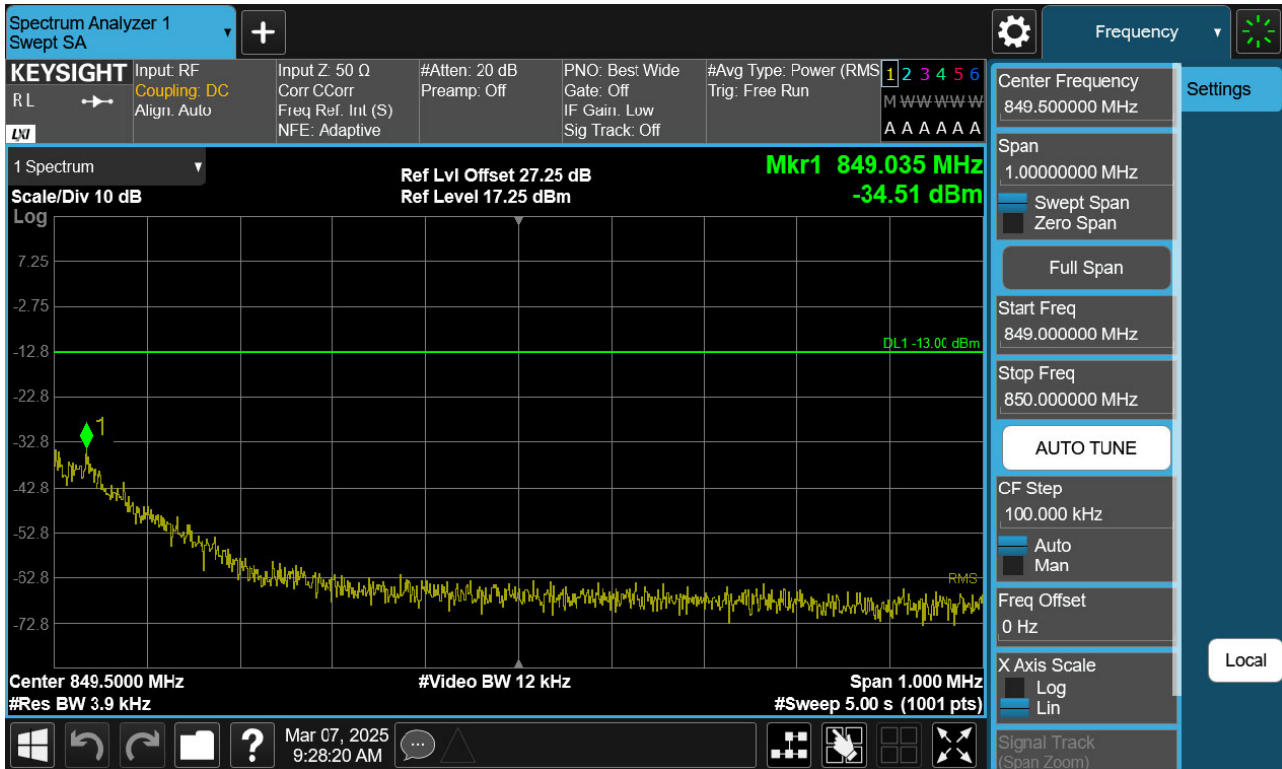

EDGE MODE (251 CH.) Block Edge 3

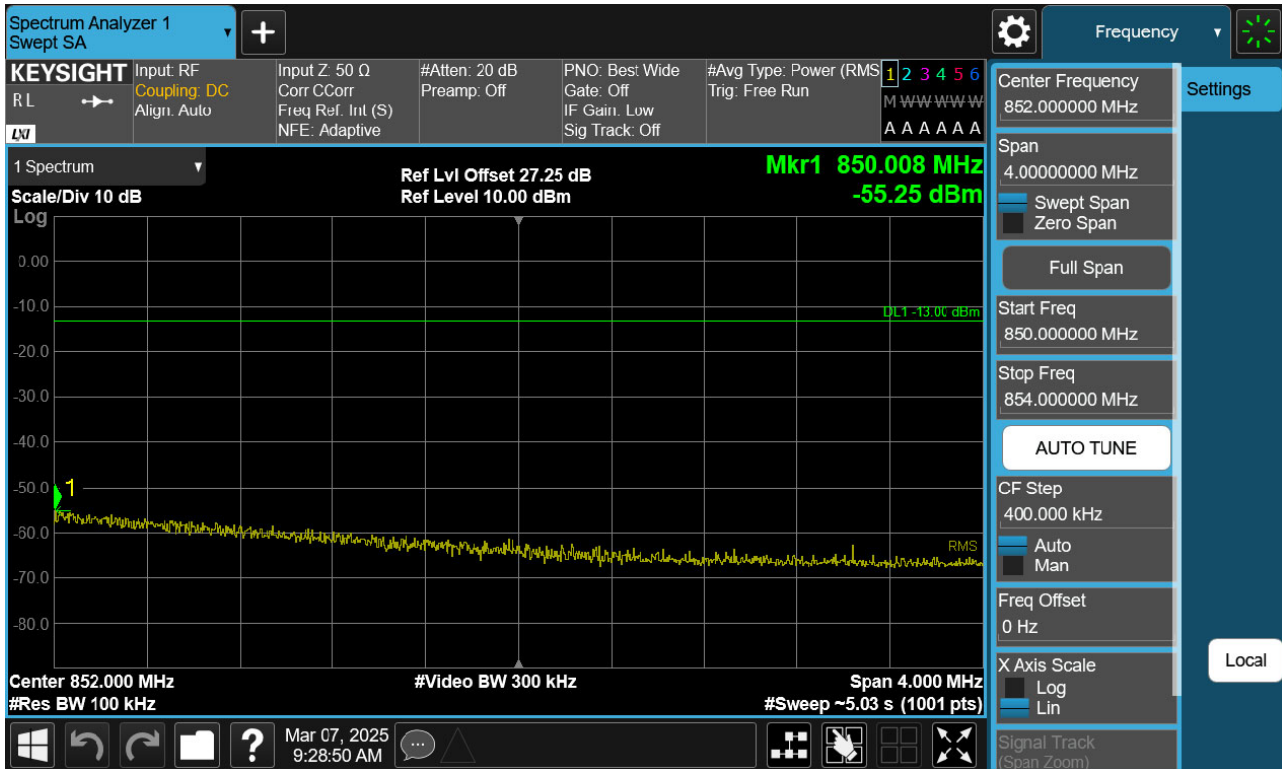

■ WCDMA850 MODE (4132 CH.) Block Edge

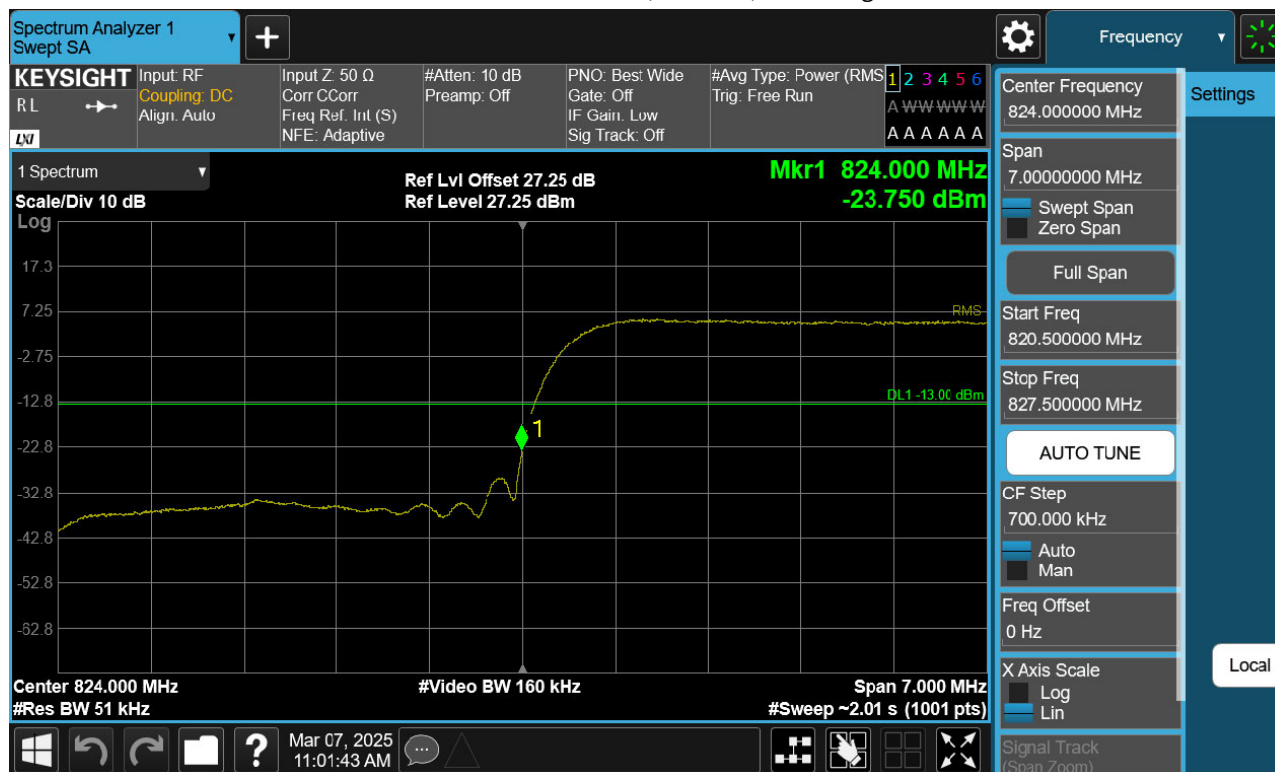

■ WCDMA850 MODE (4132 CH.) – 4 MHz Span



Note : We used a narrower RBW in order to increase accuracy.

Calculation = Reading Value + 10 x log(1 MHz/100 kHz) dB = -31.593 dBm + 10 dB = -21.593 dBm

WCDMA850MODE (4233 CH.) Block Edge



■ WCDMA850MODE (4233 CH.) – 4 MHz Span



Note : We used a narrower RBW in order to increase accuracy.

Calculation = Reading Value + 10 x log(1 MHz/100 kHz) dB = -27.202 dBm + 10 dB = -17.202 dBm

■ WCDMA1900 MODE (9262 CH.) Block Edge



■ WCDMA1900 MODE (9262 CH.) – 4 MHz Span



Note : We used a narrower RBW in order to increase accuracy.

$$\text{Calculation} = \text{Reading Value} + 10 \times \log(1 \text{ MHz}/100 \text{ kHz}) \text{ dB} = -27.155 \text{ dBm} + 10 \text{ dB} = -17.155 \text{ dBm}$$

■ WCDMA1900 MODE (9538 CH.) Block Edge



■ WCDMA1900 MODE (9538 CH.) – 4 MHz Span



Note : We used a narrower RBW in order to increase accuracy.

$$\text{Calculation} = \text{Reading Value} + 10 \times \log(1 \text{ MHz}/100 \text{ kHz}) \text{ dB} = -26.278 \text{ dBm} + 10 \text{ dB} = -16.278 \text{ dBm}$$

■ WCDMA1700 MODE (1312 CH.) Block Edge



■ WCDMA1700 MODE (1312 CH.) – 4 MHz Span



Note : We used a narrower RBW in order to increase accuracy.

$$\text{Calculation} = \text{Reading Value} + 10 \times \log(1 \text{ MHz}/100 \text{ kHz}) \text{ dB} = -26.623 \text{ dBm} + 10 \text{ dB} = -16.623 \text{ dBm}$$

■ WCDMA1700 MODE (1513 CH.) Block Edge



■ WCDMA1700 MODE (1513 CH.) – 4 MHz Span



■ GSM850 MODE (128 CH.) Conducted Spurious Emissions

