


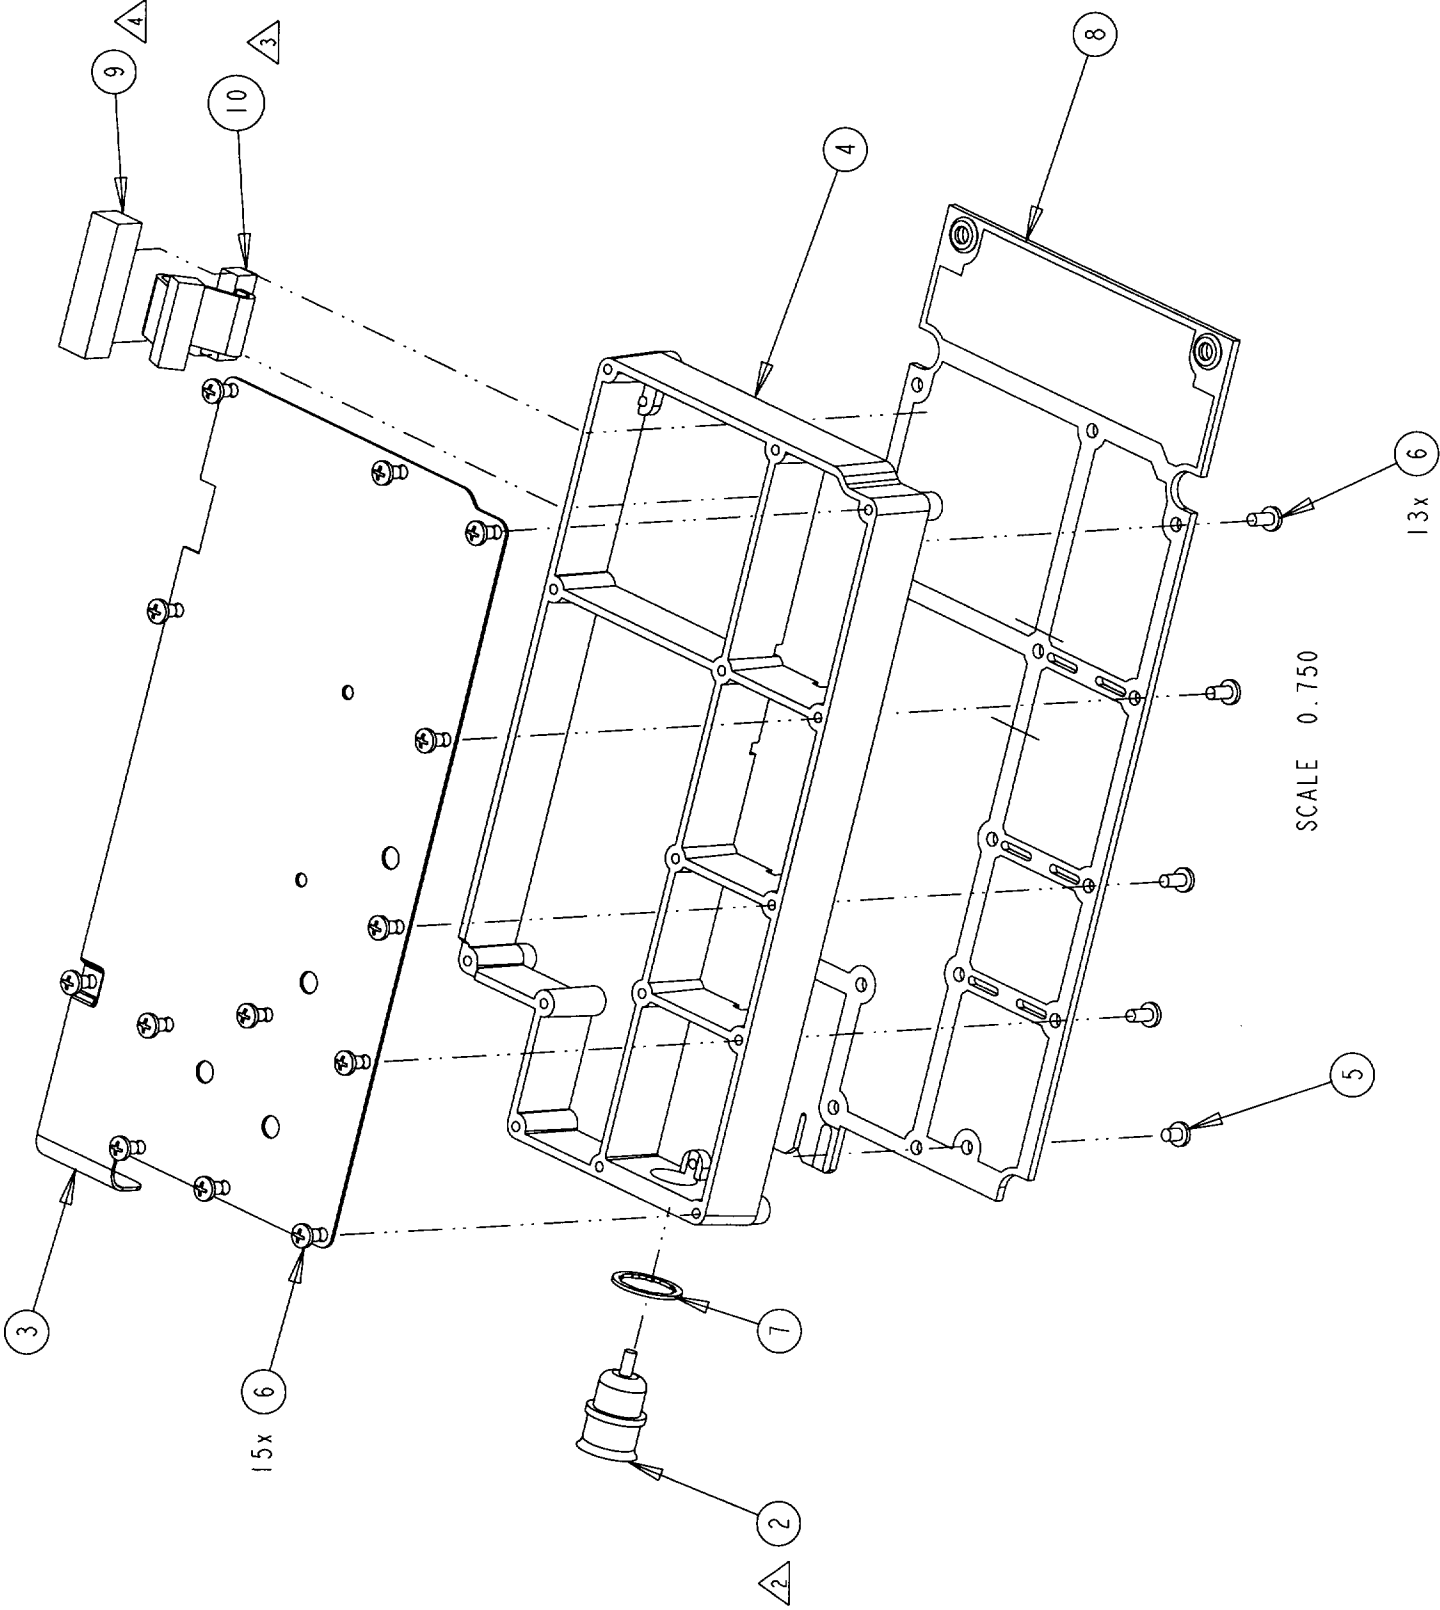

NOTES:

1. LIQUID STAKE ALL FASTENERS PER 001-01080-0000.
2. AFTER INSTALLATION, PREFORM AND SOLDER ITM 1, BUSS WIRE BETWEEN CENTER TERMINAL OF ITM 2 AND E1 PAD ON PC BOARD.
3. INSTALL THE CABLE HOUSING (ITM 10) WITHOUT KEY TO ITM 8 HEADER.
4. MOUNT CUSHION (ITM 9) ON TOP OF HOUSING (ITM 10) TO PREVENT DISCONNECTION DUE TO VIBRATION.

THIS DRAWING IS NOT COMPLETE WITHOUT
PARTS LIST 200-09447-0000.

SINGAPORE DISTRIBUTION AUTHORIZED PRINT

200-05661-0000		KX155A	TOL UNLESS NOTED .XX ±0.02 .XXX ±0.010 ANGLES ±0.5°		ME C. HOLMER EE J. HUNTER		AlliedSignal Inc. Olathe, Kansas USA CAGE: 22373	
NEXT ASSY		UNIT	MATERIAL		DRN CFH		NAME GLIDESLOPE ASSEMBLY	
AlliedSignal PROPRIETARY This document and all information contained herein are the property of AlliedSignal Inc., are provided in confidence, and may not be used, duplicated or disclosed to a third party, in whole or in part, without prior written permission of AlliedSignal Inc. Copyright 1999 AlliedSignal Inc. All rights reserved.		FINISH	DATE 19-Feb-98		SIZE B		P/N RANGE NONE	
			388/50447-0000.dwg ASSEM		SCALE 0.5		DOCUMENT NUMBER 300-09447-0000	
			SHT 1 OF 1					

REVISIONS

REV	CO/PRN	DATE	BY
-	PRN 137596	2/98	CFH
A	165160	12/99	PWB