

**SPECTRUM™ SERIES**  
**BASE LOADED MOBILE ANTENNAS**  
Manufactured by MOTOROLA

- \* ANTENNA INSTALLATION
- \* MOUNTING INSTRUCTIONS
- \* CUTTING CHARTS

- \* REPLACEMENT PARTS
- \* CONNECTOR INSTRUCTIONS

**Read all instructions carefully  
before starting the installation.**

**THANK YOU**


Thank you for selecting the Spectrum mobile antenna.

The Spectrum antennas have been designed to withstand demanding and rugged environments. During the design phase, the antennas went through extensive Accelerated Life Testing (ALT), which simulates years of in-field service. As a result, potential problems are designed out, helping ensure that the antennas you receive will give you years of dependable performance.

Effective April 3, 1994 the warranty on Spectrum antennas will be changed to one year. Motorola manufactured Spectrum antennas are warranted to be free from defects in workmanship and materials for a period of (1) one year from the date of shipment.

**DANGER**

ANTENNA CONTACT WITH  
HIGH VOLTAGE WIRES  
MAY RESULT IN DEATH  
FROM ELECTROCUTION

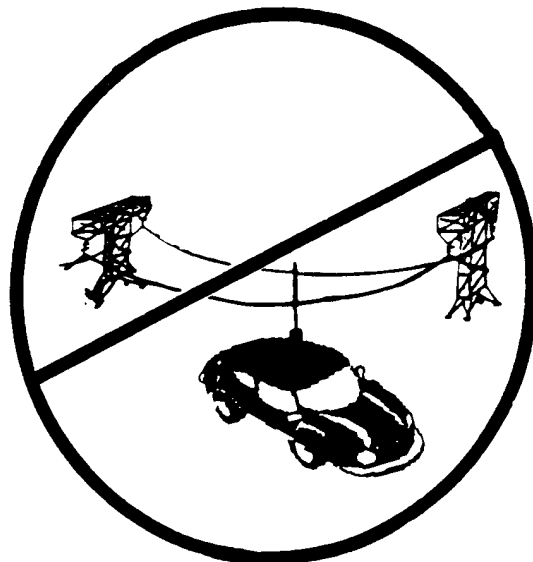

**BEFORE YOU START**  
**SAFETY PRECAUTIONS AND**  
**PROBLEM PREVENTION**  
FOR MOTOR VEHICLE USE ONLY

**1. SAFE ANTENNA INSTALLATION**


Be sure to mount the antenna on a horizontal surface to keep the antenna as vertical as possible, thus preventing the antenna from protruding beyond the vehicle and causing bodily injury and/or property damage.

**2. ENTERING GARAGES**

Remove the antenna from the vehicle when entering a garage, preventing damage to the vehicle and the antenna whip/ball from damaging overhead light fixtures, and garage doors.

**3. AUTOMATIC CARWASH**

To prevent damage to the antenna and vehicle, remove the entire antenna from the vehicle before entering the automatic carwash. Antenna mount contact must be wiped dry to prevent moisture from damaging the contact.

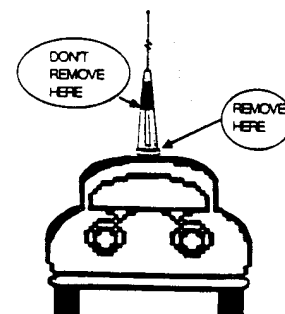

**MOTOROLA**  
**COMMUNICATIONS PARTS DIVISION**  
1313 E. Algonquin Rd.  
Schaumburg, Illinois 60196  
To Order Call Toll-Free 1-800-422-4210

