



## TEST SETUP PHOTOGRAPHS

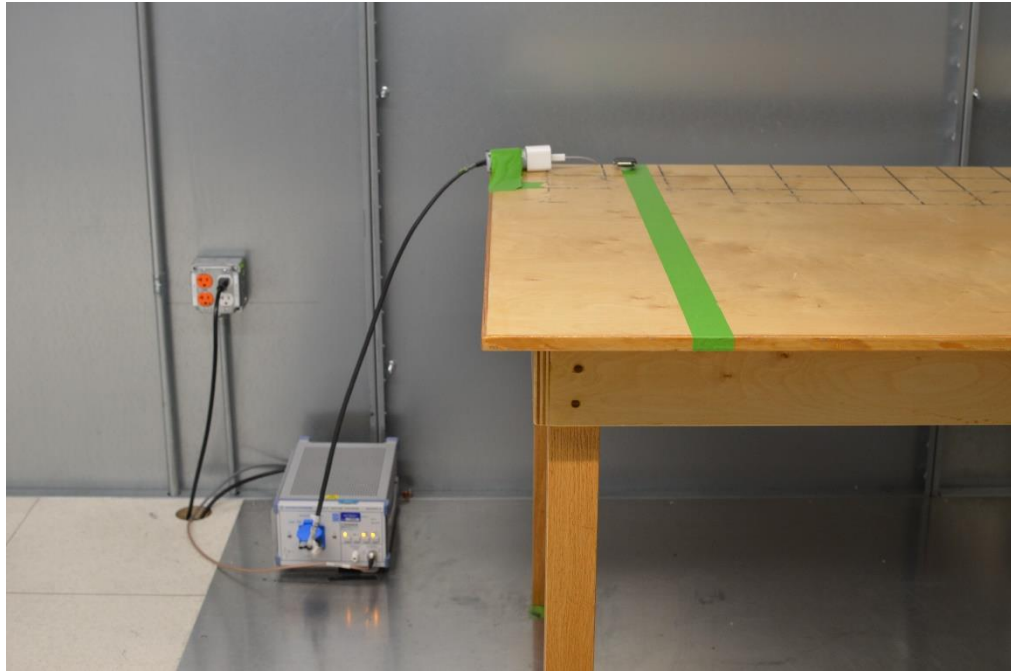

**Figure 1: AC Line Conducted Emissions (Front View)**

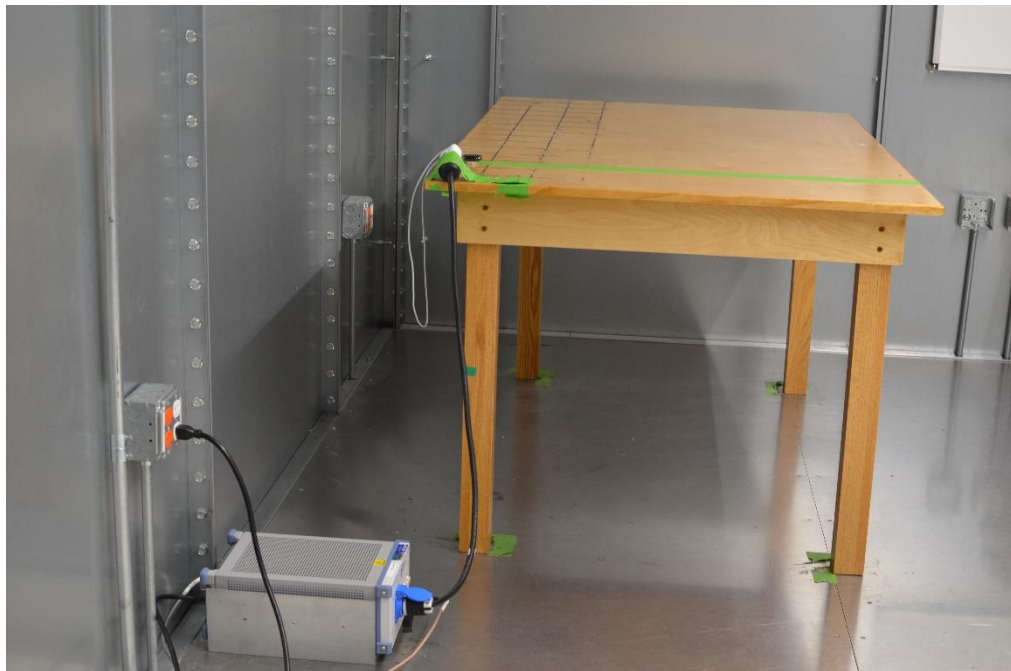

**Figure 2: AC Line Conducted Emissions (Side View)**



**Figure 3: AC Line Conducted Emissions (Front View)**



**Figure 4: AC Line Conducted Emissions (Side View)**



Figure 5: Above 960MHz Test Setup


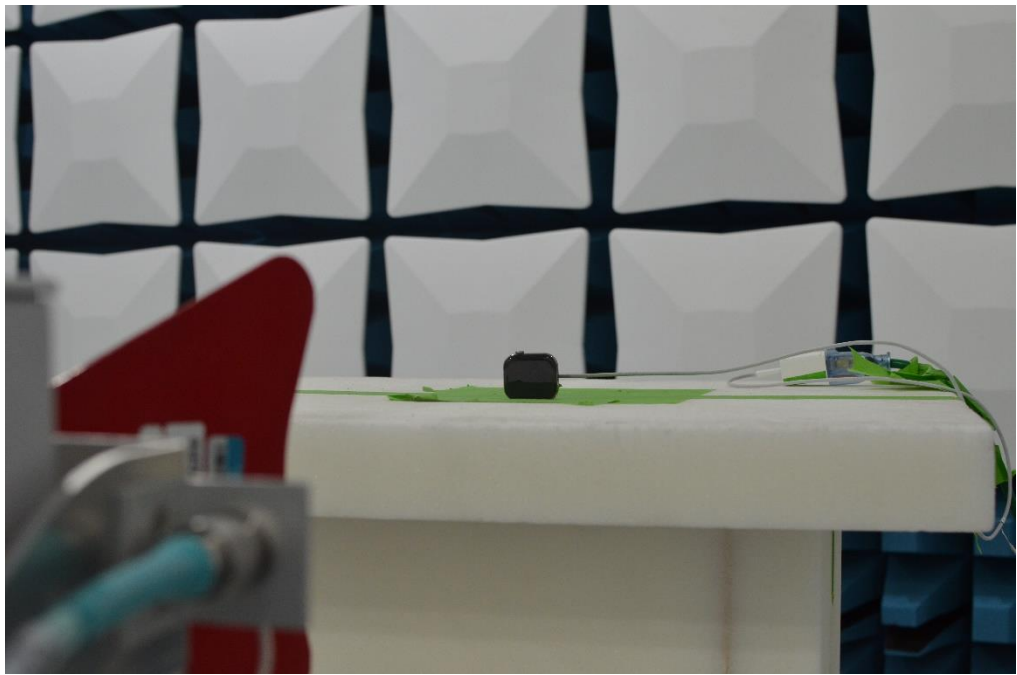



Figure 6: Above 960MHz Test Setup




**Figure 7: Above 960MHz Test Setup**

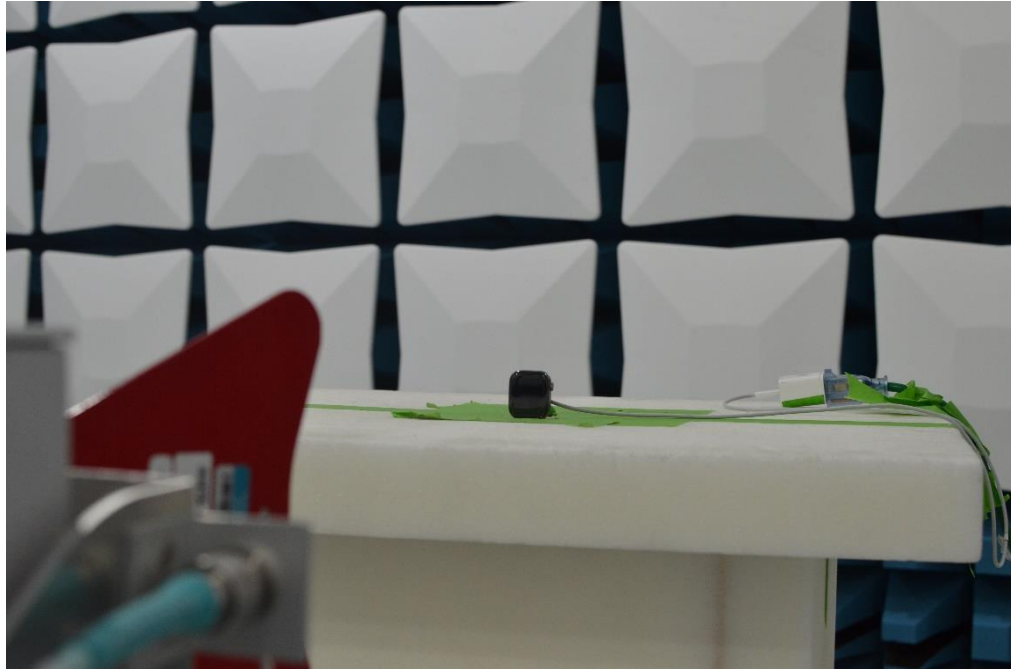


**Figure 8: 30MHz-1GHz Test Setup (Front View)**

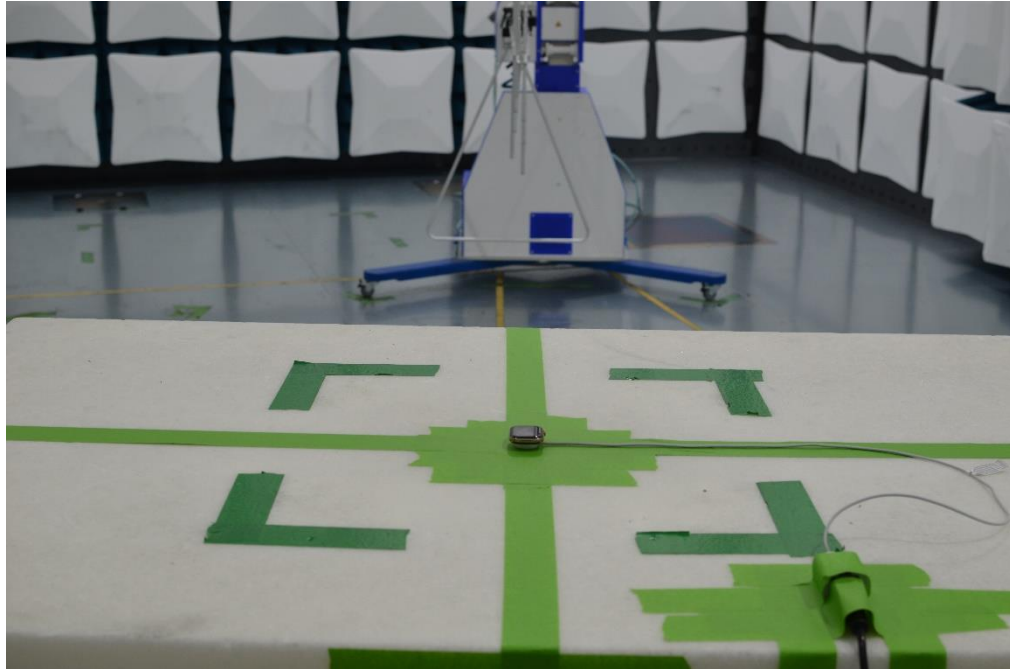

**Figure 9: 30MHz-1GHz Test Setup (Rear View)**

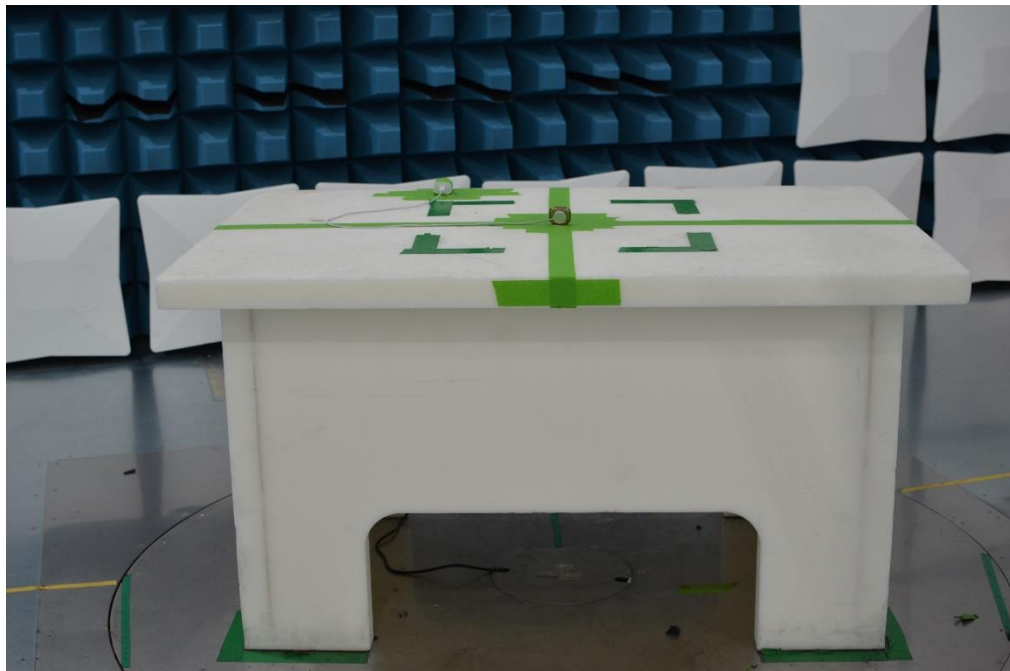


**Figure 10: 30MHz-1GHz Test Setup (Front View)**

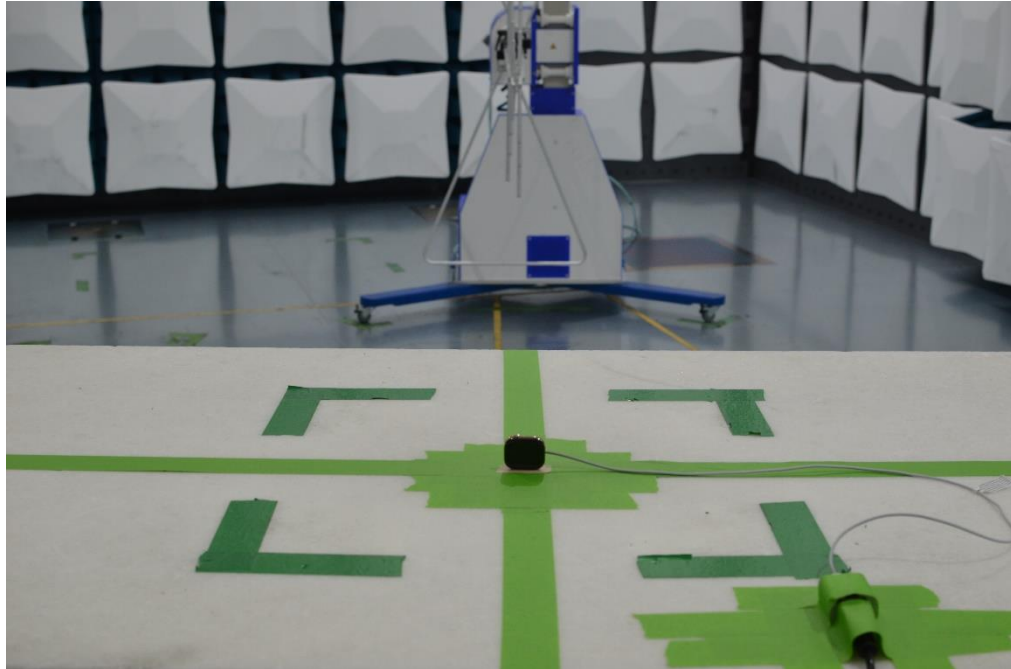

**Figure 11: 30MHz-1GHz Test Setup (Rear View)**




**Figure 12: 30MHz-1GHz Test Setup (Front View)**

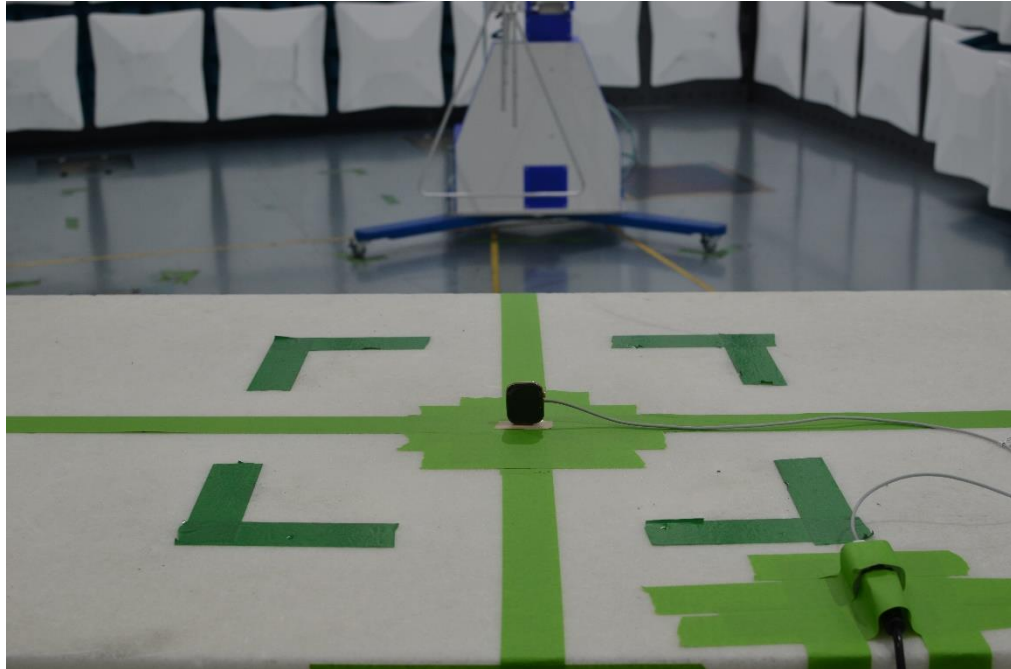

**Figure 13: 30MHz-1GHz Test Setup (Rear View)**




**Figure 14: 30MHz-1GHz Test Setup (Front View)**

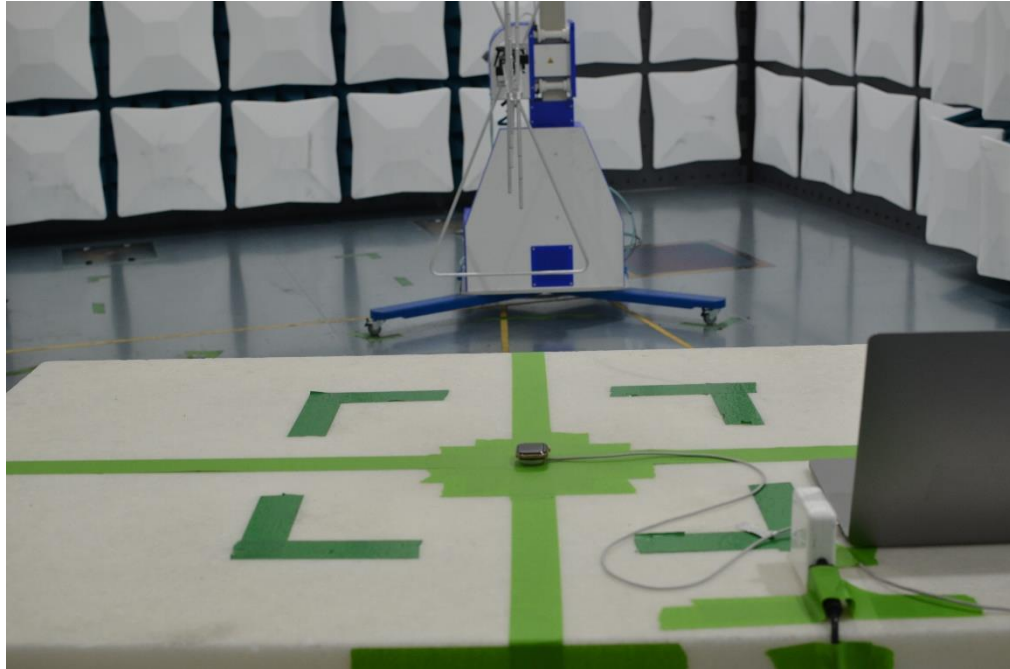

**Figure 15: 30MHz-1GHz Test Setup (Rear View)**




**Figure 16: 30MHz-1GHz Test Setup (Front View)**

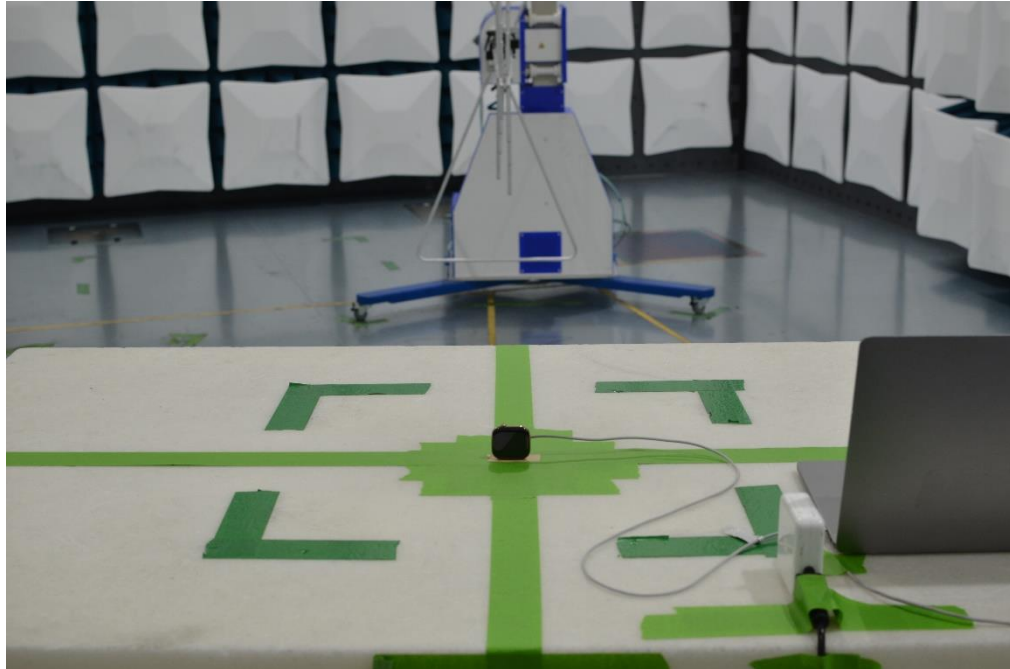

**Figure 17: 30MHz-1GHz Test Setup (Rear View)**



**Figure 18: 30MHz-1GHz Test Setup (Front View)**

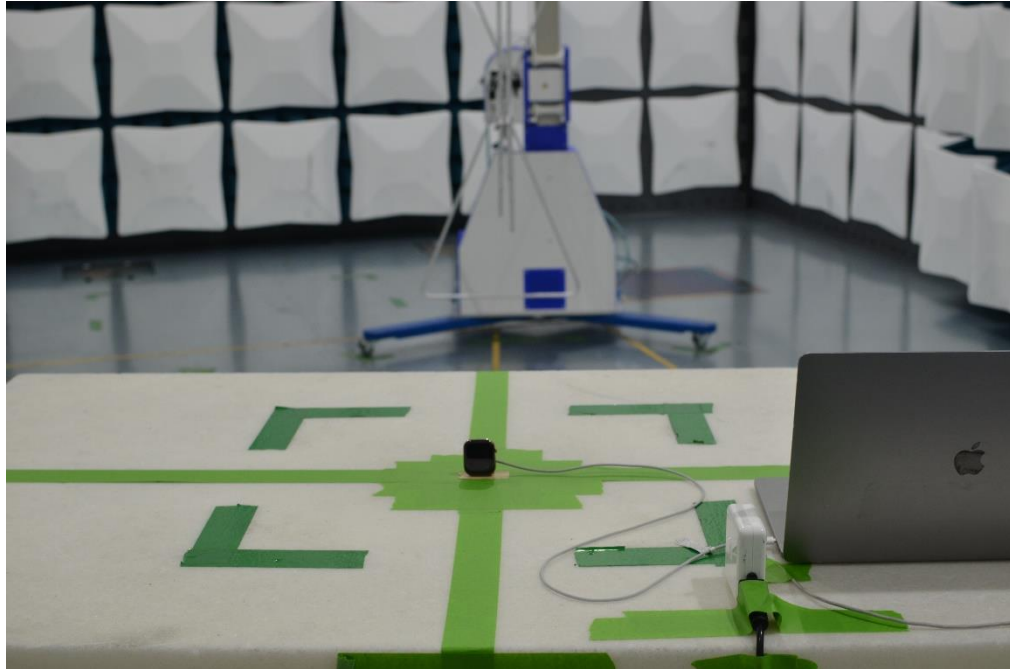

**Figure 19: 30MHz-1GHz Test Setup (Rear View)**



**Figure 20: 9kHz-30MHz Test Setup (Front View)**



**Figure 21: 9kHz-30MHz Test Setup (Front View)**



**Figure 22: 9kHz-30MHz Test Setup (Front View)**