



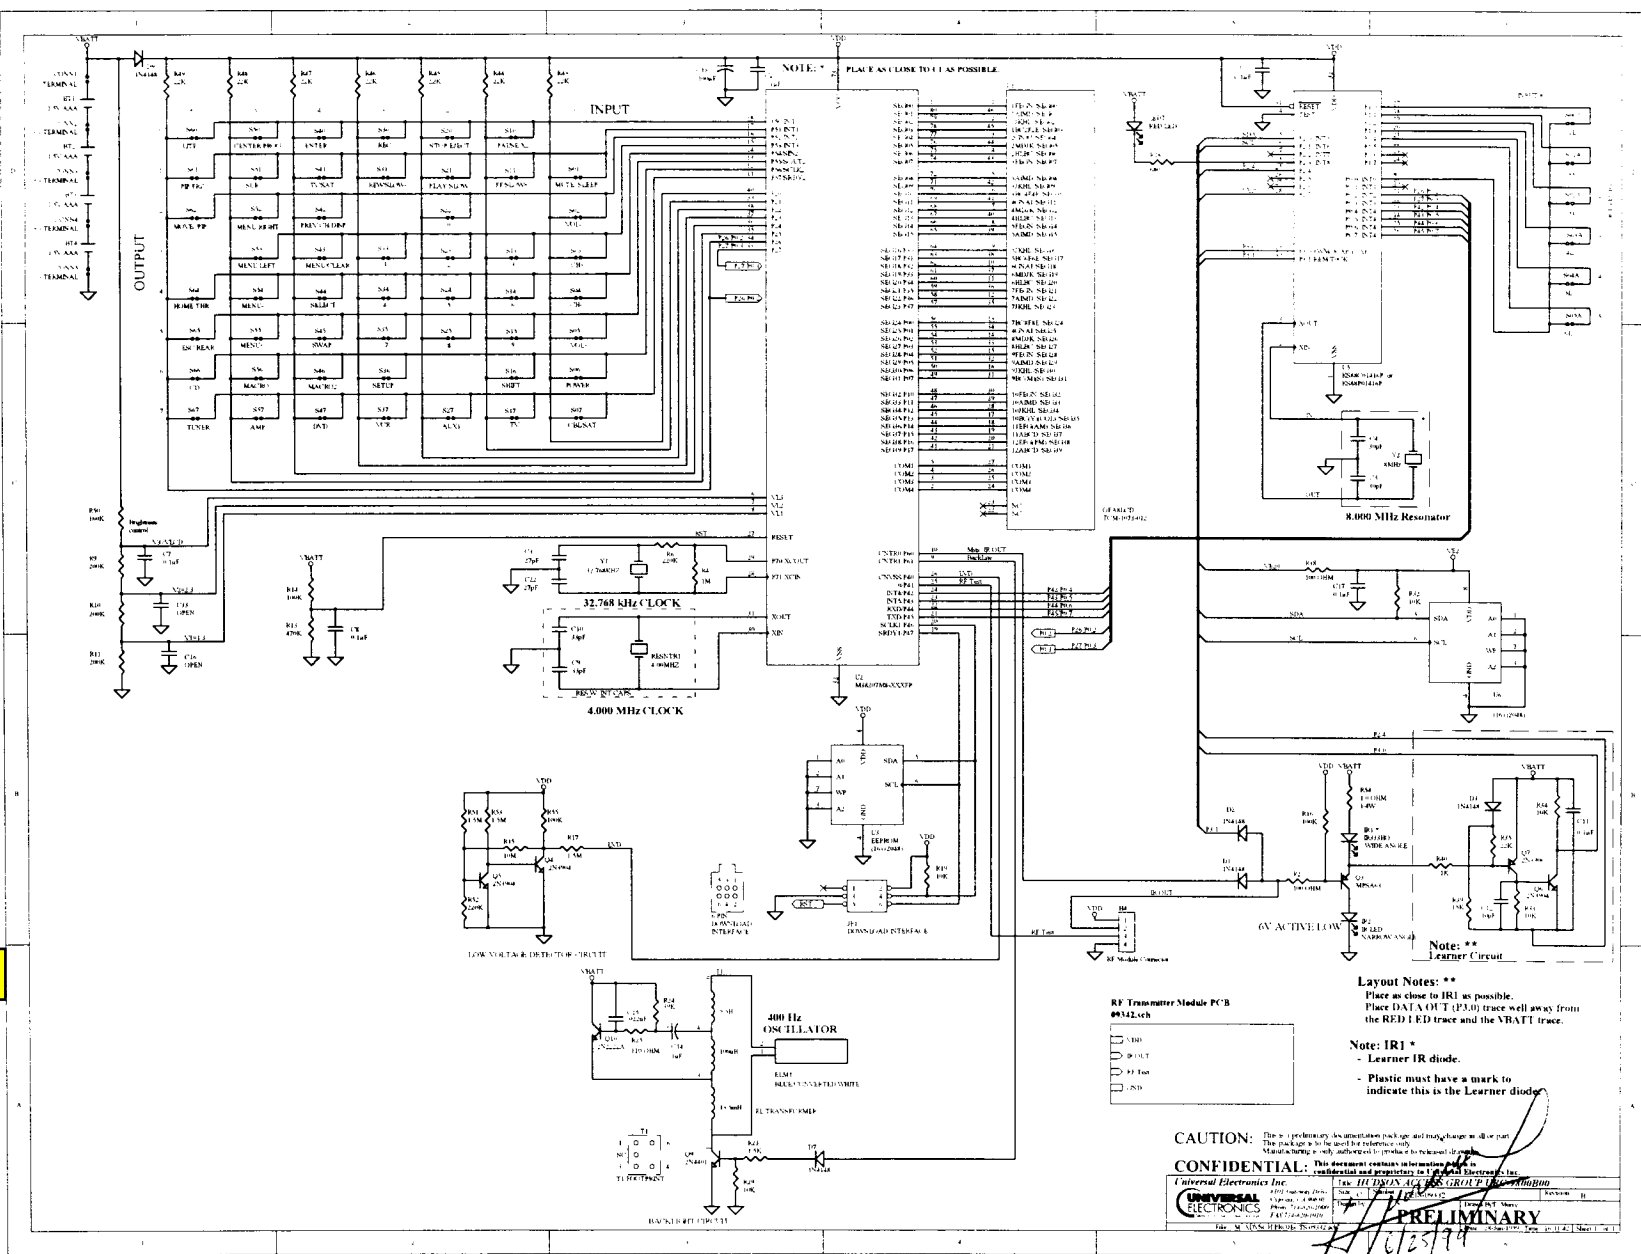



Layout Notes: **
Place as close to IR1 as possible.
Place DATA OUT (P3.0) trace well away from the RED LED trace and the VBAT trace.

Note: IR1 *
- Learner IR diode.
- Plastic must have a mark to indicate this is the Learner diode.


CAUTION: This is a preliminary documentation package and may change without notice.
The package is to be used for reference only.
Manufacturing is only authorized to produce a technical drawing.
CONFIDENTIAL: This document contains information that is confidential and proprietary to Universal Electronics Inc.
Universal Electronics Inc.
10000 University Ave.
Suite 100
San Diego, CA 92121
Phone: 619-594-0000
Fax: 619-594-0001
E-mail: sales@universal-electronics.com
Web: www.universal-electronics.com
Rev. 1.0
1/16/25

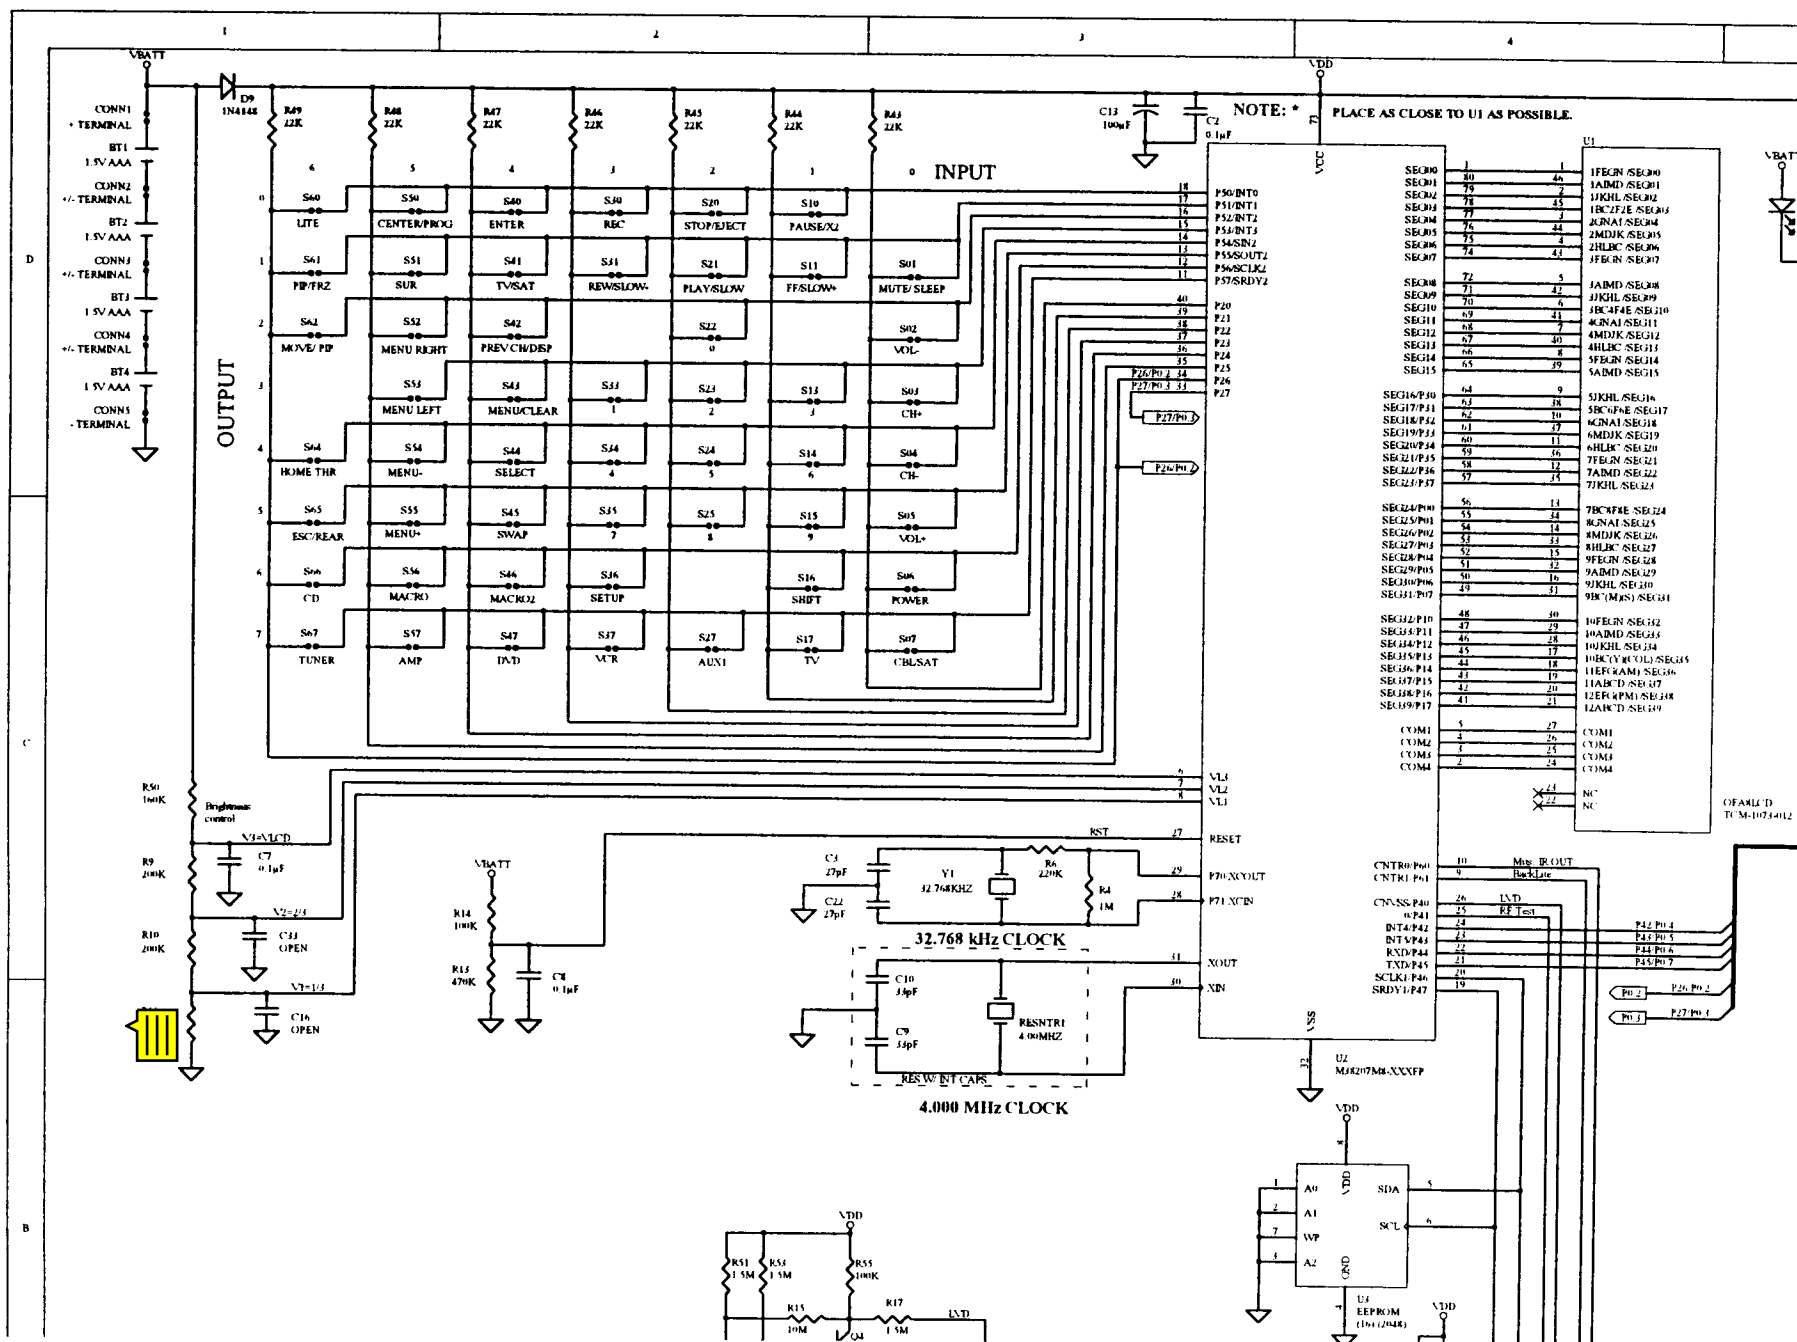

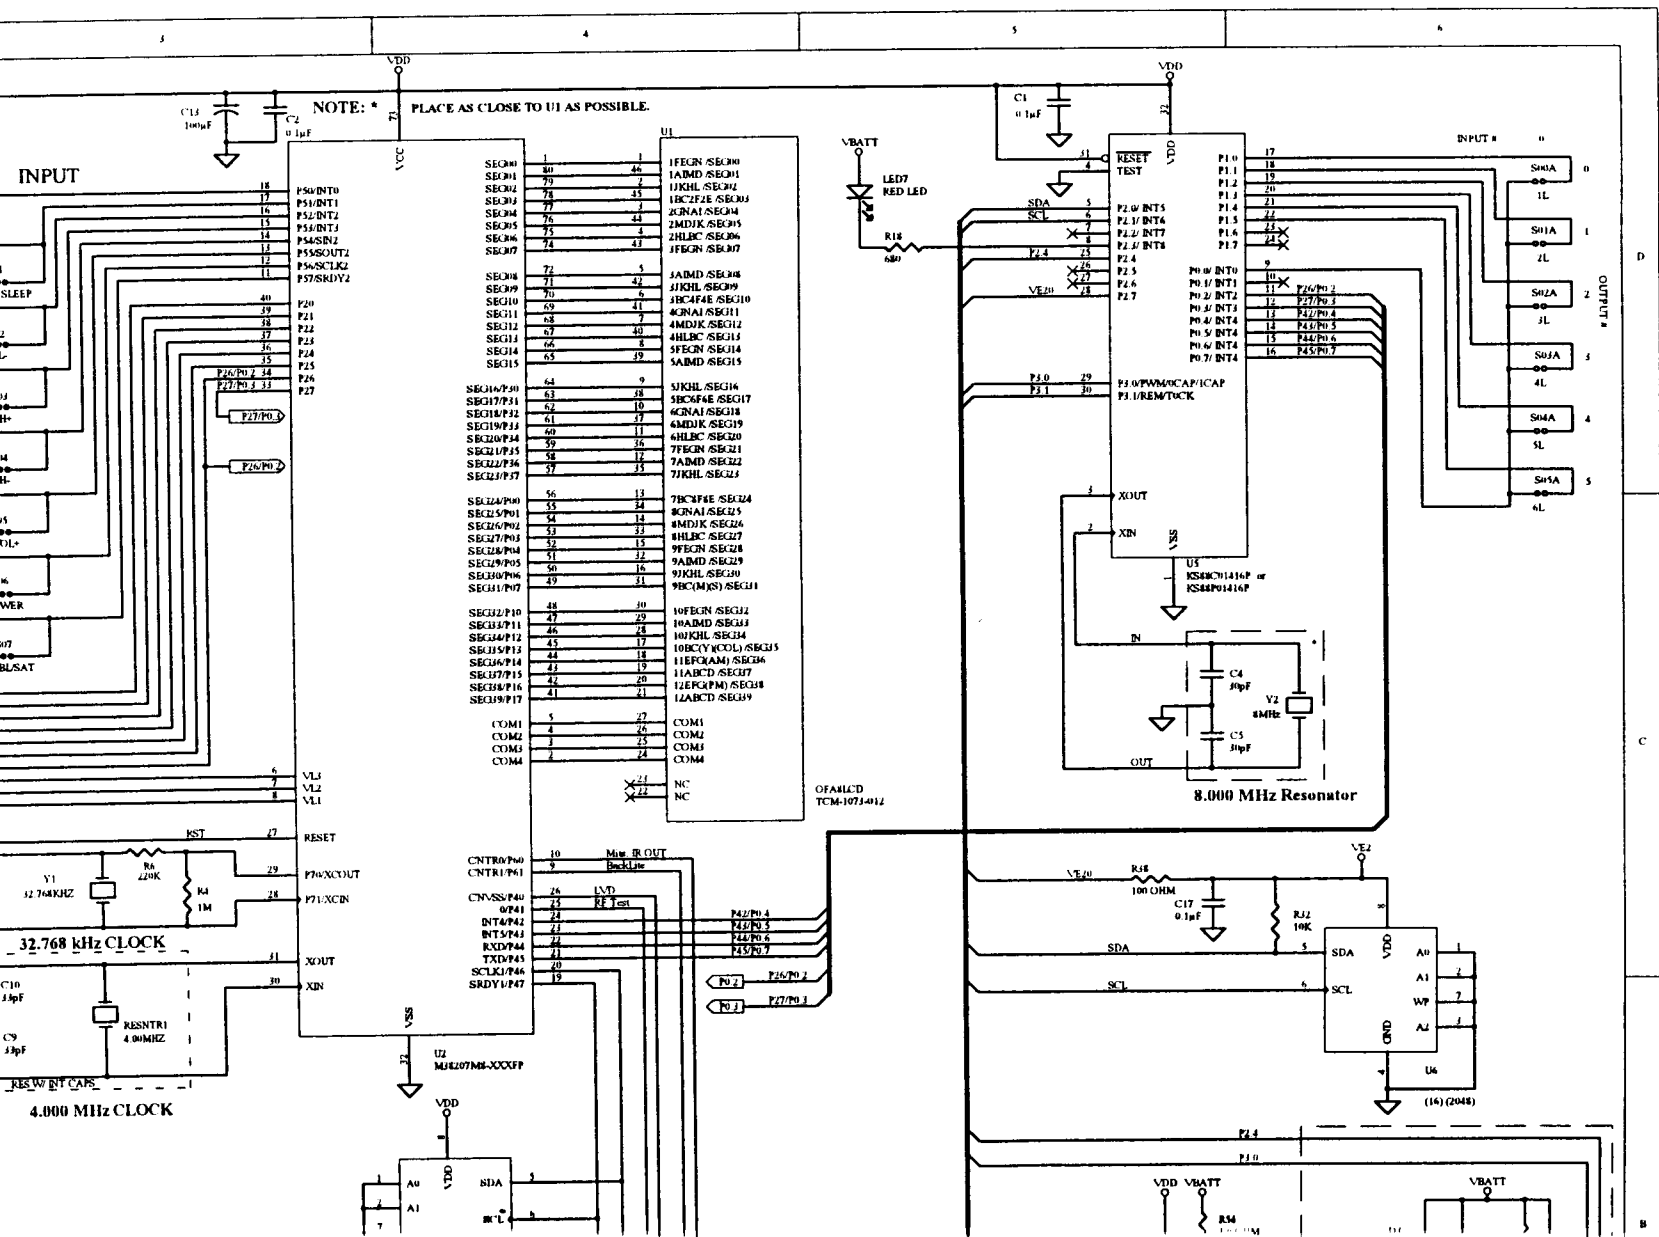

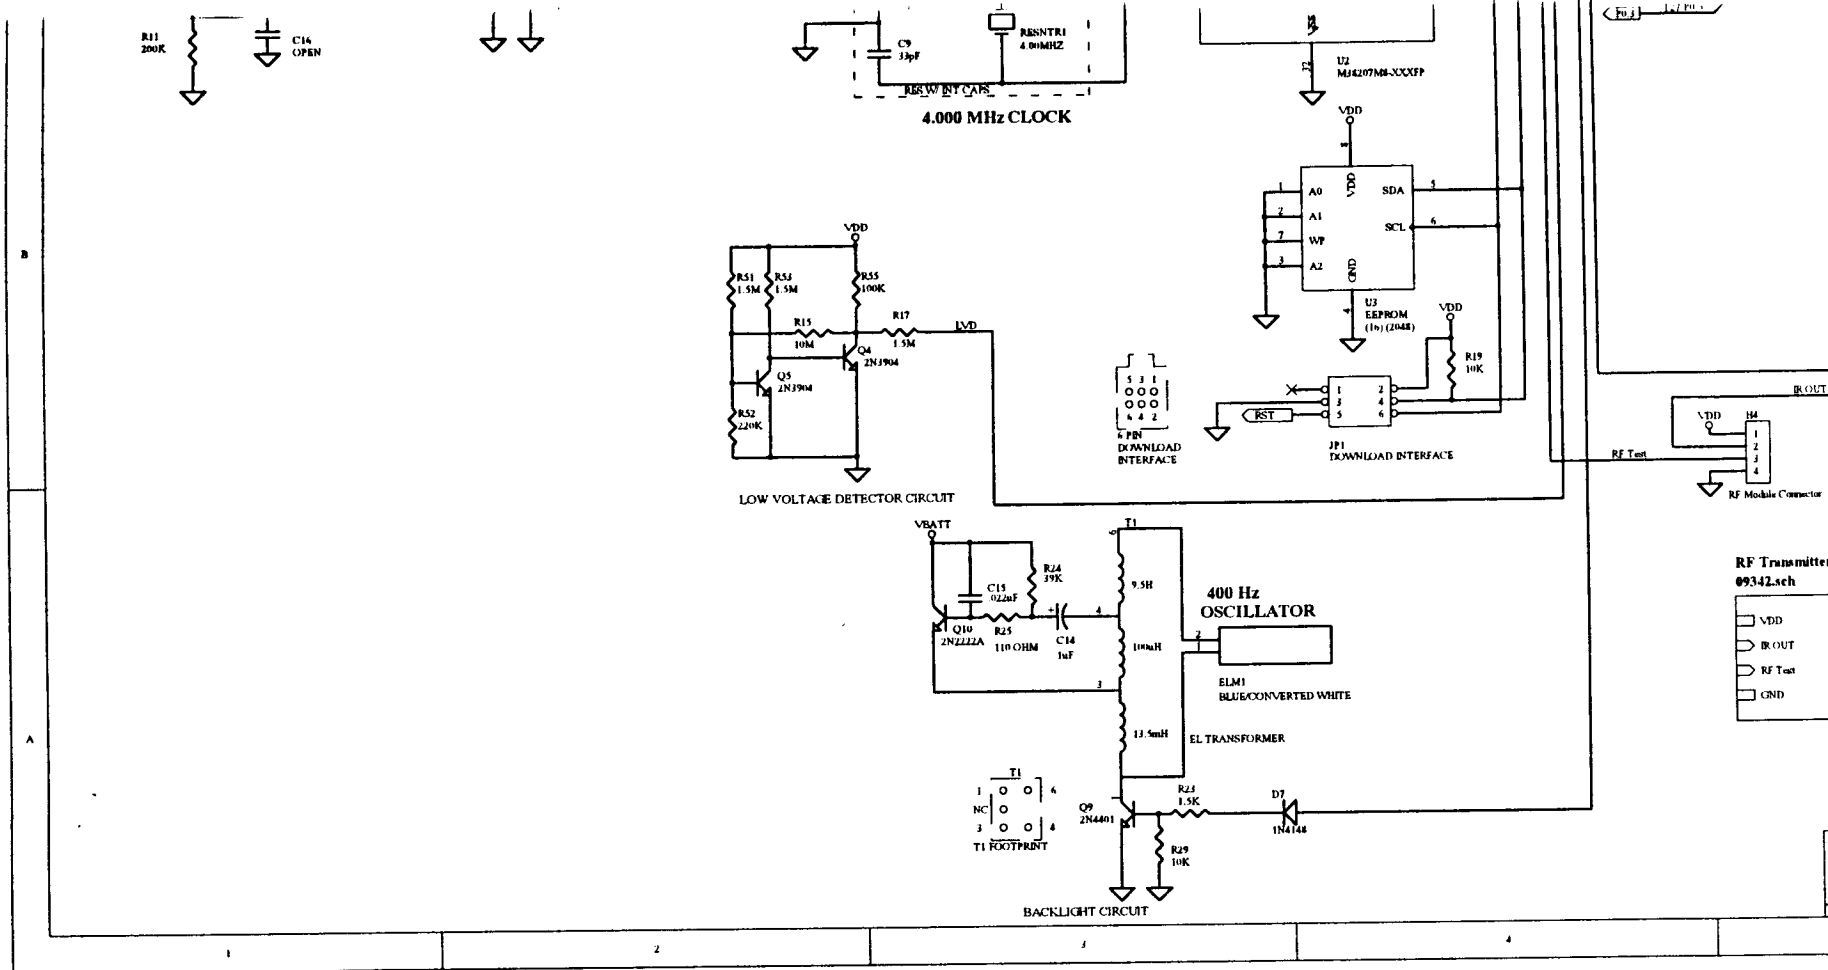

430.000 MHz OSCILLATOR

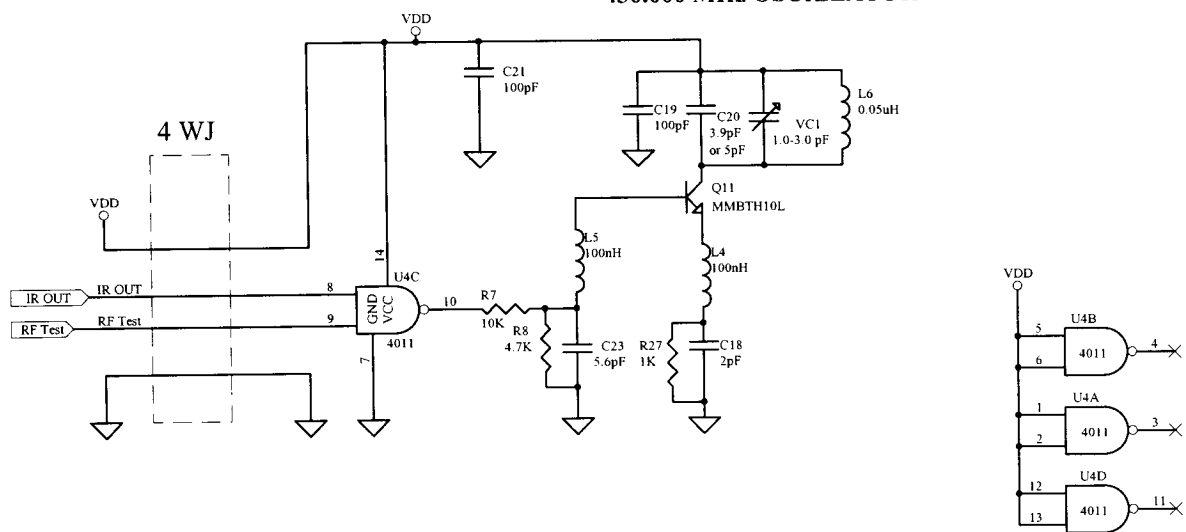

CONFIDENTIAL: This document contains information which is confidential and proprietary to Universal Electronics Inc.

Universal Electronics Inc.

6101 Gateway Drive
Cypress, CA 90630
Phone 714-820-1000
FAX 714-820-1010

Title RF Transmitter Module

Size A Number UEIS-09342

Revision A

Design by: [Signature]

Drawn By:

File: M:\ADVSCH\PROJECTS\09342.SCH

Date: 28-Jun-1999 Time: 16:10:34 Sheet 1 of 1