



W992WZ82

Date: NOV 14, 2024



BOX LABEL

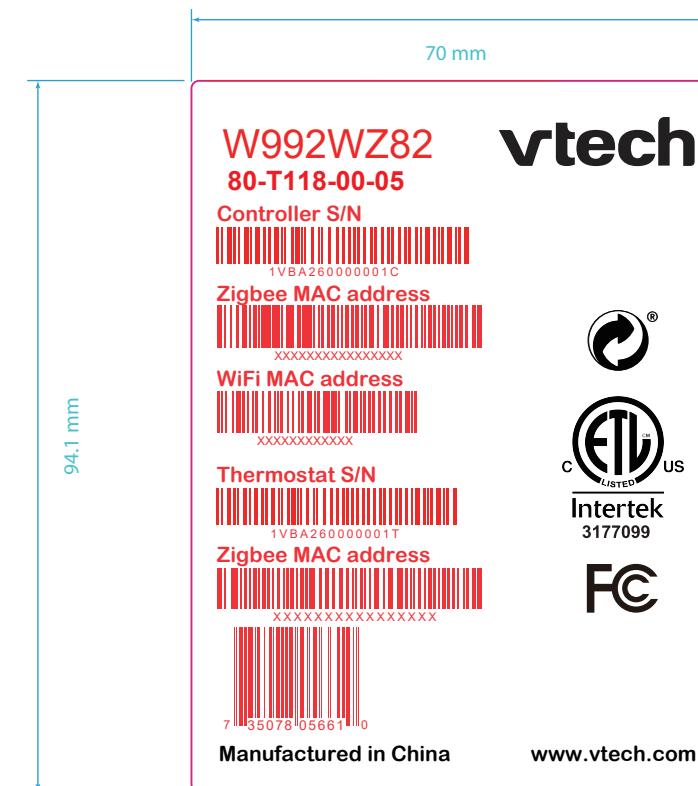

Label 1 size: 94.1*70mm

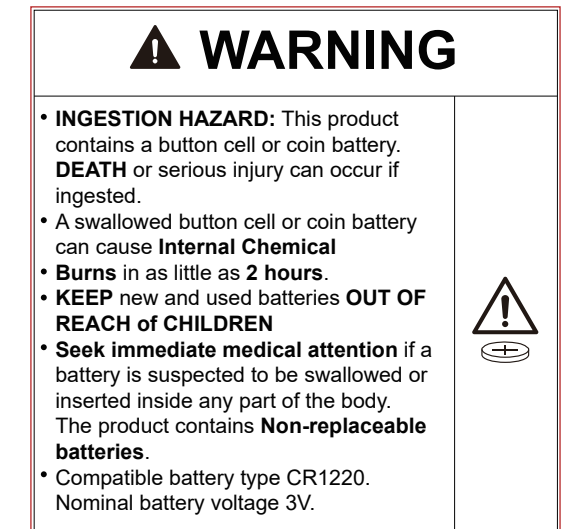

Label 2 size: 70 x 70 mm

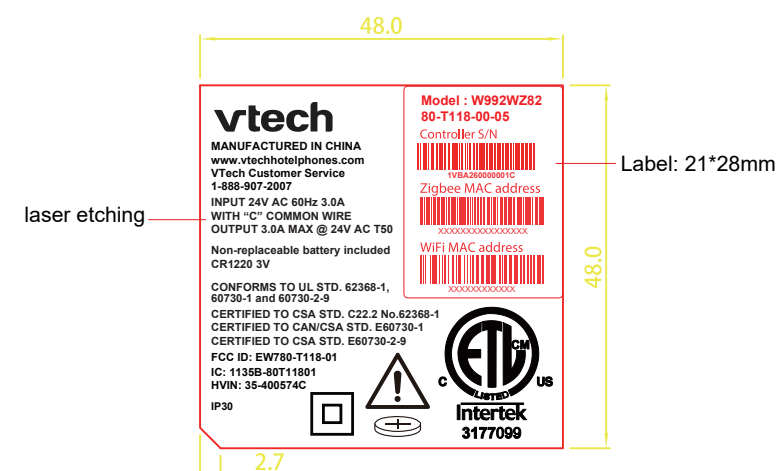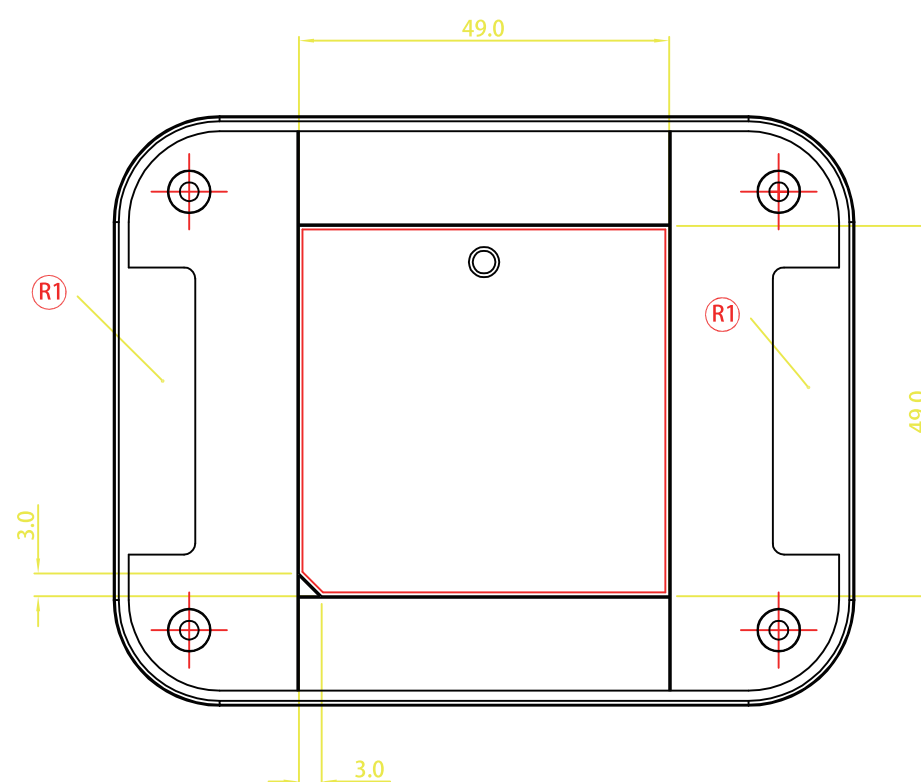

CTN LABEL 92-005428-000-100



Label: 75*65mm

▼992VZ82

1VB A26 0000001 T

- Thermostat
- Serial number
- Date code
- Product code

1VB A26 0000001 C



- Controller
- Serial number
- Date code
- Product code

Serial number -> Continued number on all POs
 For example,
 00000001, 00000002, 00000003..... 00030000(for current order);

Next PO start from 00030001, 00030002.....,NNNNNNNN.


A39 = Date code
 A = 2024, B = 2025, C = 2026, ...; 26 = production week, 生产周数

UNITS LABEL

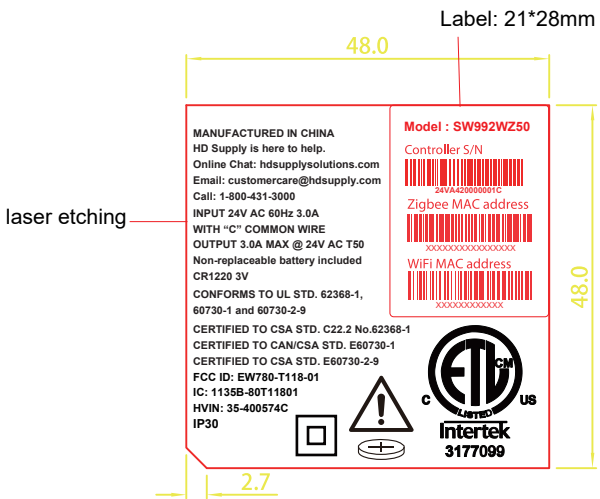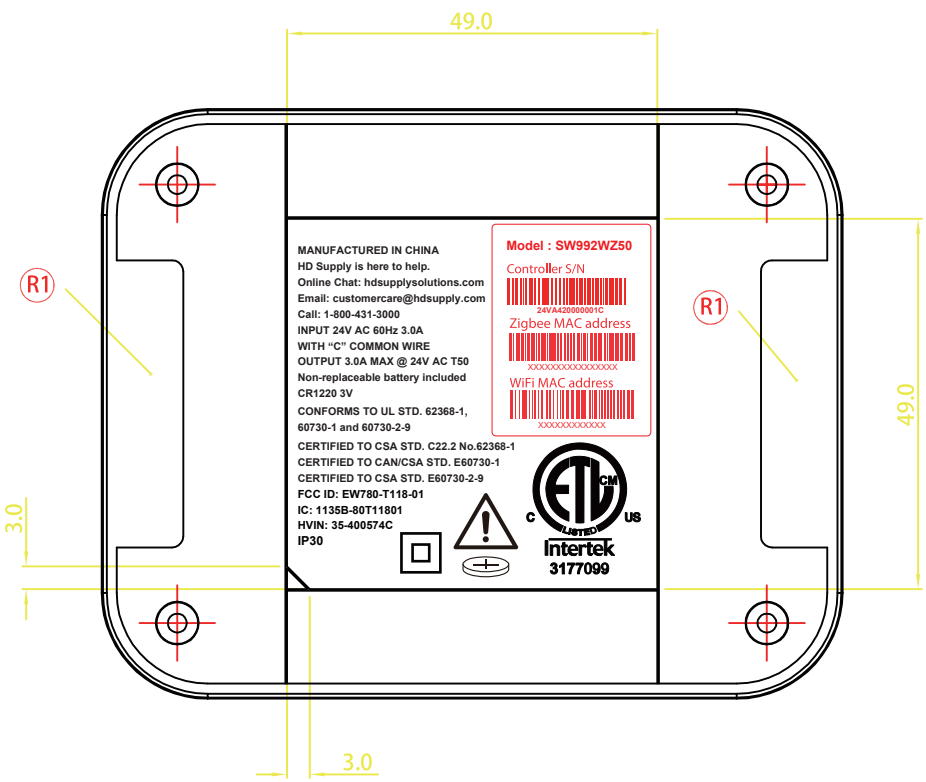


BOX LABEL

BOX LABEL

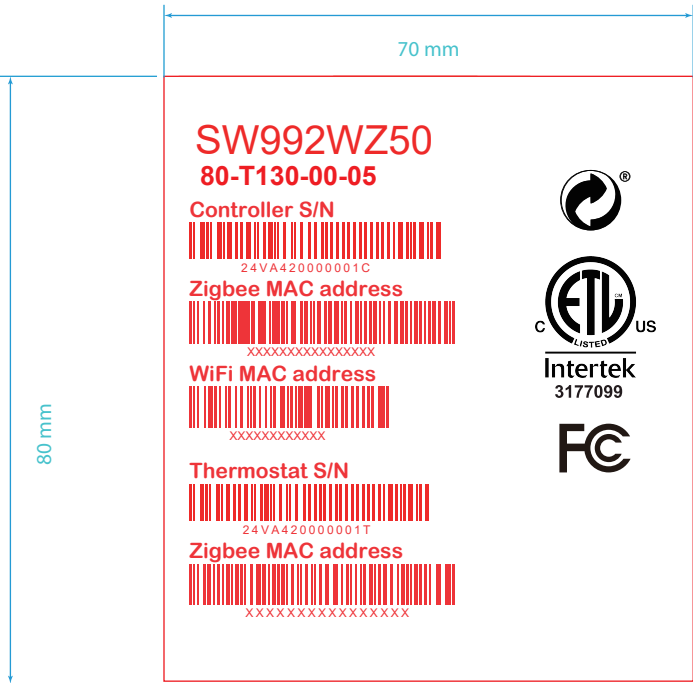

Box label: label size: 80 x 70 mm


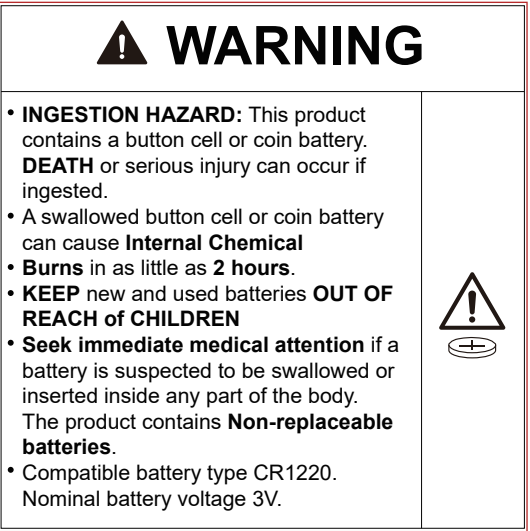


Box label: label size: 70 x 70 mm



Label size: 110 x 70 mm

HD-SW992WZ50

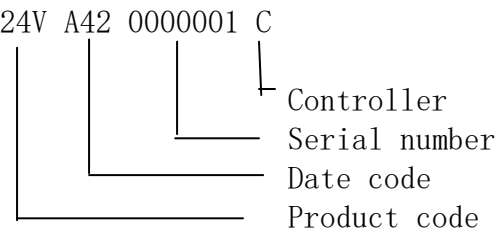
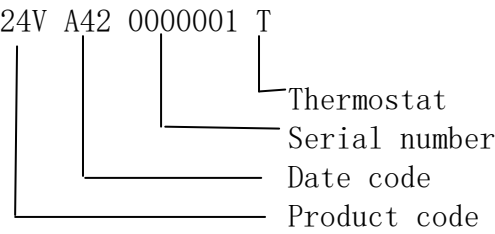


Serial number -> Continued number on all P0s
For example,
0000001, 0000002, 0000003..... 0003000(for current order);


Next P0 start from 0003001, 0003002.....NNNNNNN;

A39 = Date code
A = 2024, B = 2025, C = 2026, ...; 26 = production week, 生产周数

UNITS LABEL

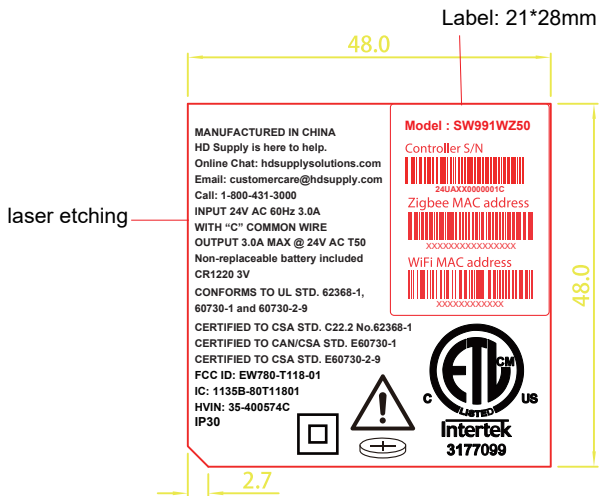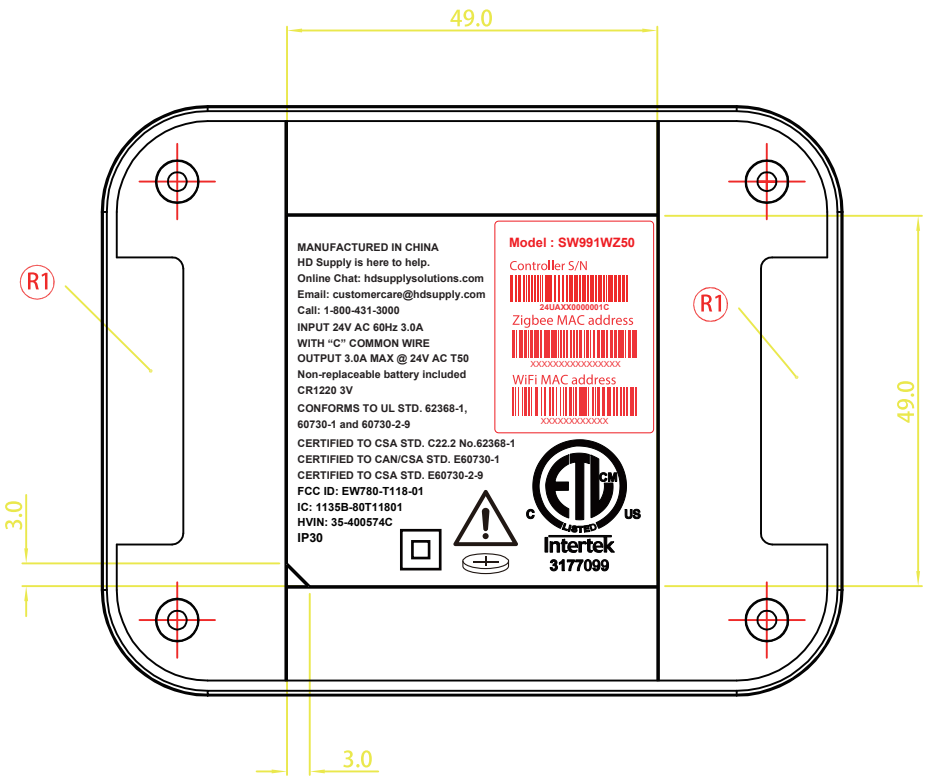

BOX LABEL

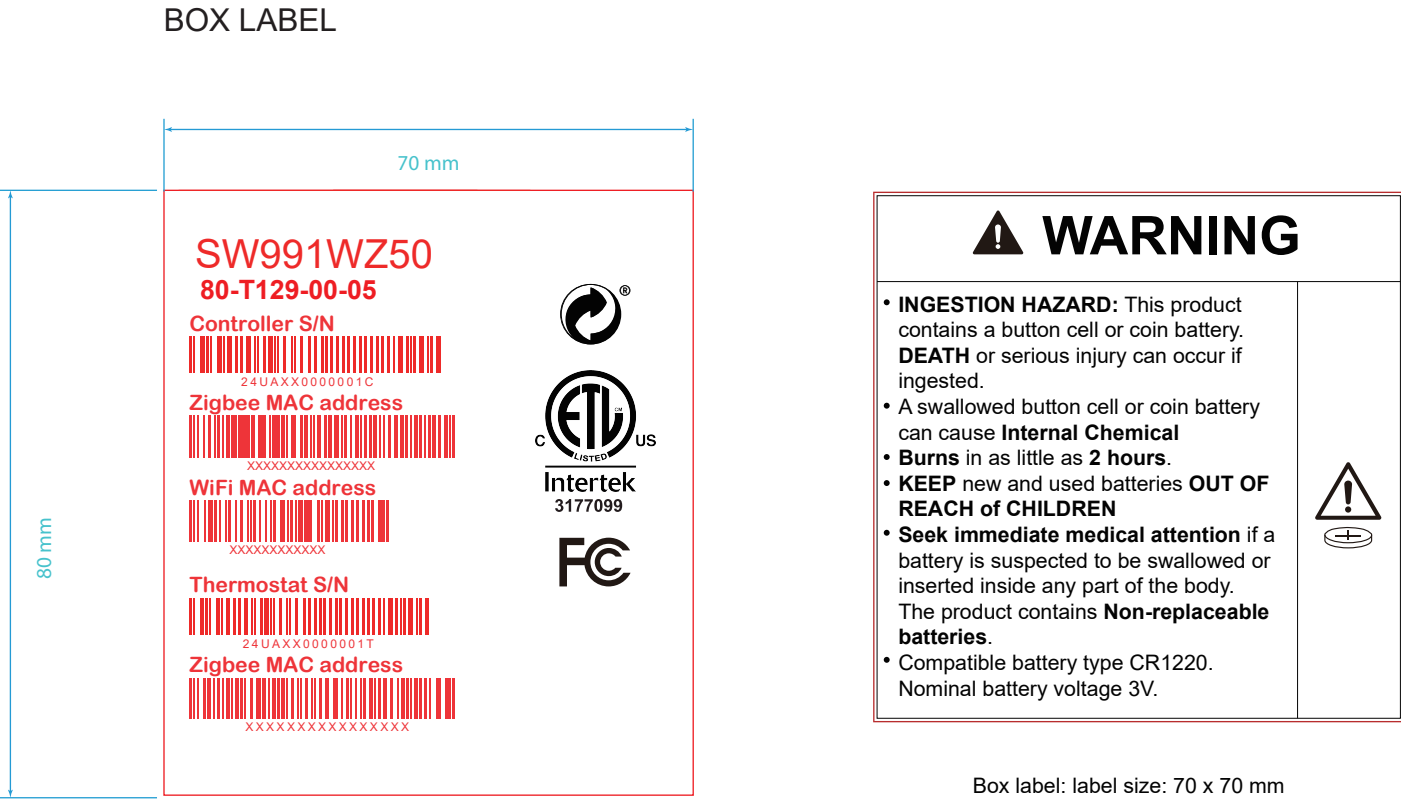

Box label: label size: 80 x 70 mm





Label size: 110 x 70 mm



BOX label location

HD-SW991WZ50

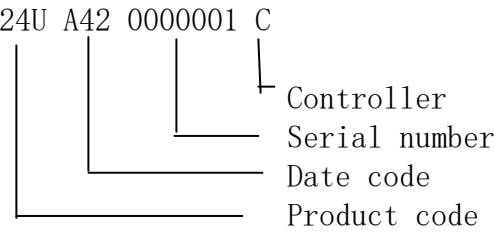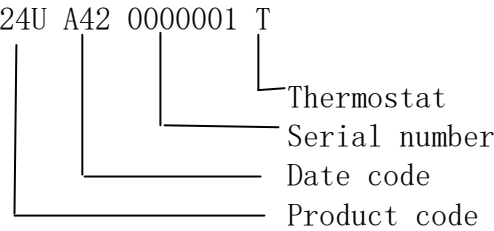

Serial number -> Continued number on all POs
For example,
0000001, 0000002, 0000003..... 0003000(for current order);

Next PO start from 0003001, 0003002.....NNNNNNN;

A39 = Date code
A = 2024, B = 2025, C = 2026, ...; 26 = production week, 生产周数