


DO NOT SCALE DRAWING


REVISIONS

REV.	E.C.O. OR CHANGE DESCRIPTION	BY	APPD.	DATE
A	PER ECO 15811	STU		4/13/00

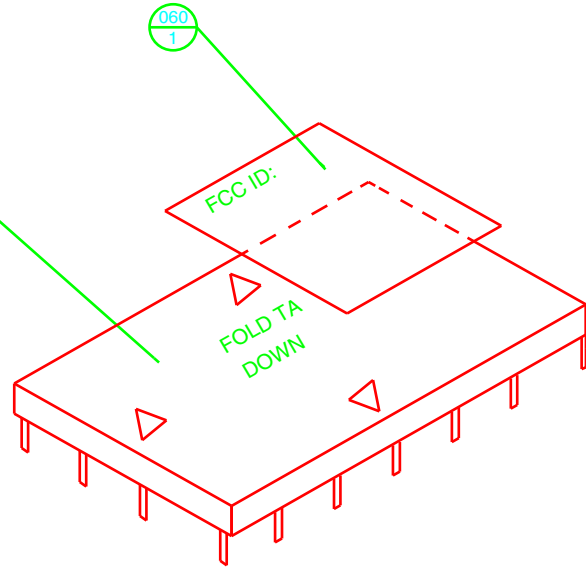

ASSEMBLY INSTRUCTIONS:

- 1.) PLACE (010) OVER THE COMPONENT SIDE OF (060) SO THAT THE LEGS OF (010) FIT INTO THE HOLES IN (060) ORIENT AS SHOWN AND SOLDER AT THE 4 CORNERS. MAKE SURE THAT THE SHIELD (010) IS TIGHT TO THE BOARD (060).
- 2.) APPLY (080) CENTERED ON (010). ORIENT AS SHOWN.

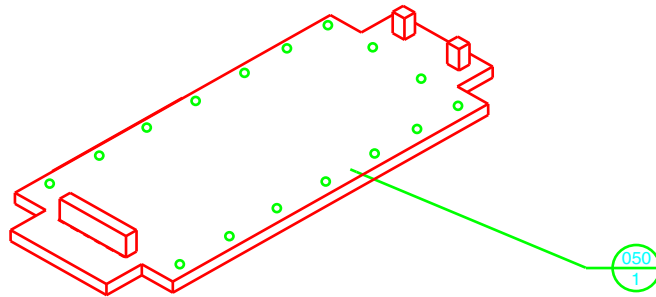

PROPRIETARY NOTE
INFORMATION DISCLOSED HEREIN IS THE PROPERTY OF COMTEC
INFORMATION SYSTEMS INC. AND SHALL NOT BE USED FOR ANY
OTHER PURPOSE EXCEPT AS SPECIFIED BETWEEN THE RECIPIENT
AND COMTEC INFORMATION SYSTEMS INC.

		MATERIAL	SIGNATURES	DATE	 Comtec Information Systems, Inc. 30 Plan Way, Warwick, Rhode Island 02886 USA (401) 739-5800 FAX:(401) 724-0296
			DRAWN R.E. GORDON	06-12-97	
			CHECK		
			ENGR. MIKE D.		
			APPROVED		
		ALL DIMENSIONS ARE GIVEN IN INCHES	ISSUED		TITLE 916 MHZ SRRF ASSEMBLY INCLUDING ALL SHIELDING
		TOLERANCES UNLESS OTHERWISE SPECIFIED			
		.X .1 IN. .XX .01 IN. .XXX .005 IN. ANGLES ± 1/2°			
NEXT ASSY	USED ON		AUTOCAD		SIZE : SRRF
APPLICATION					DWG. NO. CC15431-TAB
					REV A
					SCALE 2:1
					FILE: C15431A1.DWG
					SHEET 1 OF 1