

Short-Term Confidentiality Requested RF WWAN Test Setup Photos


<Radiated Emission>

<Close Mode>


<PT Antenna>

Y Plane with Adapter for CDMA BC0 (1xEVDO)


LF

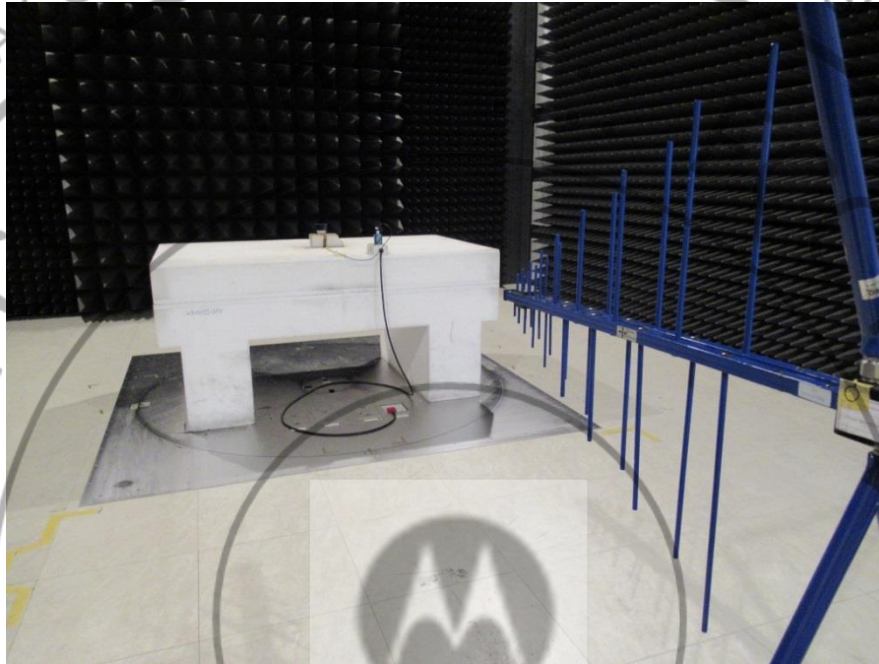


HF

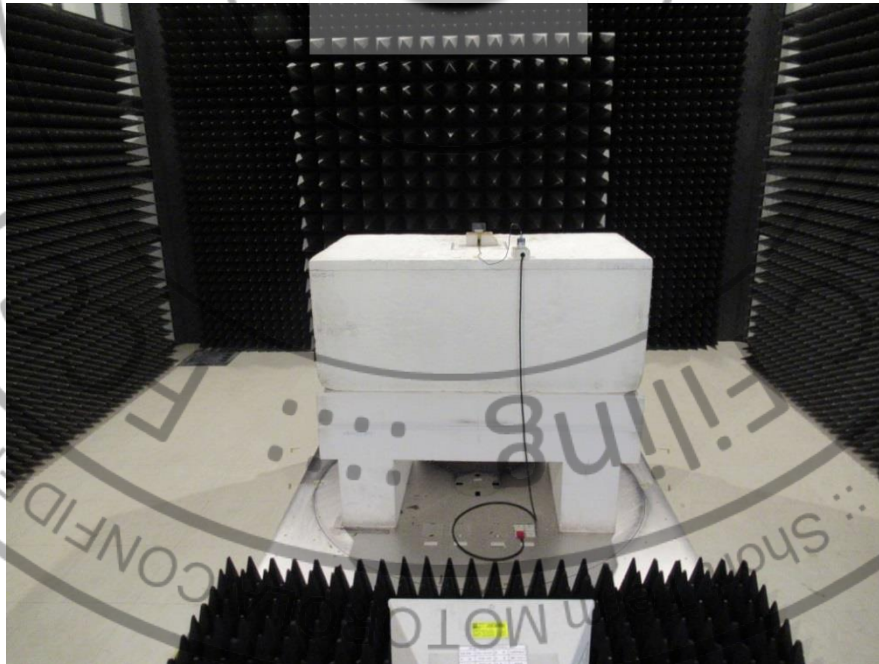

Z Plane with Adapter for GPRS 850 / EDGE 850 / WDMA Band V / CDMA
BC0 (1xRTT)
LF

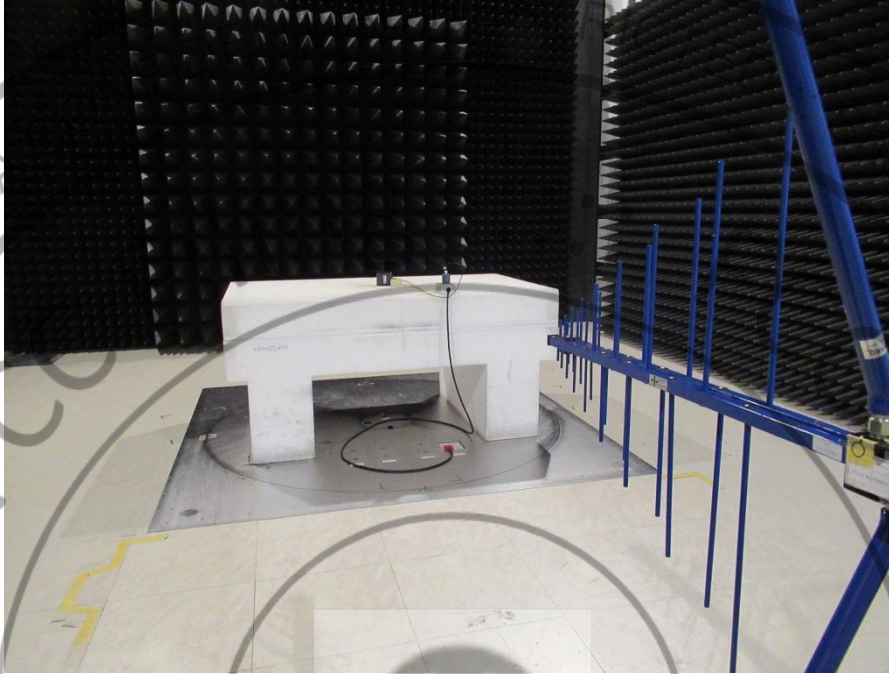

HF

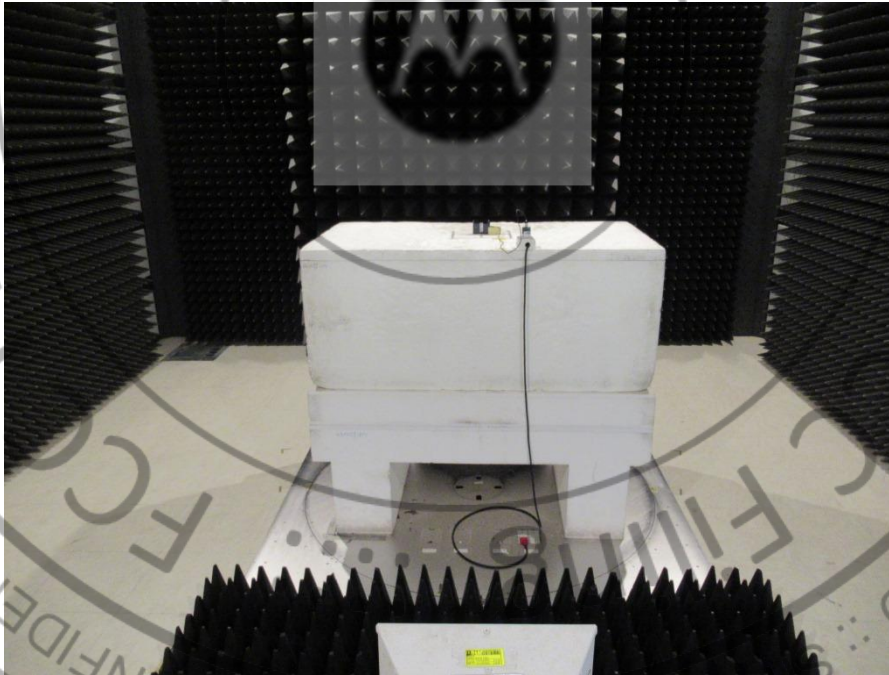


<Open Mode>


<PT Antenna>

Y Plane with Adapter for GPRS 1900 / EDGE 1900 / WCDMA Band II /
CDMA BC1 (1xRTT)


LF

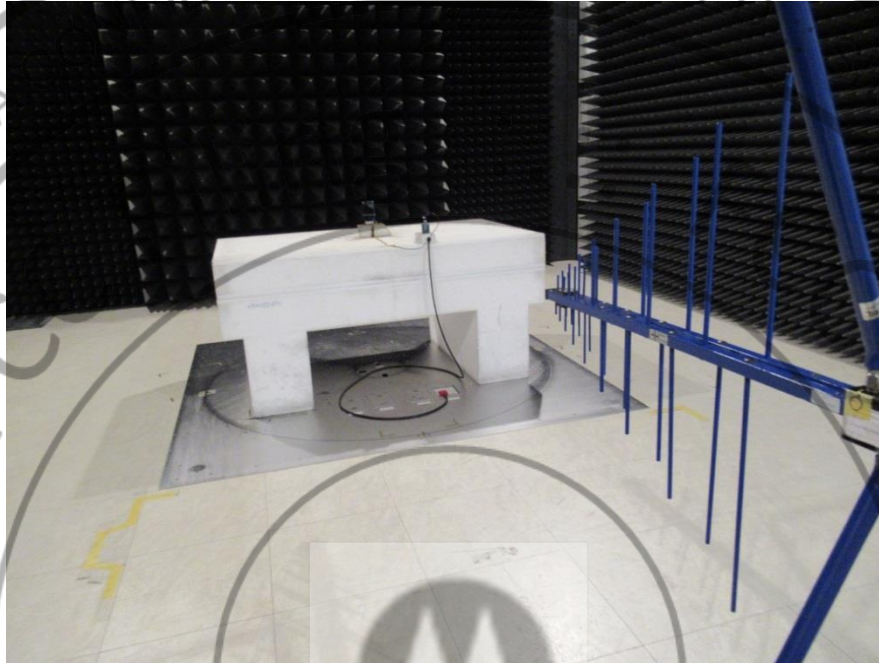


HF

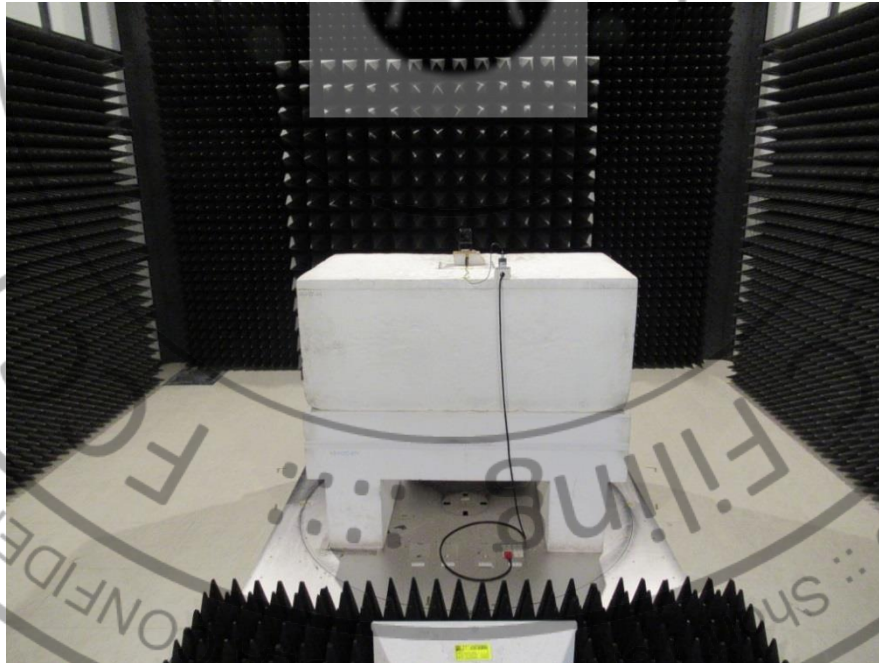

**Z Plane with Adapter for CDMA BC1 (1xEVDO) / WCDMA Band IV
LF**

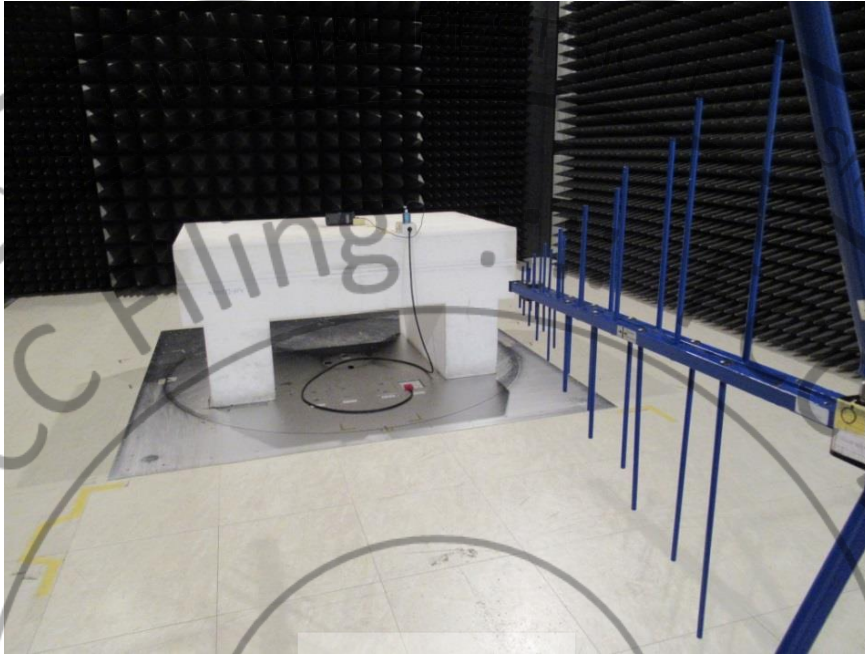

HF

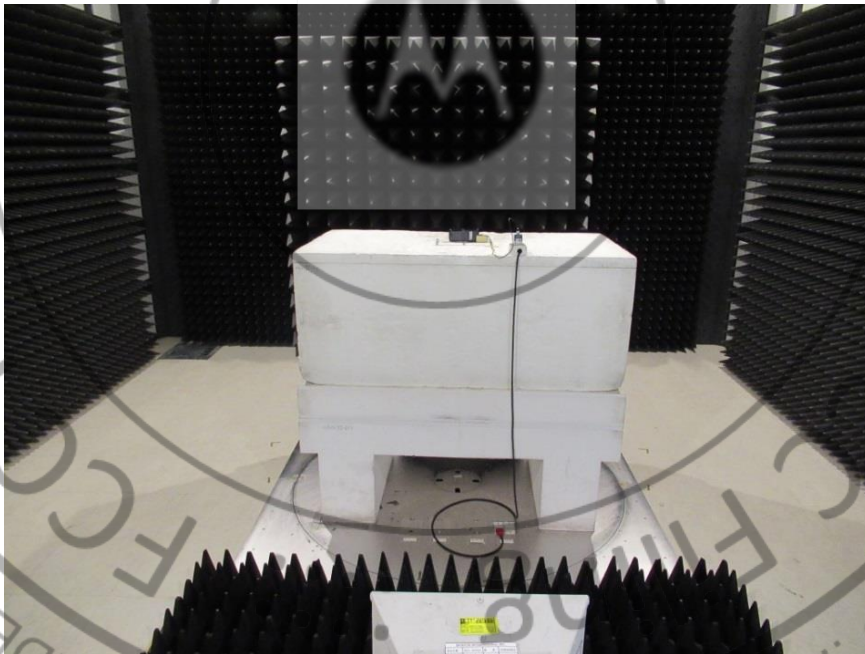

— THE END —