


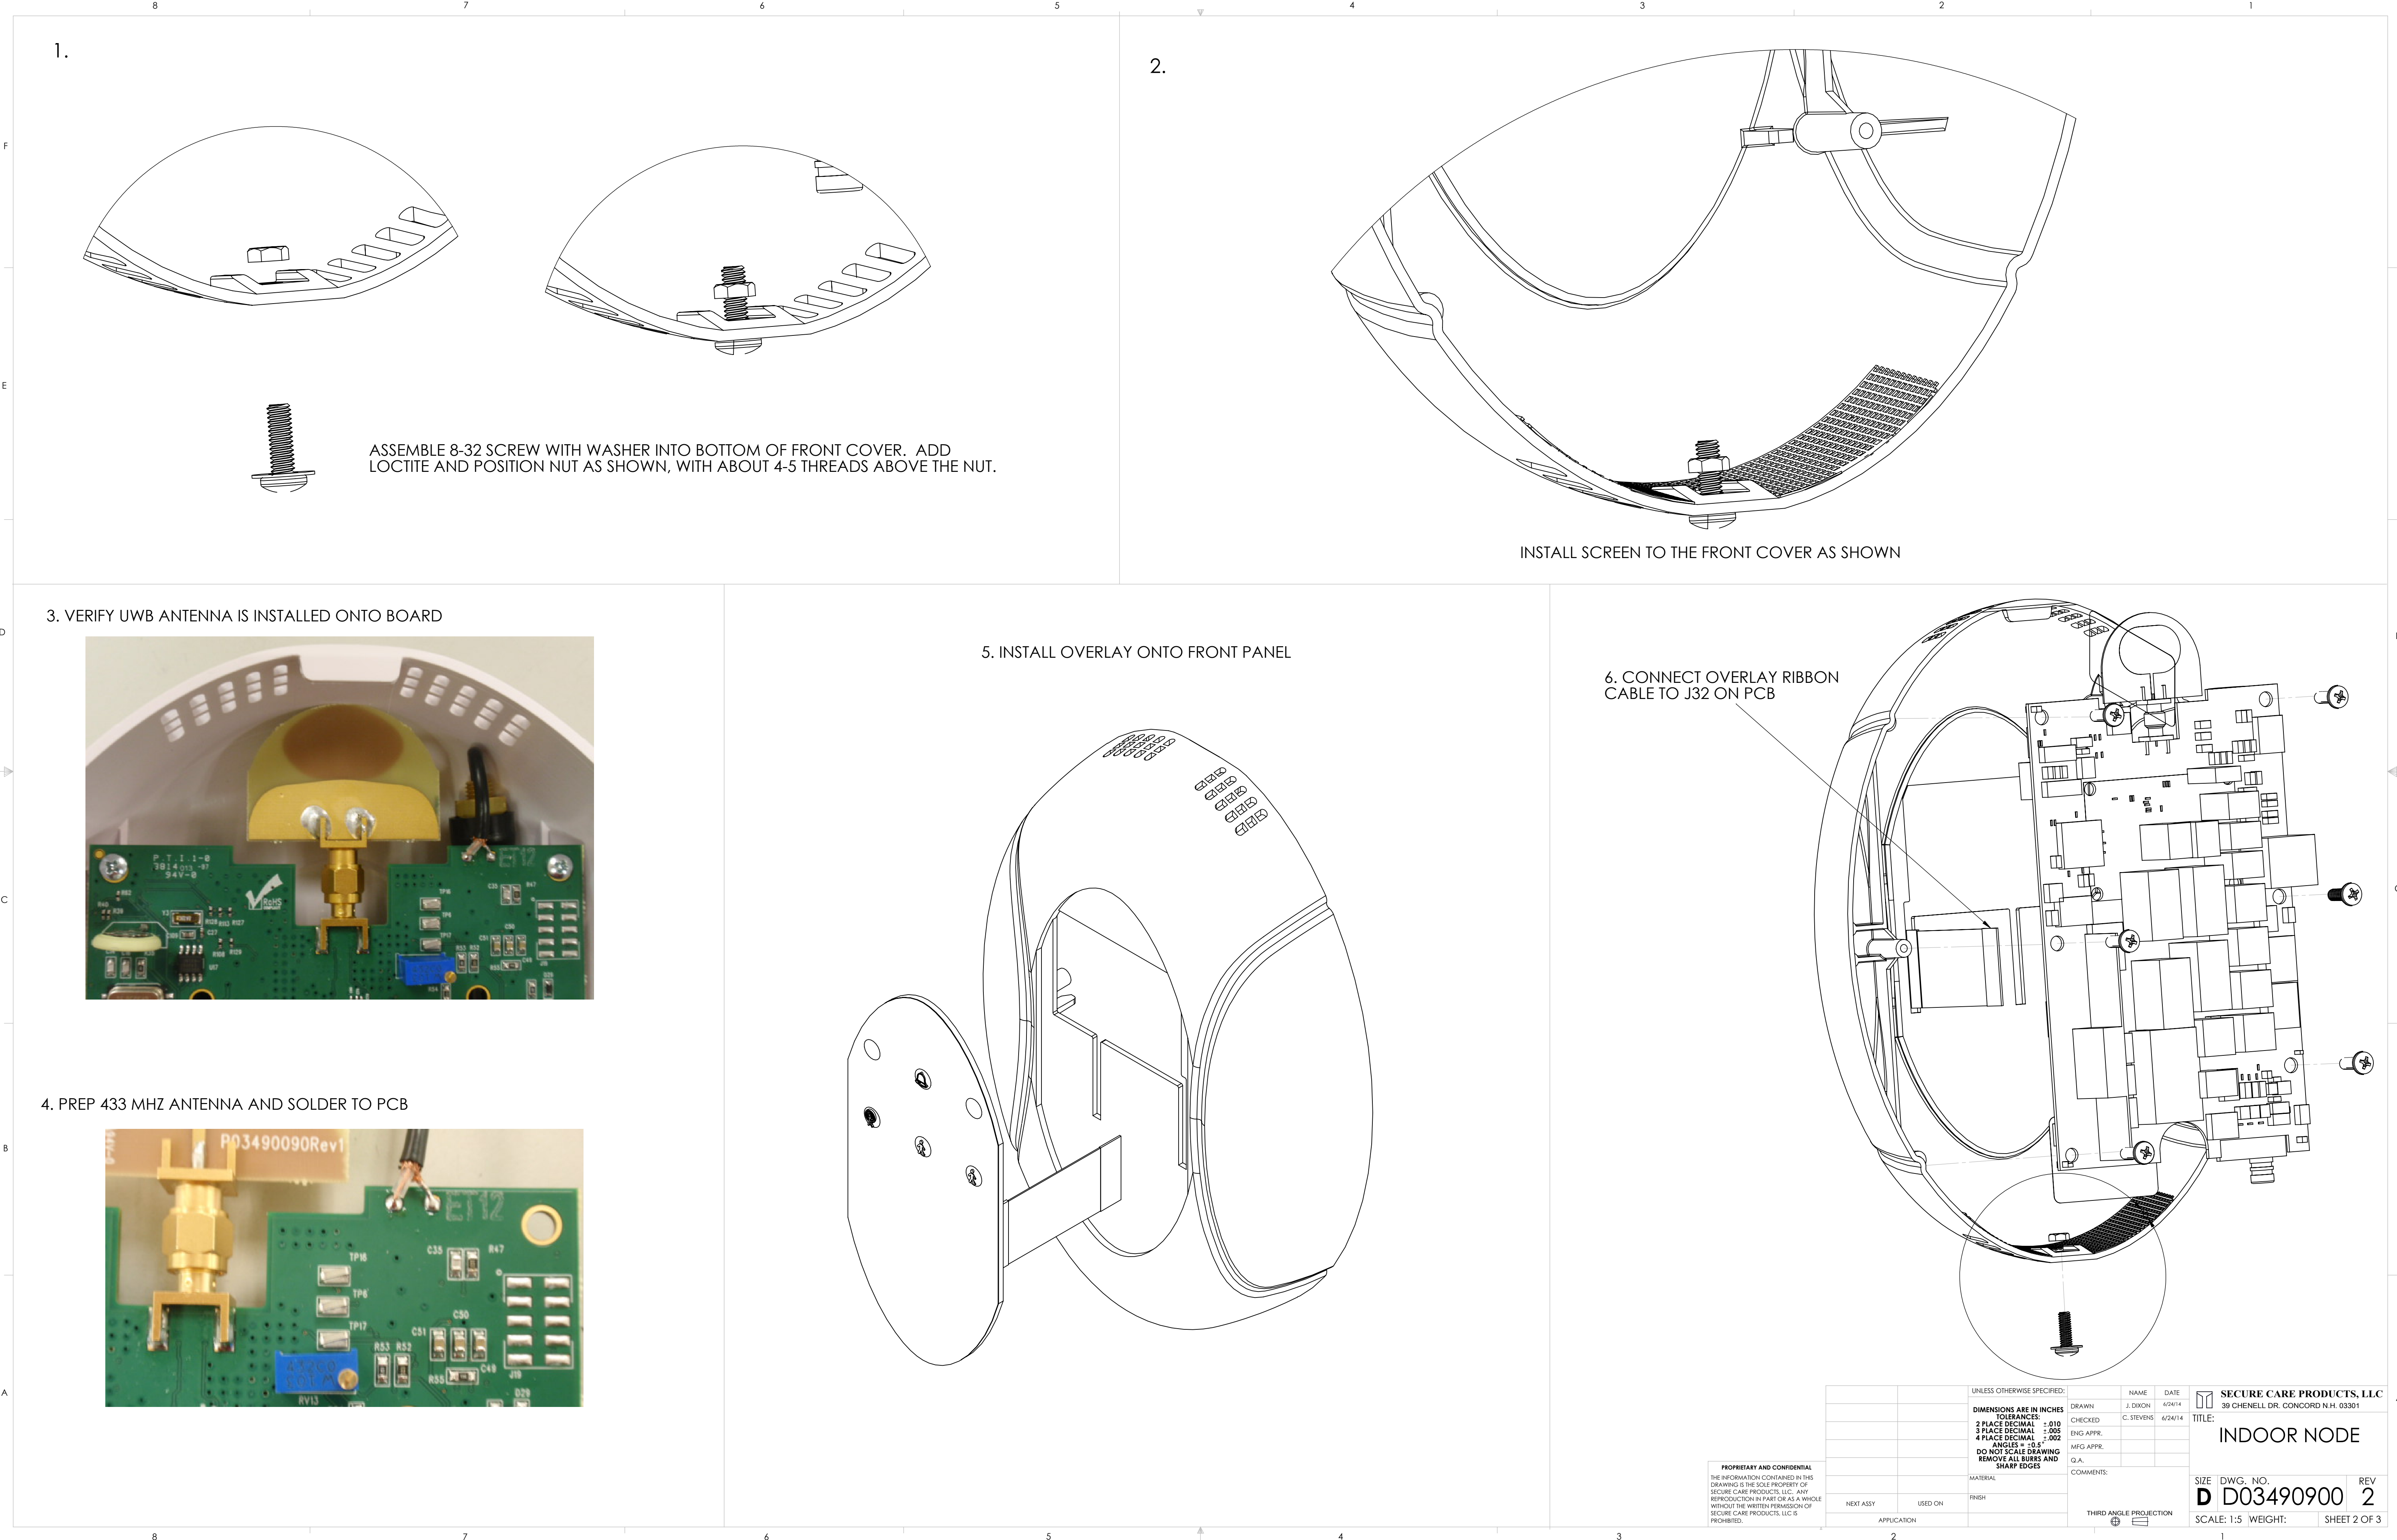


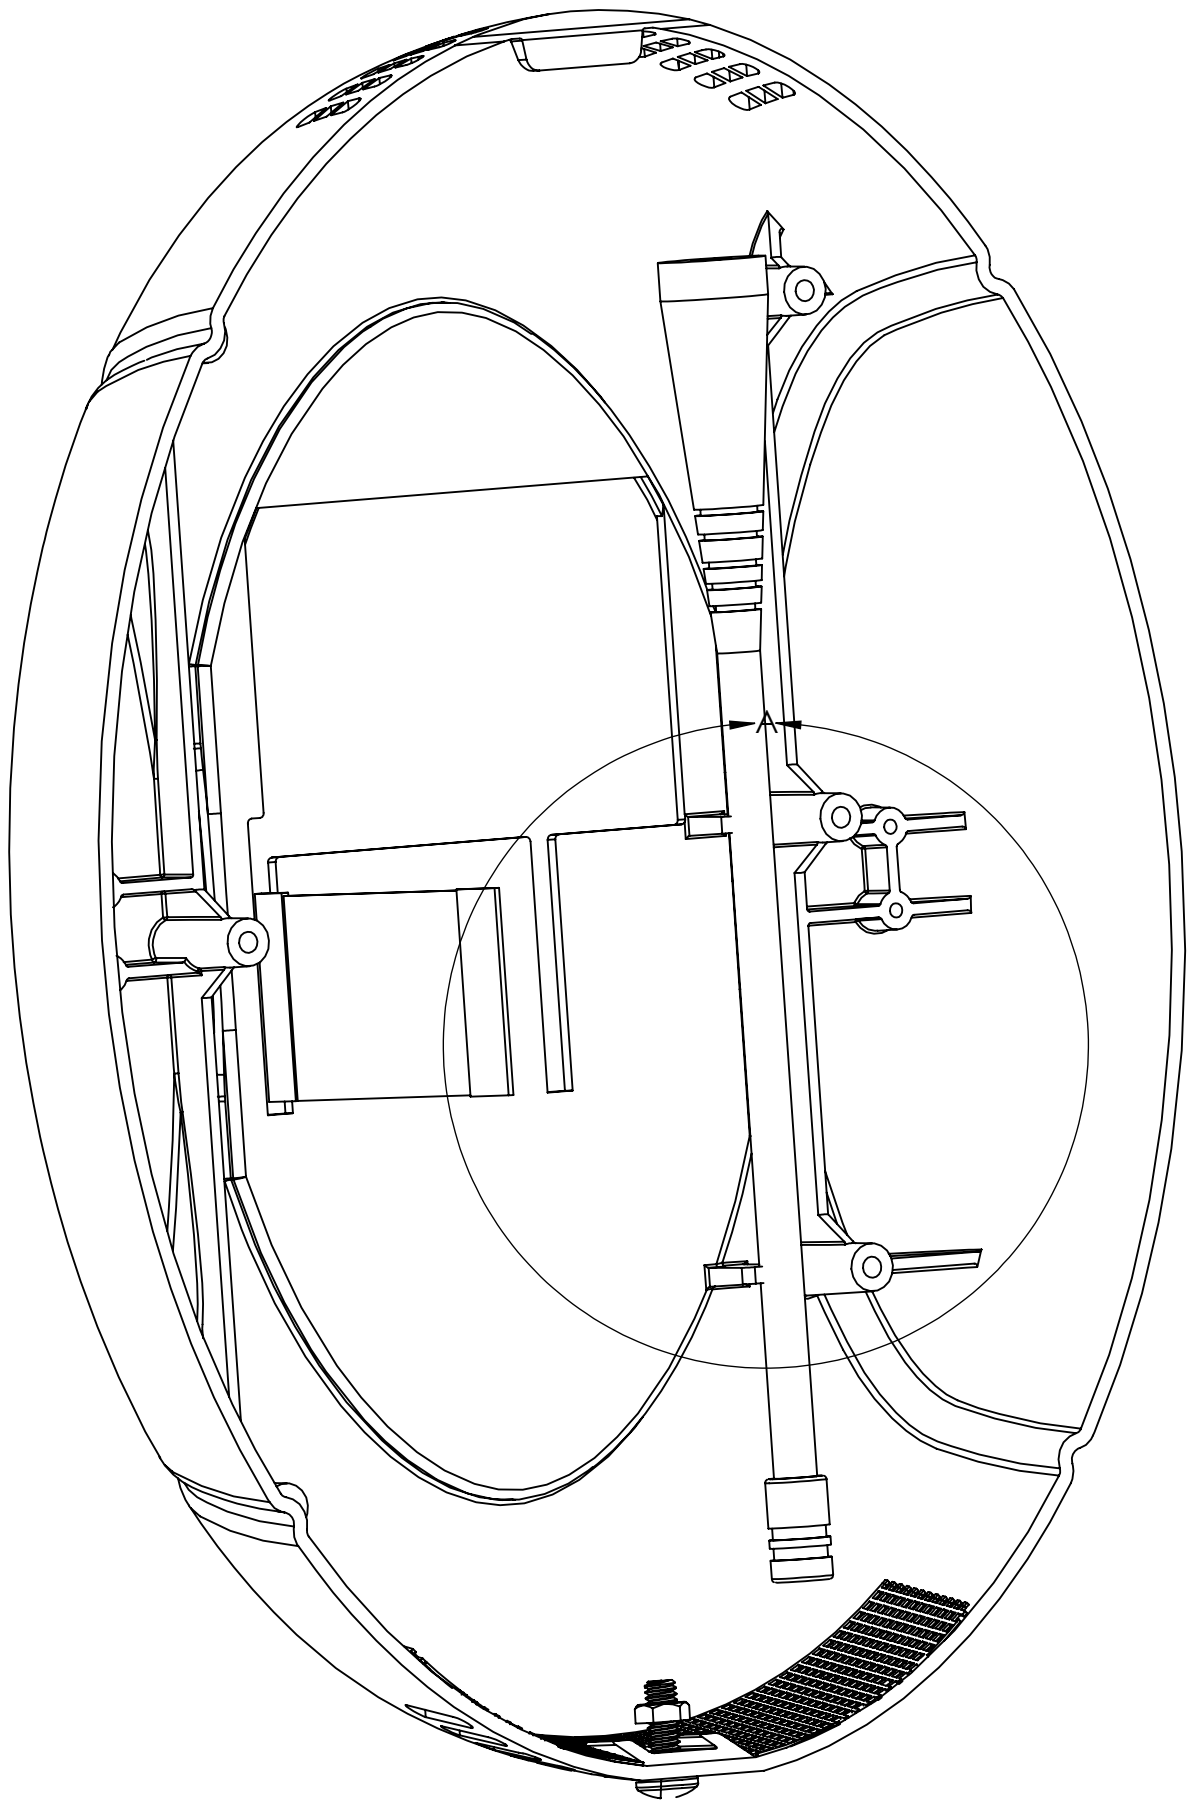


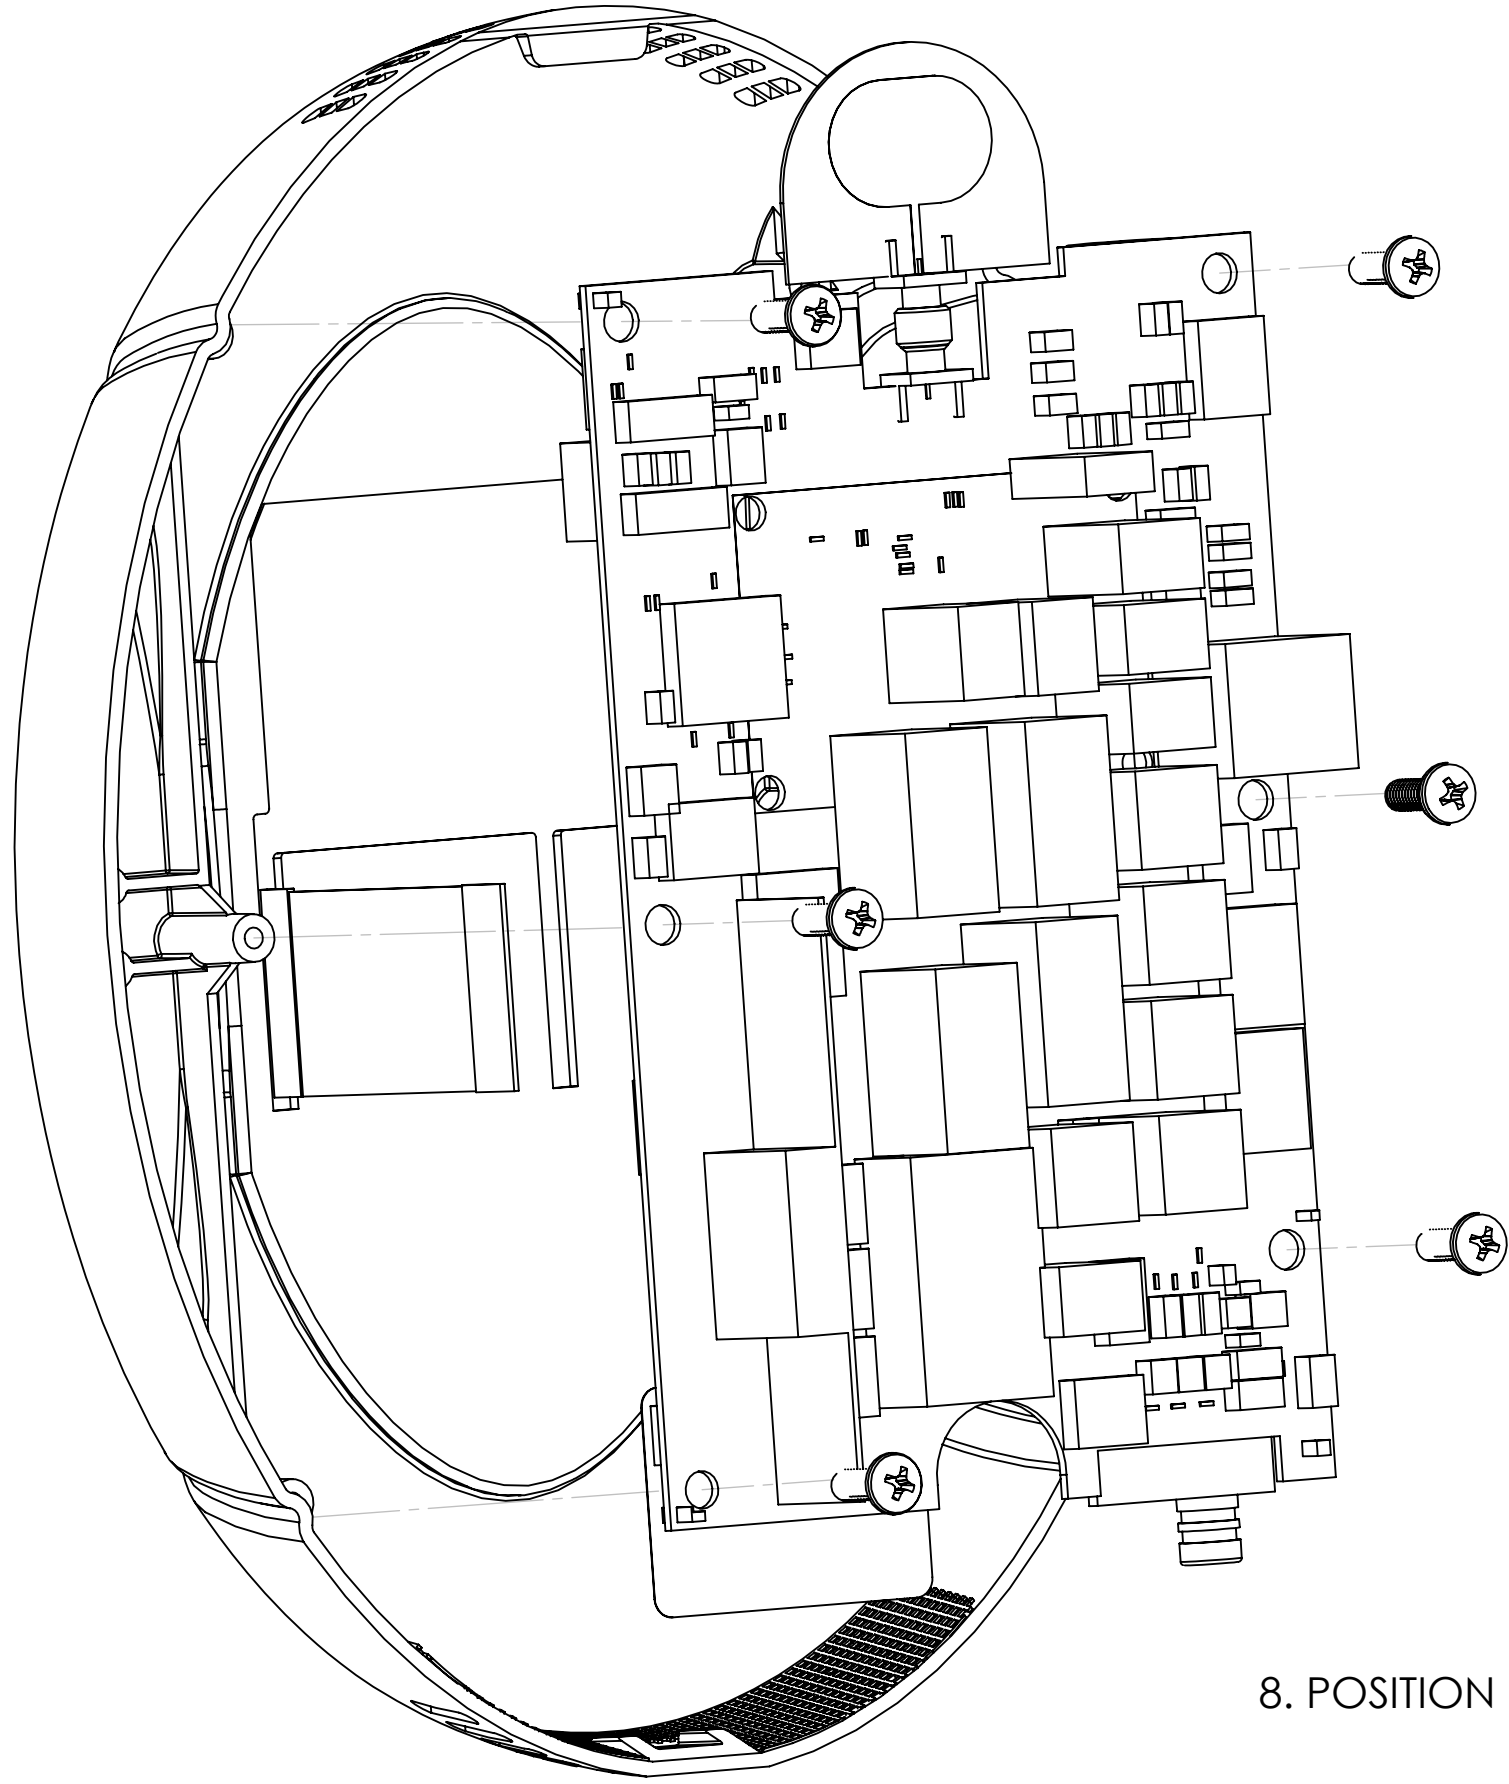


7. POSITION 433 ANTENNA INTO CLIPS ON FRONT PANEL

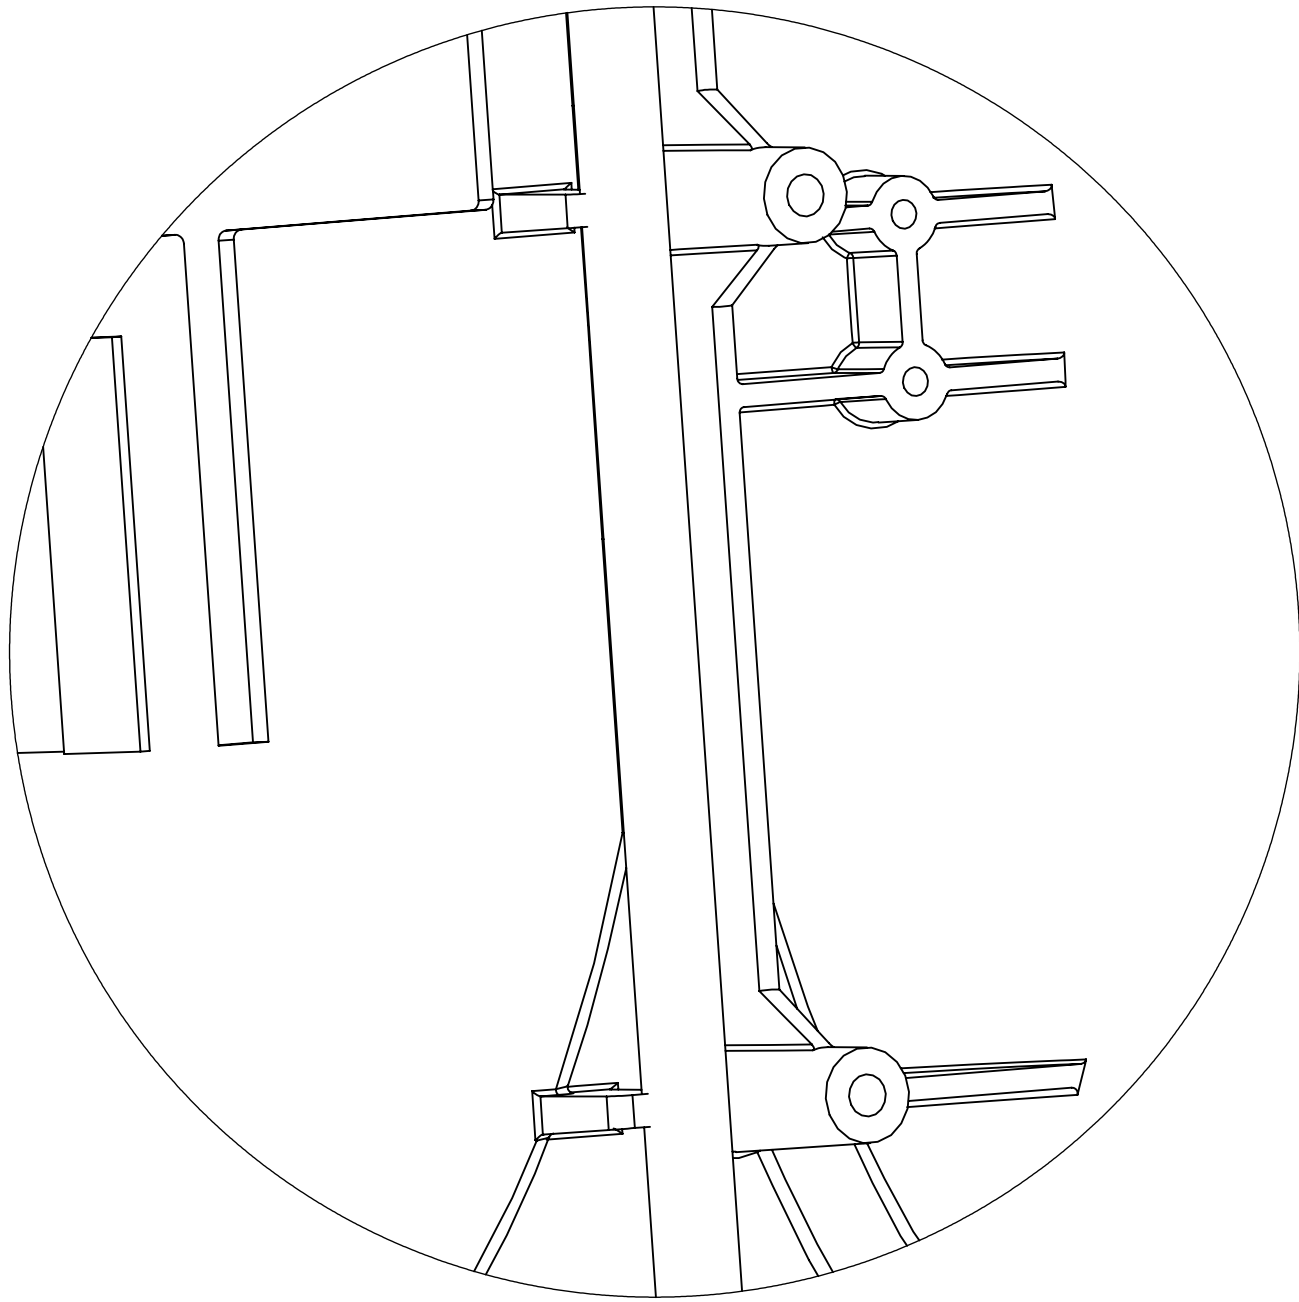


8. POSITION PCBA TO FRONT PANEL AND SECURE WITH 6 SCREWS

9. INSTALL 2-PIN PLUG CONNECTOR (ITEM 11) INTO J8

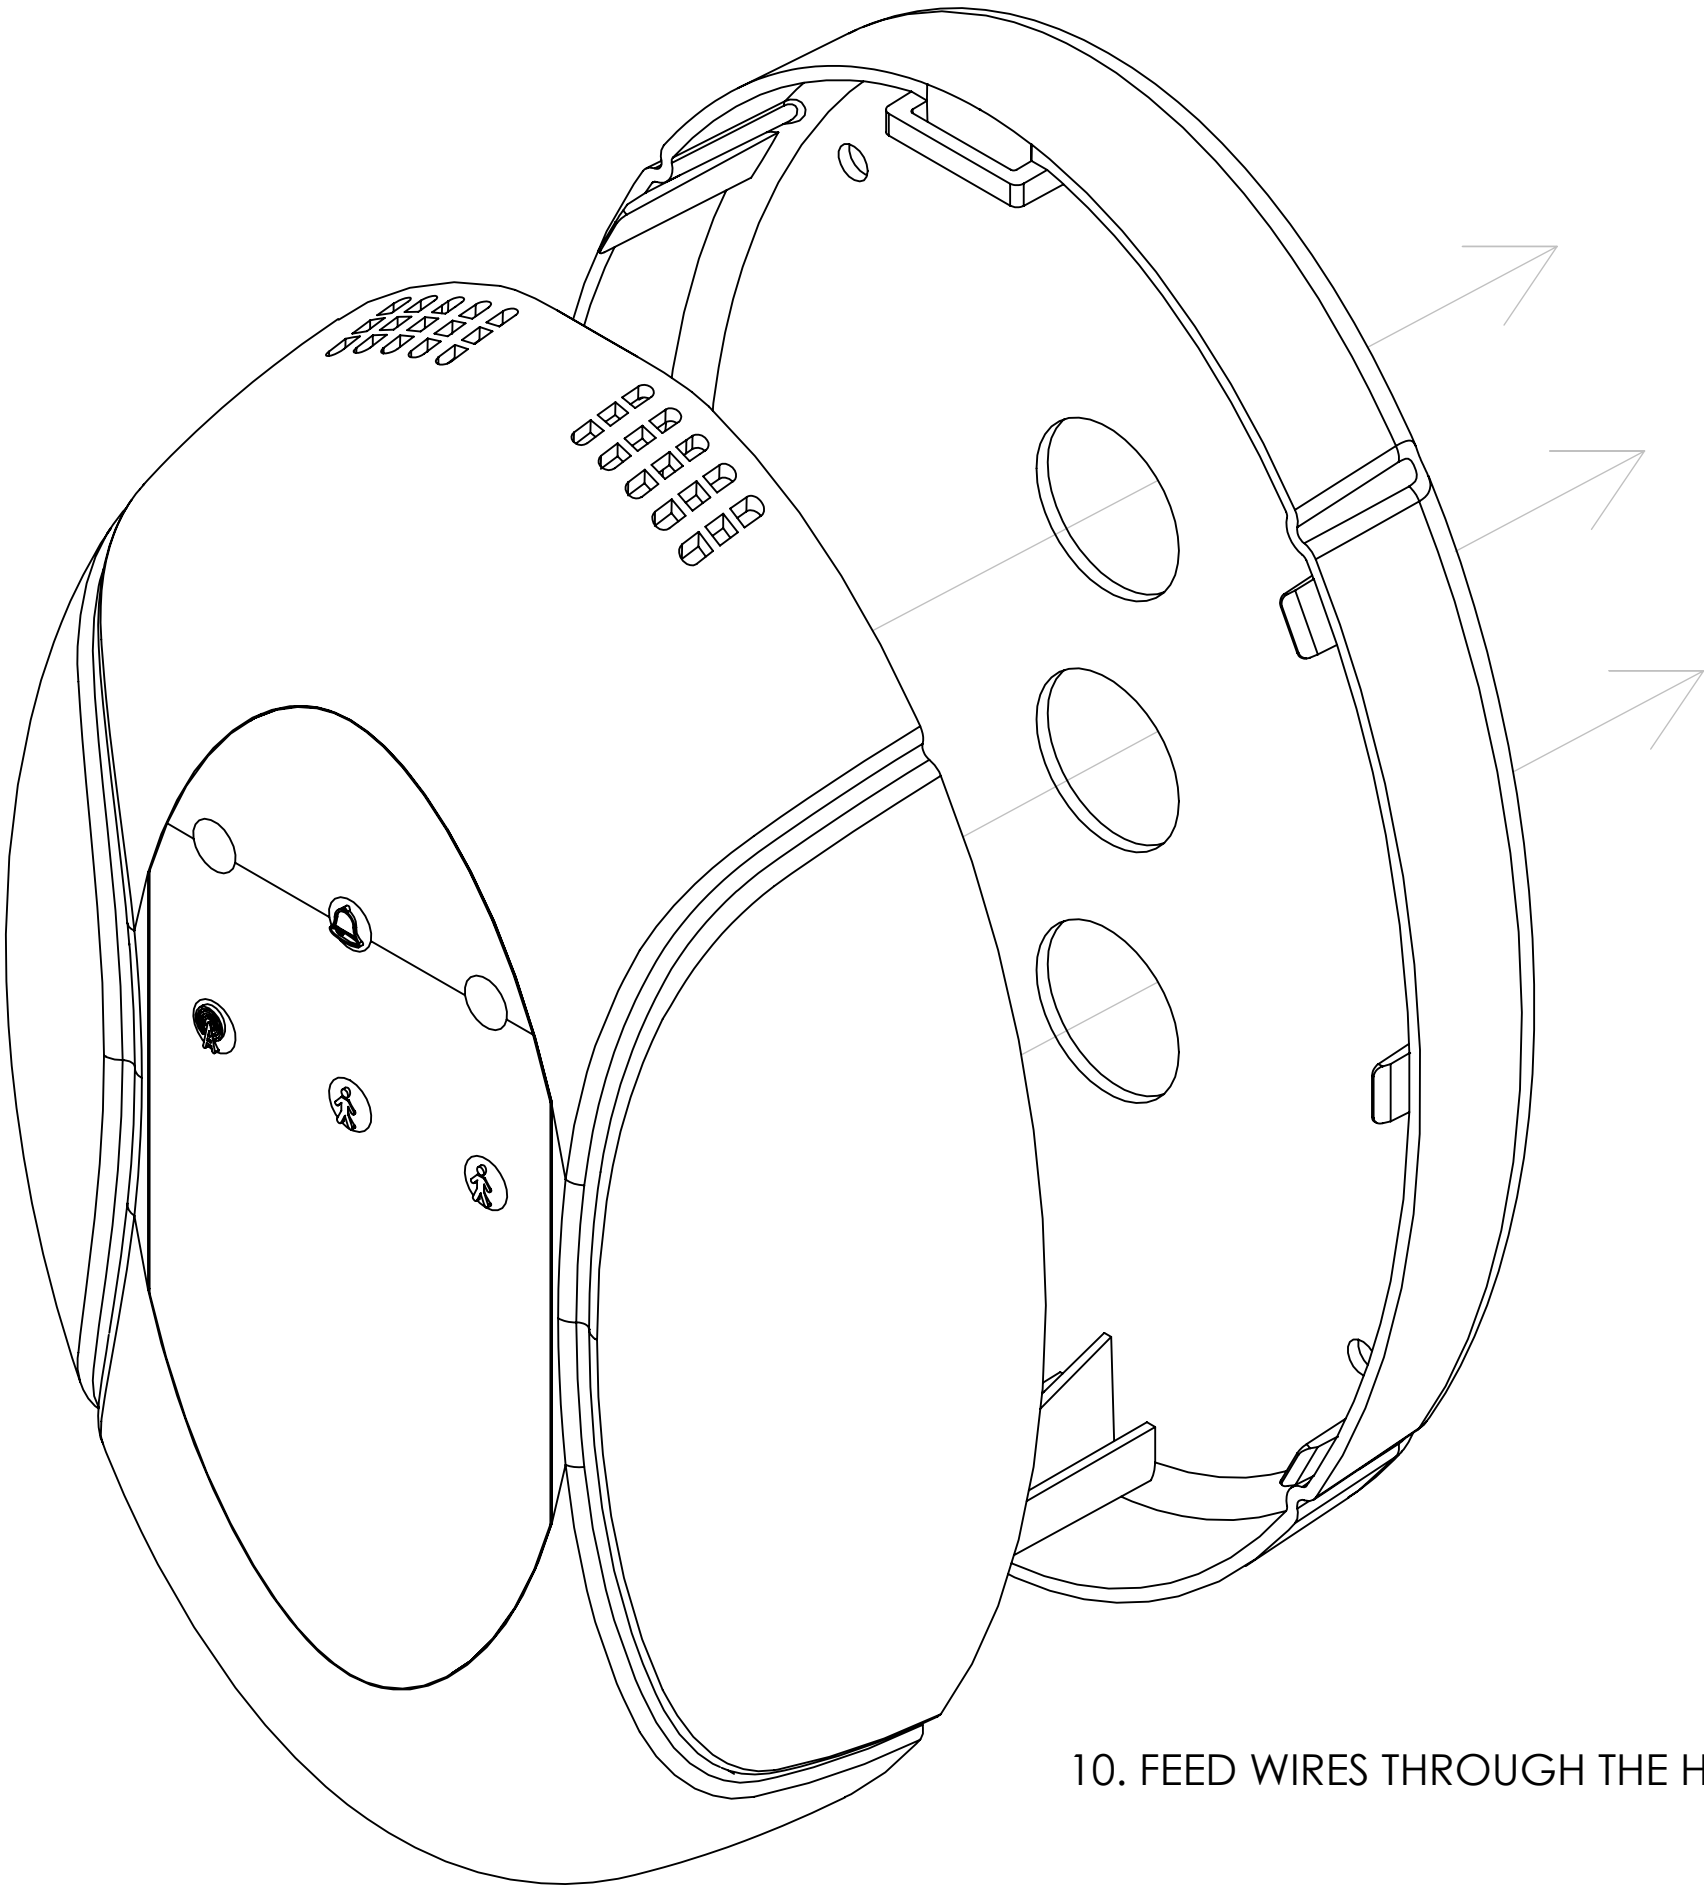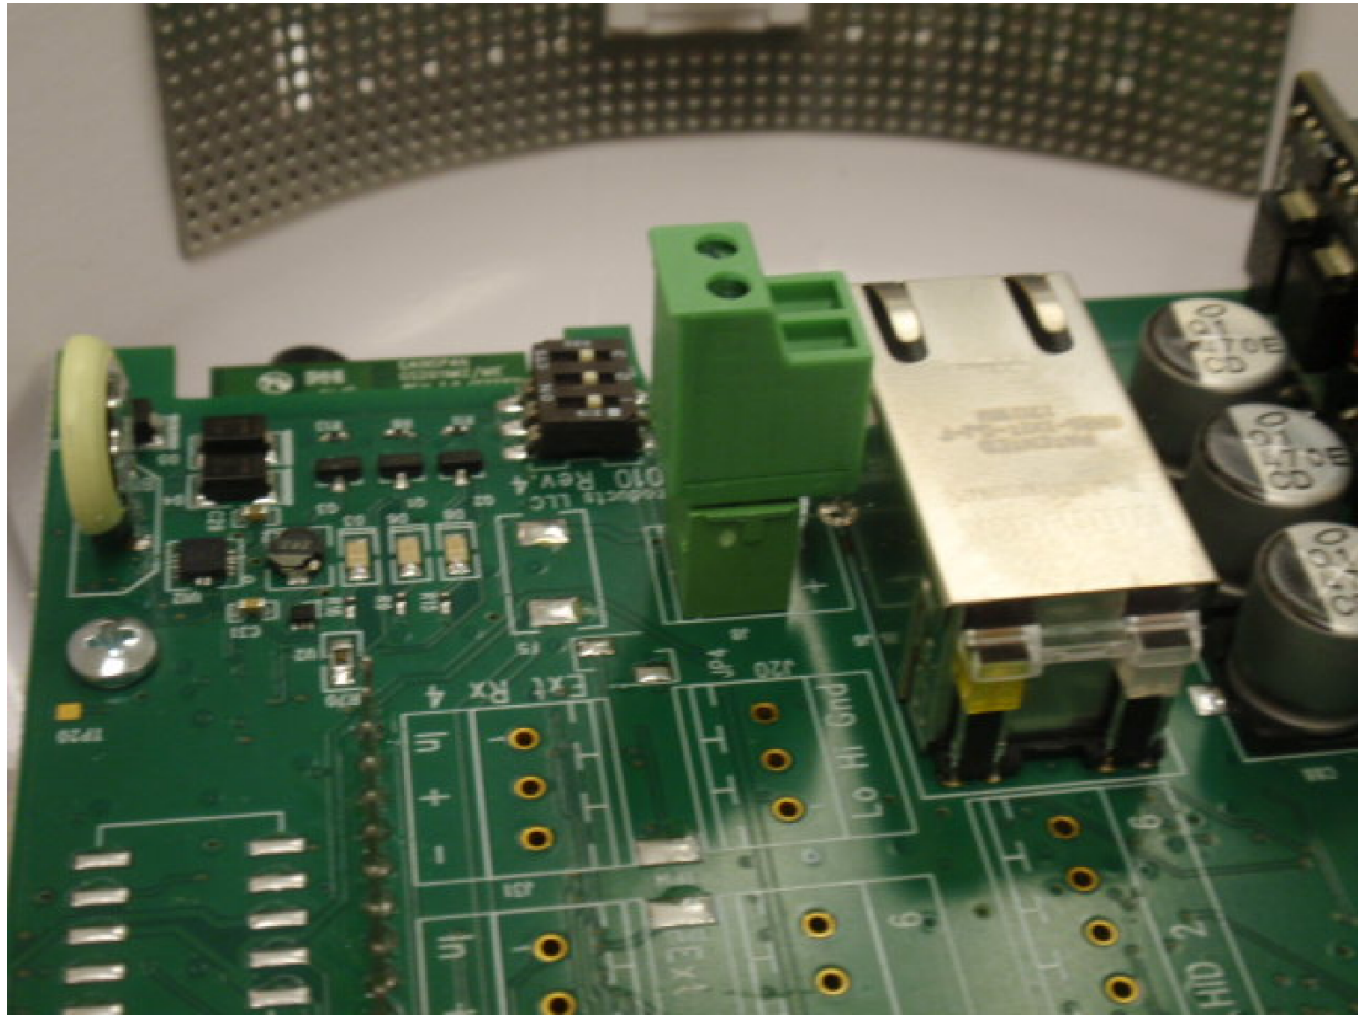

10. FEED WIRES THROUGH THE HOLES ON THE BACK COVER

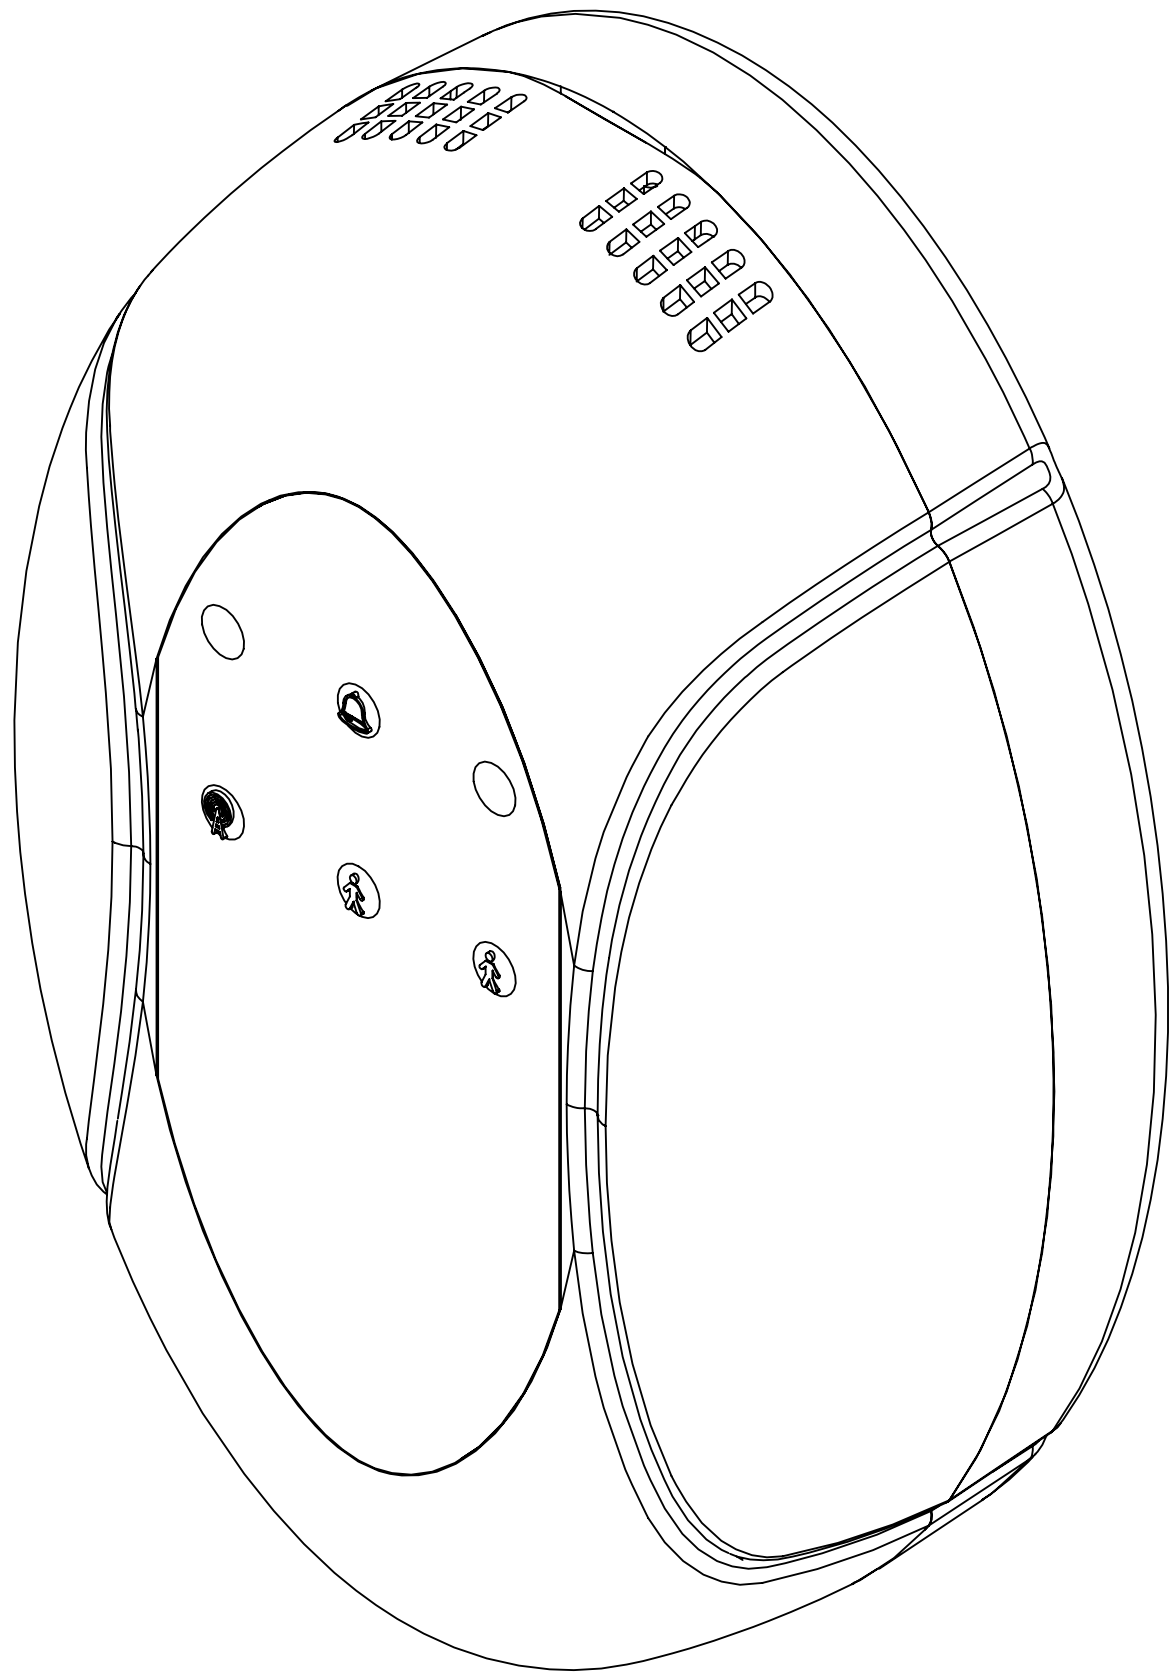

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
SECURE CARE PRODUCTS, LLC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
SECURE CARE PRODUCTS, LLC IS
PROHIBITED.

UNLESS OTHERWISE SPECIFIED:		NAME	DATE
DIMENSIONS ARE IN INCHES		J. DIXON	4/24/14
TOLERANCES:		CHECKED	C. STEVENS
2 PLACE DECIMAL ±.010		ENG APPR.	
3 PLACE DECIMAL ±.005		MFG APPR.	
4 PLACE DECIMAL ±.002		G.A.	
DO NOT SCALE DRAWING		COMMENTS:	
REMOVE ALL BURS AND SHARP EDGES			
MATERIAL		THIRD ANGLE PROJECTION	
FINISH			
NEXT ASSY	USED ON		
APPLICATION			

SECURE CARE PRODUCTS, LLC		99 CHENELL DR. CONCORD N.H. 03301	
TITLE:		INDOOR NODE	
SIZE	DWG. NO.	REV	
D	D03490900	2	
SCALE: 1:5	WEIGHT:	SHEET 3 OF 3	