




E-Plane Pattern, $\phi = 90$ degrees Plane Cut
Proto 02-3d, Left Antenna, With Solder Mask

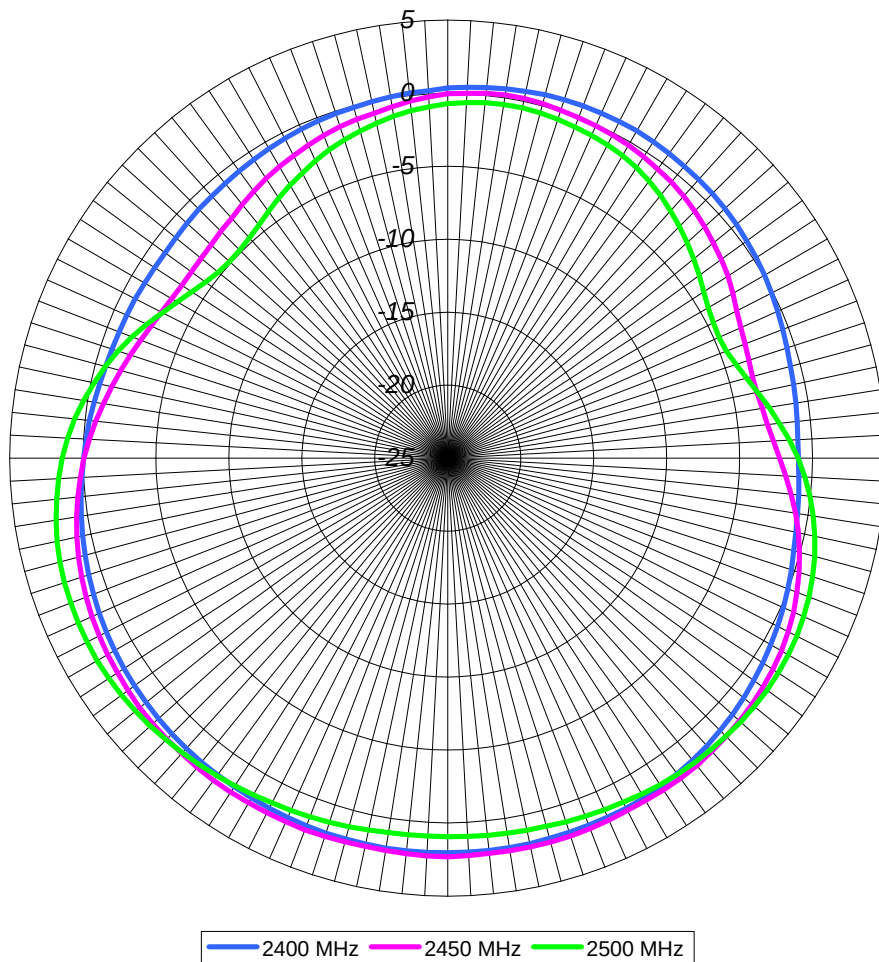


E-Plane Pattern, $\phi = 90$ degrees Plane Cut
Proto 02-3d, Left Antenna, With Solder Mask

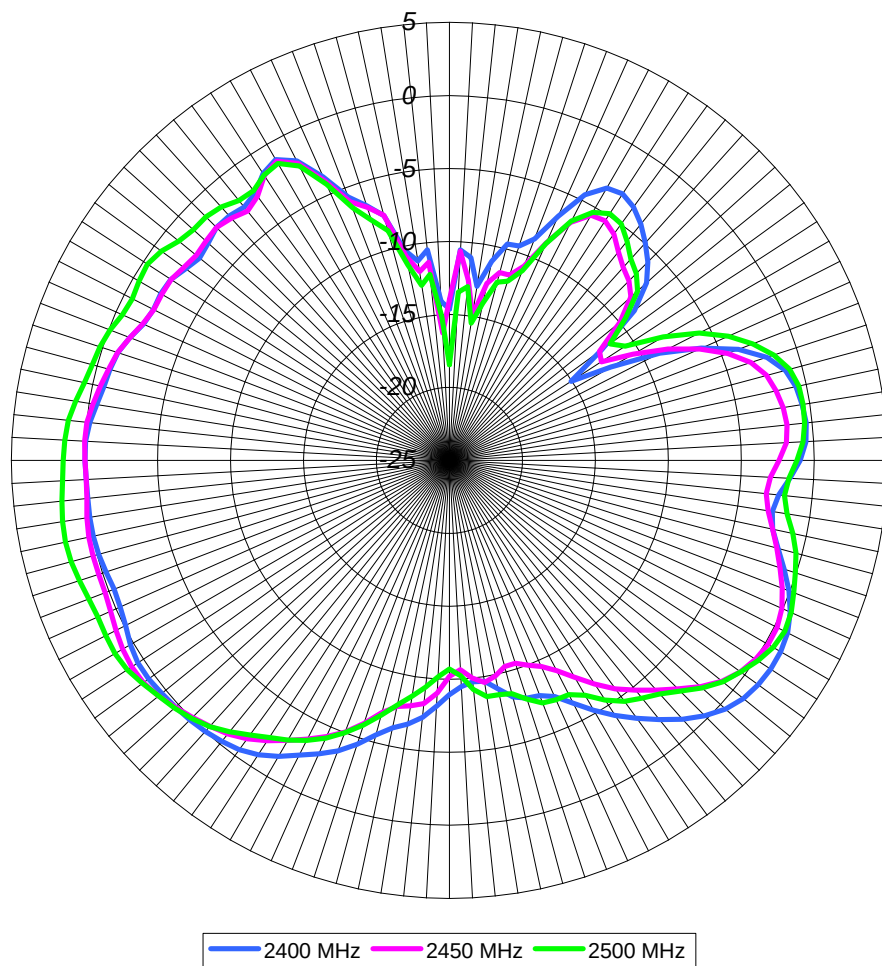

E-Plane Pattern, $\phi = 0$ degrees Plane Cut
Proto 02-3d, Left Antenna, With Solder Mask

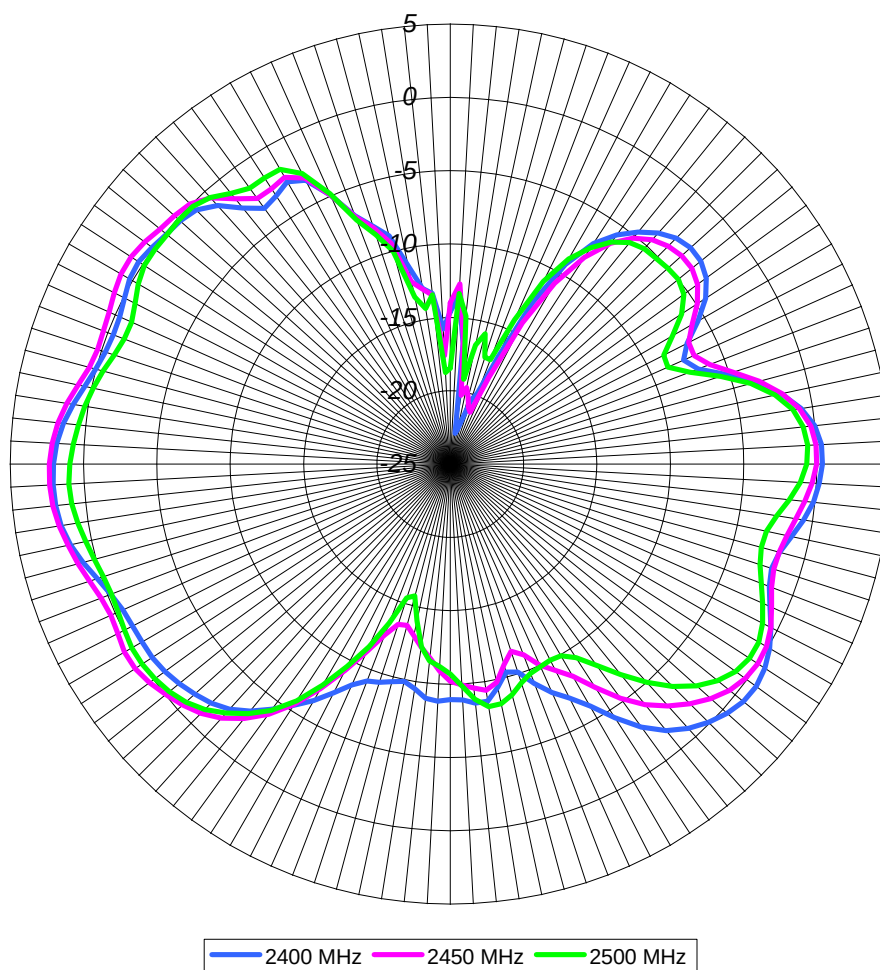

E-Plane Pattern, $\phi = 90$ degrees Plane Cut
Proto 02-3d, Right Antenna, With Solder Mask

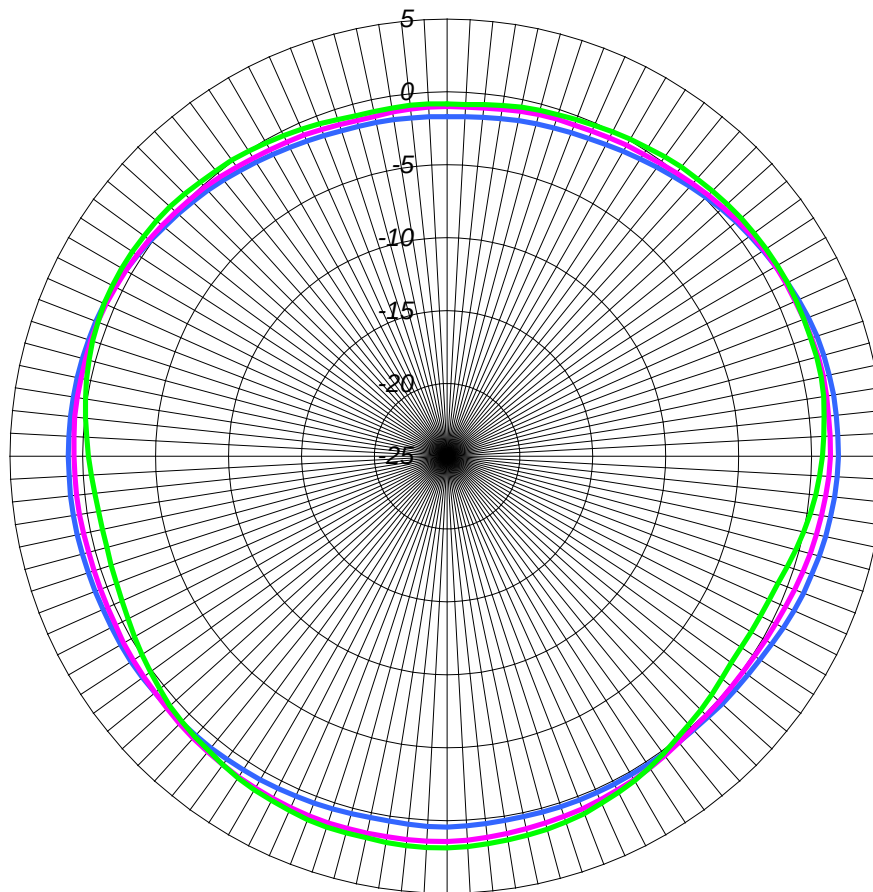

— 2400 MHz — 2450 MHz — 2500 MHz

1

Frequency

, MHz	E Total. dB
2400	2.4150175
2410	2.3338744
2420	2.410514
2430	2.2717408
2440	2.6226712
2450	2.405734
2460	2.4296494
2470	2.4156107
2480	2.662088
2490	2.6996445
2500	2.6498898

