
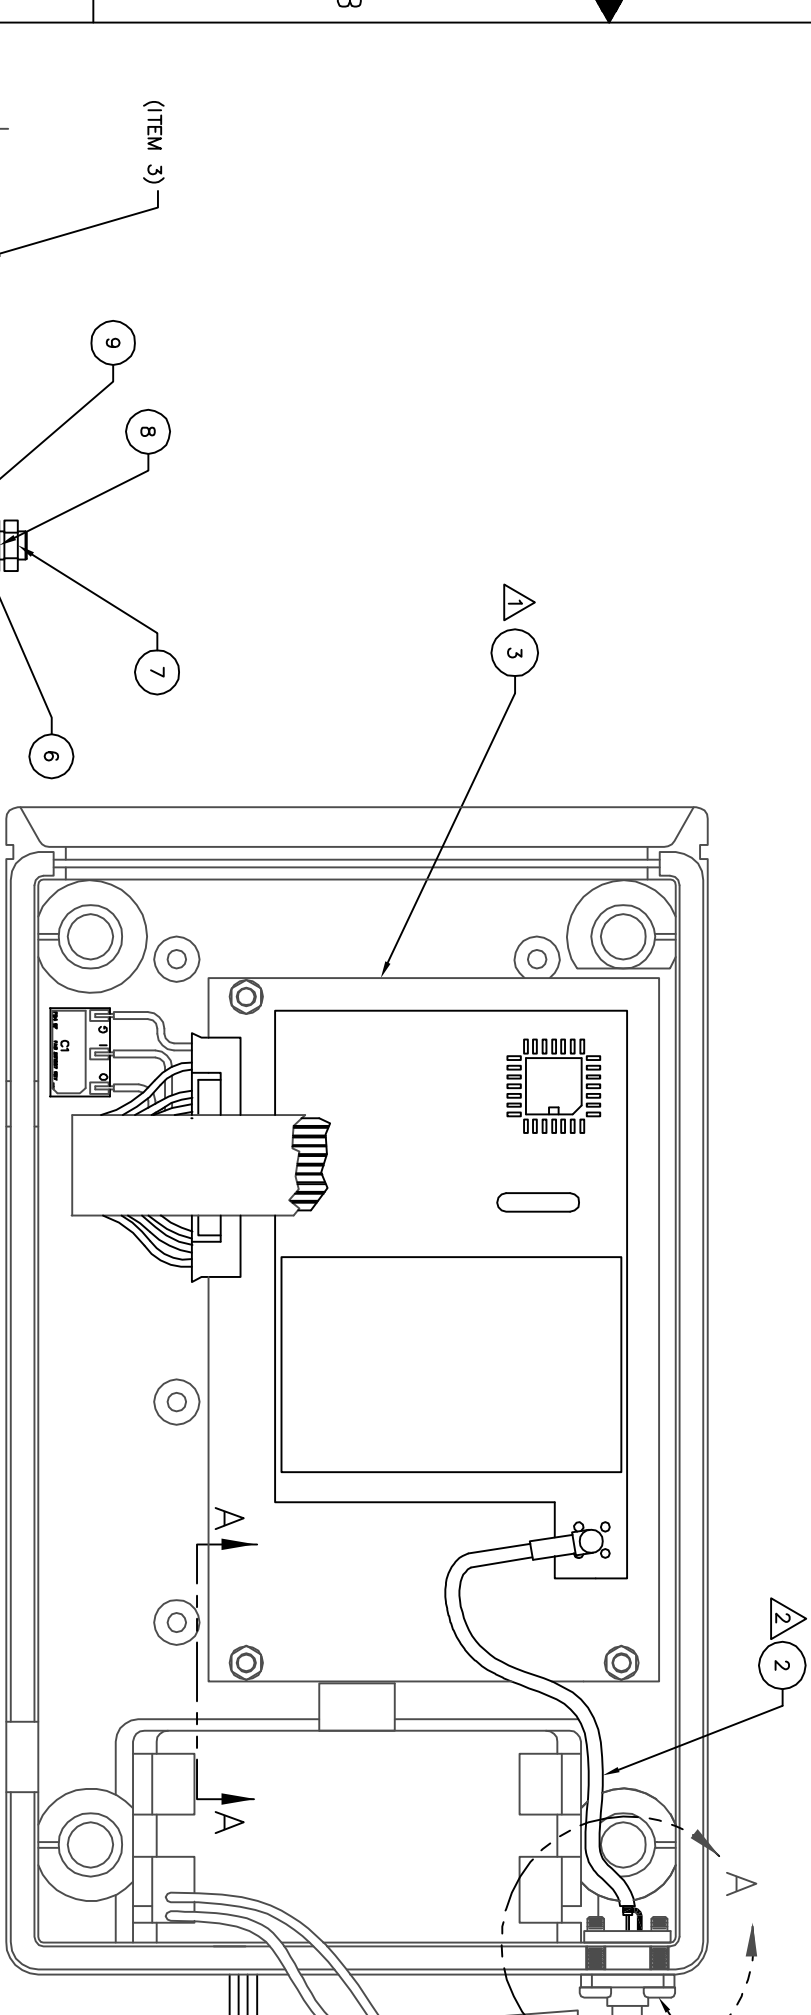


NOTES:

- 1 REMOVE EXISTING PROXIM WIRELESS MODEM AND MOUNTING HARDWARE. REPLACE WITH ITEM 3, PDE-5 PWA PDE-5 PWA AND MOUNTING HARDWARE, ITEMS 5 THRU 9. SEE VIEW A-A, PAGE 2.
- 2 REMOVE EXISTING RF CABLE AND REPLACE WITH ITEM 2, RF CABLE. ROUTE CABLE AS SHOWN.
- 3 APPLY FCC LABEL, ITEM 4 OVER THE EXISTING FCC LABEL.
- 4 REMOVE EXISTING CONNECTOR & ANTENNA AND REPLACE WITH ITEMS 11 & 12, AS SHOWN.
- 5 SOLDER 1AW J-STD-001, CLASS 2, USING ITEM 10.

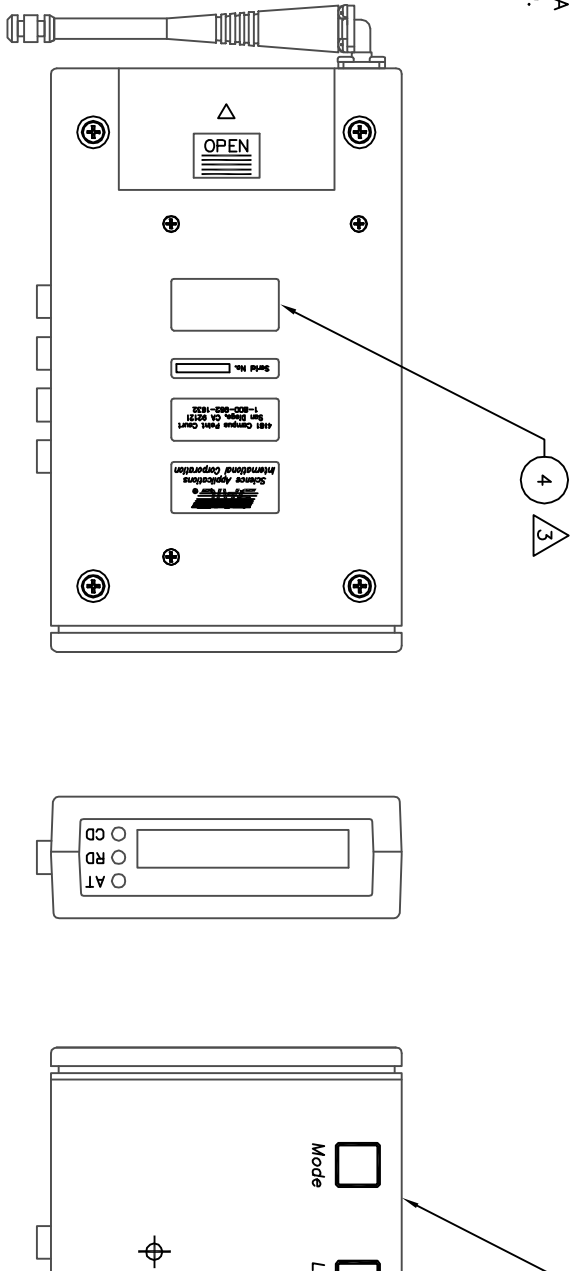

VIEW A-A
3 PLACES, TYPICAL