


Preparing Door and Keypad Escutcheon

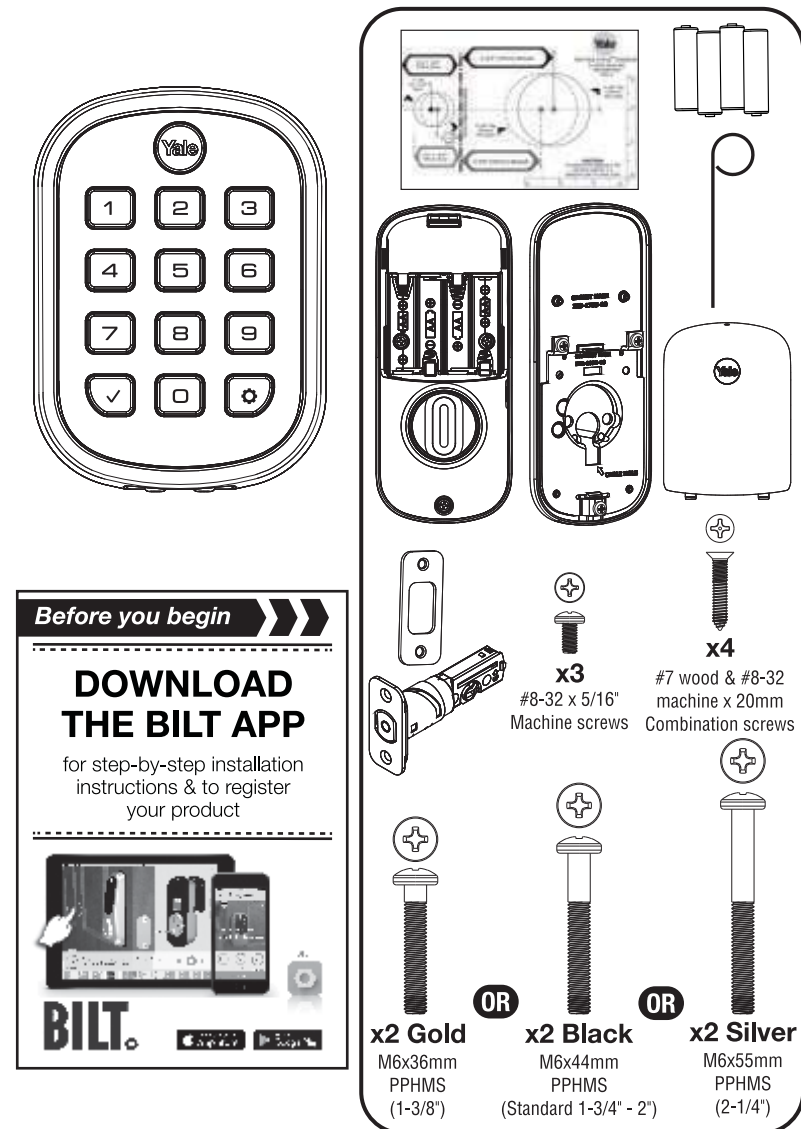


FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT AND VOID THE FACTORY WARRANTY

An ASSA ABLOY Group brand




P/N YRD136-MNL-0008 Rev A

ASSA ABLOY



4 Attaching the Cable Assembly

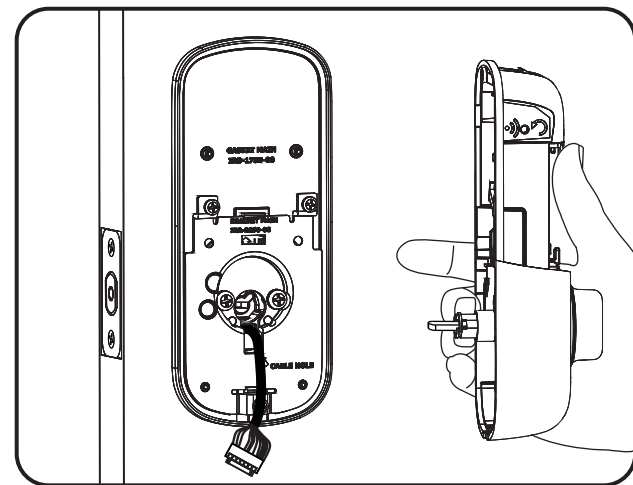




5 Installing Interior Escutcheon

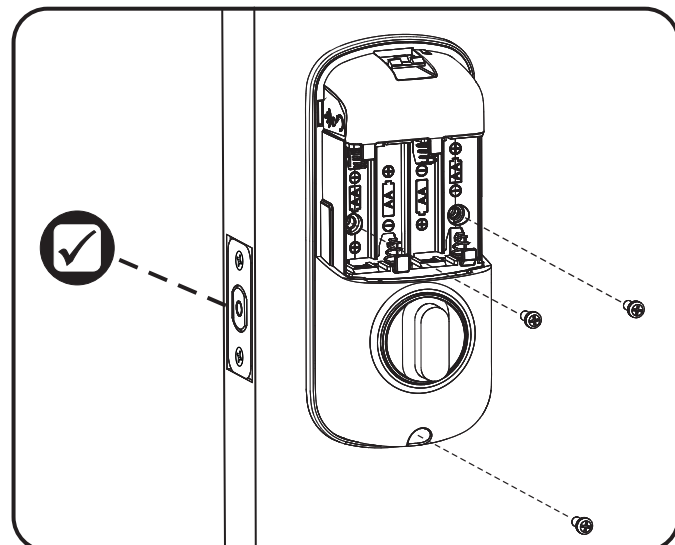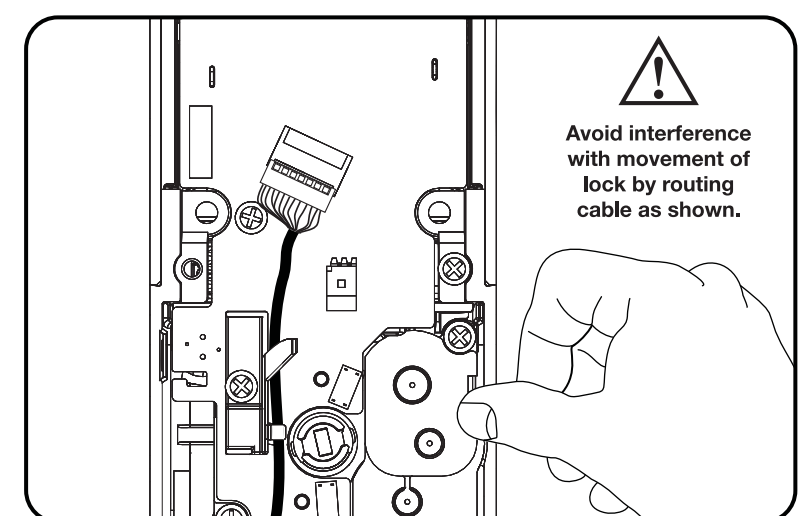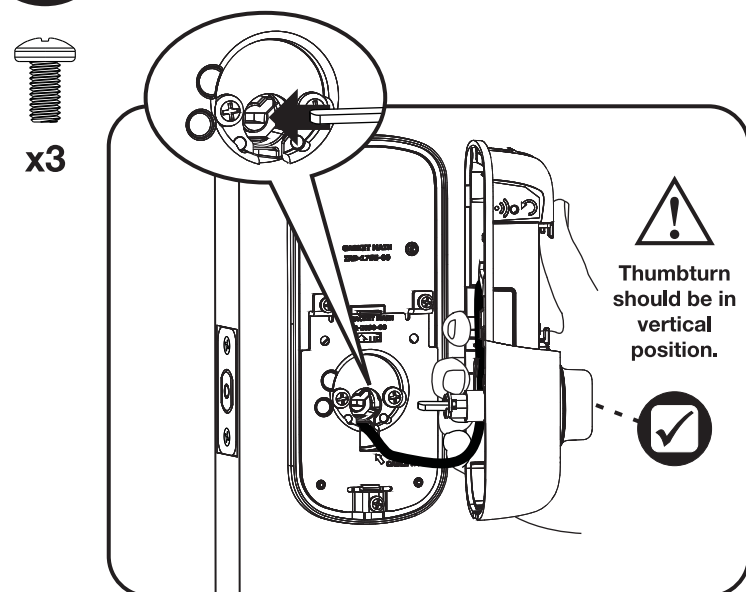



1 Installing Latch & Strike Plate

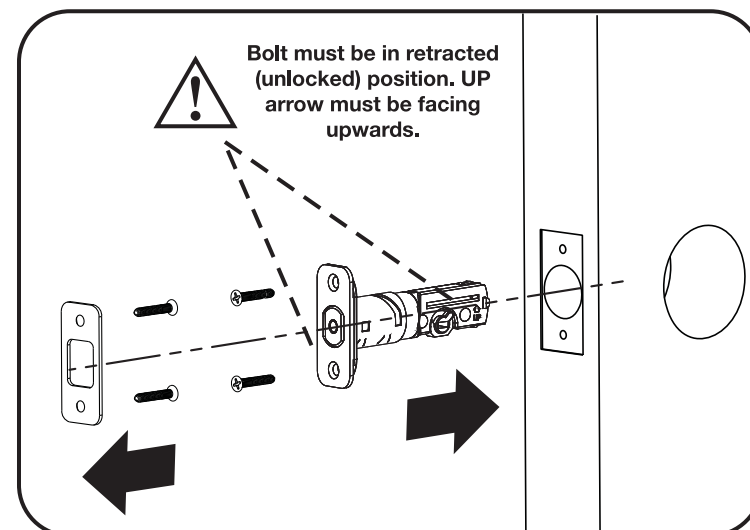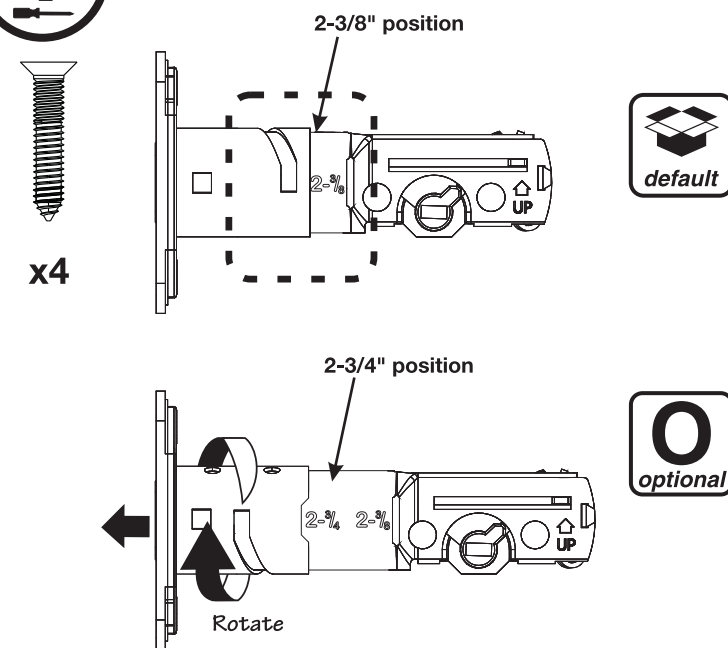



2 Installing Keypad Escutcheon

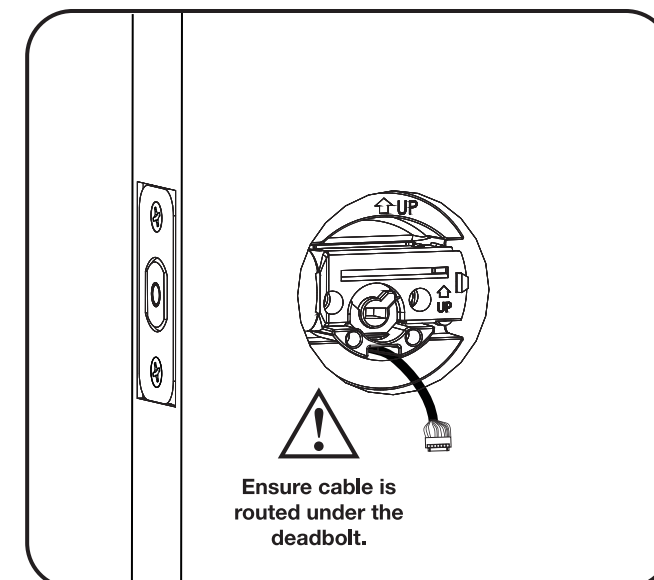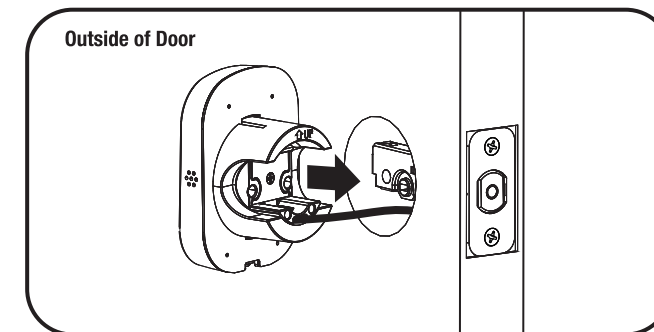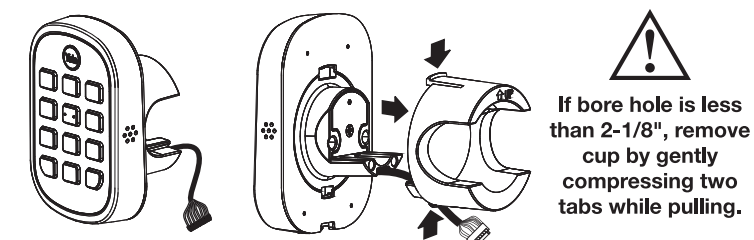



3 Installing Interior Mounting Plate

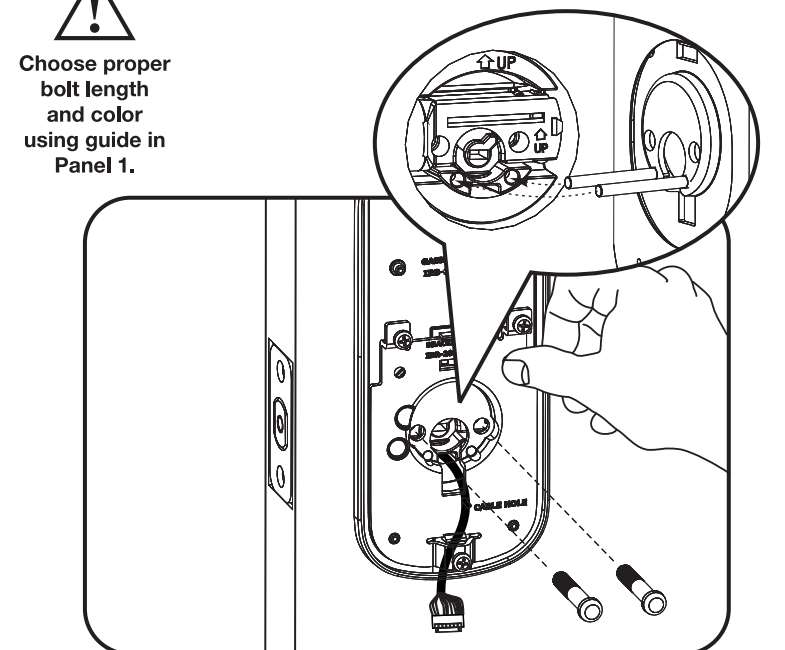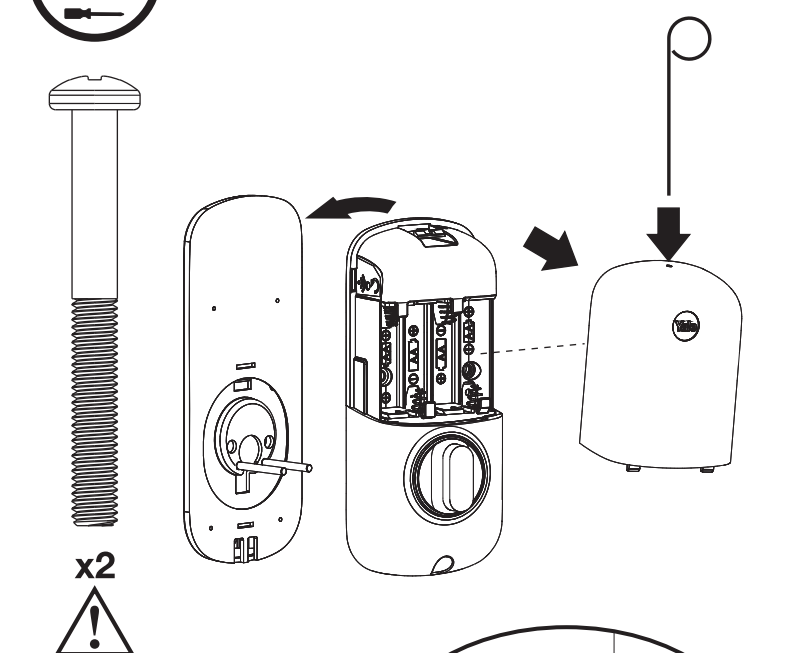


Testing Operation

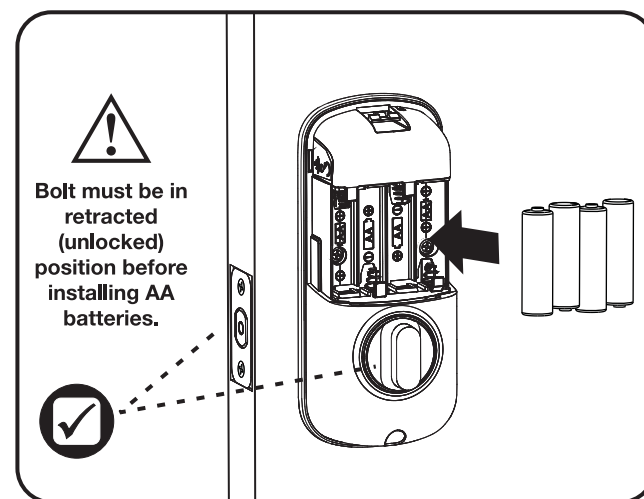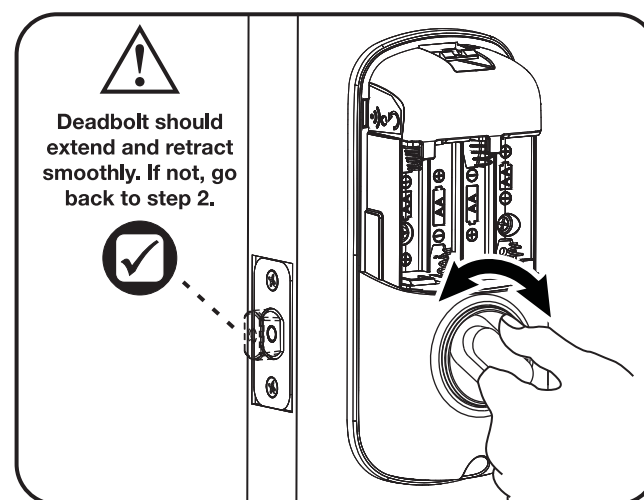

Initial Programming

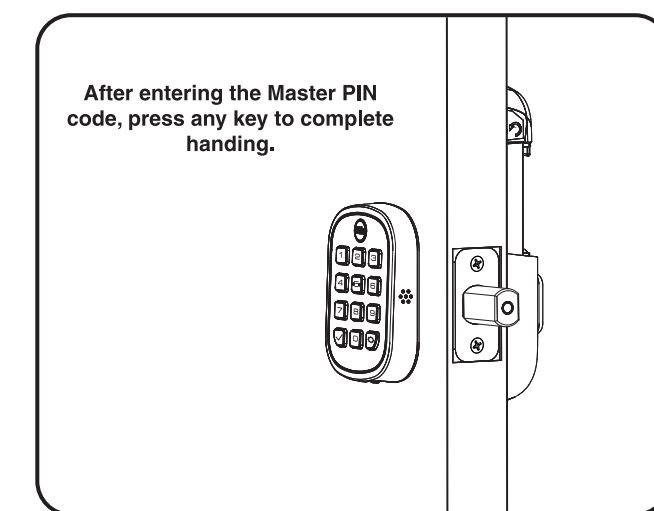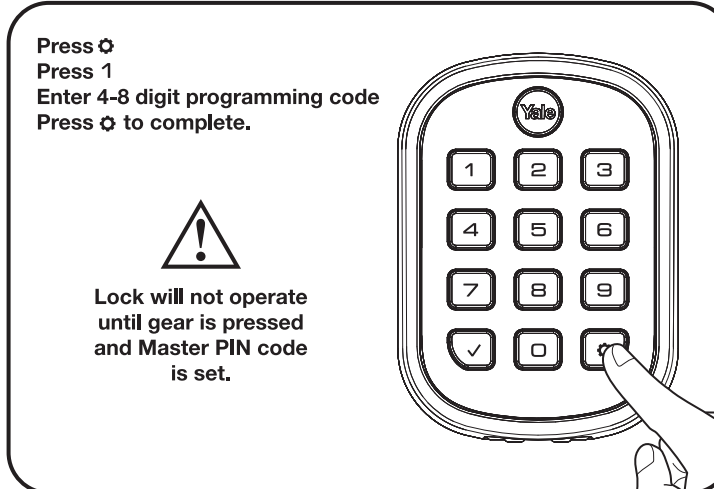

6 Installing Cover

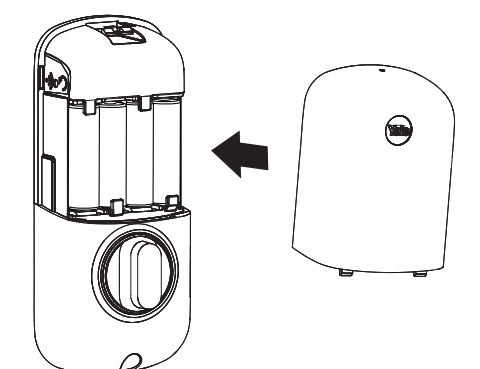

Congratulations, you've installed the Yale® ProSL Key Free Keypad Deadbolt with Z-Wave Plus! Turn sheet over for Programming Instructions to customize your product.

