



leading wireless innovation™


Performance Summary of the Novatel Antenna in Free Space

PC Card




- Orientation of antenna in range
- Swept gain
- Swept Efficiency
- Contour plots


Antenna Range Axis Definition

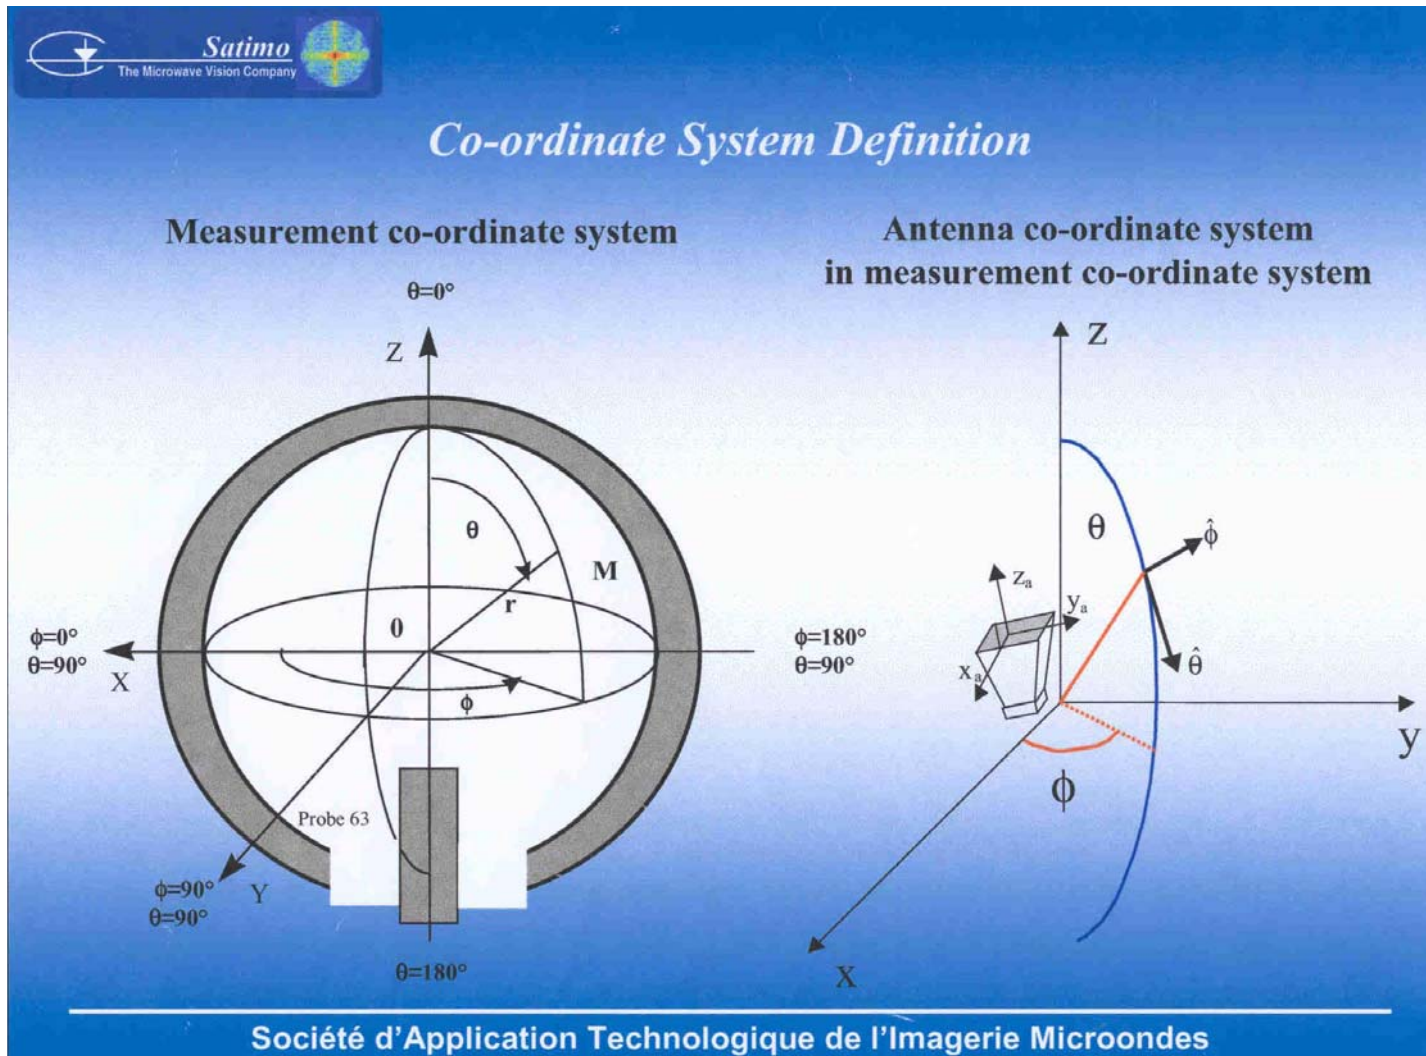


Orientation of Antenna in the Range

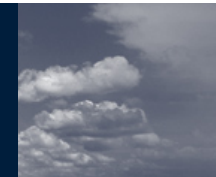


SkyCross

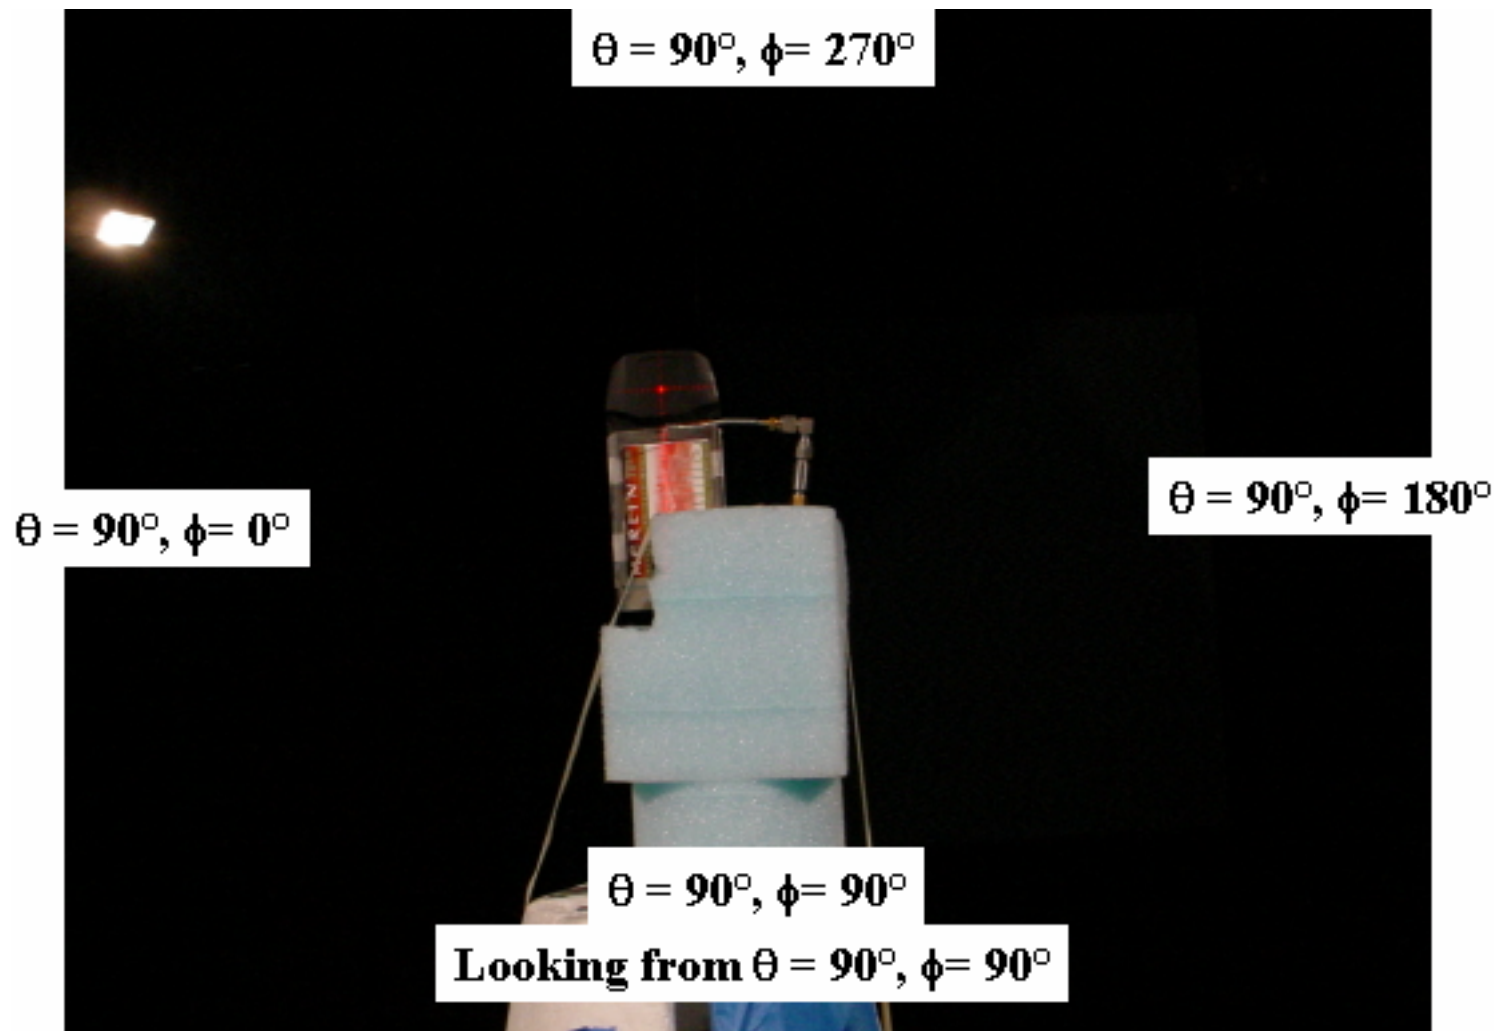


Gain – Low Band

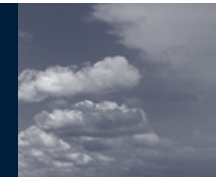


SkyCross

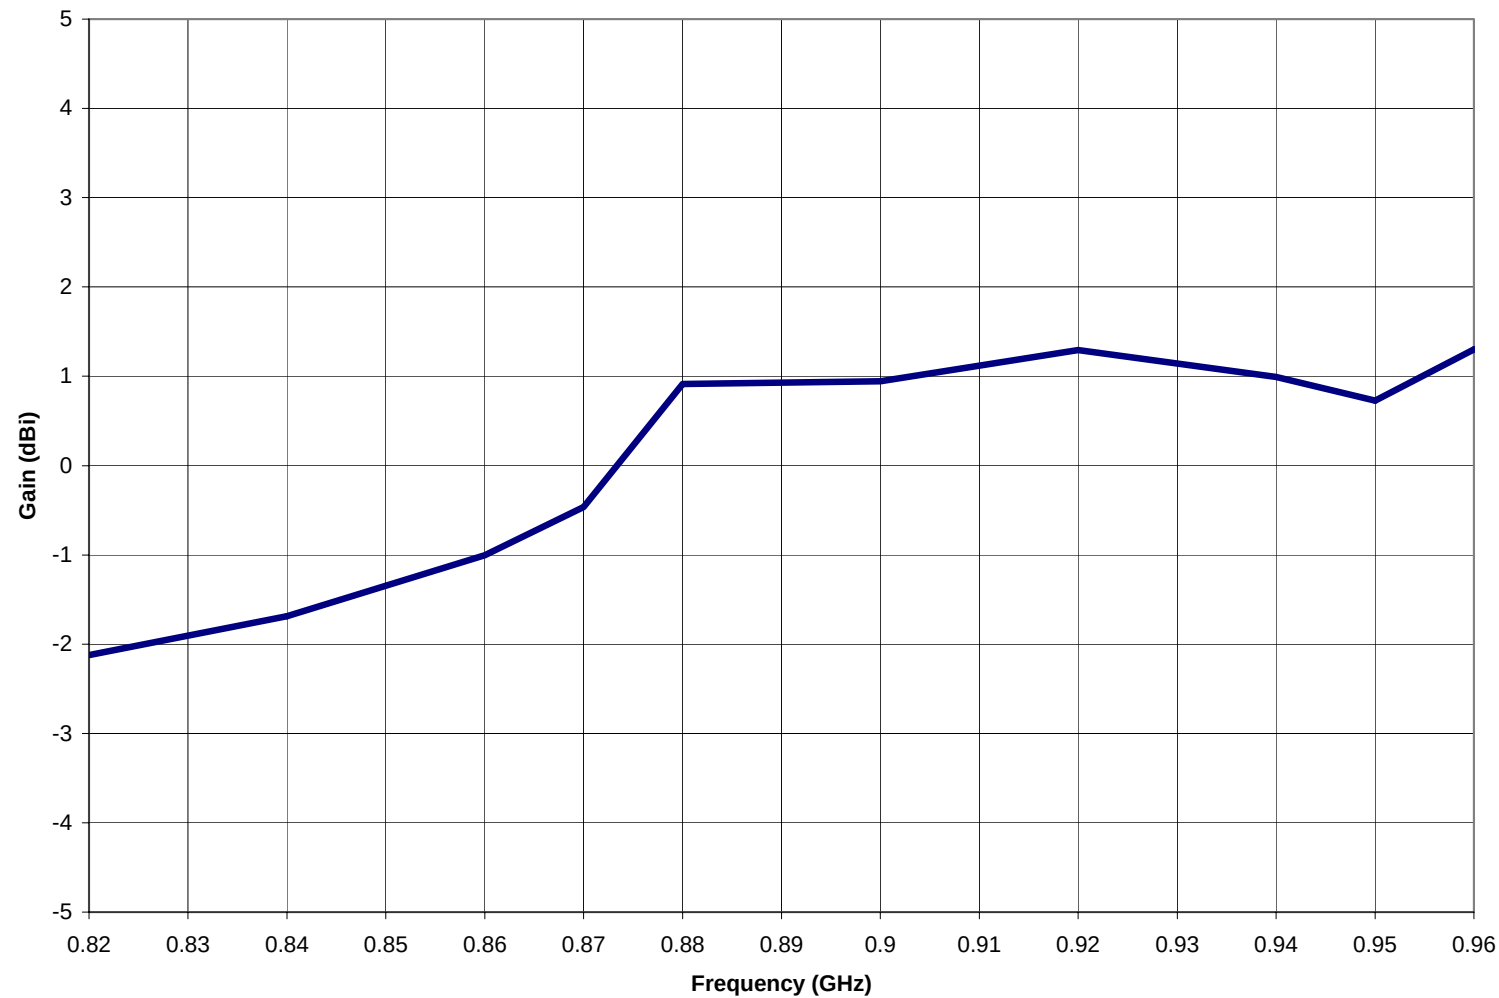

Gain – High Band

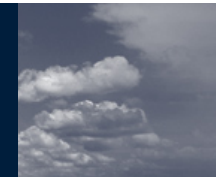


SkyCross

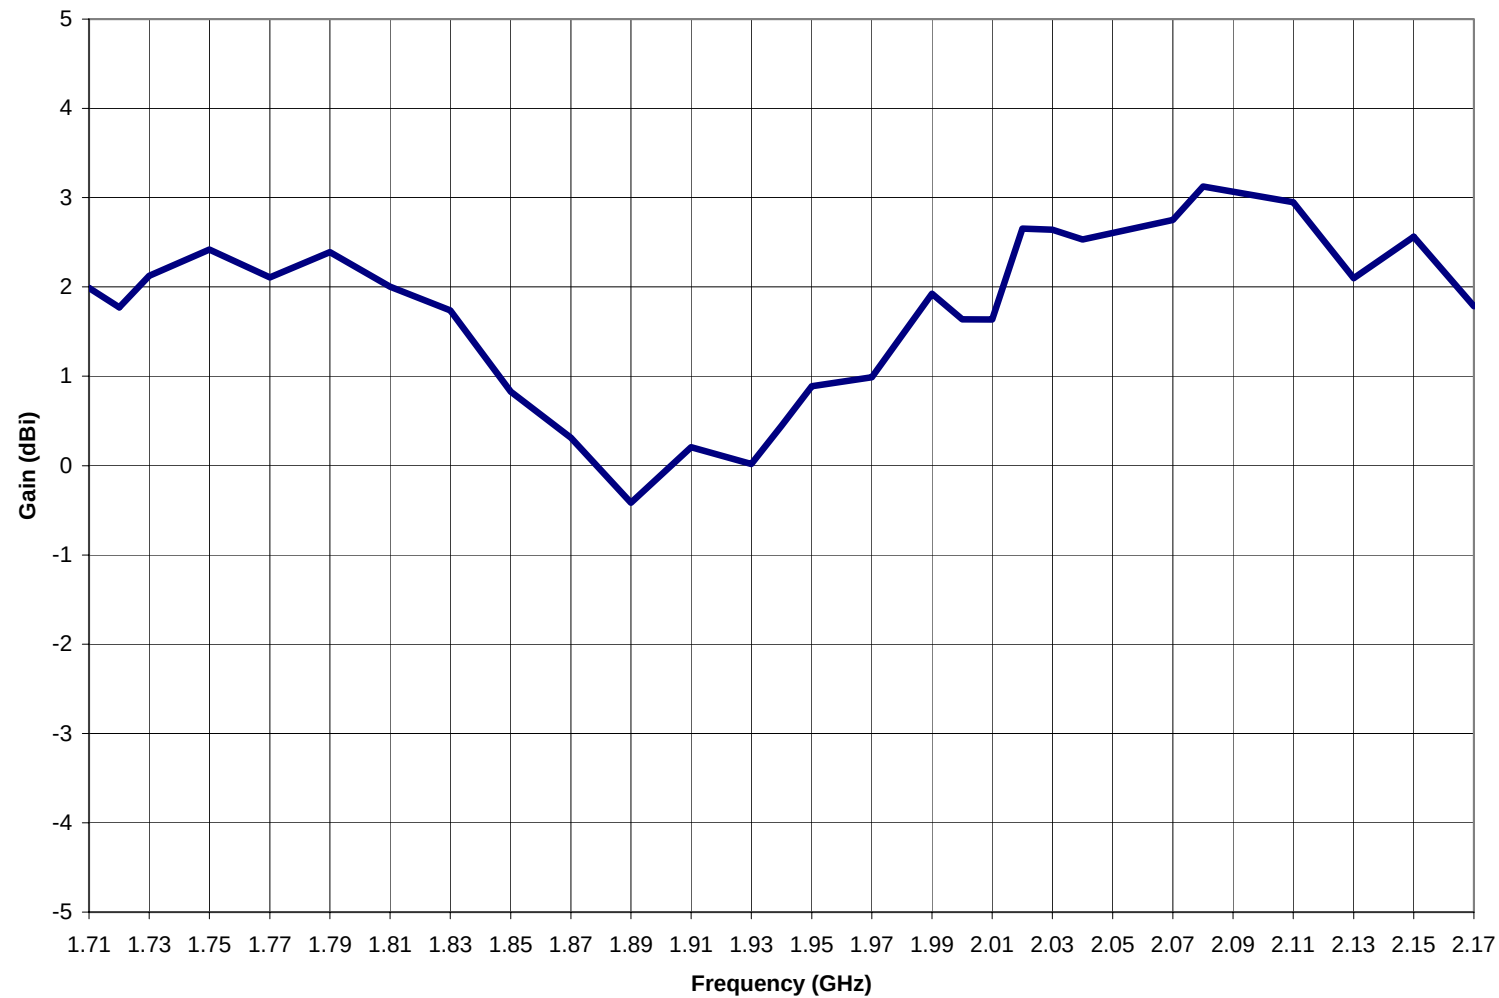

Efficiency – Low Band




SkyCross

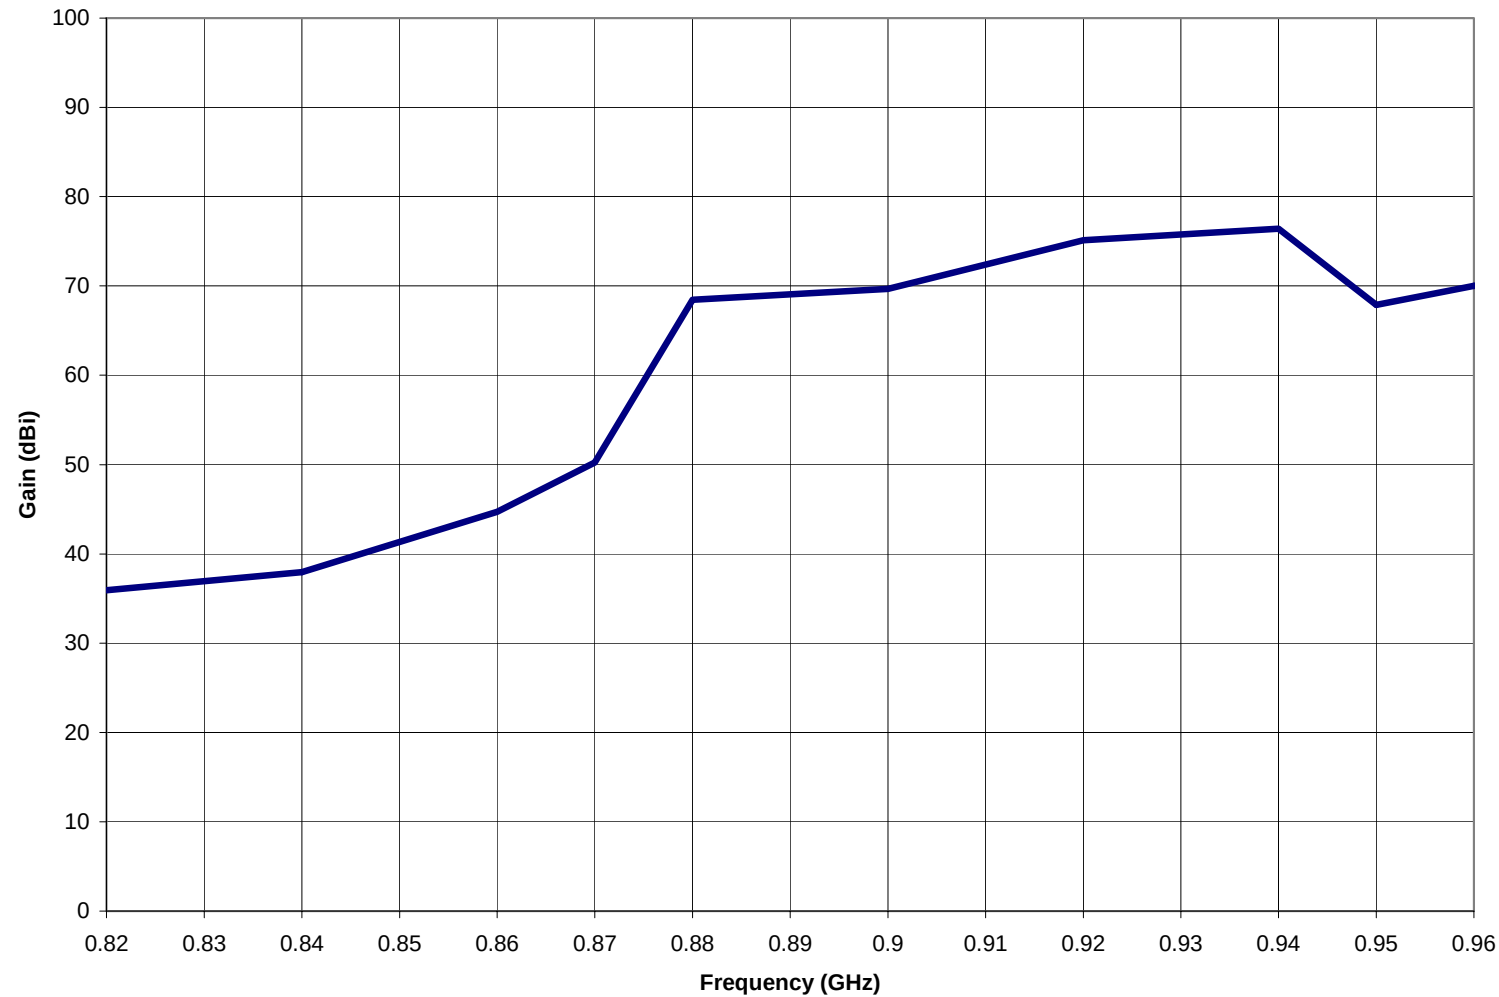


Efficiency – High Band




SkyCross

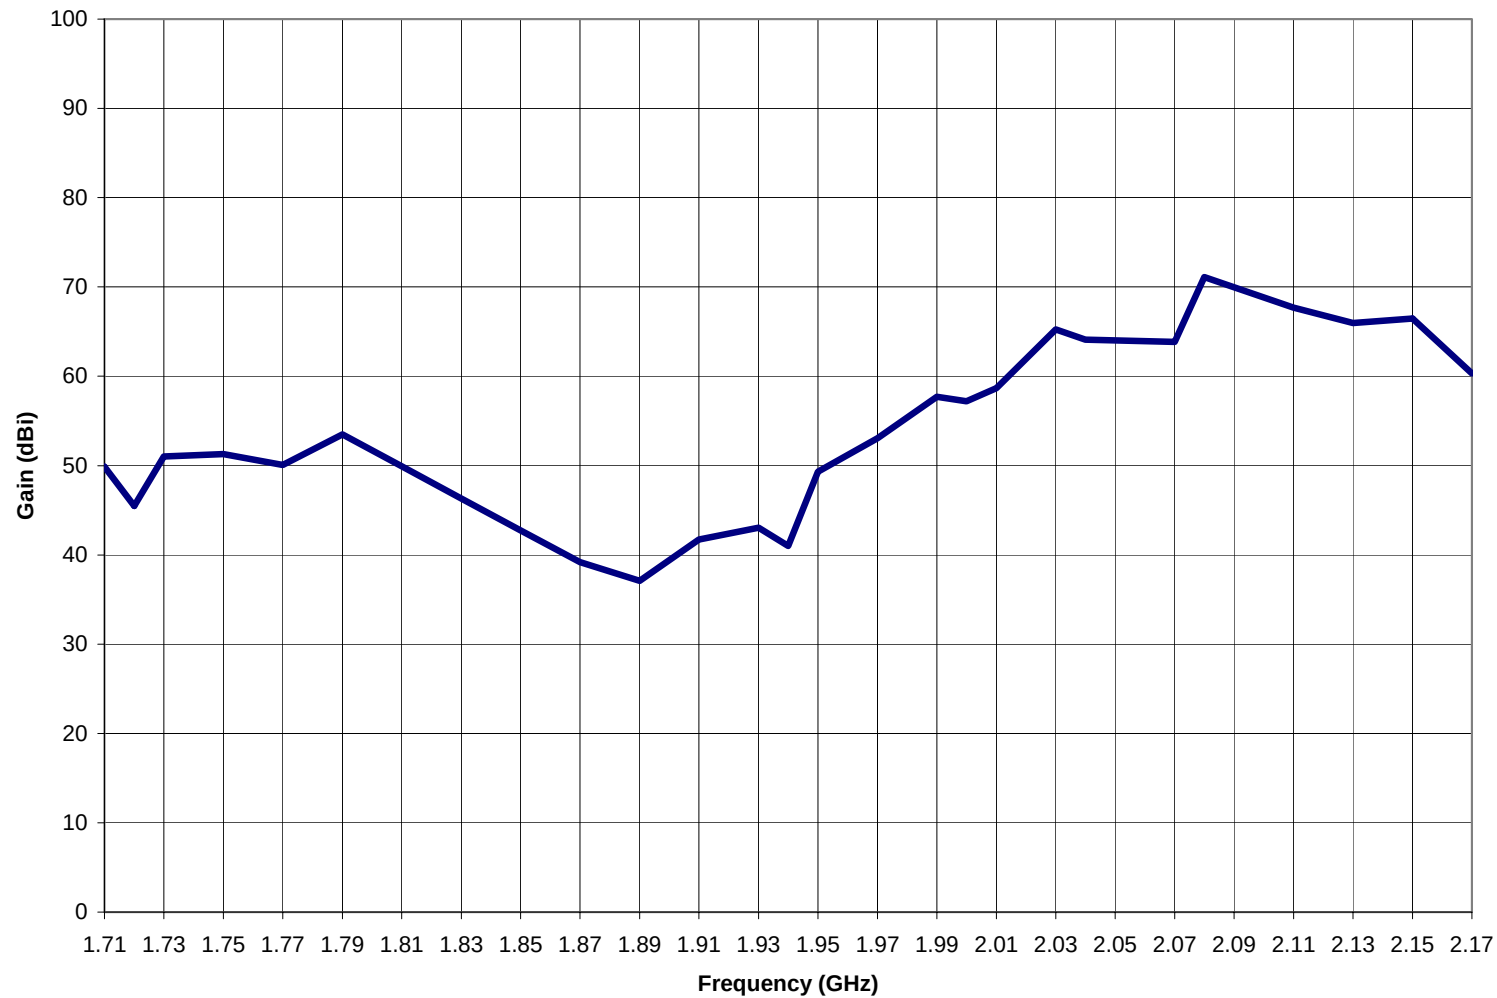


1920 MHz

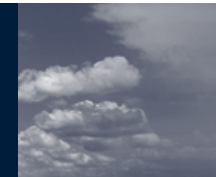


SkyCross

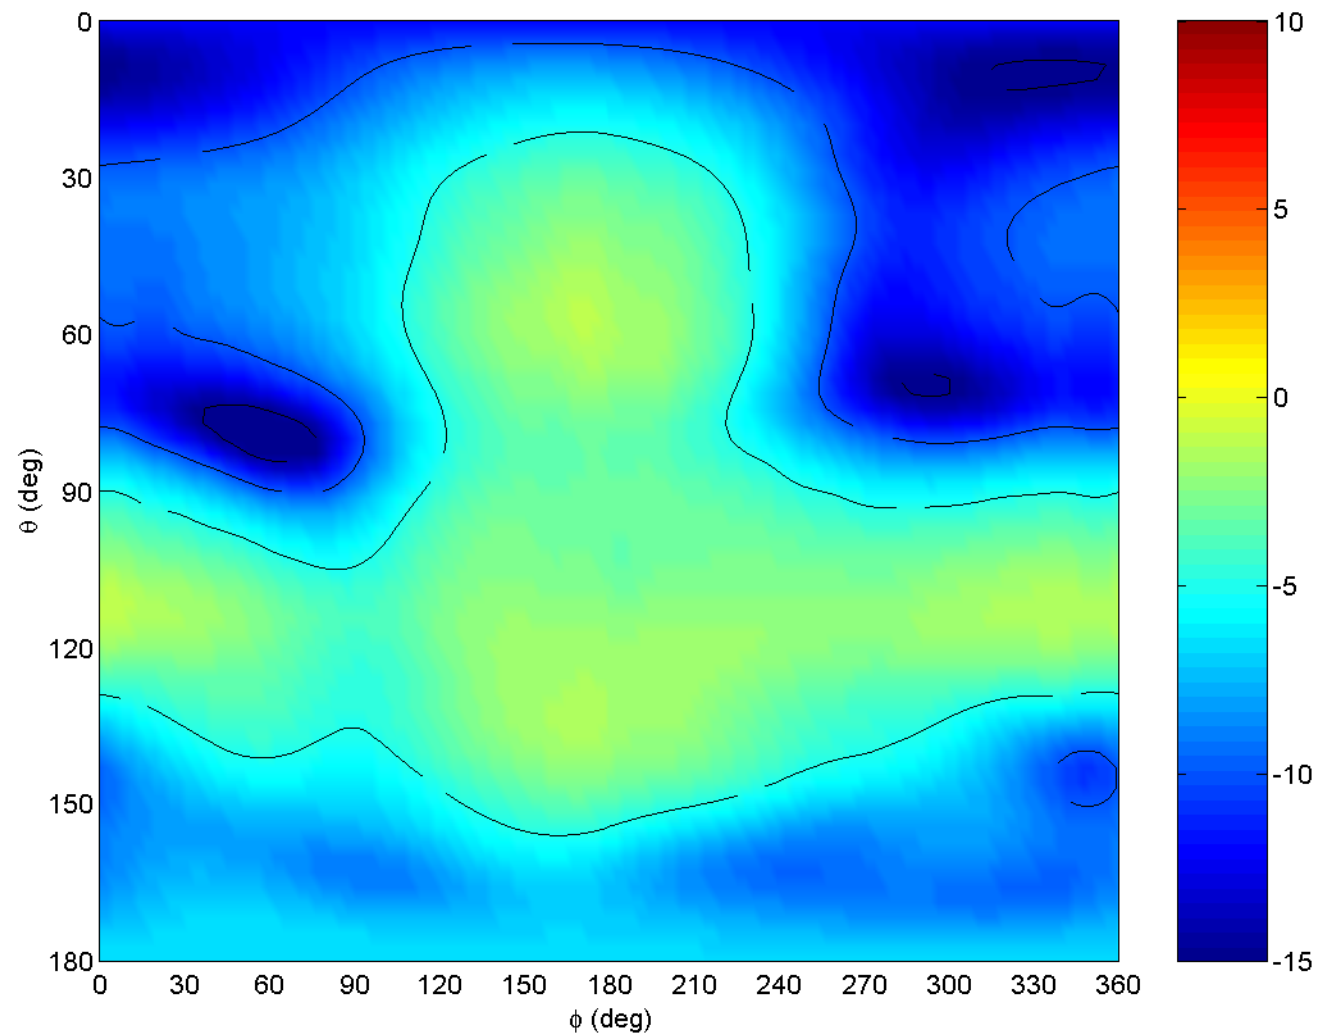


1990 MHz

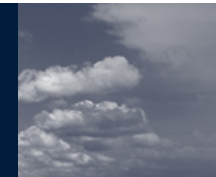


SkyCross

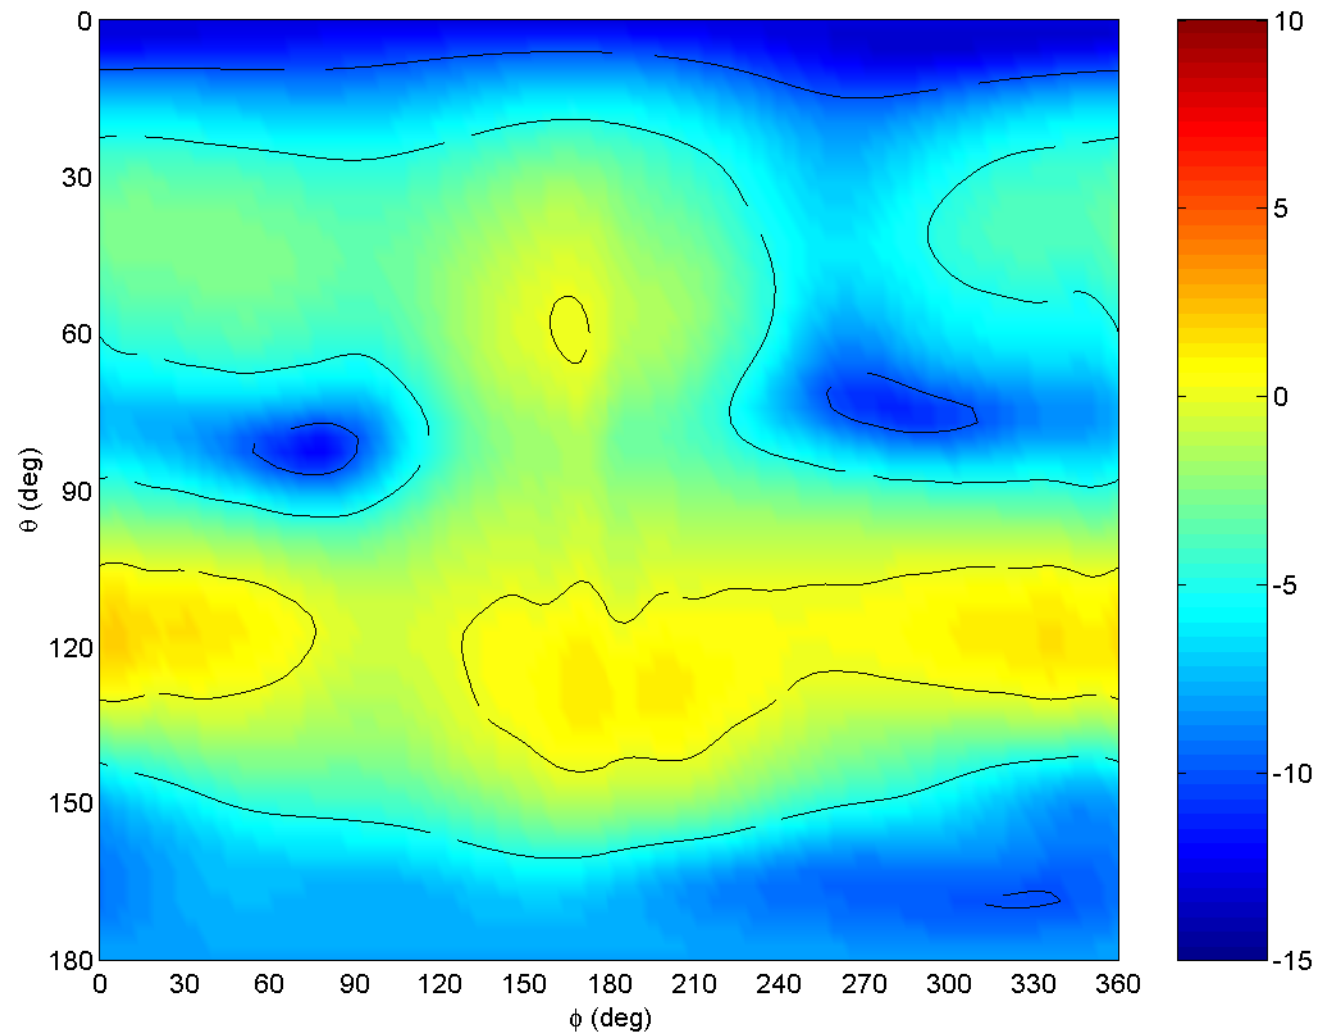


2100 MHz

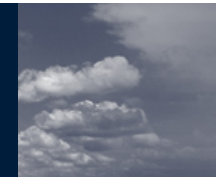

SkyCross

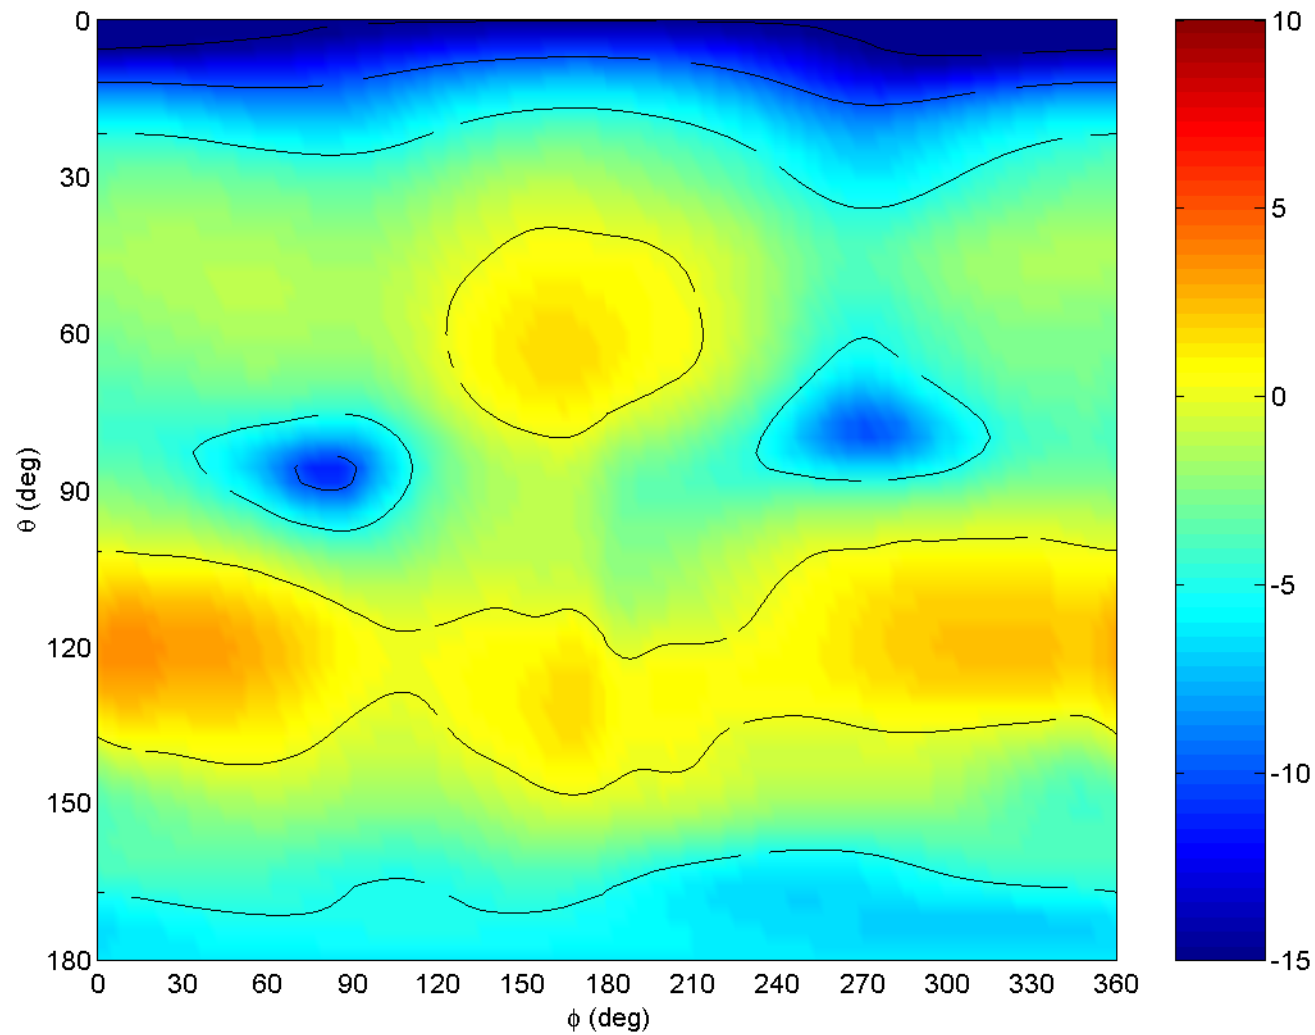

2170 MHz

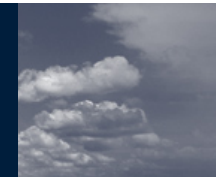

SkyCross

