


800MHz CELLULAR (AMPS)- DOWNLINK

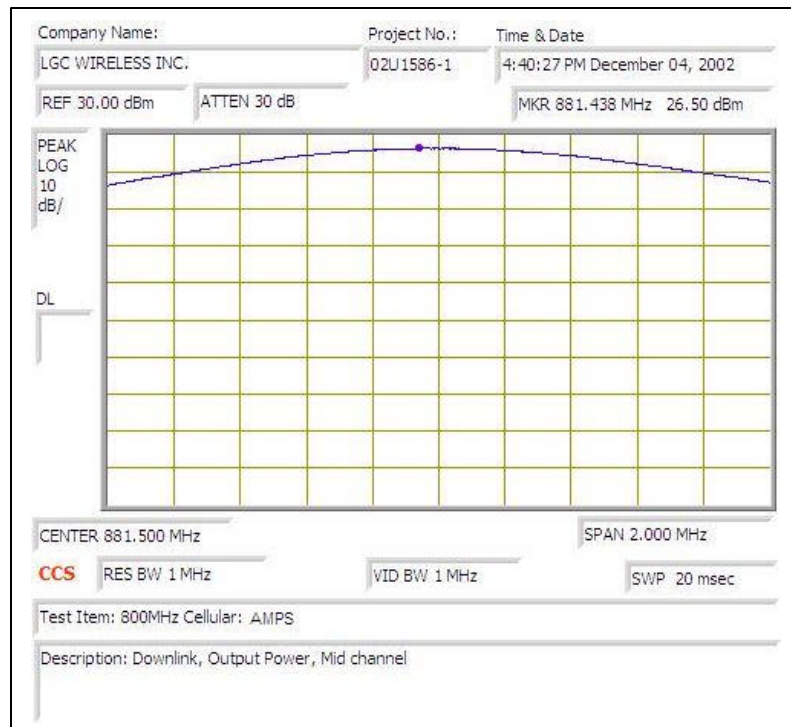


Plot # 1





Plot # 2

Plot # 3

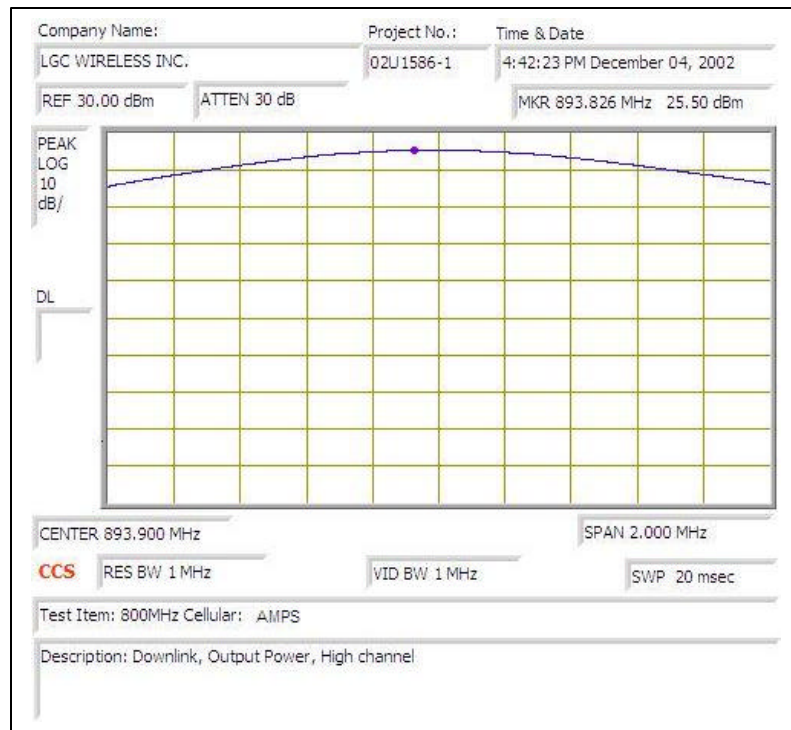


Plot # 4

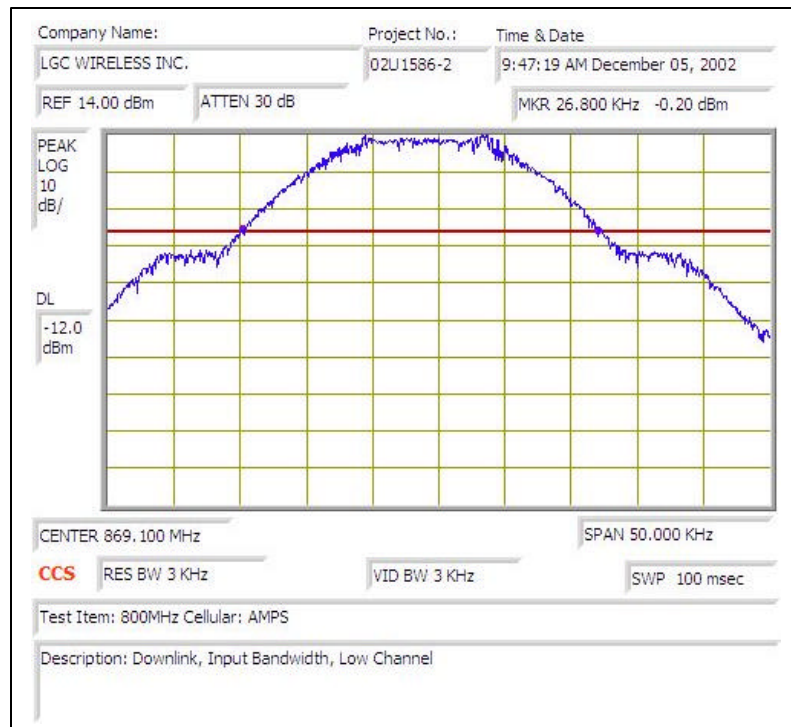


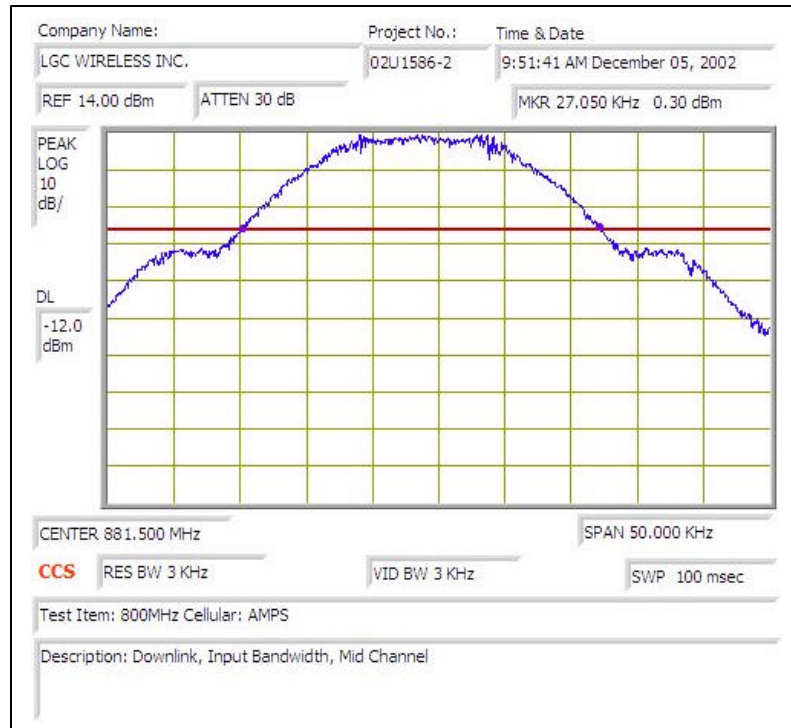


Plot # 5

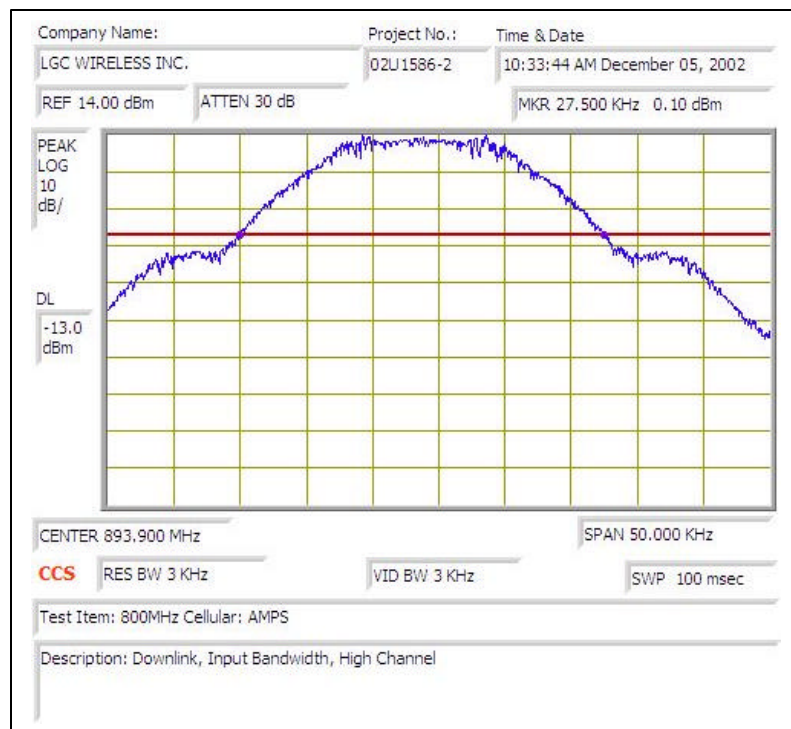


Plot # 6

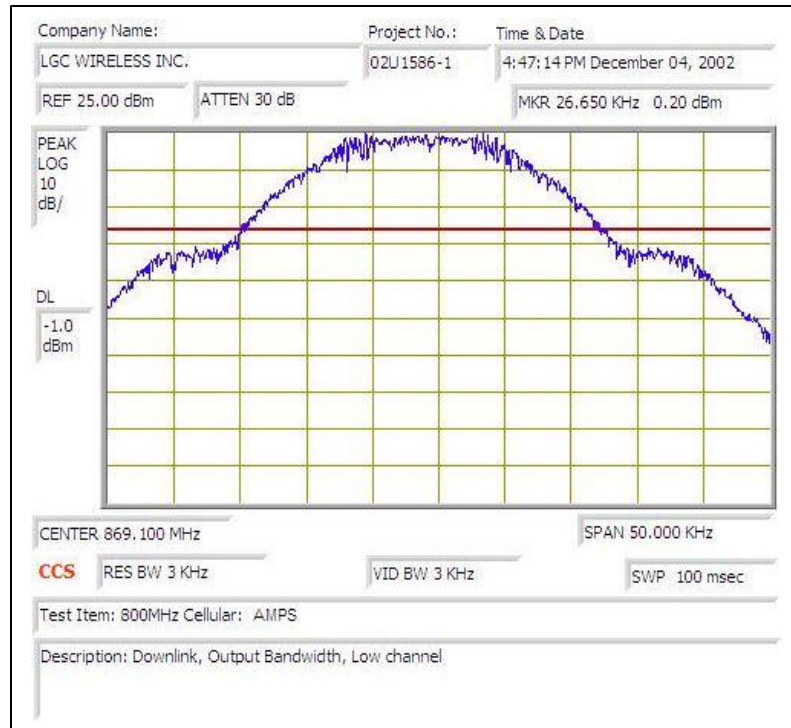


Plot # 7

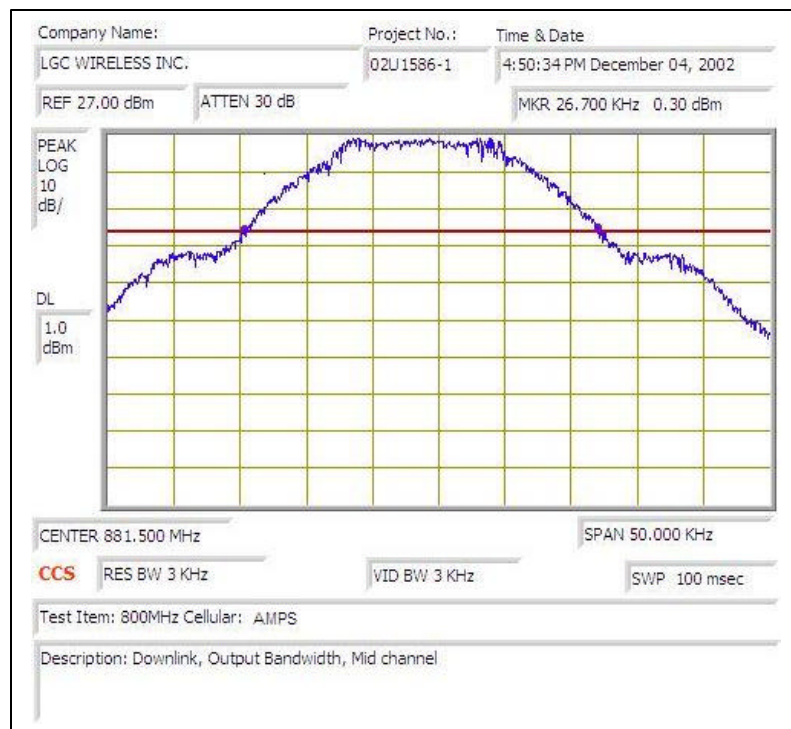


Plot # 8

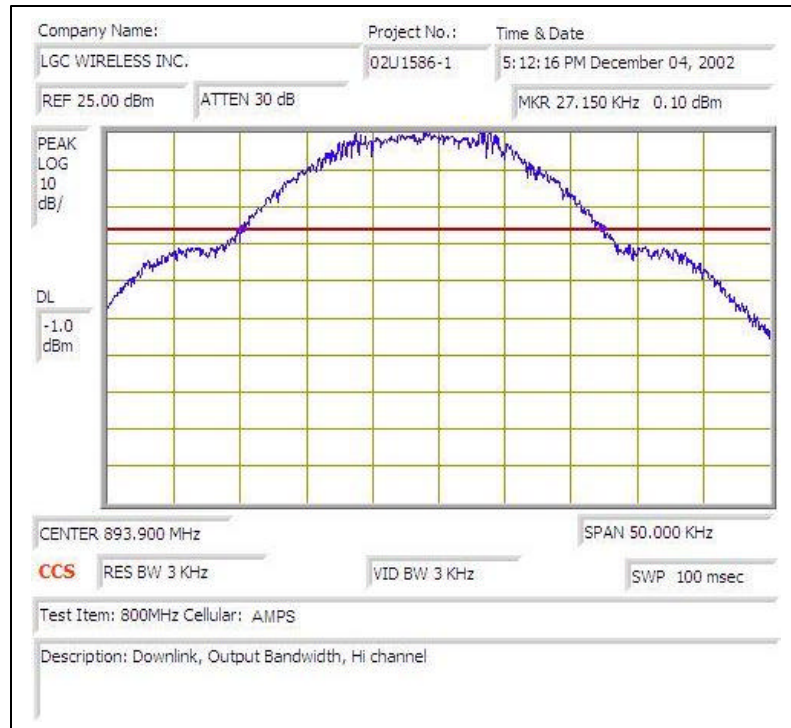


Plot # 9

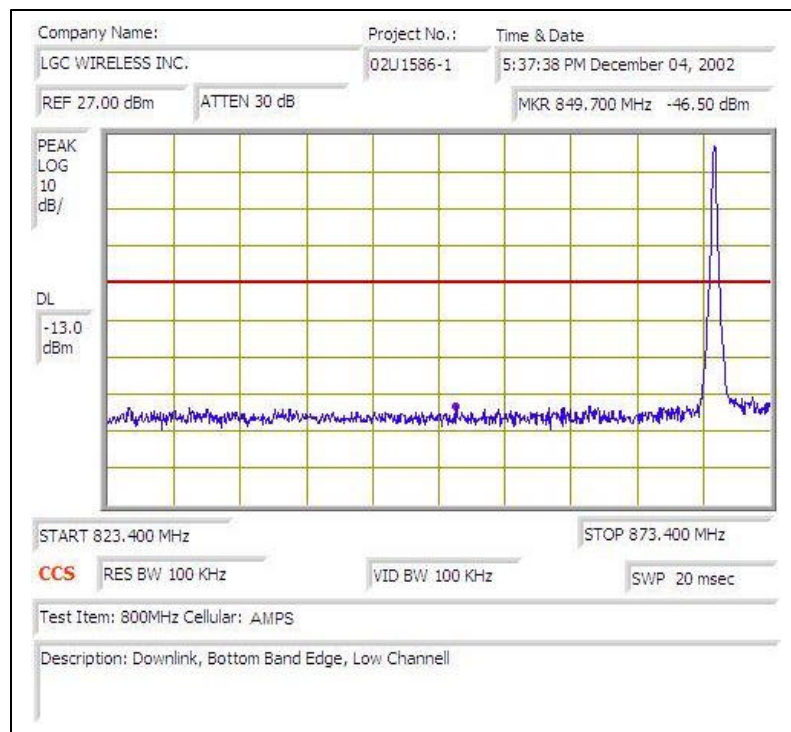


Plot # 10

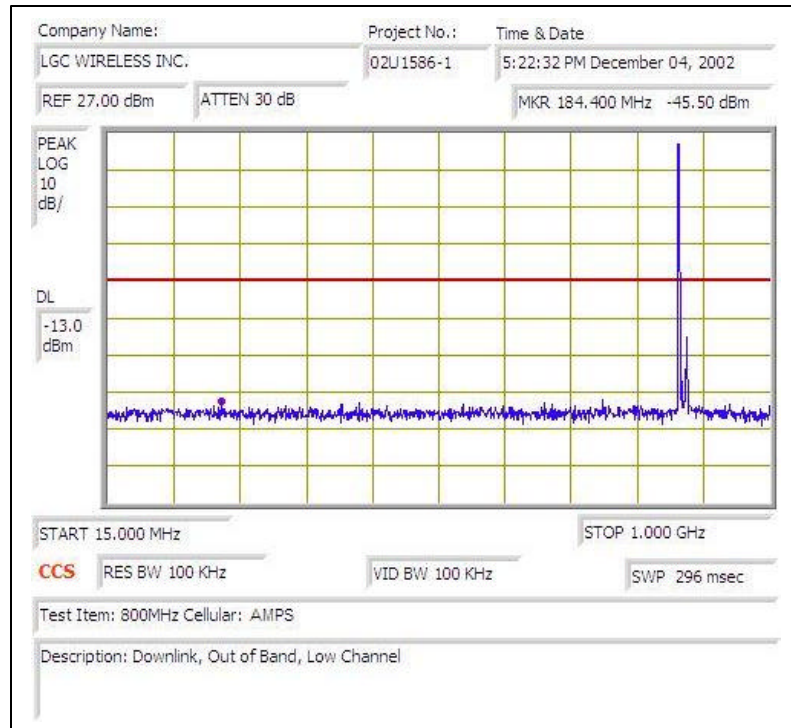

Plot # 11

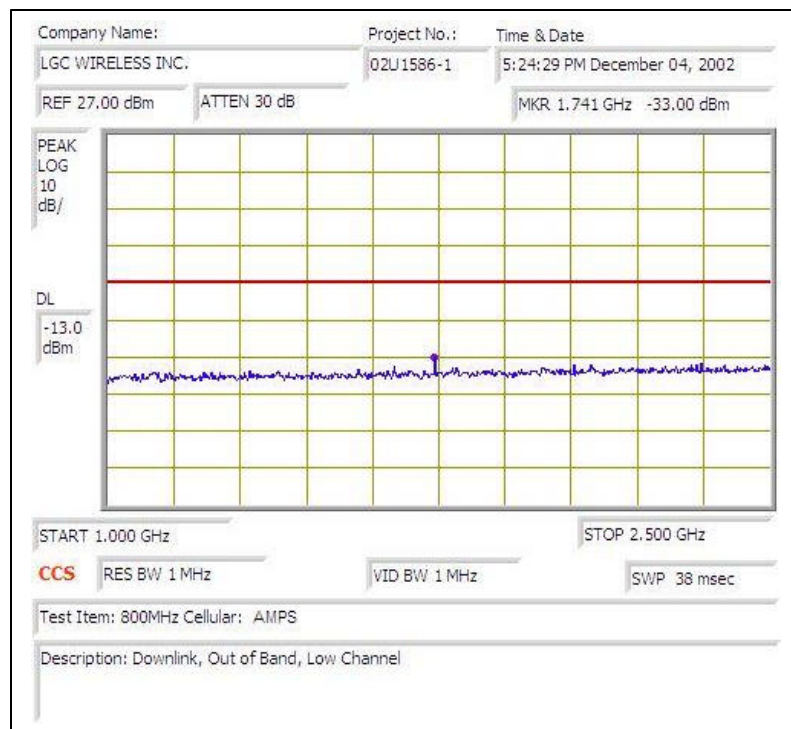


Plot # 12

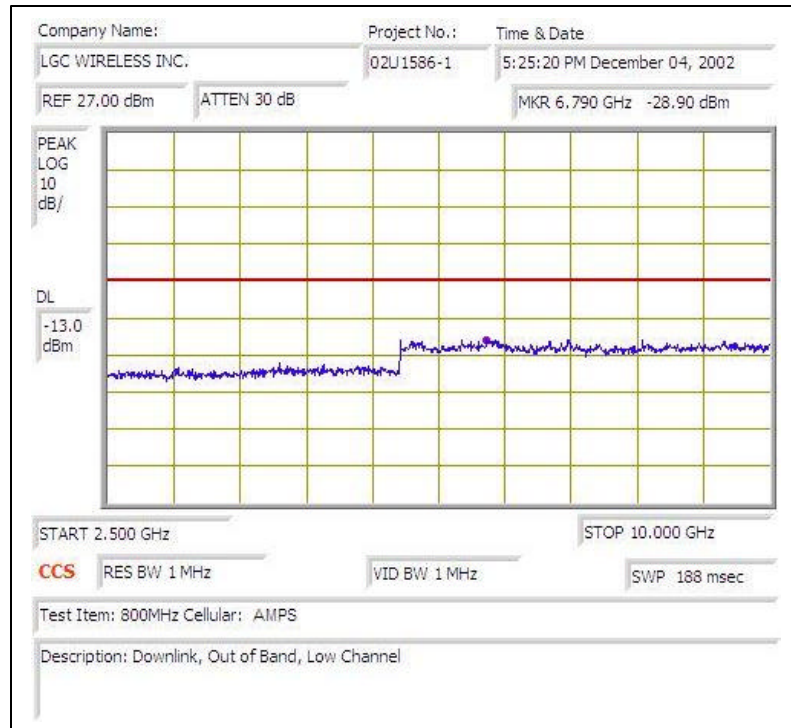


Plot # 13




Plot # 14

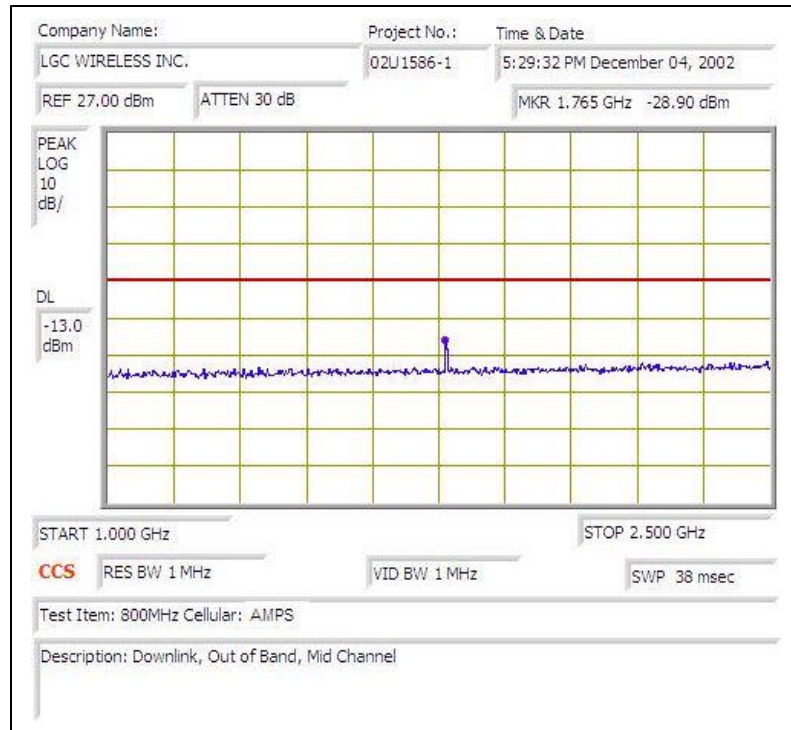


Plot # 15

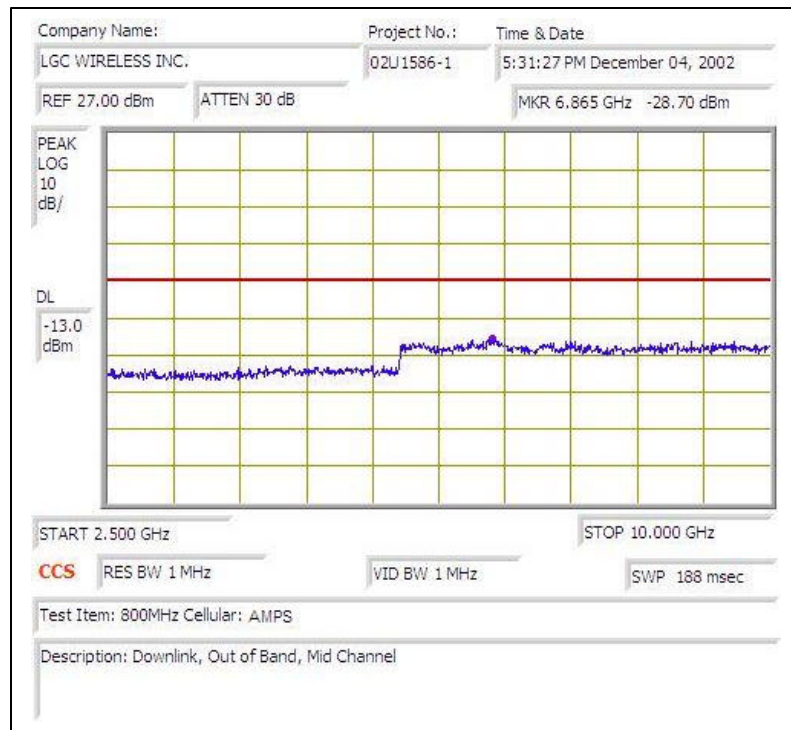

Plot # 16

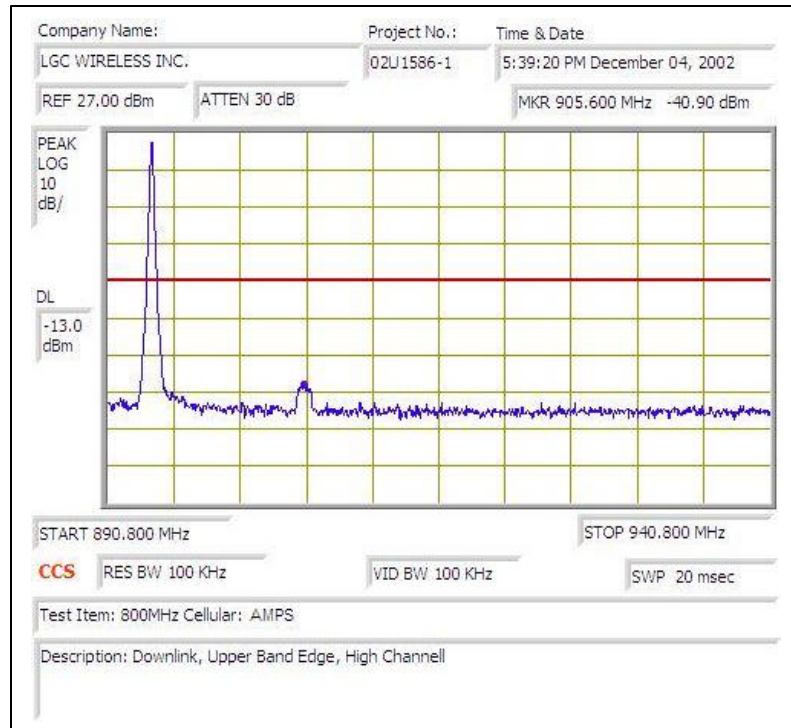


Plot # 17

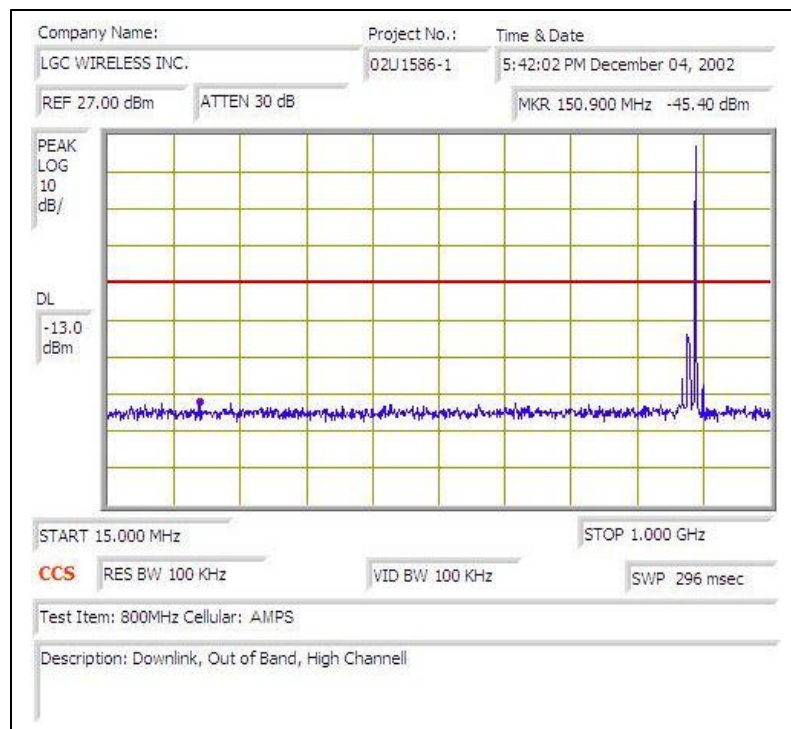



Plot # 18

Plot # 19

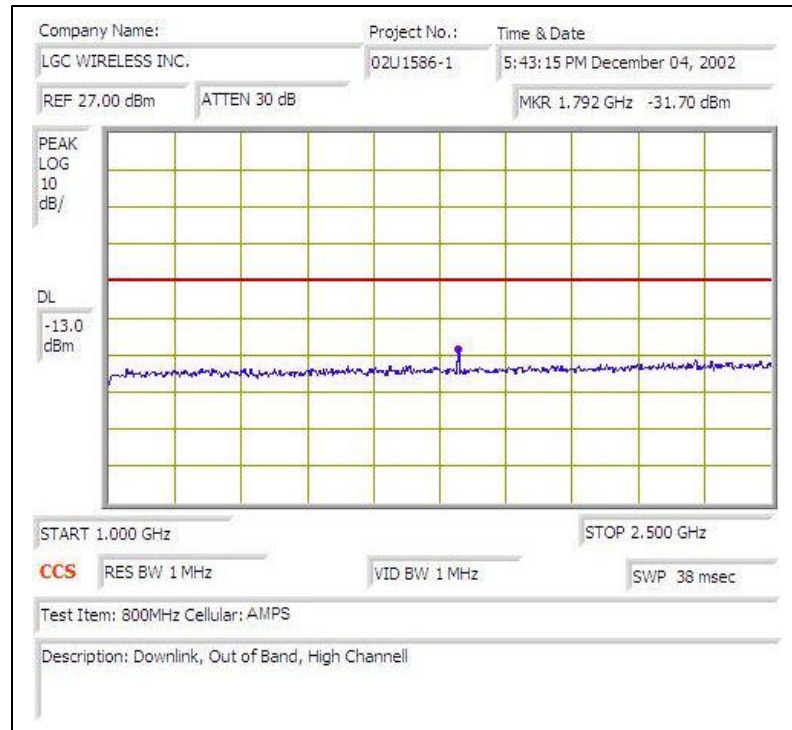


Plot # 20

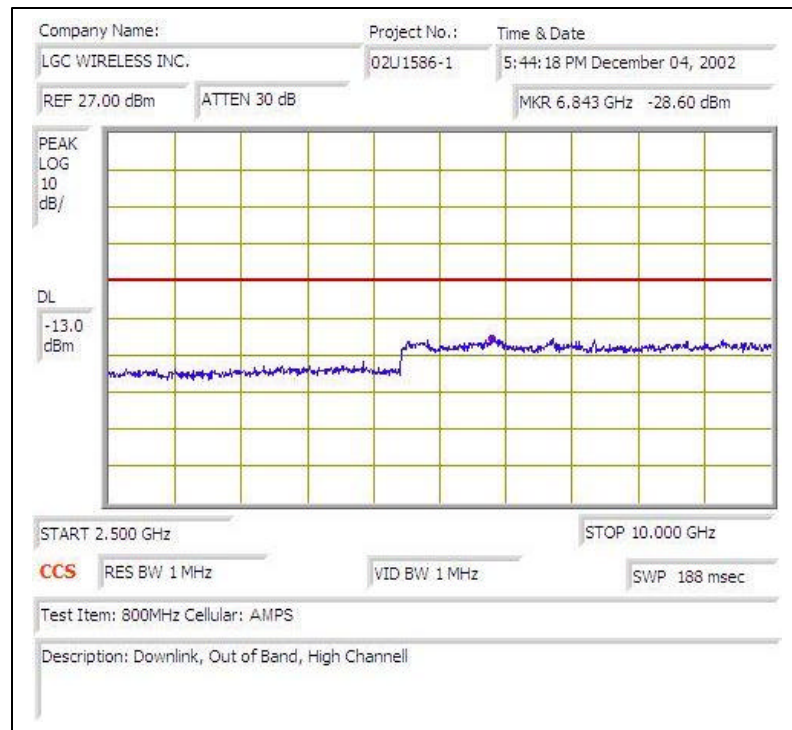

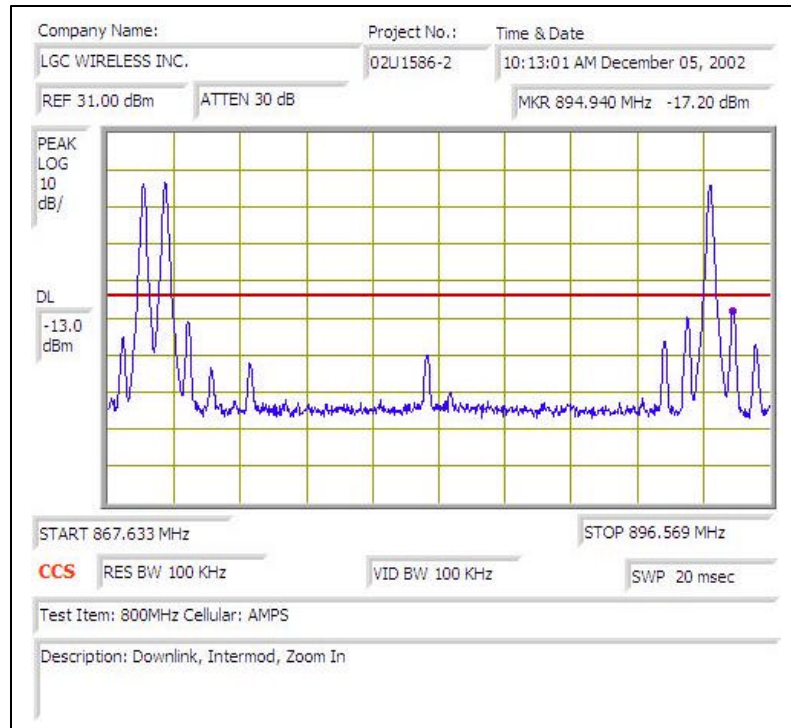


Plot # 21

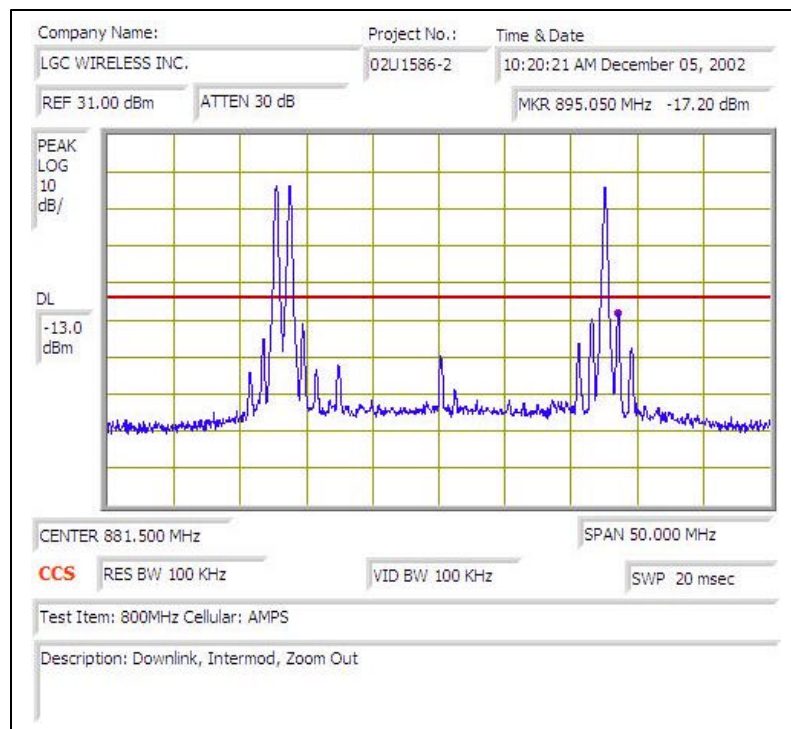


Plot # 22



Plot # 23

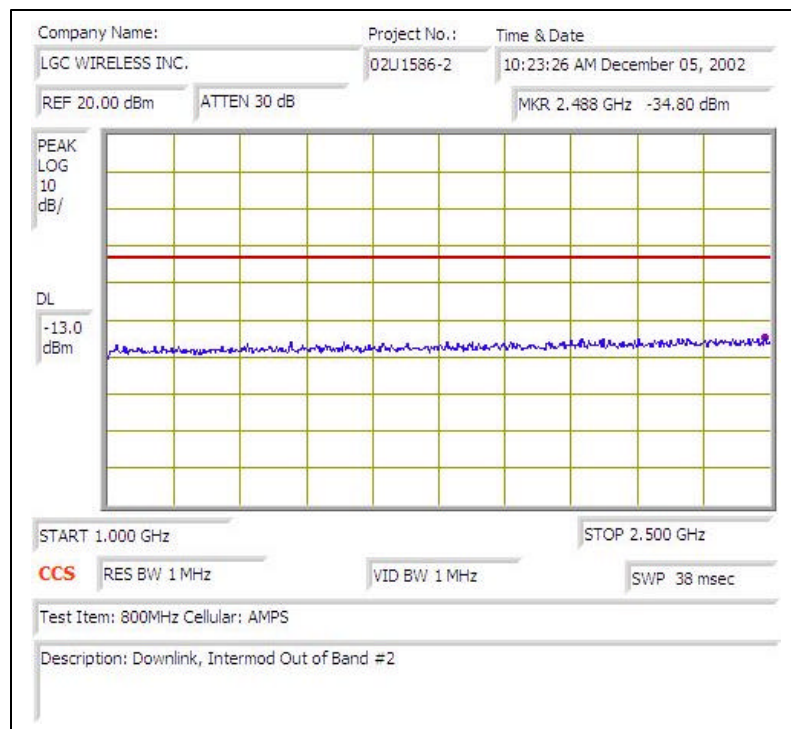

Plot # 24

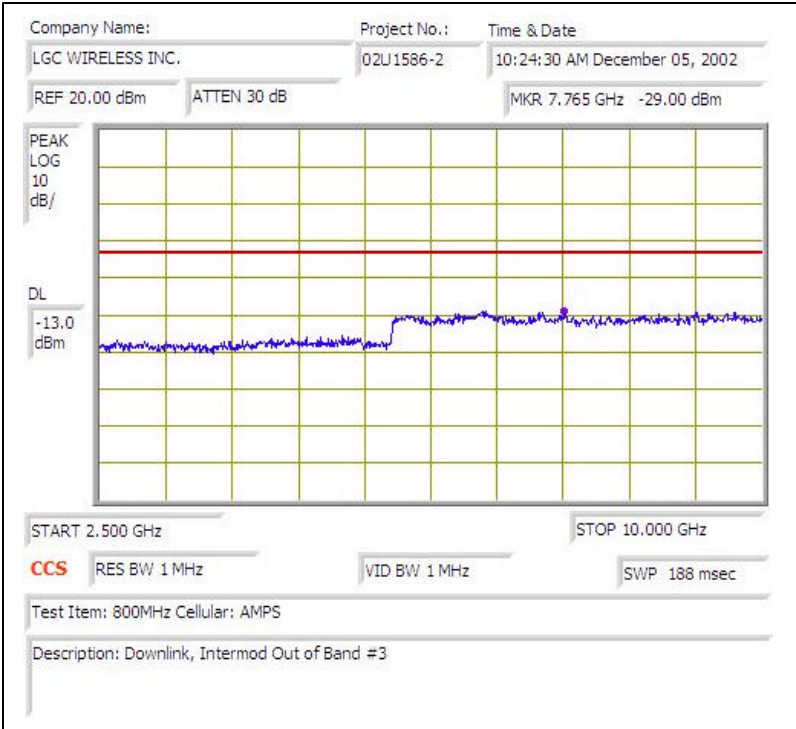

Plot # 25