



800MHz CELLULAR (AMPS)- UPLINK

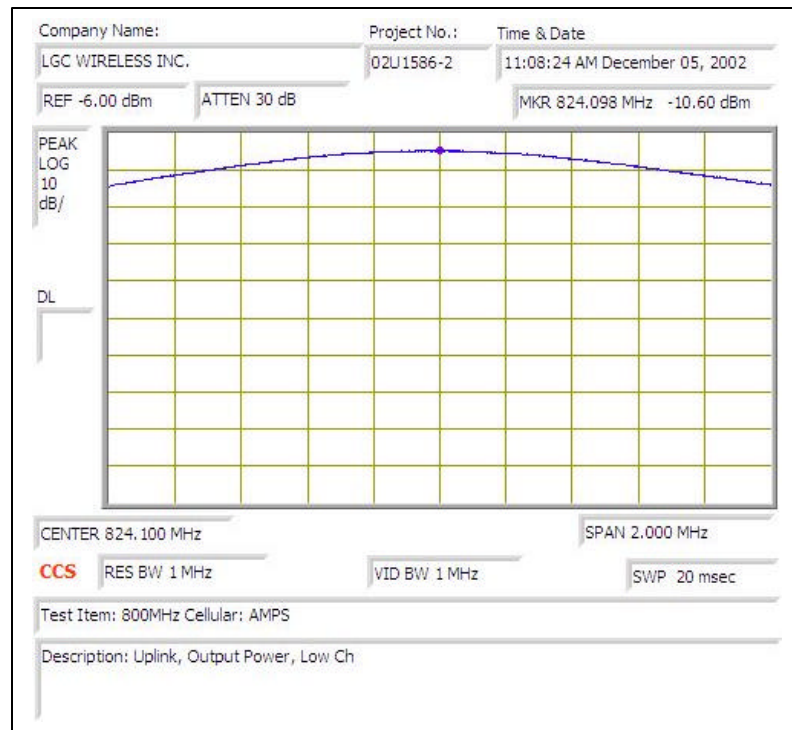


Plot # 1

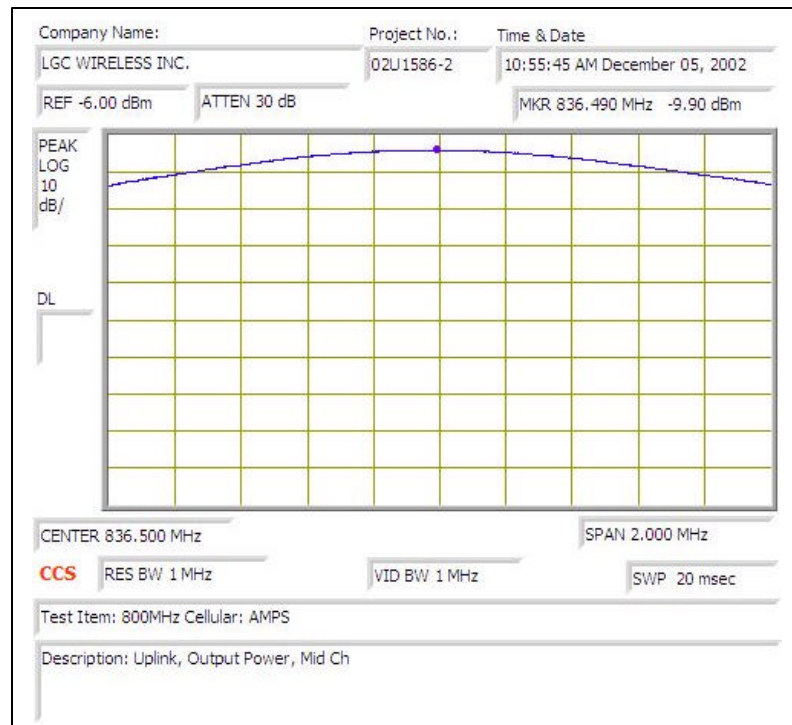



Plot # 2

Plot # 3

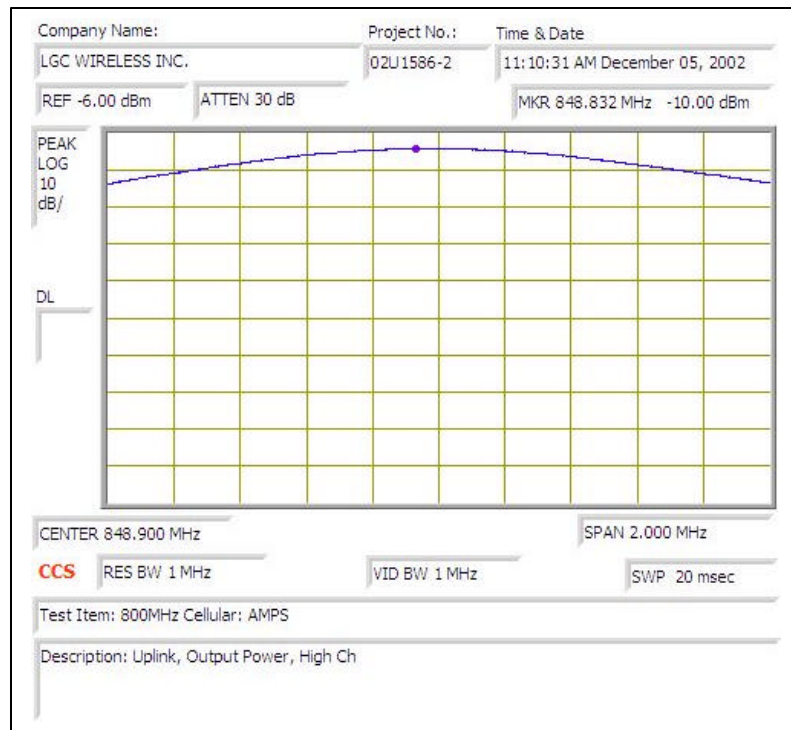


Plot # 4

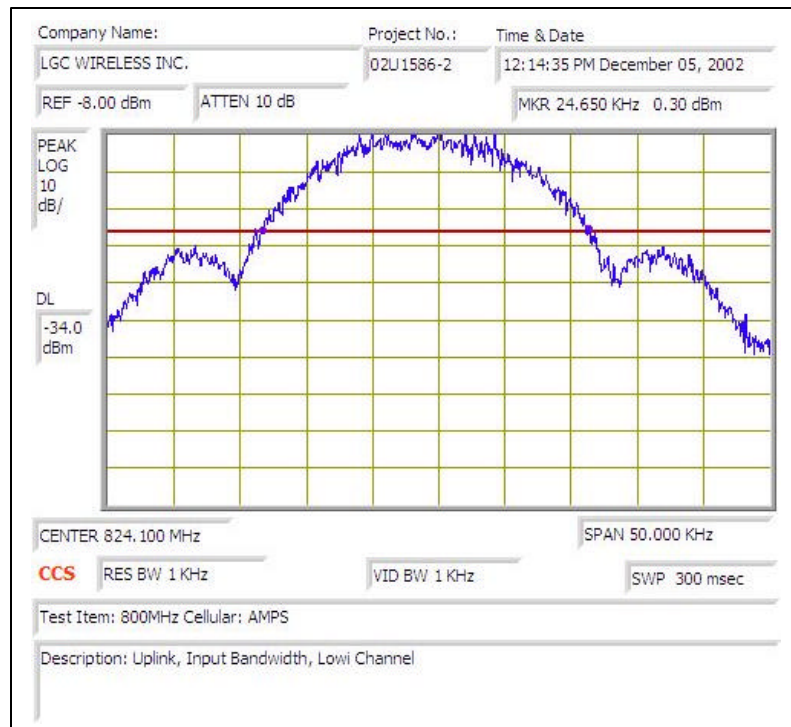


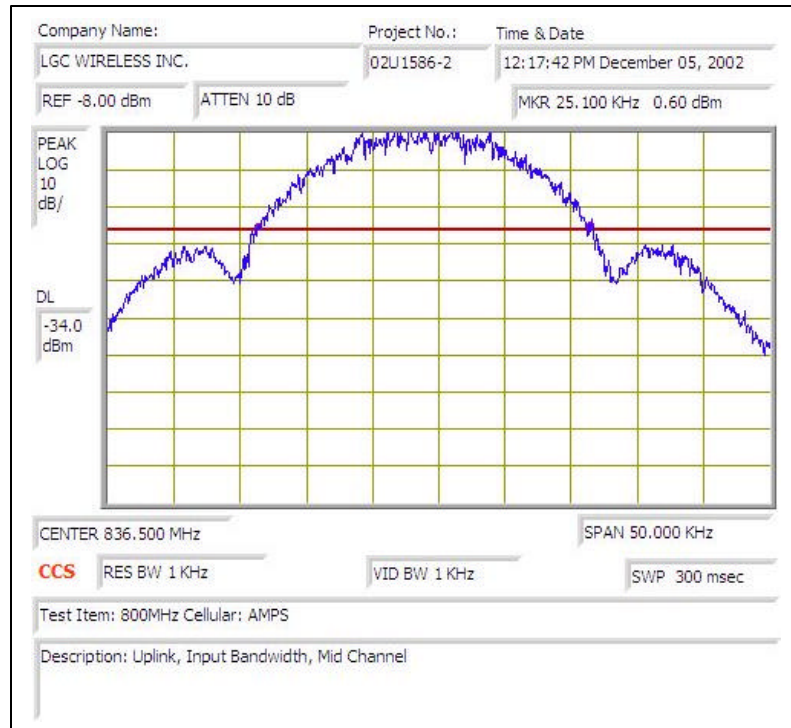


Plot # 5

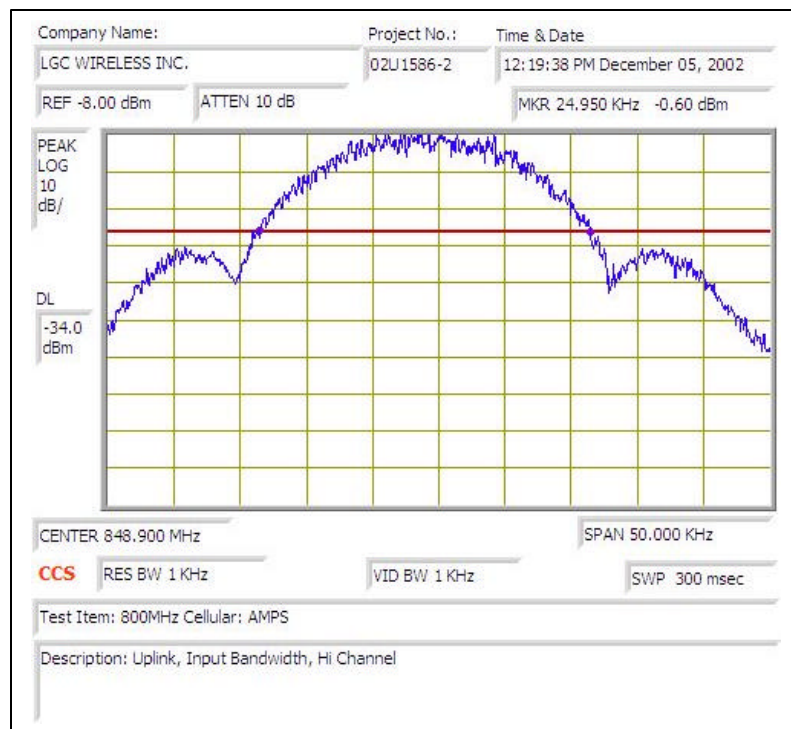

Plot # 6

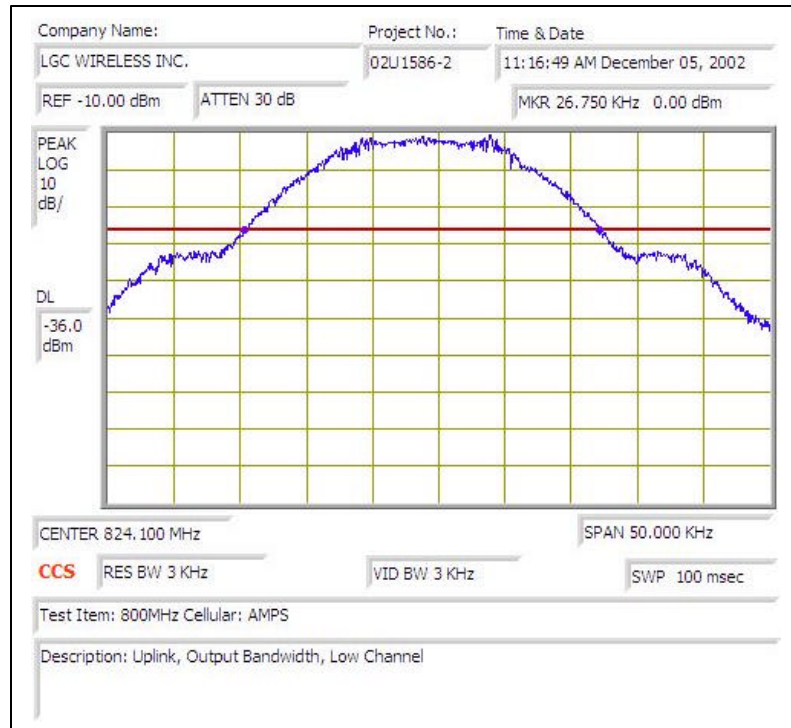


Plot # 7

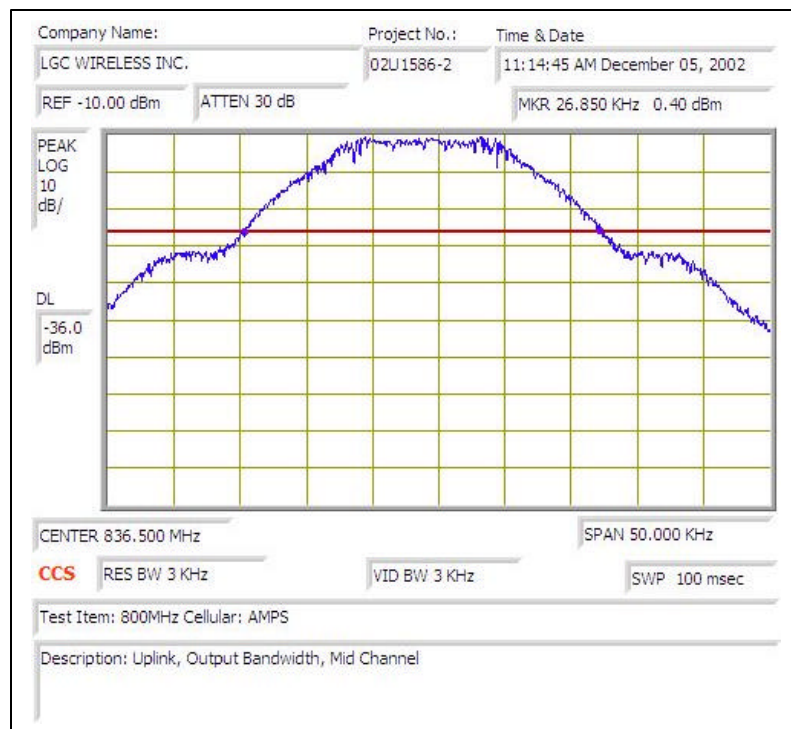


Plot # 8

Plot # 9

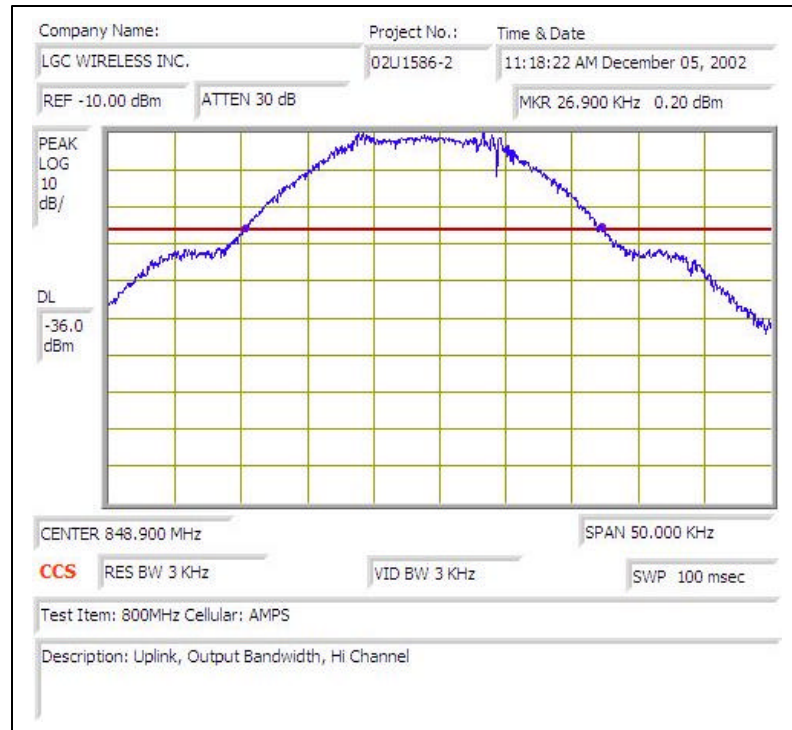


Plot # 10

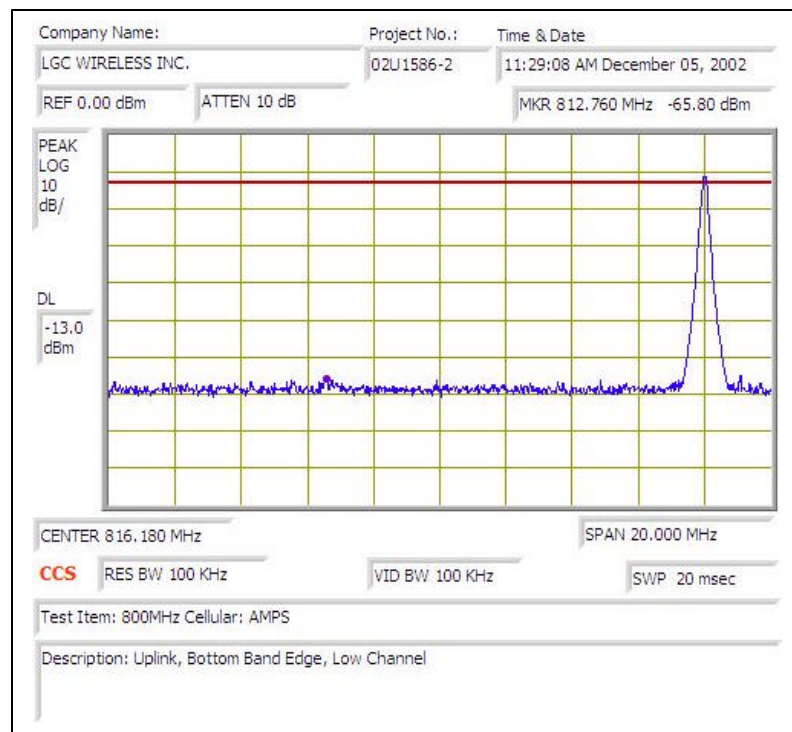




Plot # 11

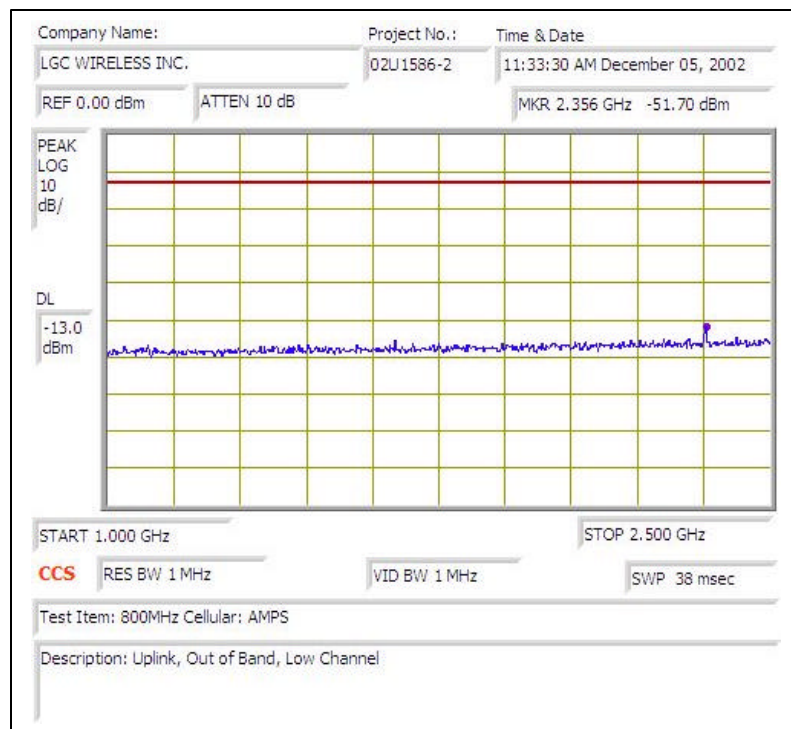


Plot # 12


Plot # 13

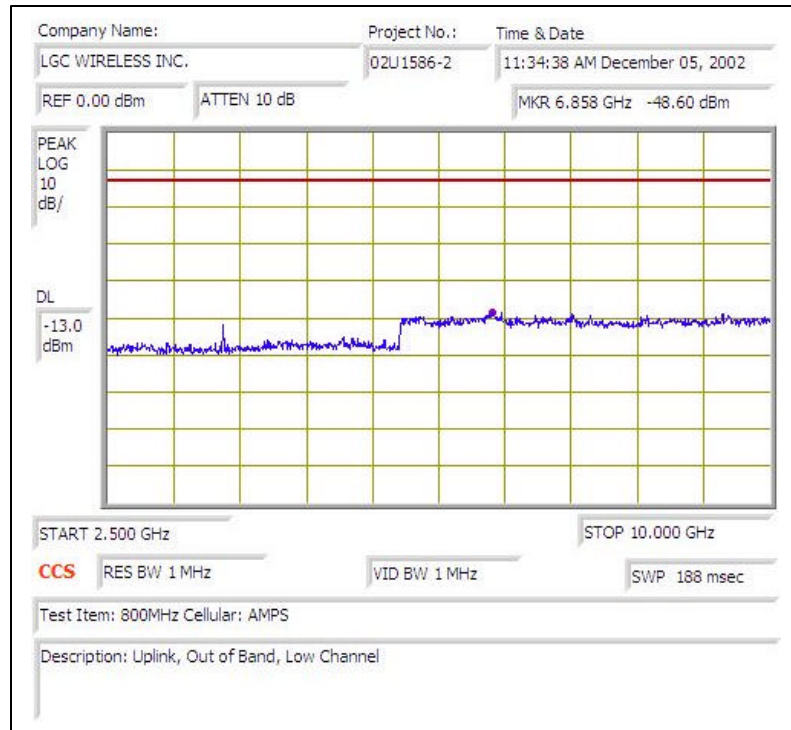


Plot # 14

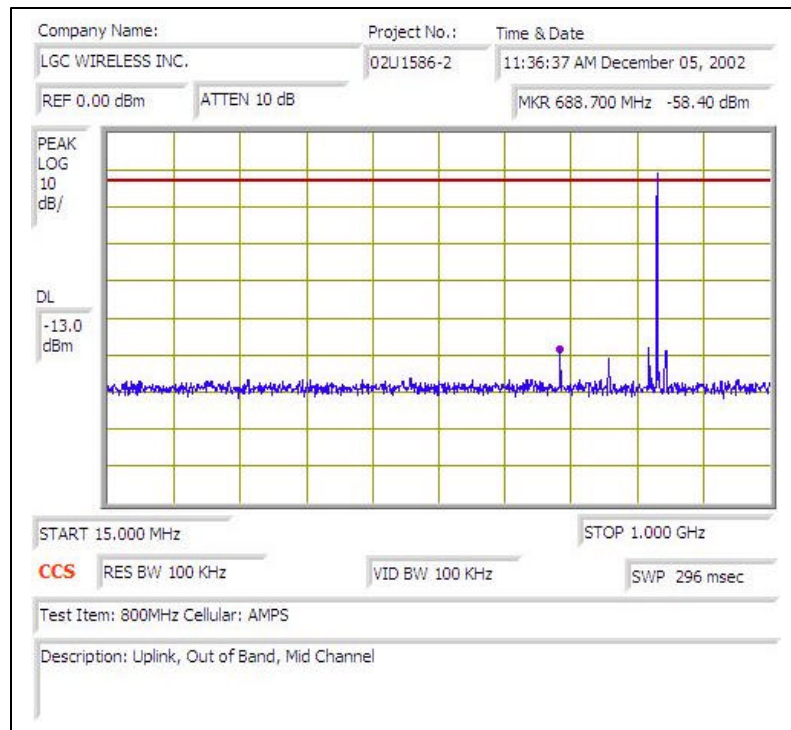


Plot # 15

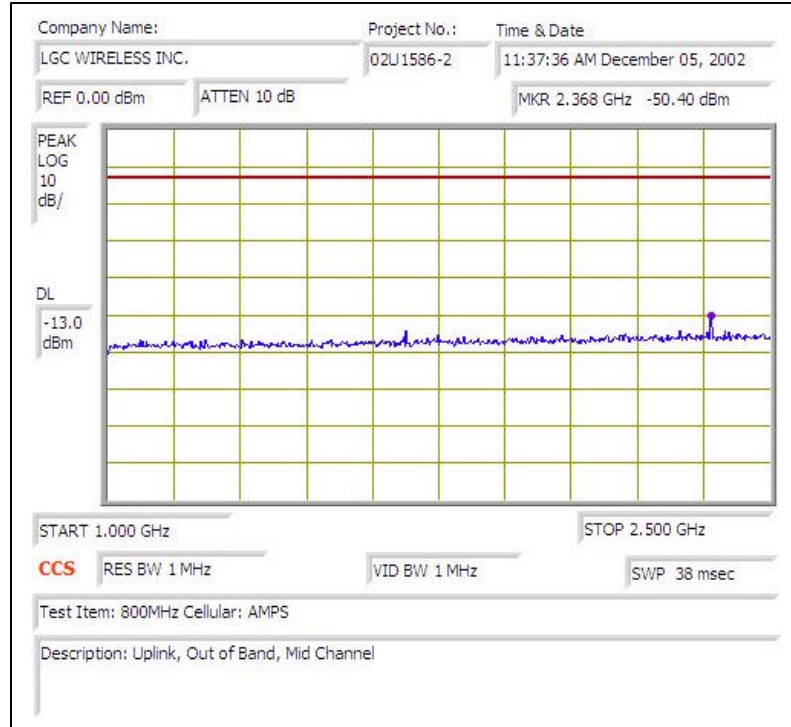


Plot # 16

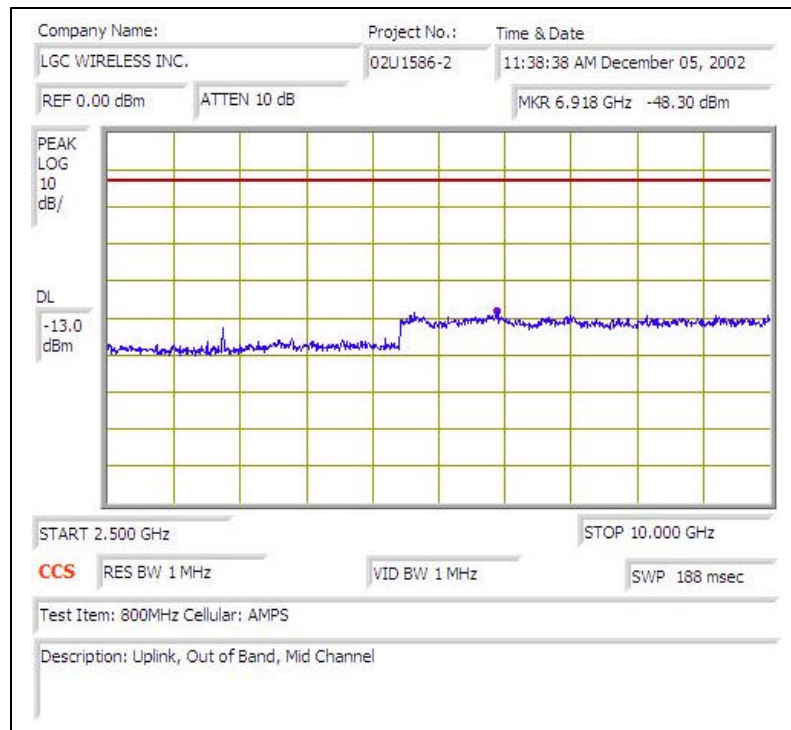

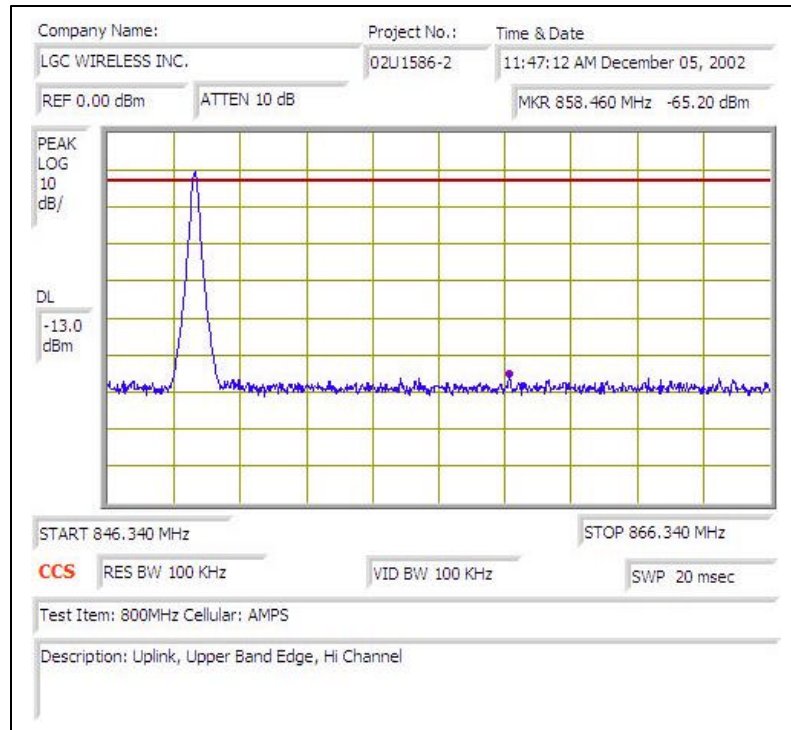


Plot # 17

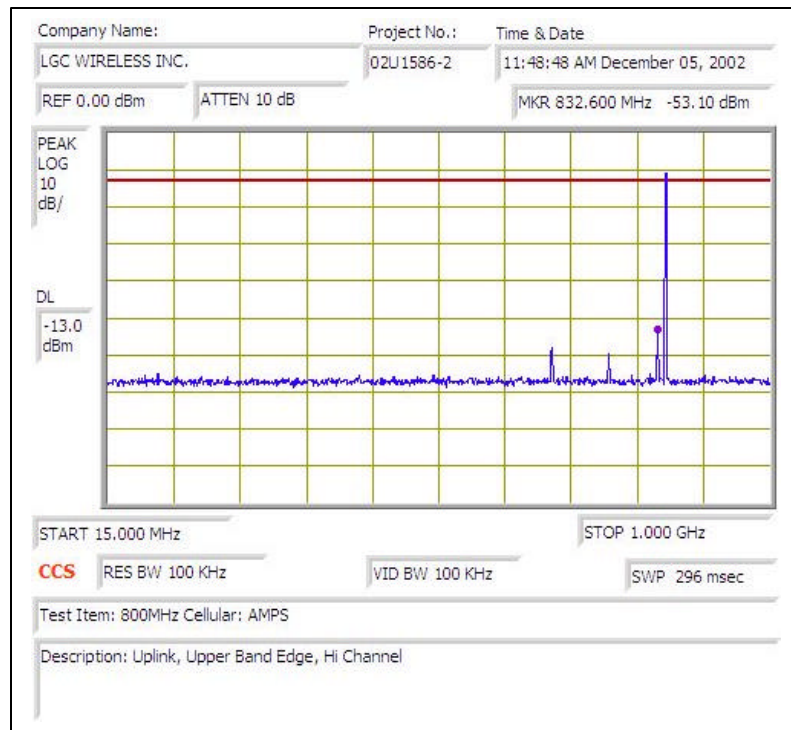


Plot # 18


Plot # 19

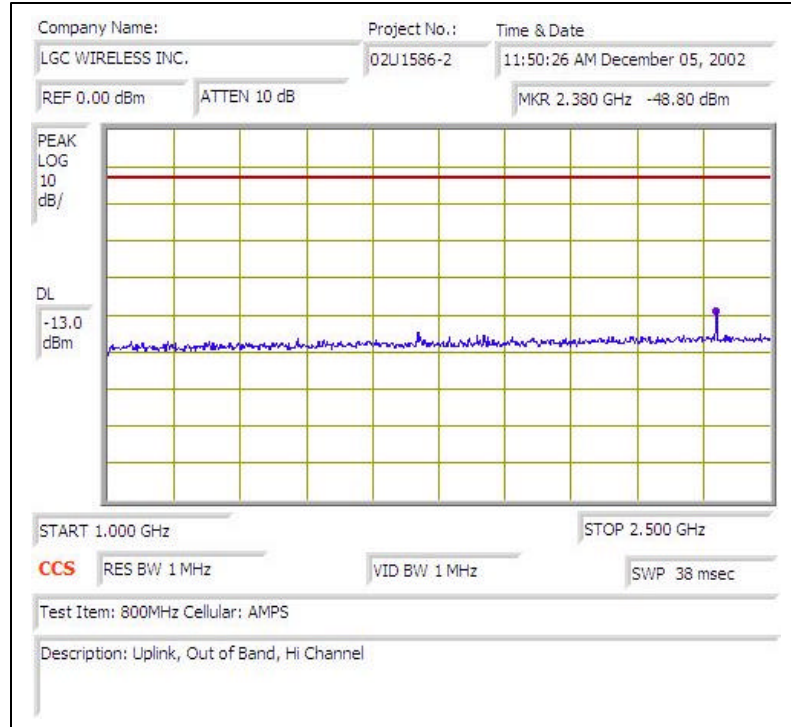


Plot # 20

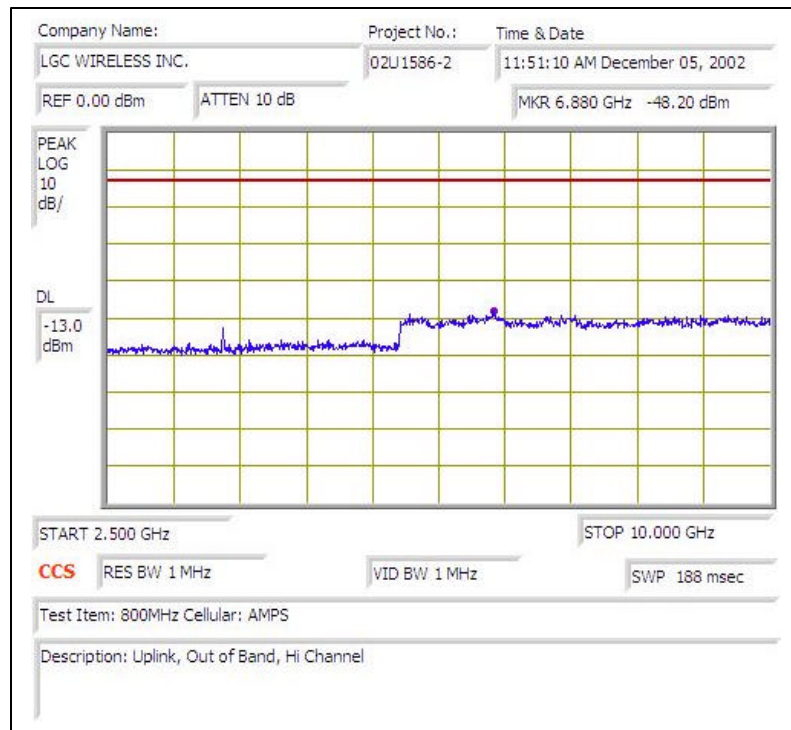


Plot # 21

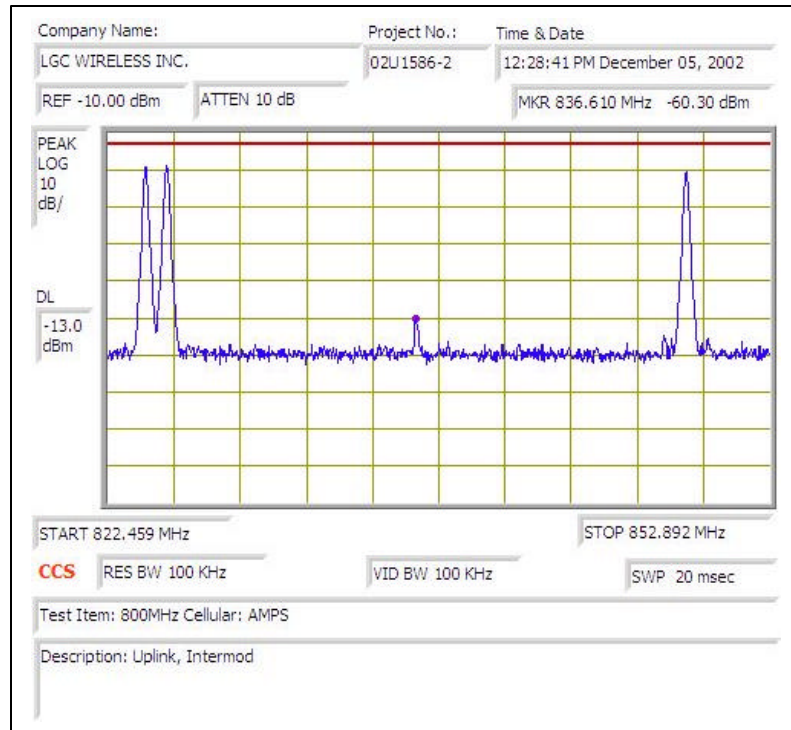


Plot # 22

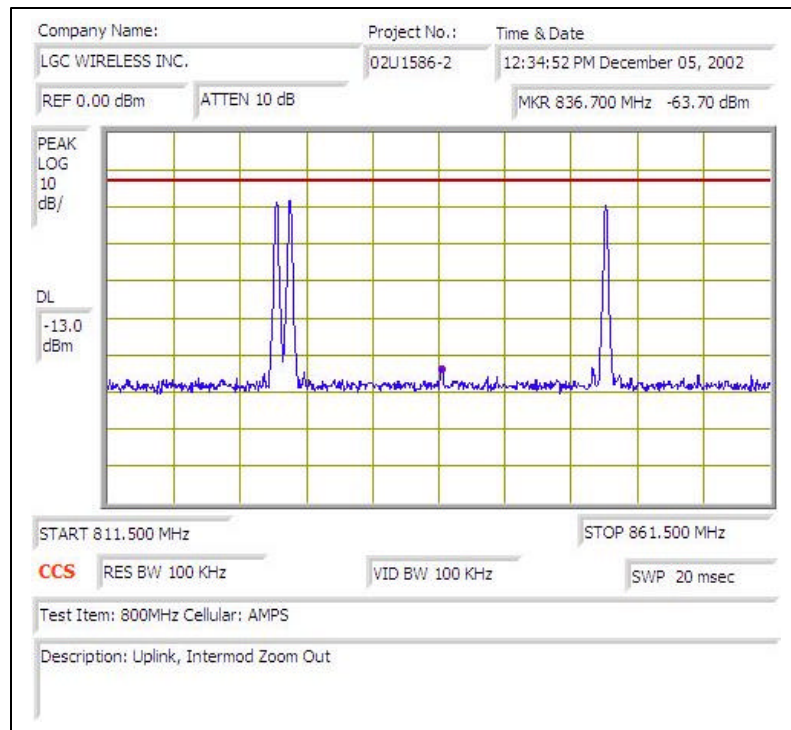

Plot # 23

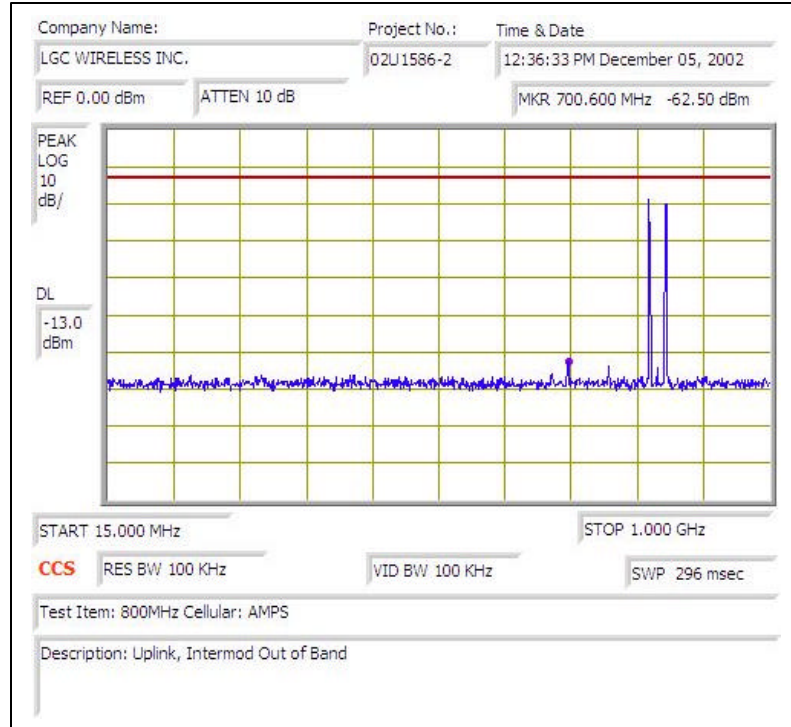

Plot # 24

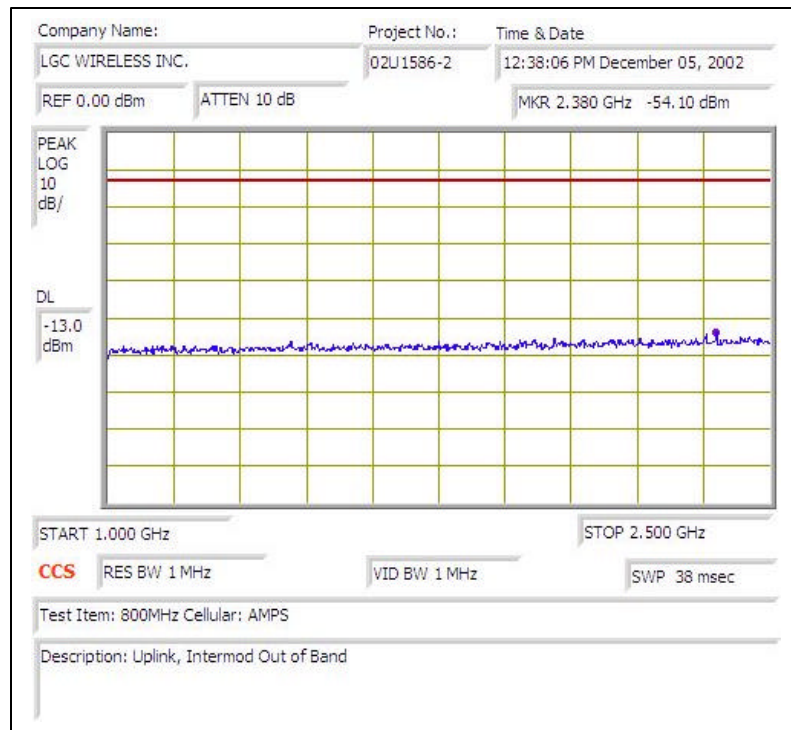



Plot # 25