




900MHz EGSM (AMPS)- DOWNLINK

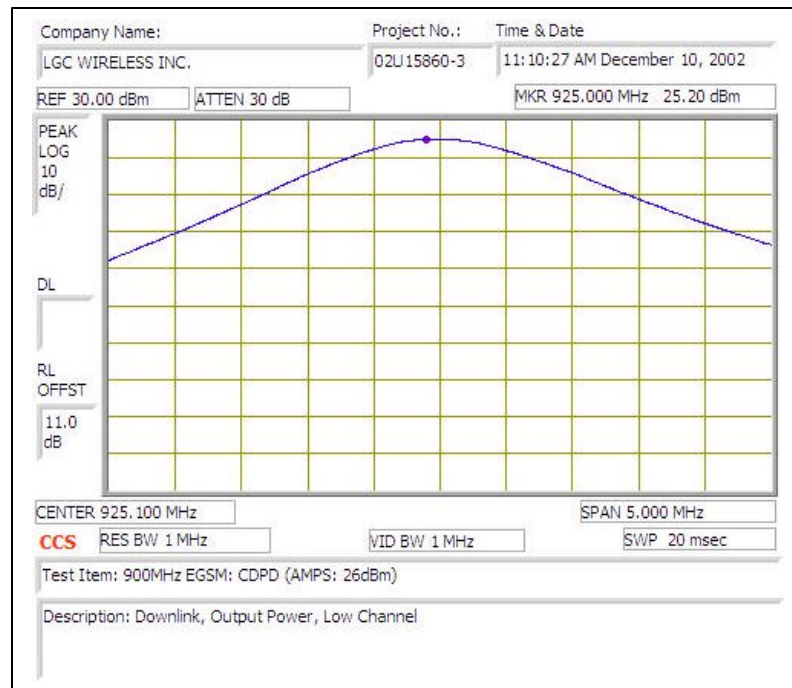


Plot # 1

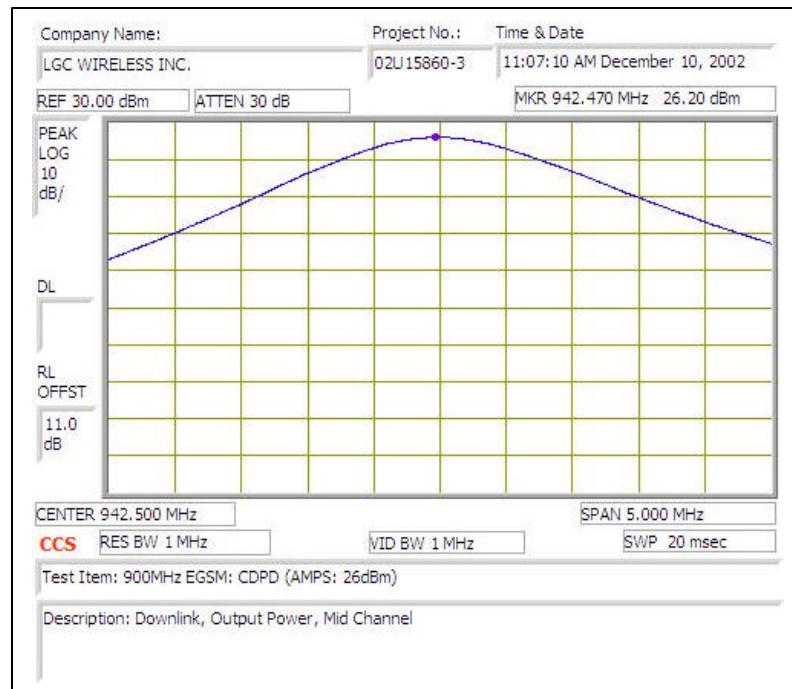

Plot # 2

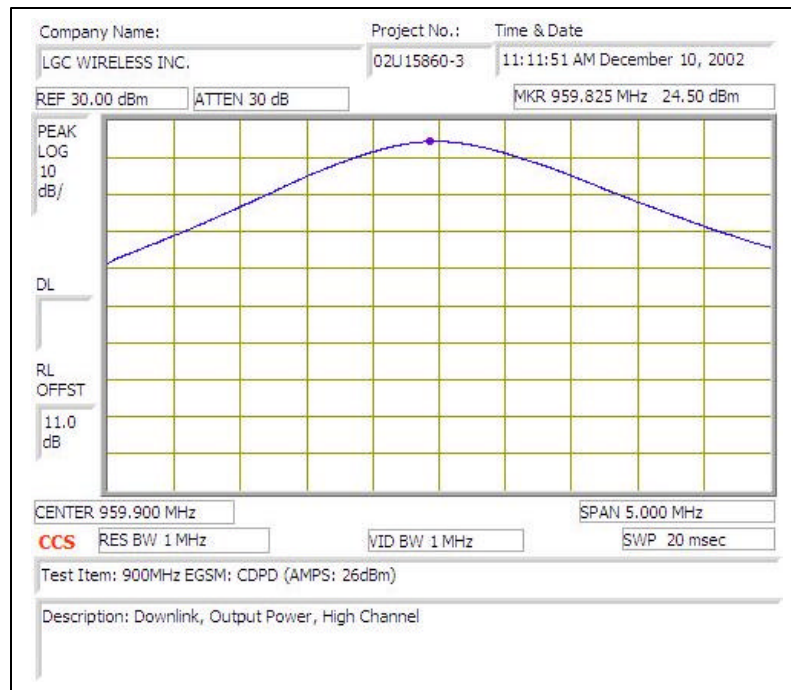


Plot # 3

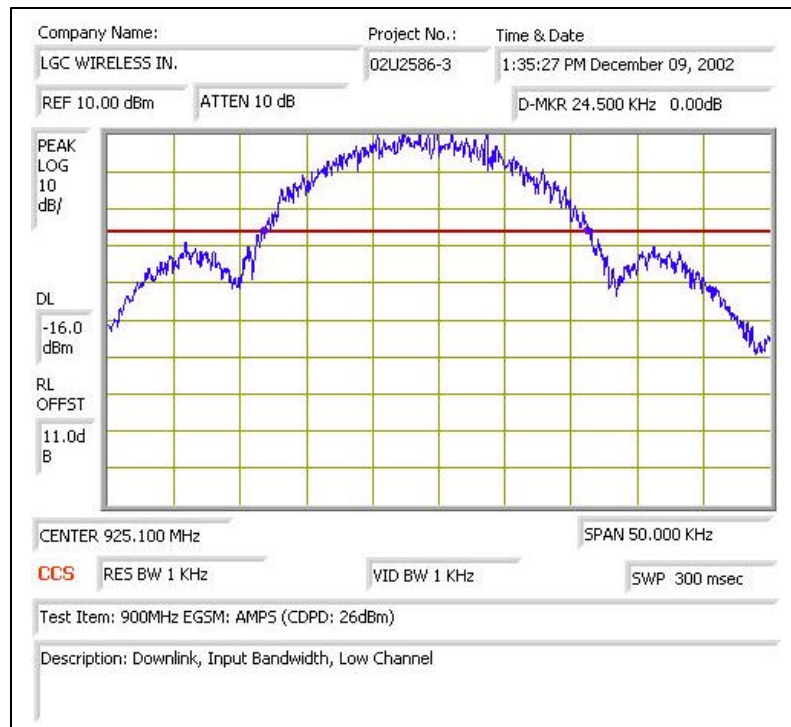


Plot # 4


Plot # 5

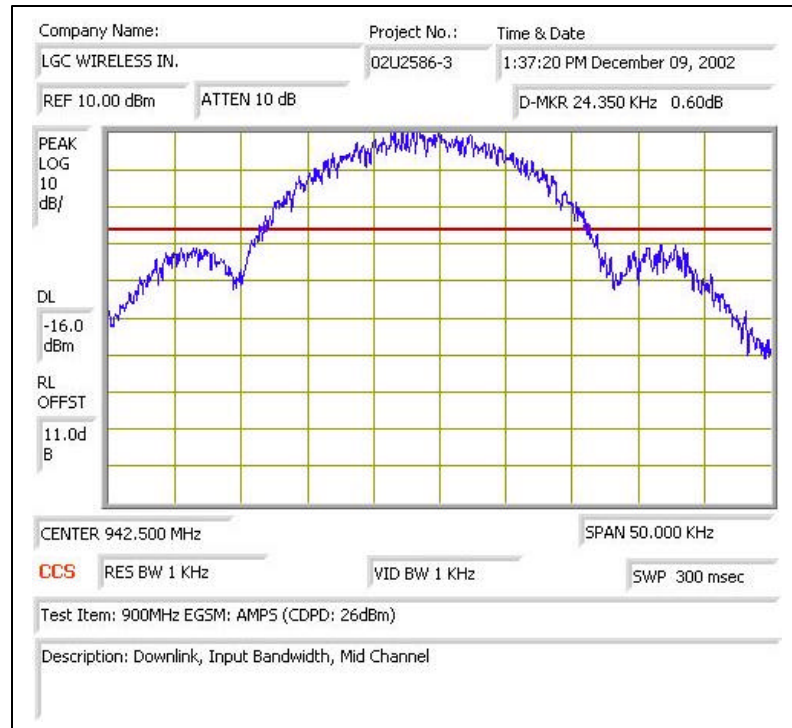


Plot # 6

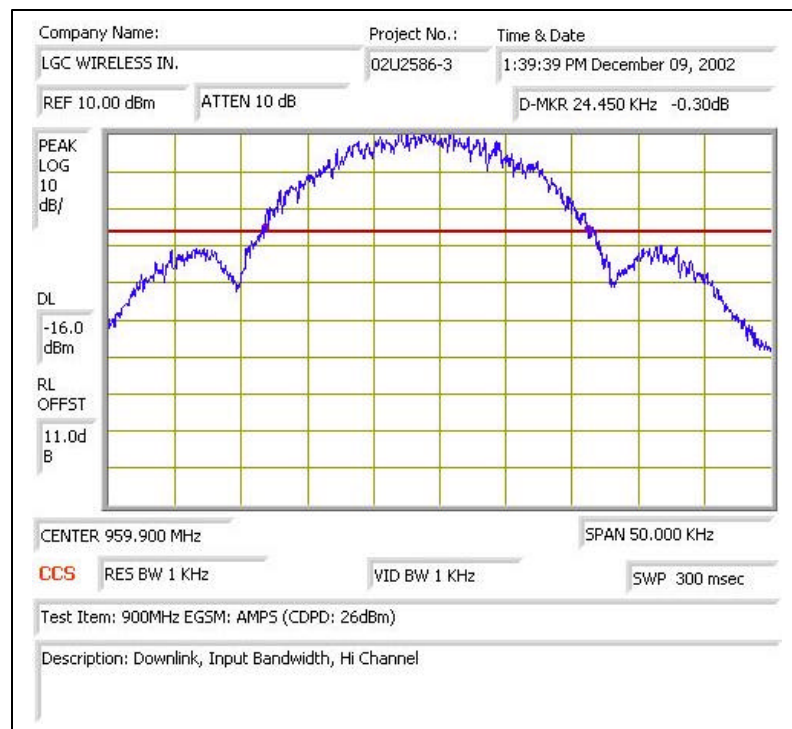


Plot # 7

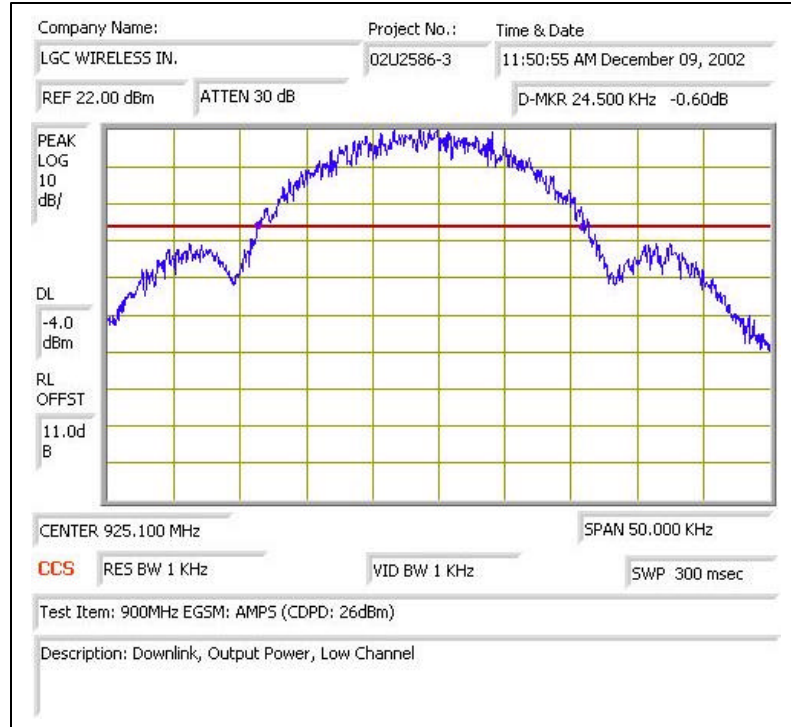


Plot # 8

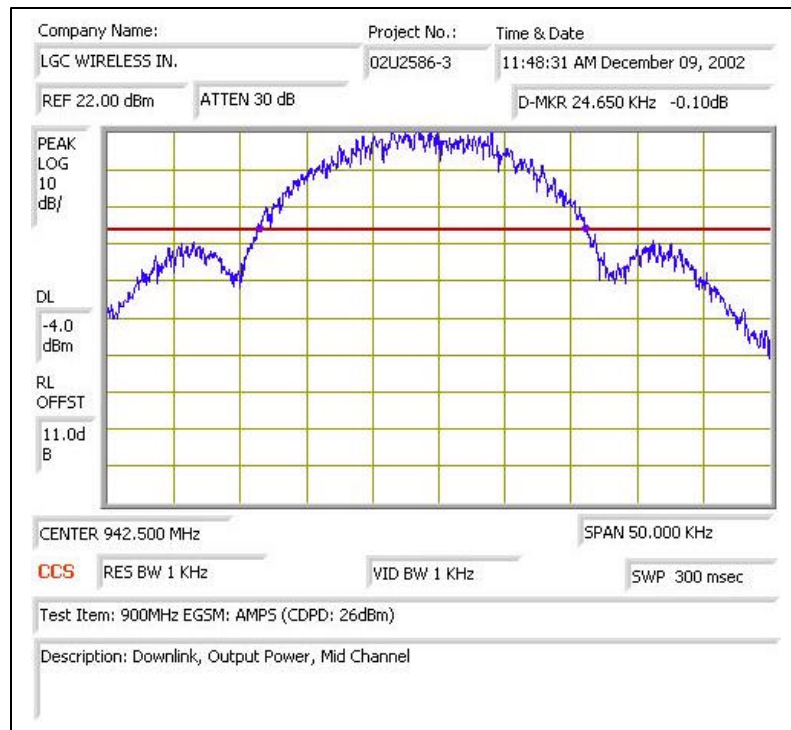


Plot # 9

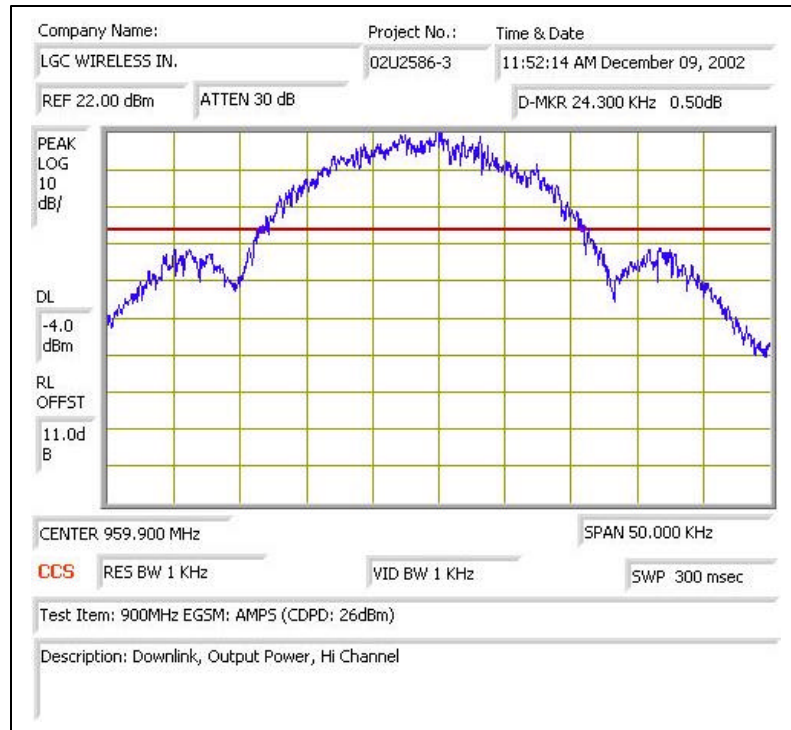


Plot # 10

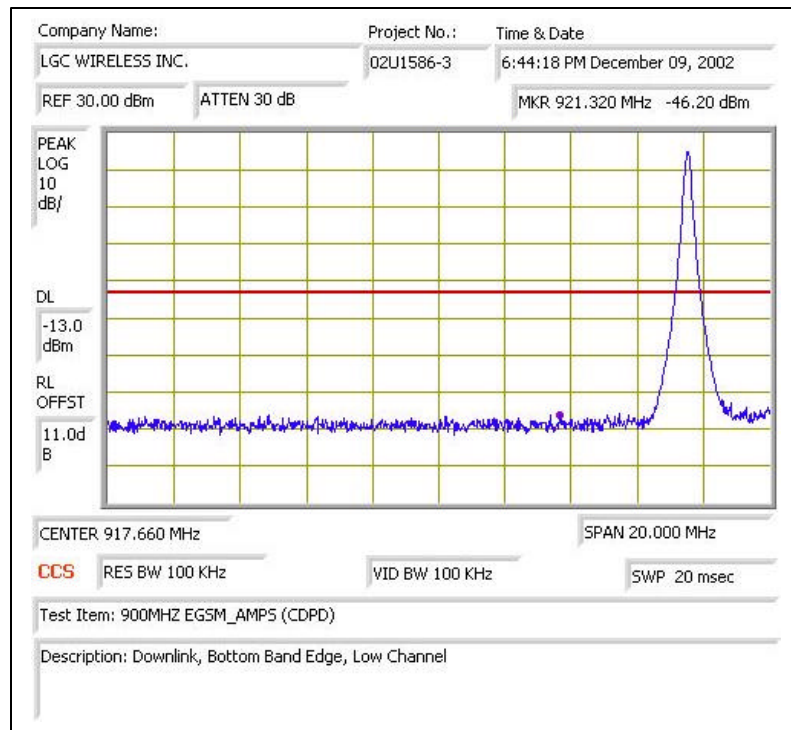


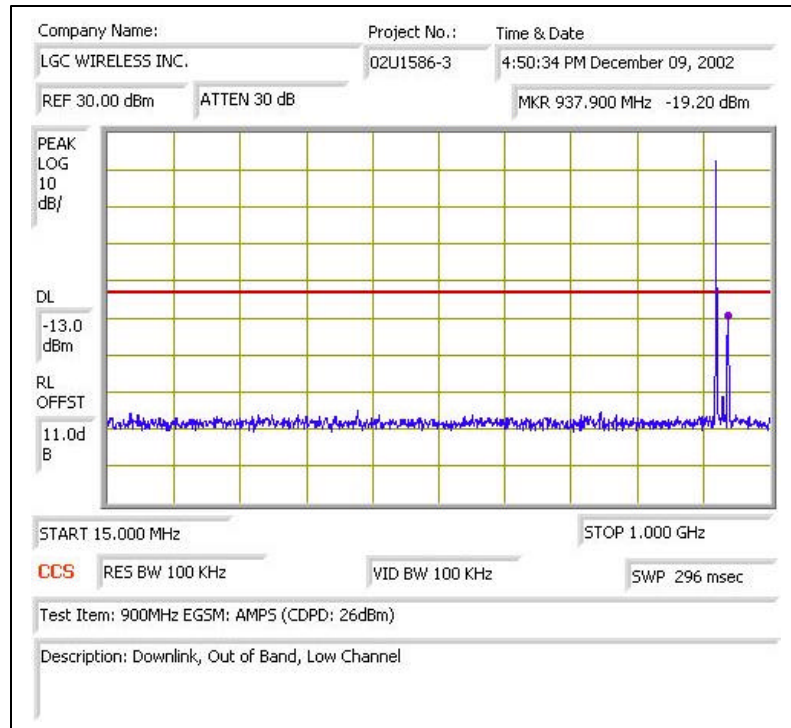


Plot # 11

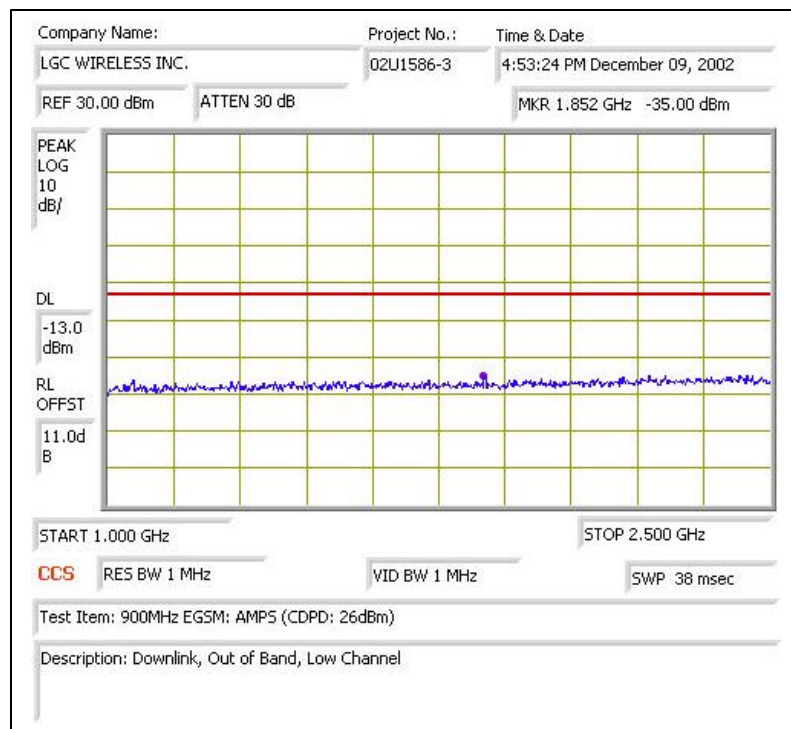

Plot # 12

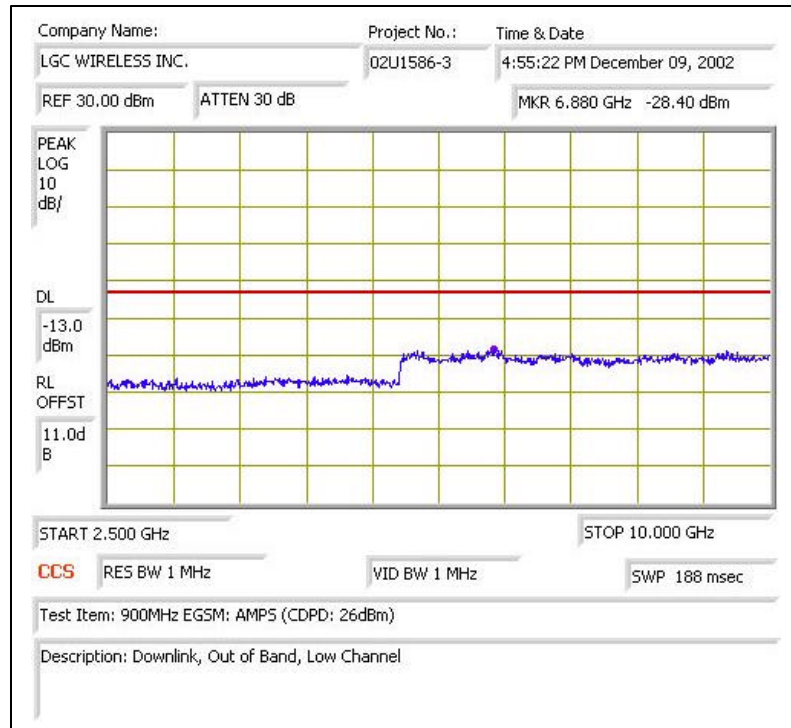


Plot # 13

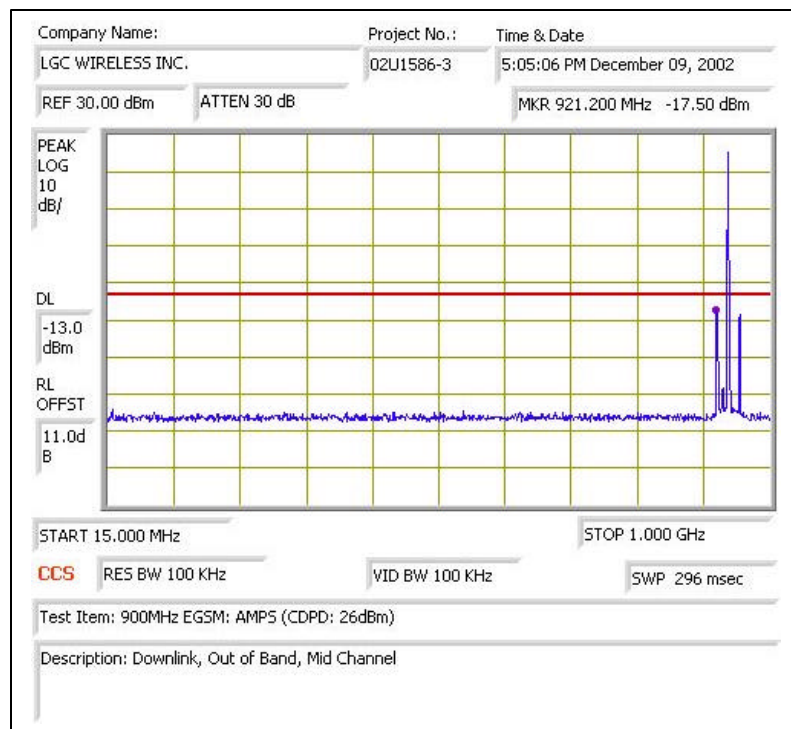


Plot # 14


Plot # 15

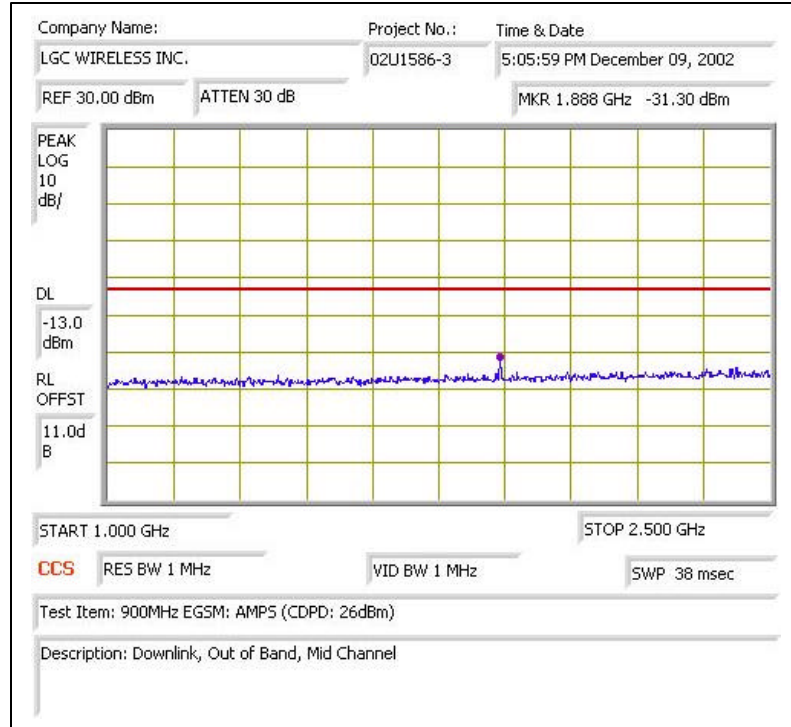


Plot # 16

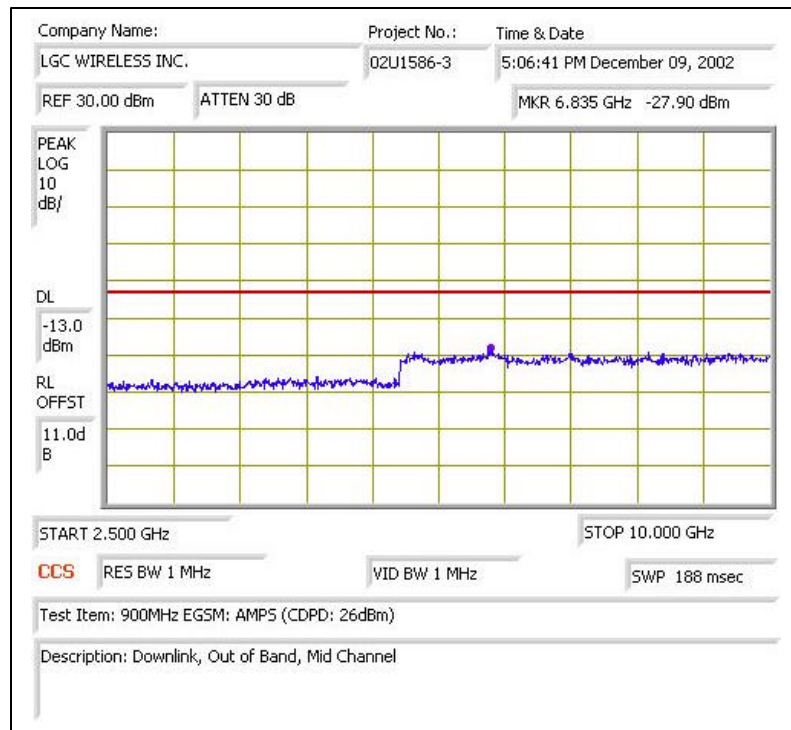


Plot # 17

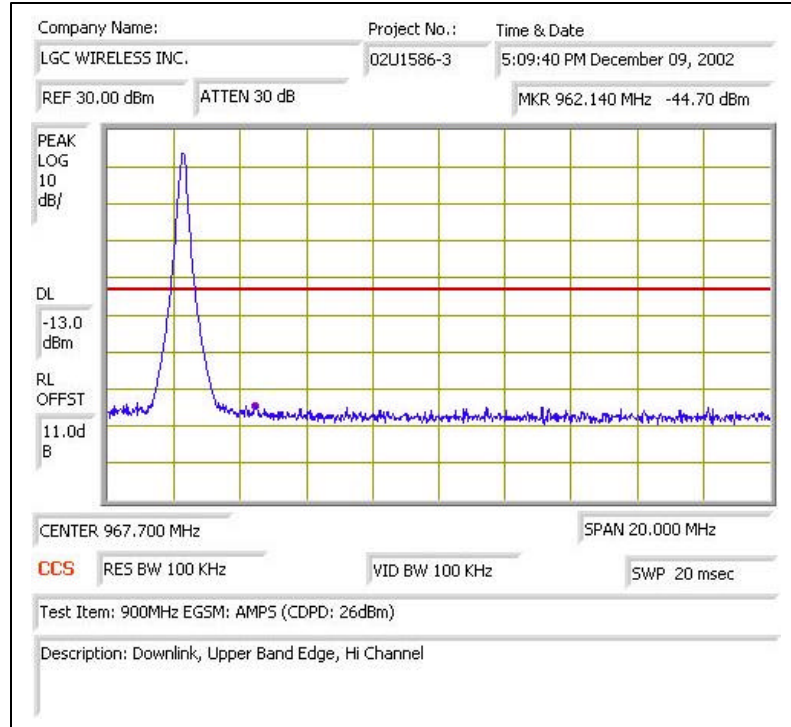


Plot # 18

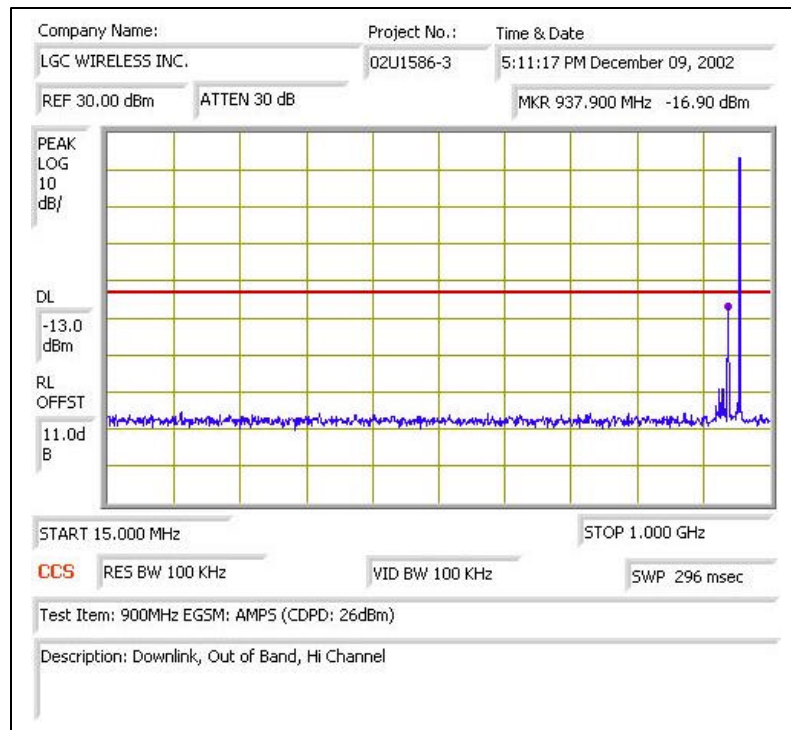


Plot # 19

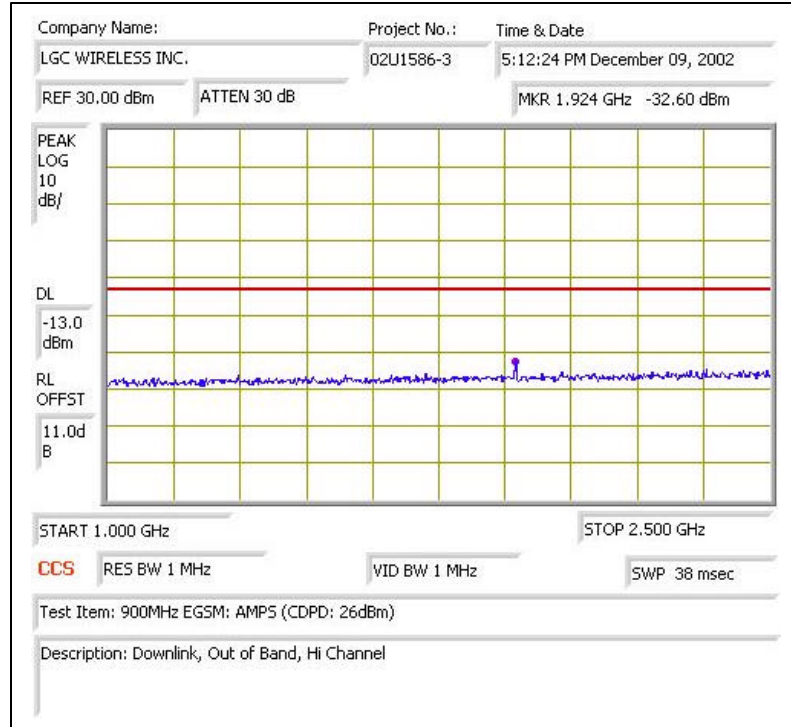


Plot # 20

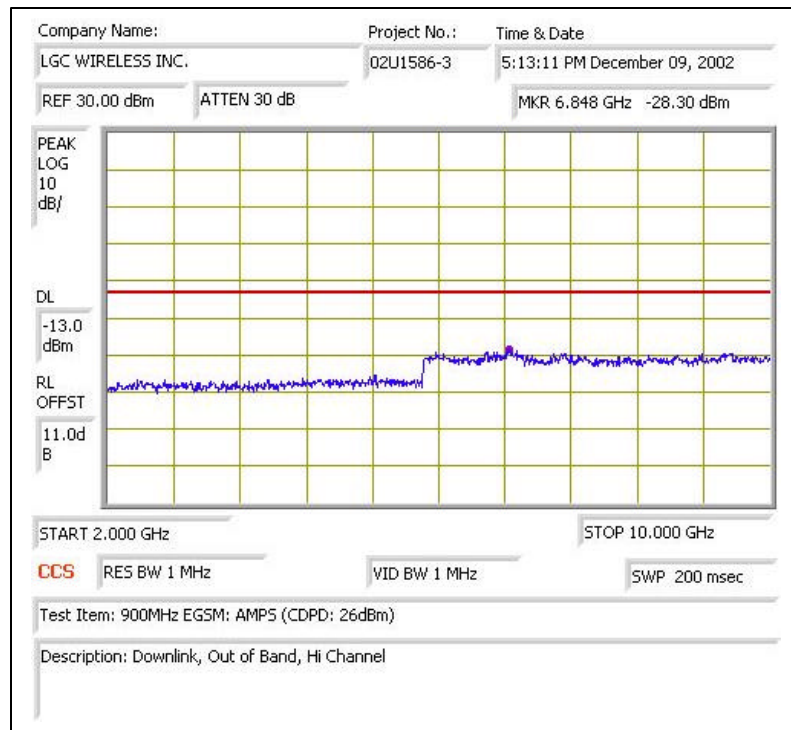


Plot # 21

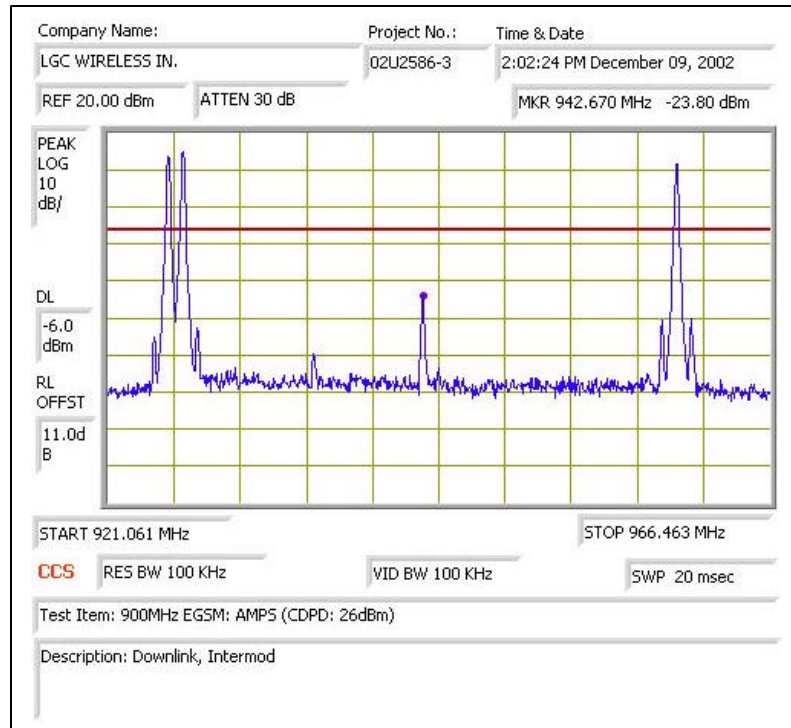


Plot # 22

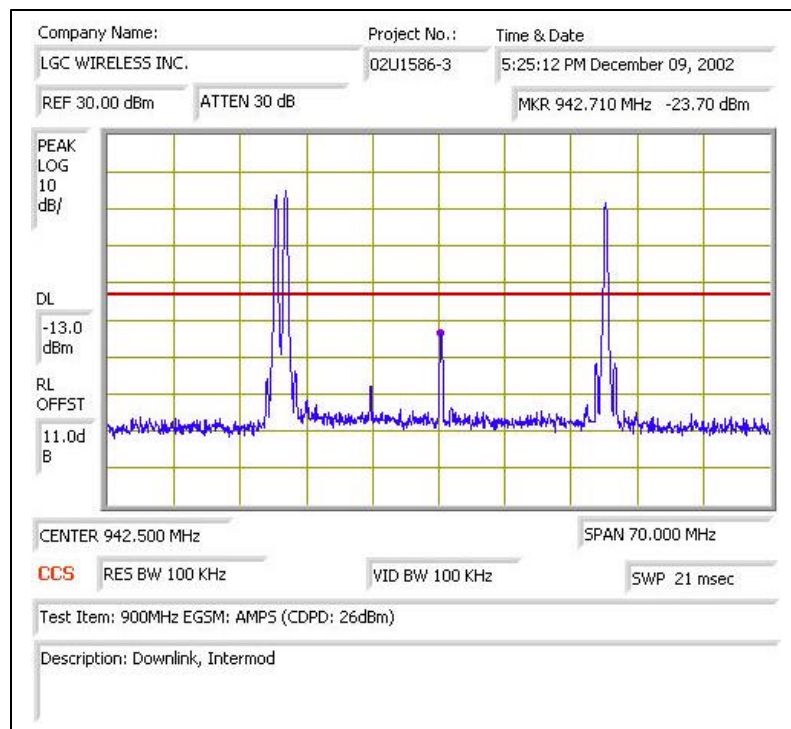


Plot # 23

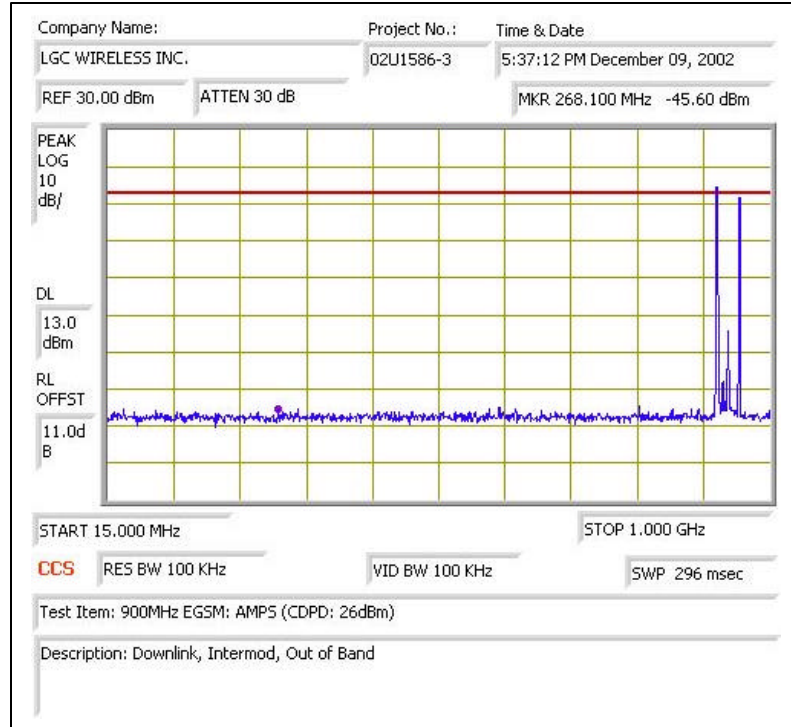

Plot # 24

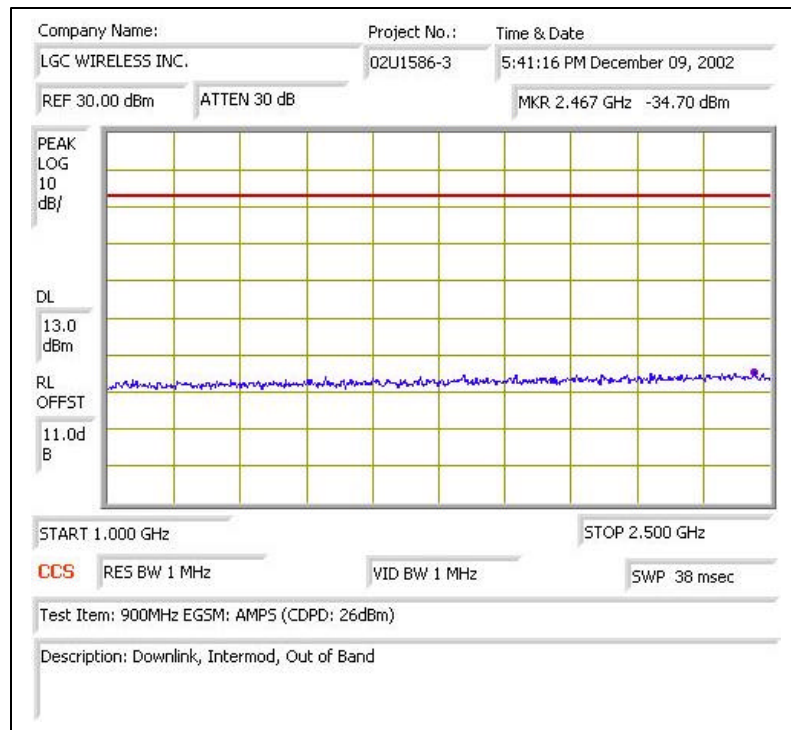

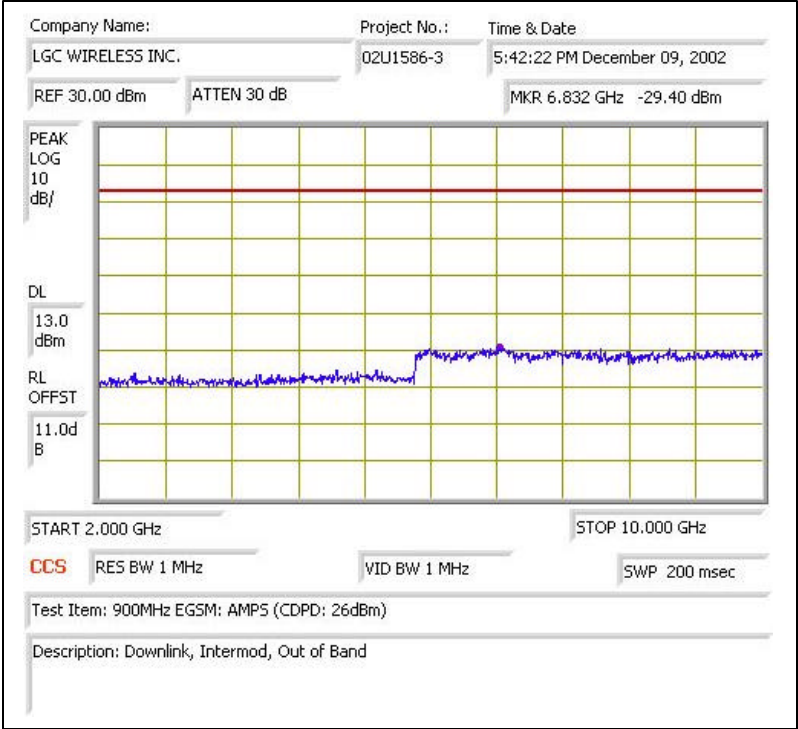

Plot # 25