




1900MHz PCS (TDMA)- UPLINK

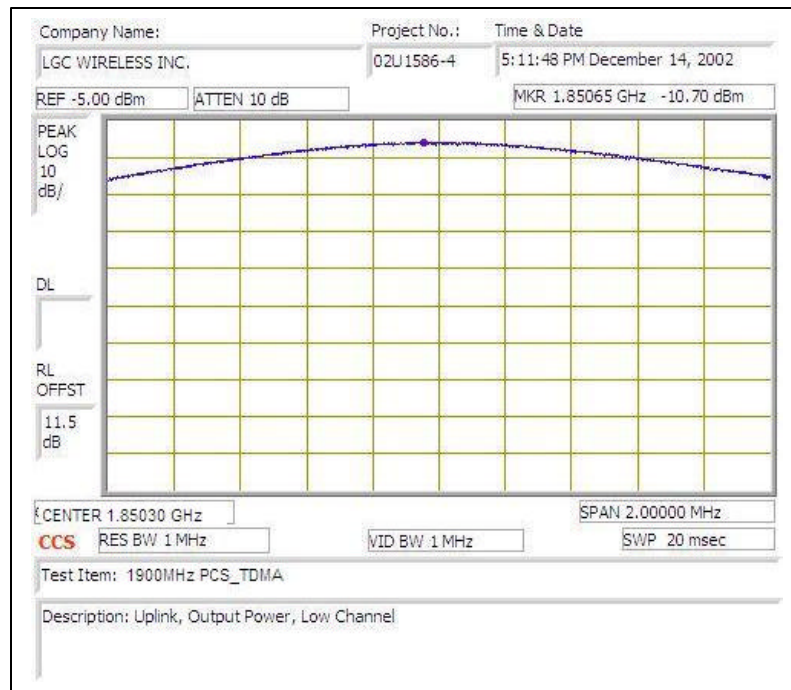


Plot # 1

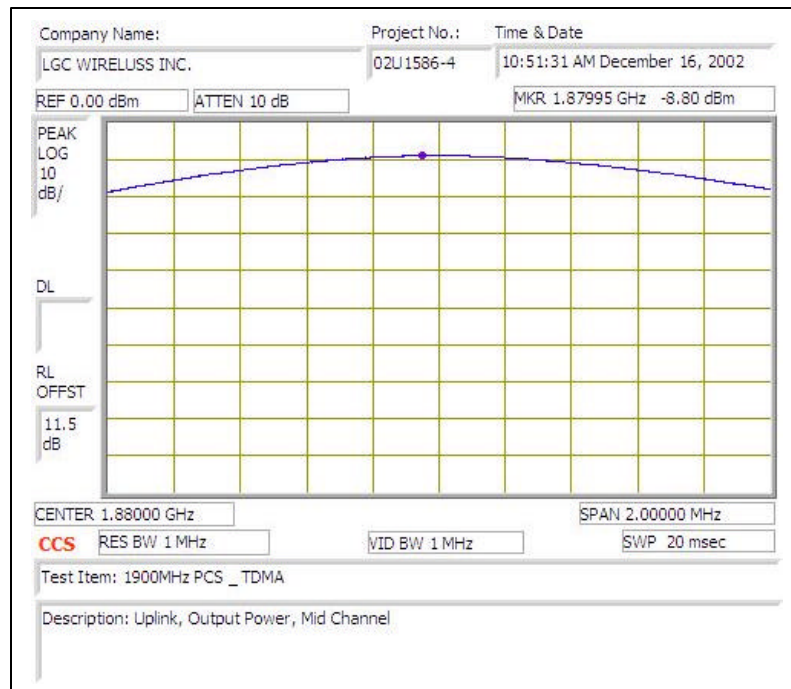


Plot # 2

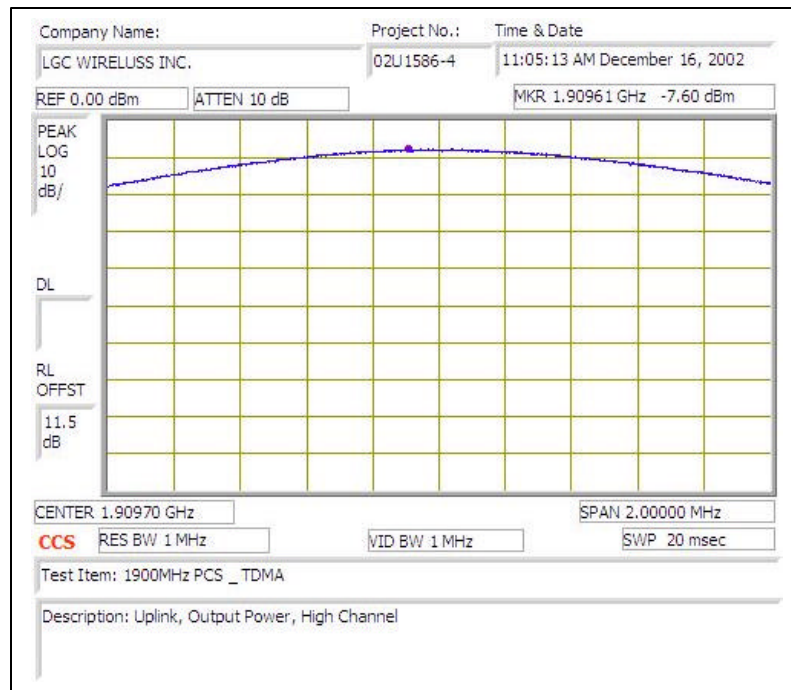


Plot # 3

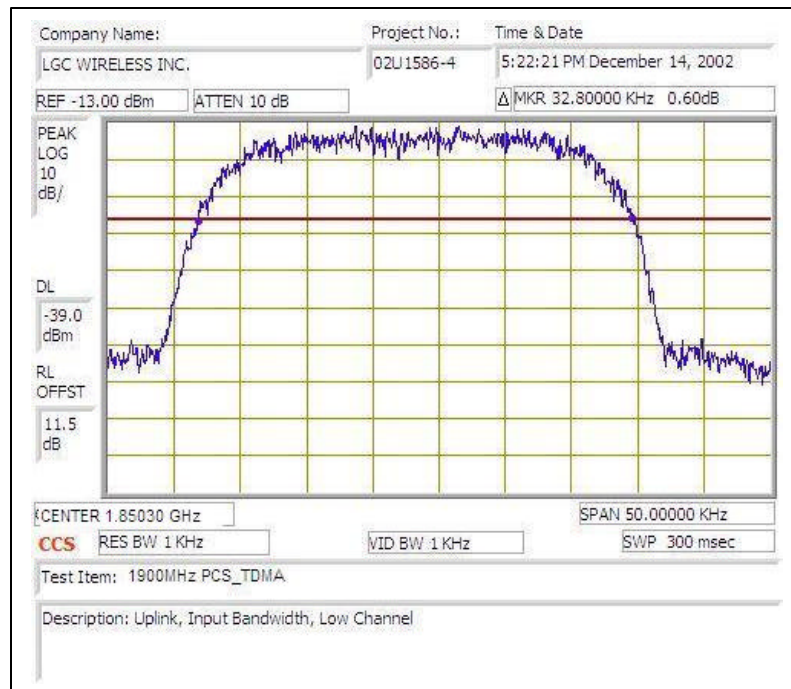


Plot # 4

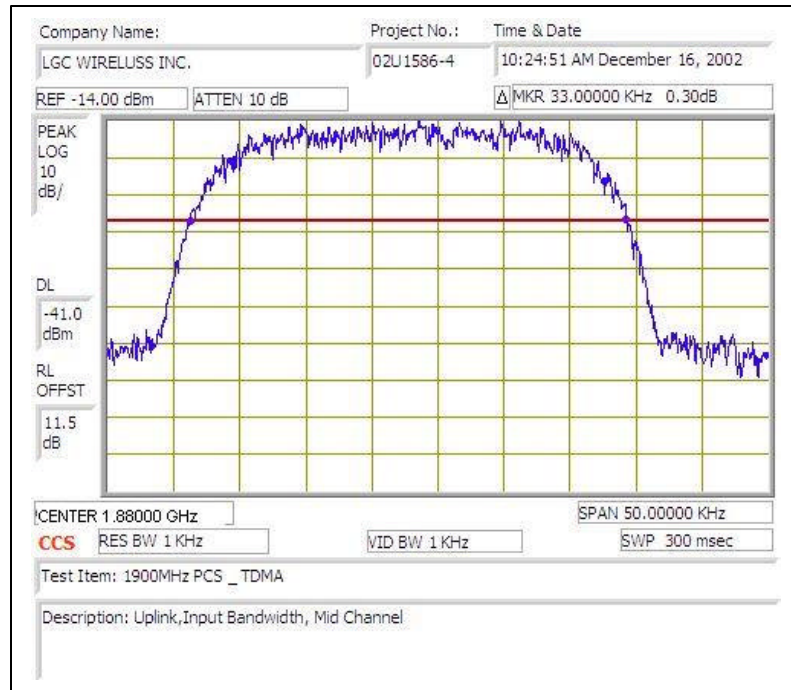


Plot # 5

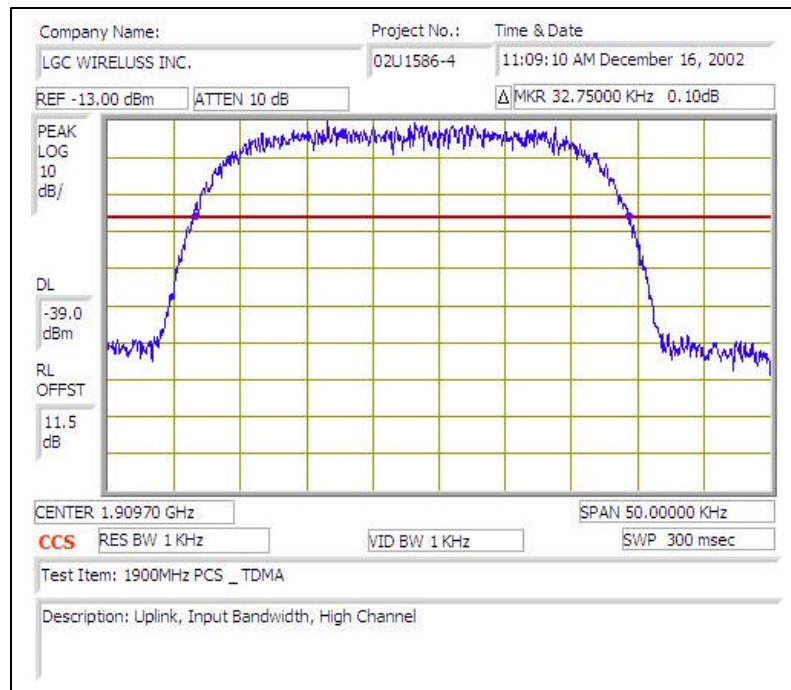


Plot # 6

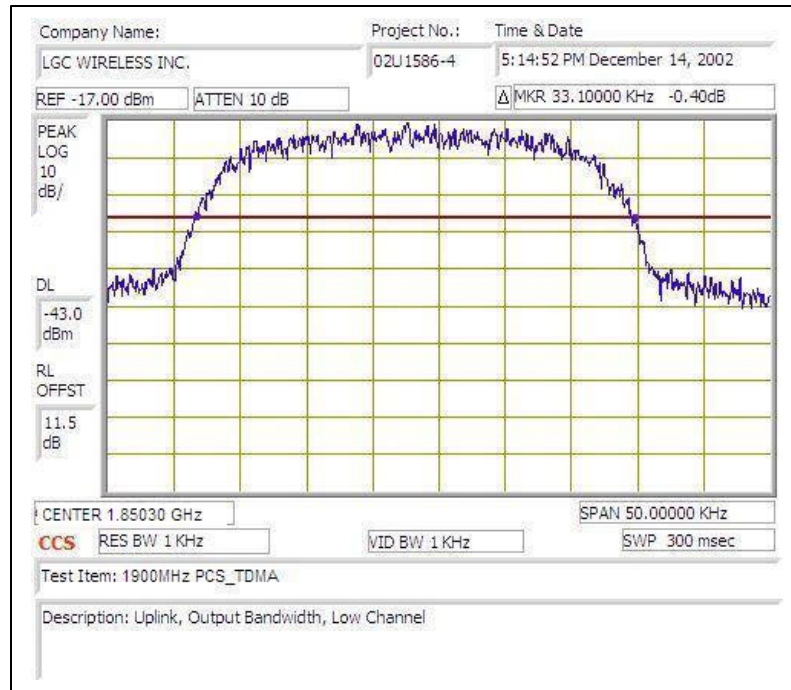


Plot # 7

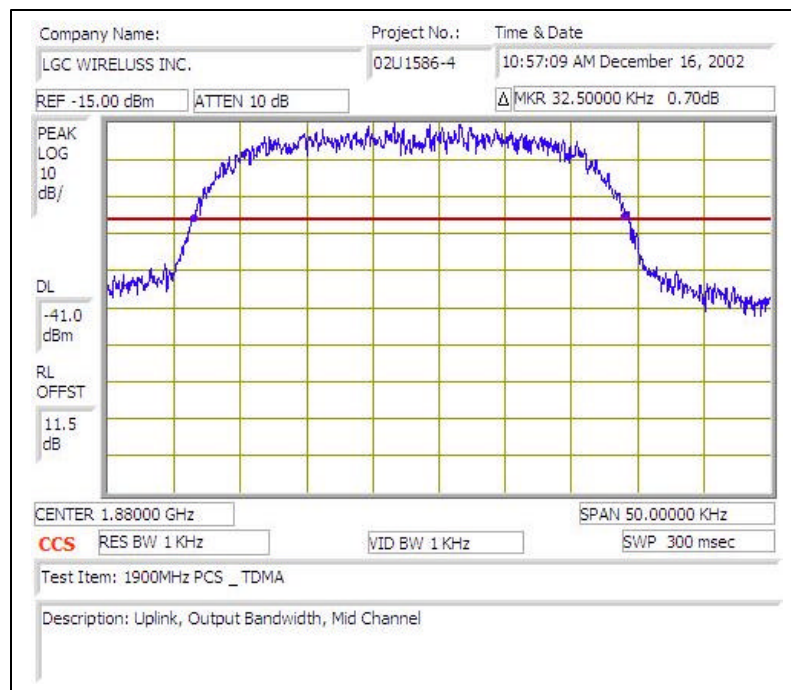


Plot # 8

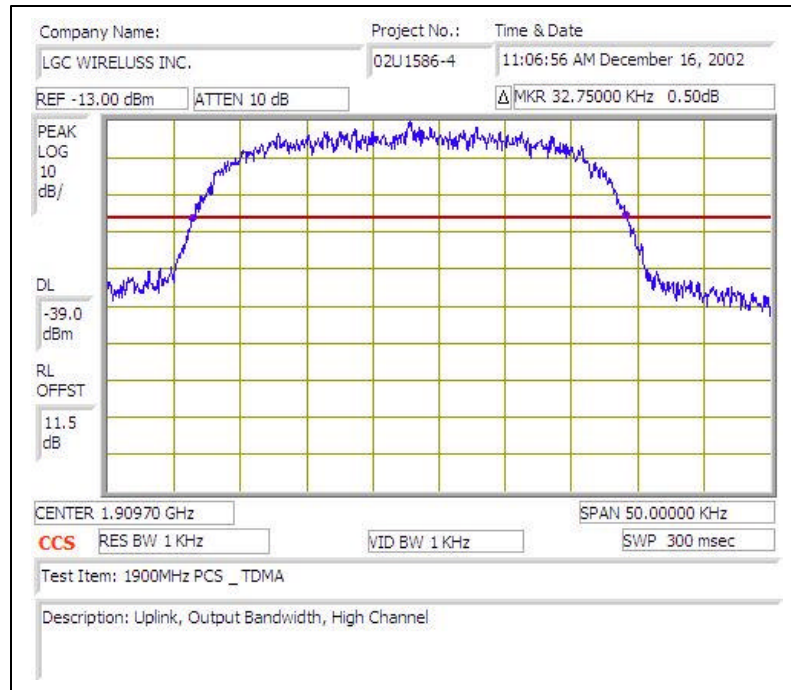


Plot # 9

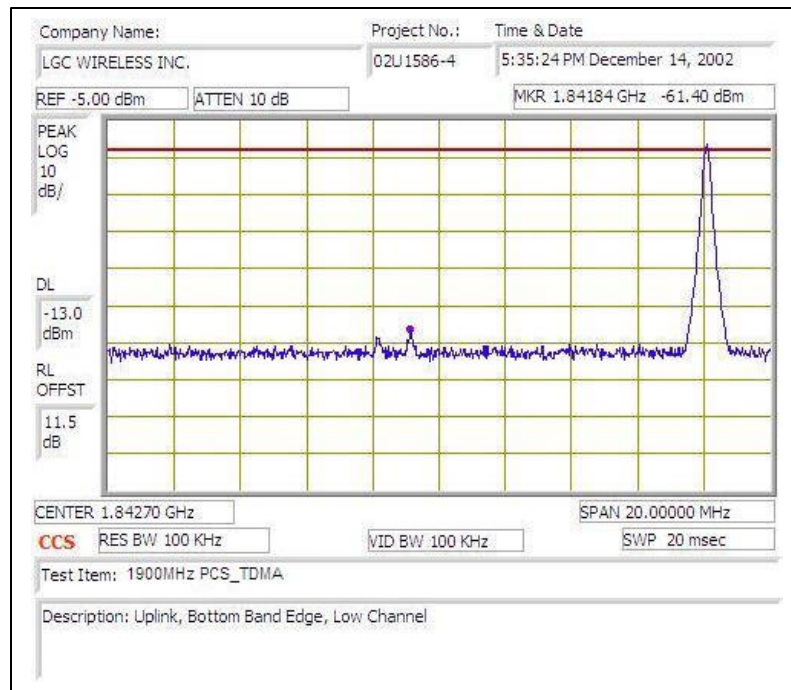

Plot # 10

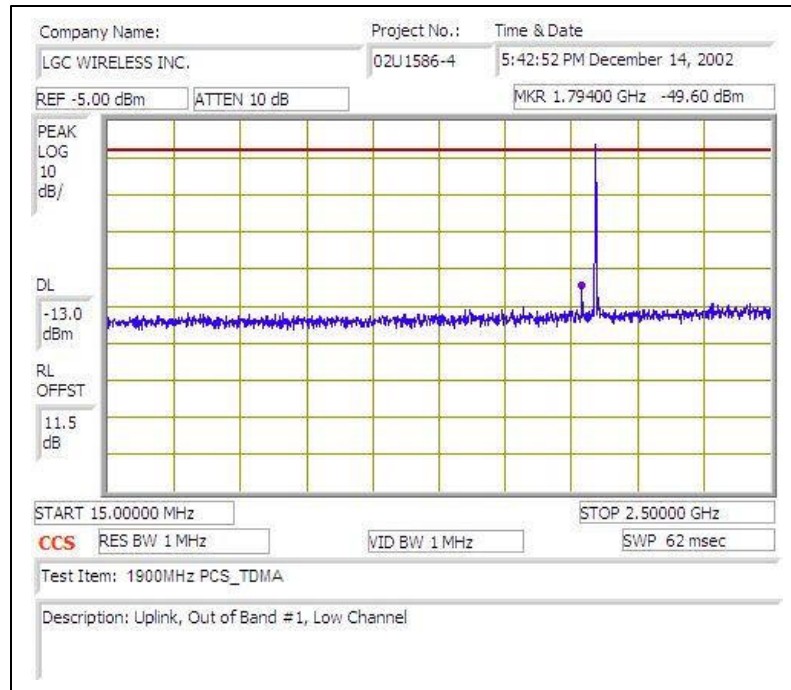


Plot # 11

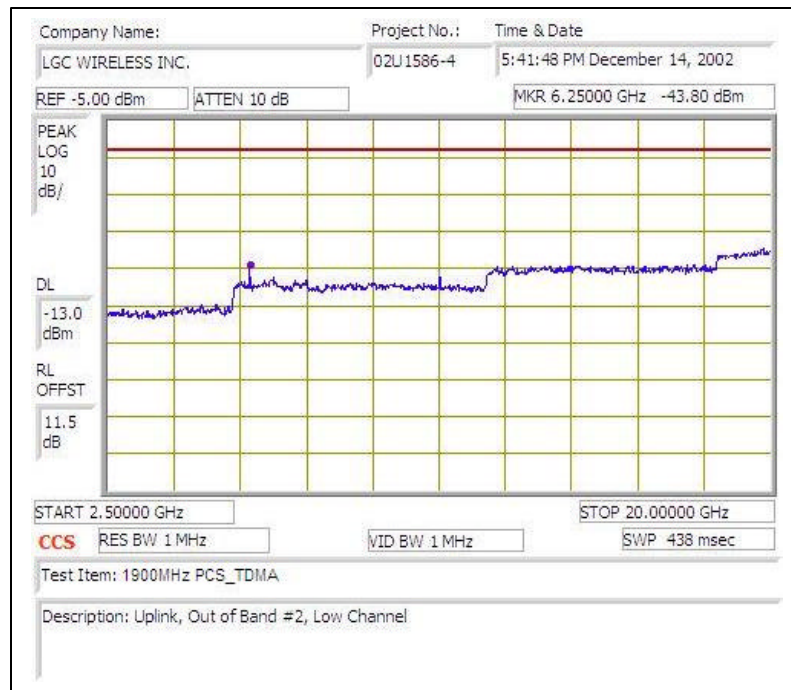



Plot # 12

Plot # 13

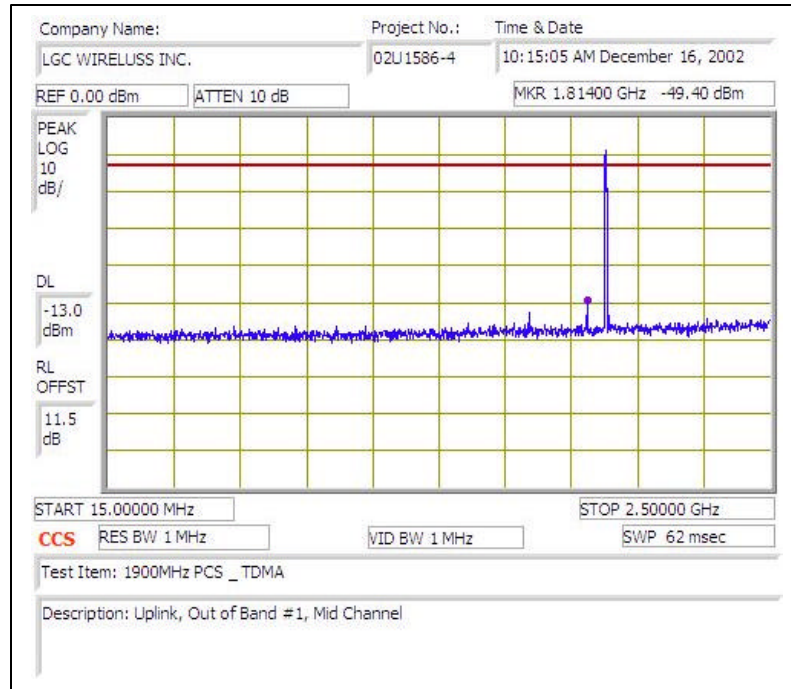


Plot # 14

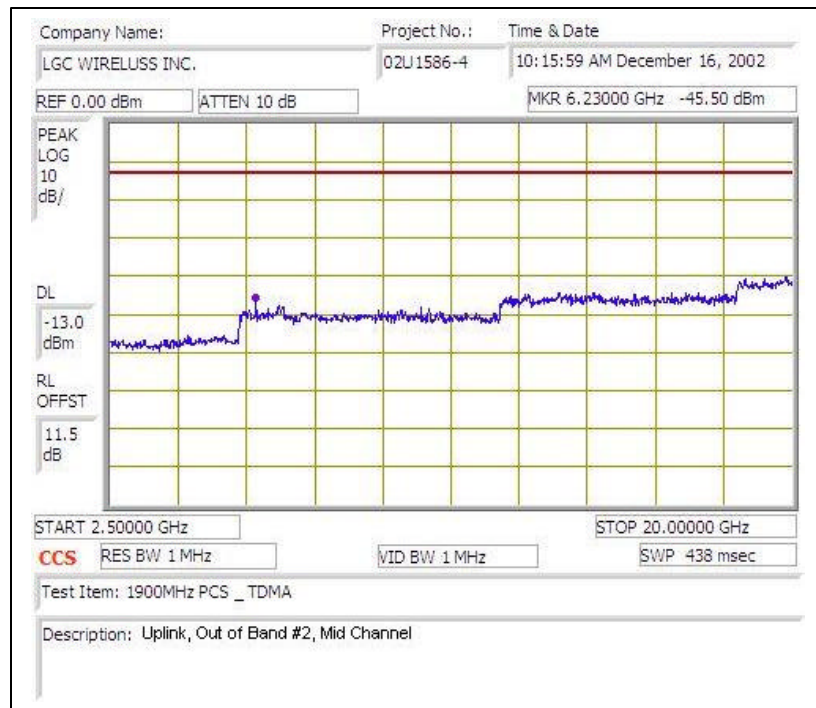

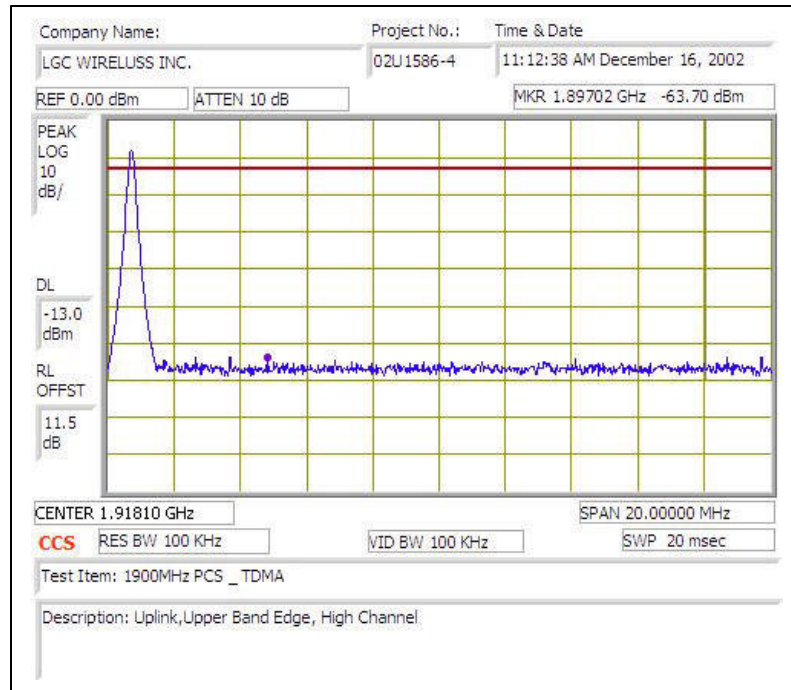


Plot # 15

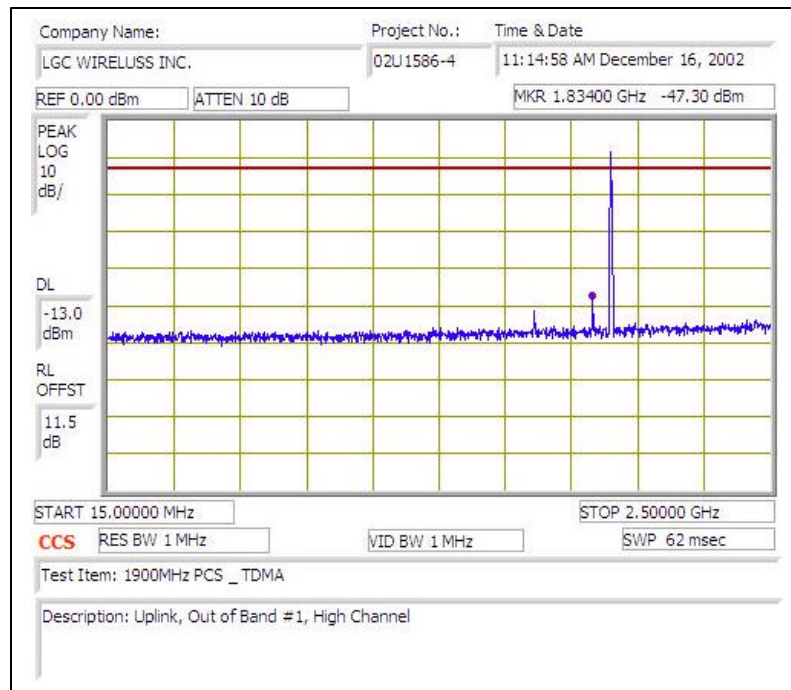


Plot # 16


Plot # 17

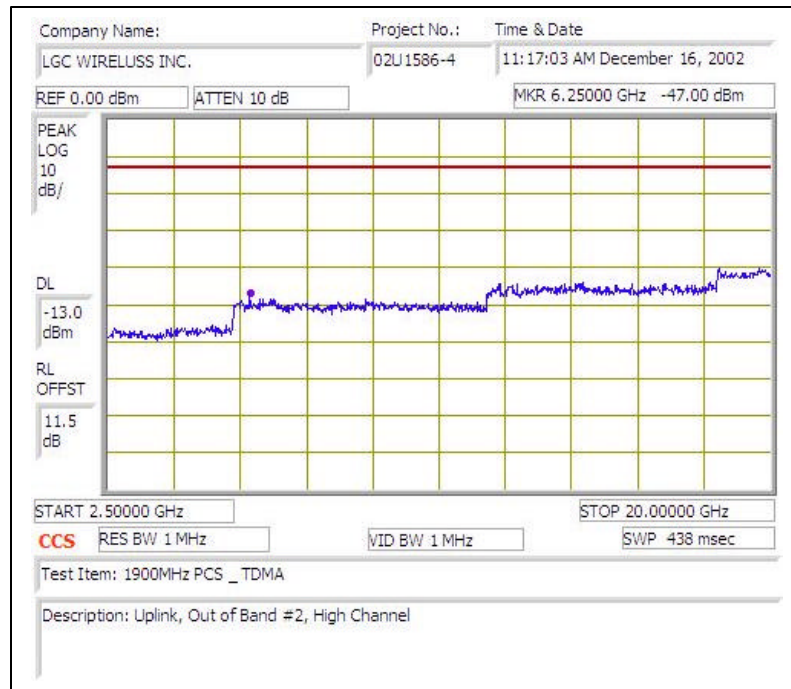

Plot # 18

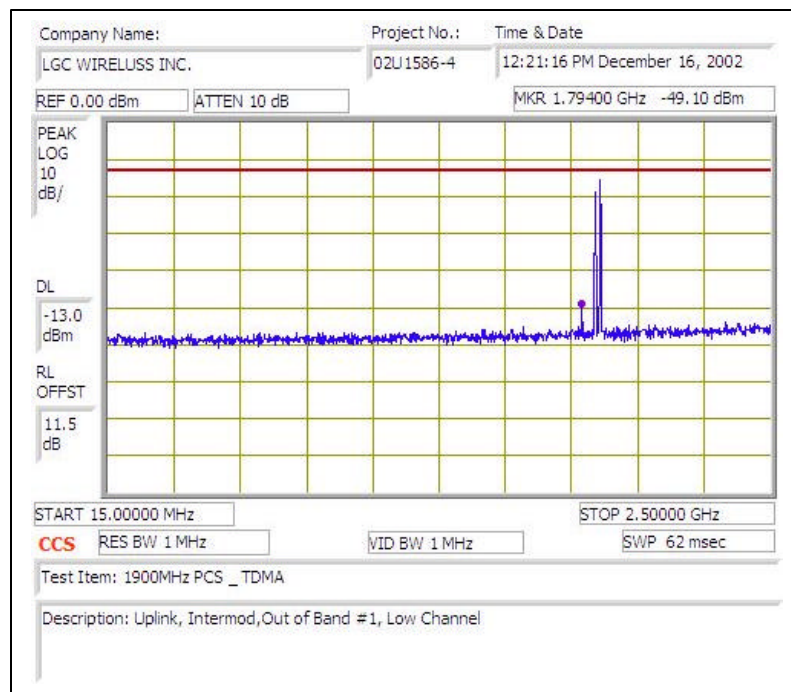


Plot # 19

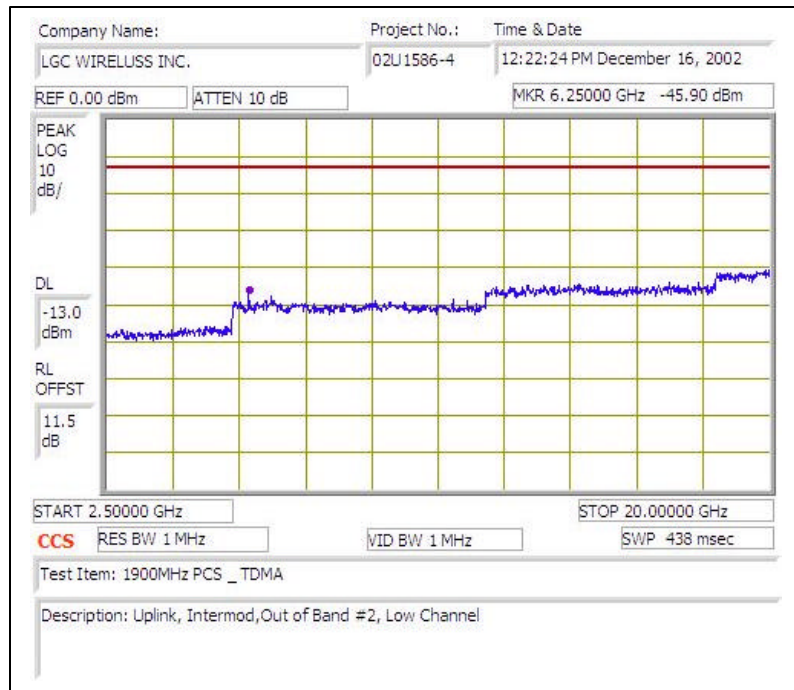


Plot # 20




Plot # 21

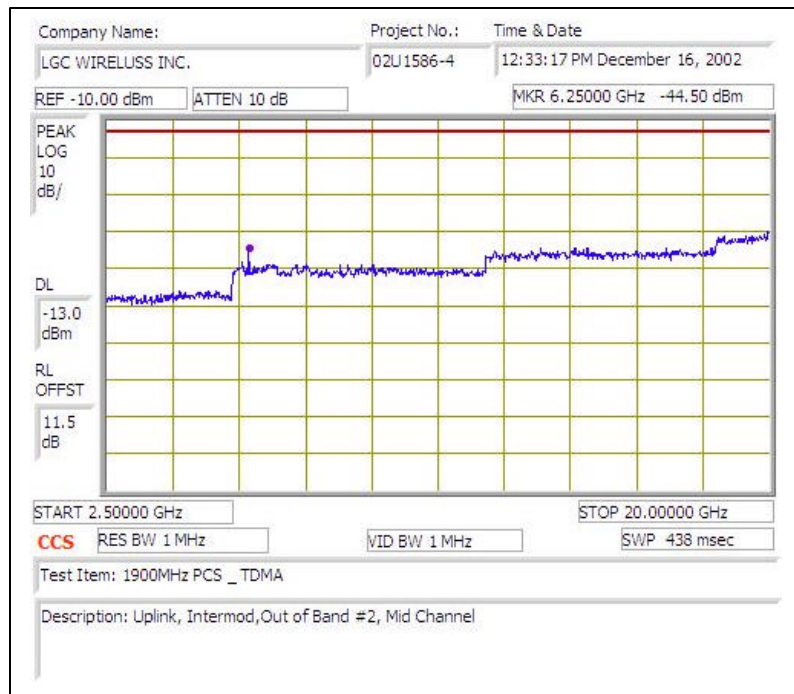


Plot # 22

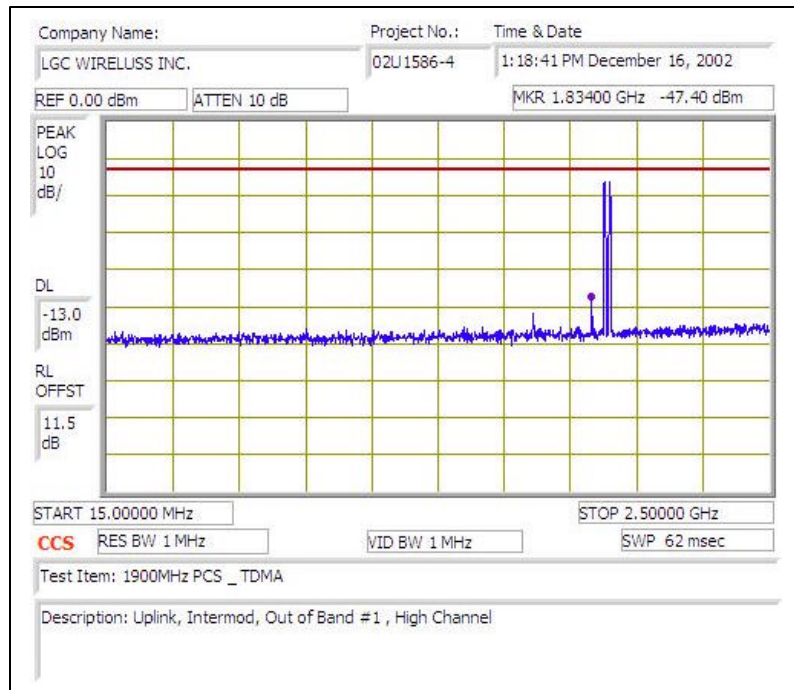


Plot # 23

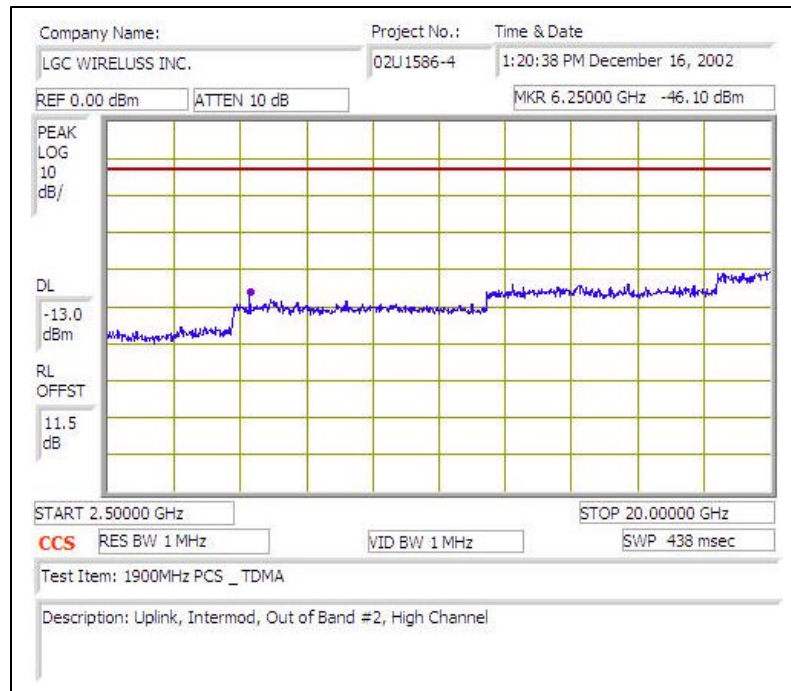


Plot # 24

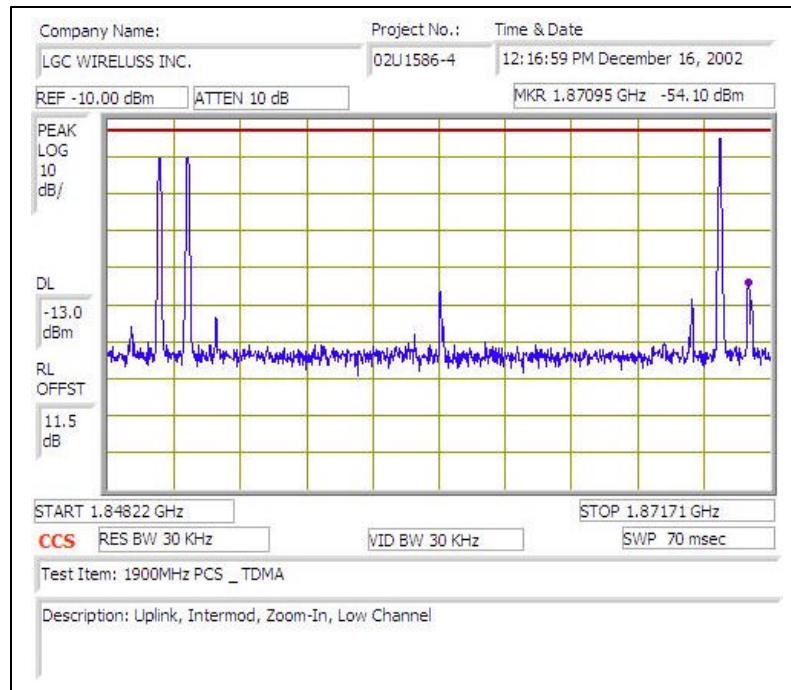


Plot # 25

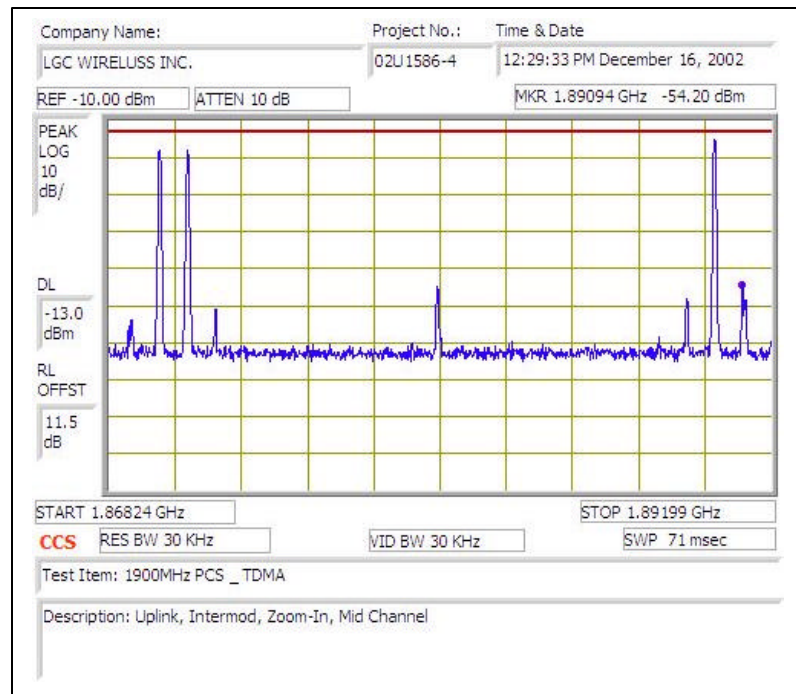


Plot # 26

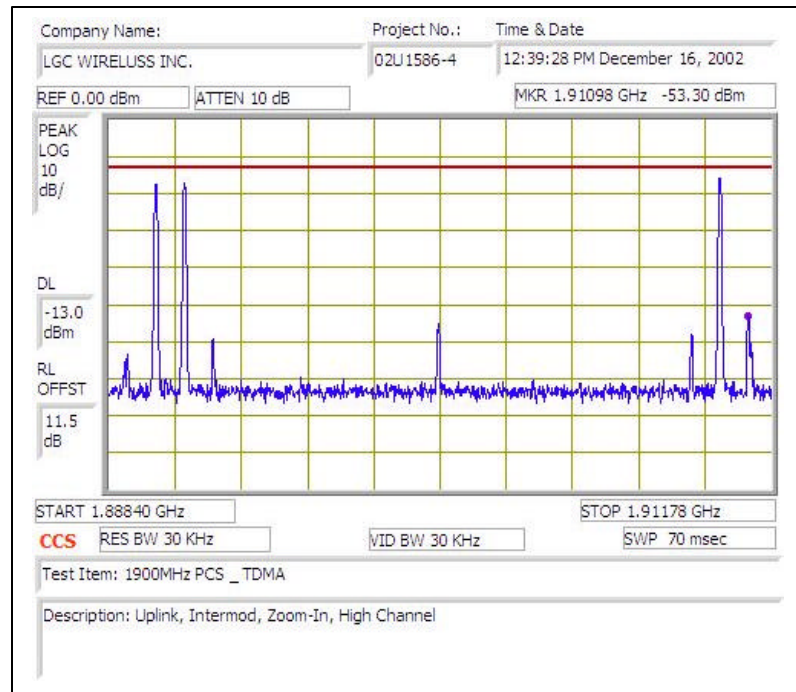

Plot # 27

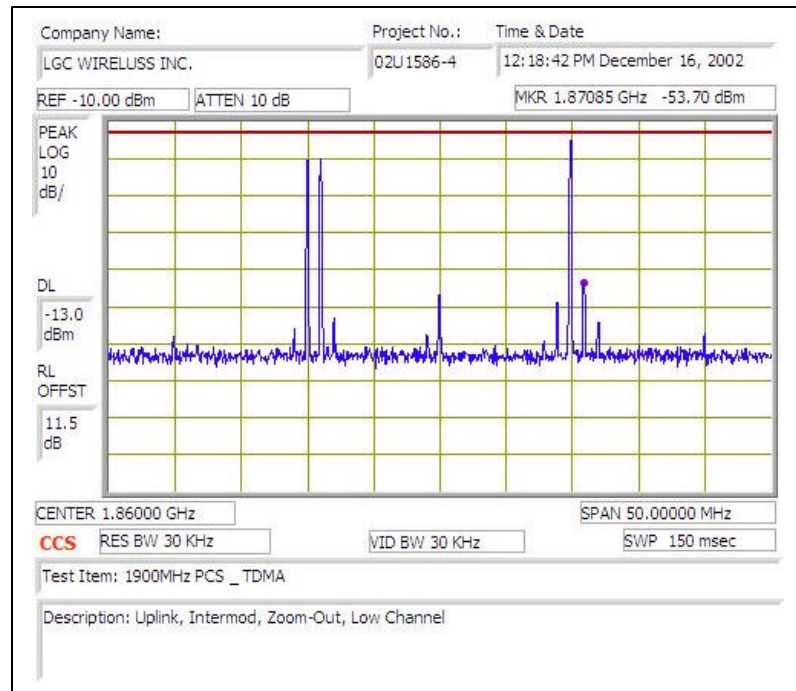

Plot # 28

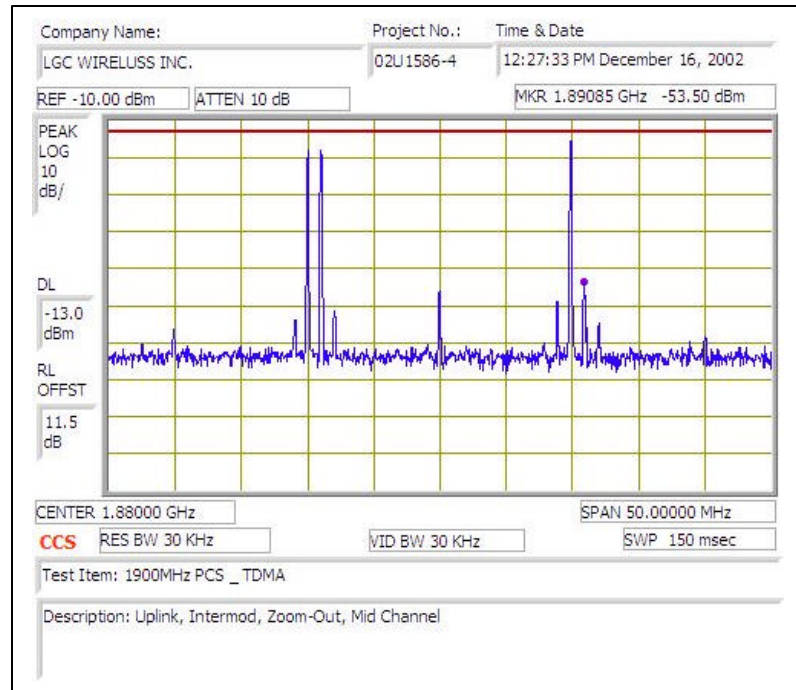

Plot # 29

