

Moto Magnet II™ Ultra

Patent Pending

Decoy installation instructions

① Shell Decoys


WARNING: Remove swing arm before installing swing arm.
Place template on center of decoy back.
Find center of decoy by balancing decoy with index finger. Drill two 3/8" holes.



Insert top of unit into holes. Clip shut and you're ready.


CAUTION:
Remove swing arm before installing decoy.

- ② Place the lower portion of the stake into the ground, up to the circular marker on stake.

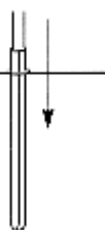

① Silhouette Decoys

WARNING: Remove swing arm before installing swing arm.

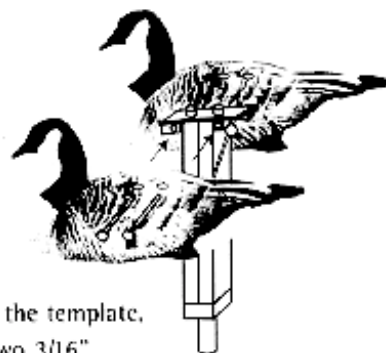

Using the template, drill two 3/16" holes in each side of the decoy, as shown. Insert the bolt from the outside of one decoy half, thru the mechanism and the other half of the decoy. Secure with nut.

- ③ Set the decoy and motion system onto the stake and turn on the switch.



You can find us on the internet at www.trumotion.com

Moto Magnet II™ Ultra Operating Instructions

Remote Operation

1. Turn on switch on small black box
2. Turn unit on and off as desired, by remote control switch.

Continuous Operation

1. Make sure small black box switch is off.
2. Turn on switch in front of main unit.