



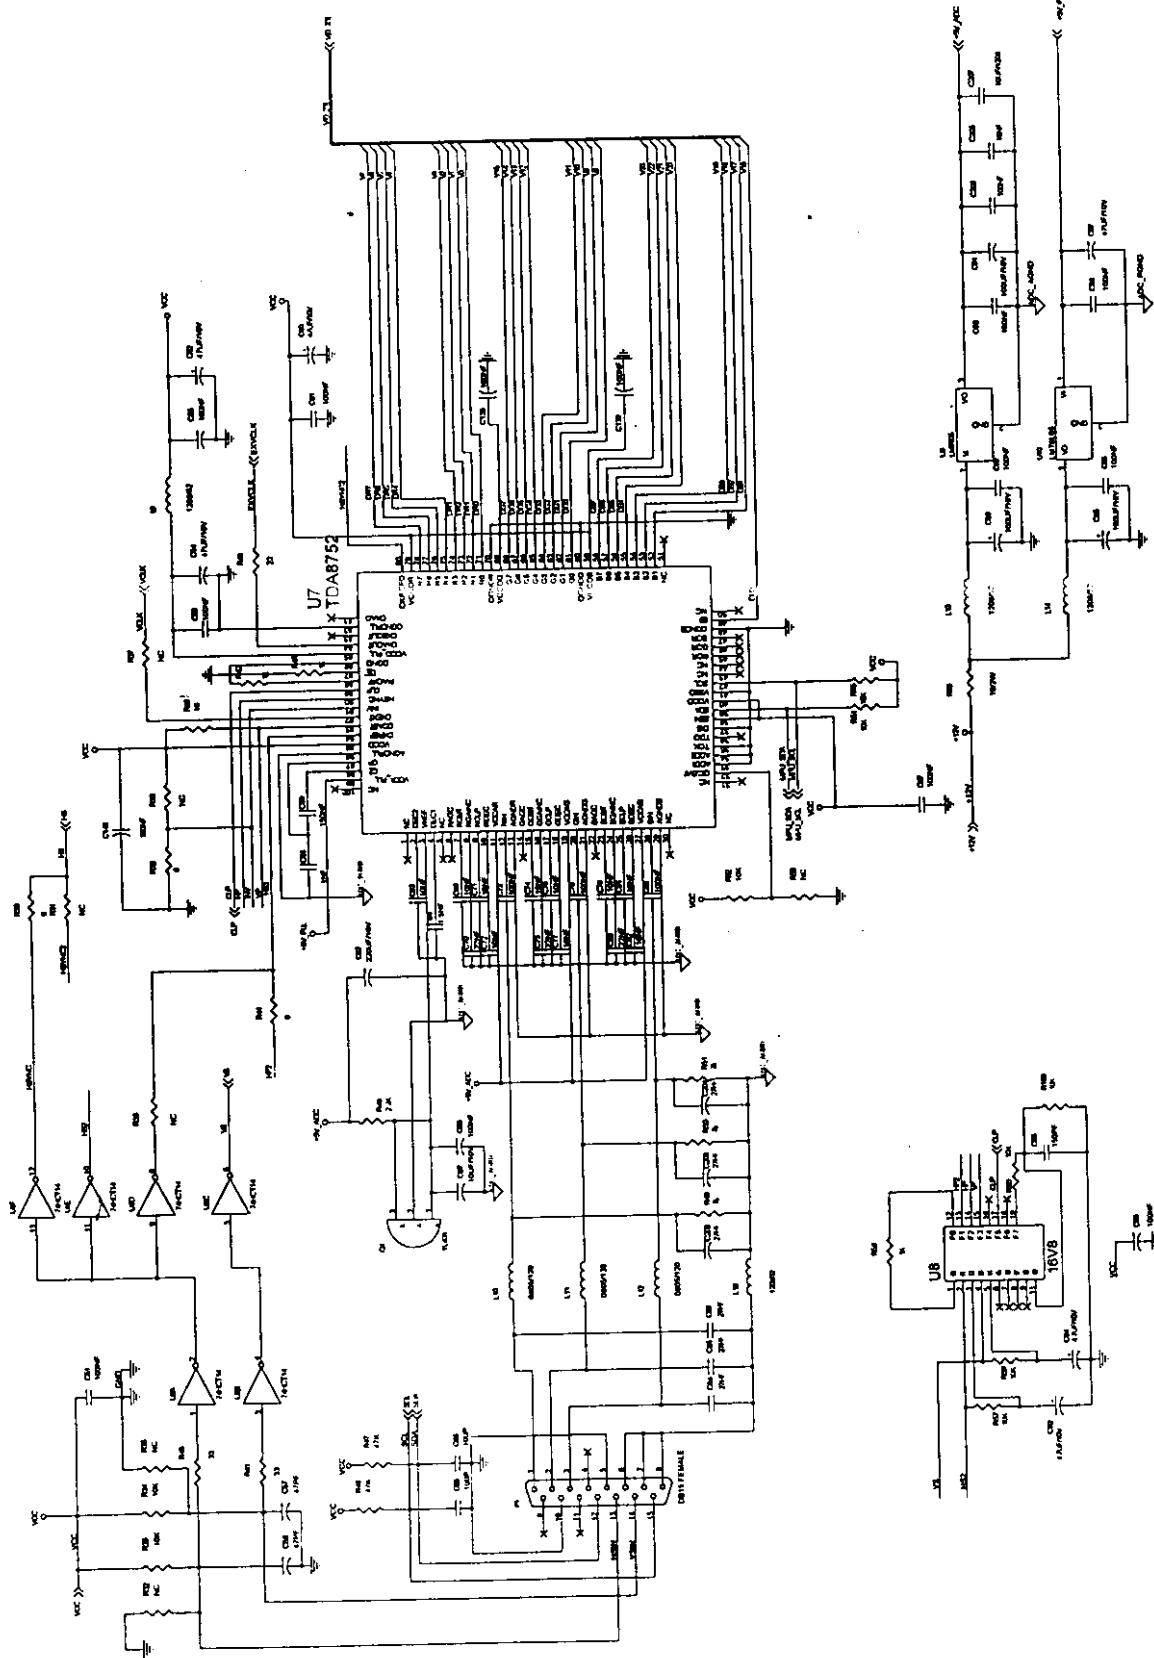



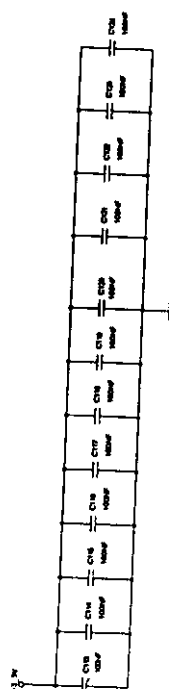


U8 MUST ADD A DIP 20P SOCKET

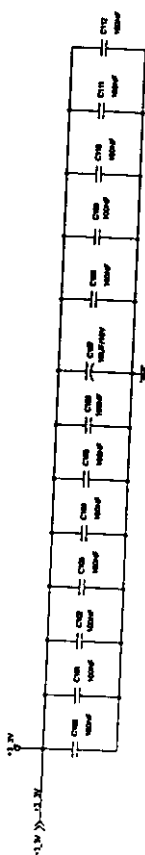



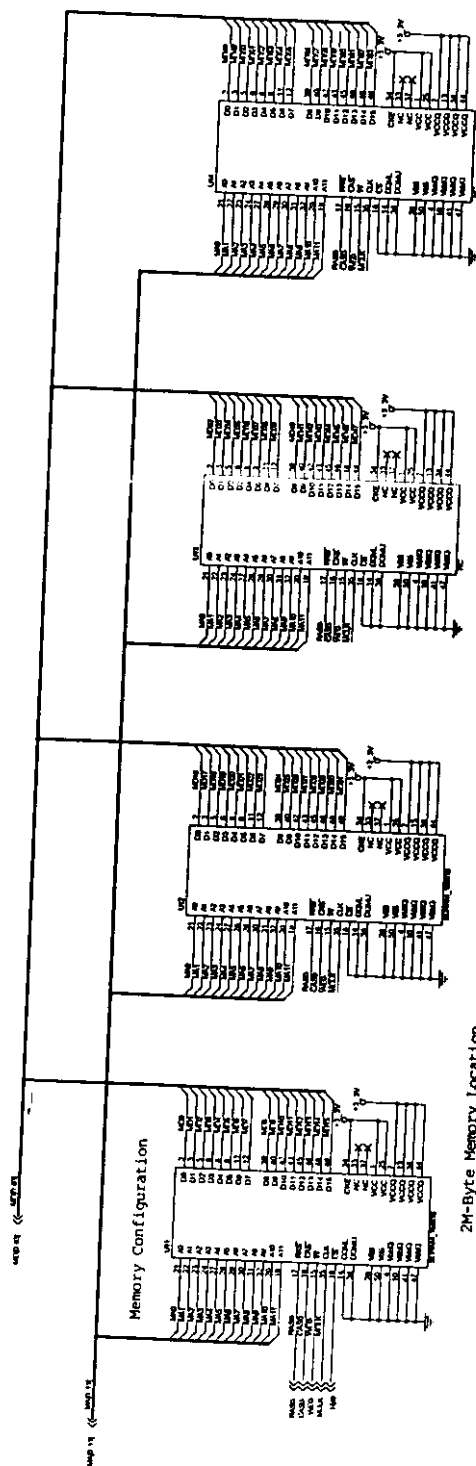

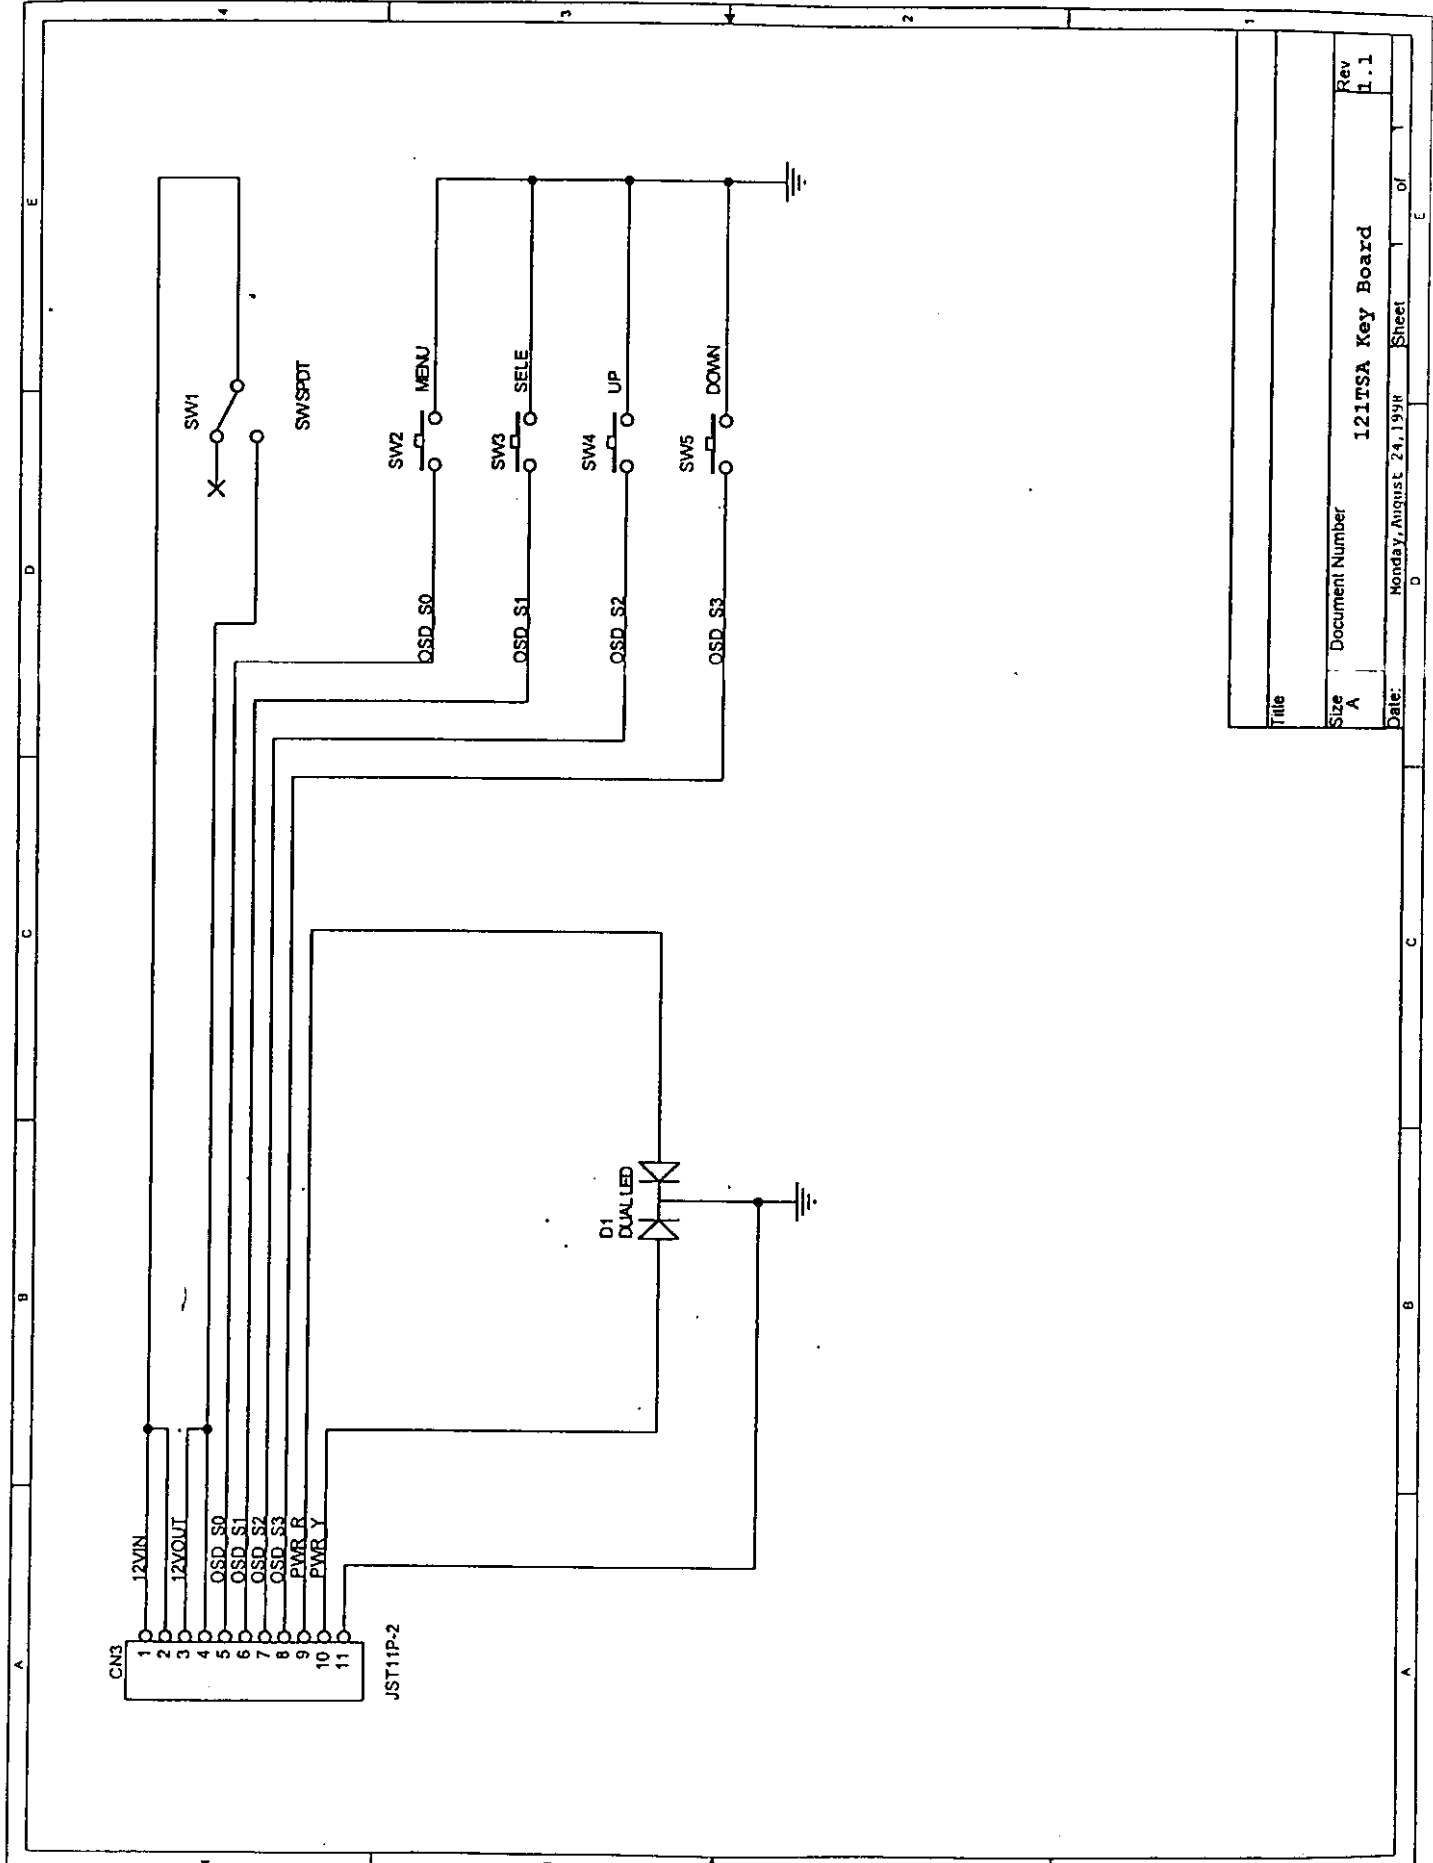

|       |                         |
|-------|-------------------------|
| Title |                         |
| Size  | Document Number         |
| A     | 121TSA Key Board        |
| Rev   | 1.1                     |
| Date: | Monday, August 24, 1998 |
| Sheet | of                      |
| 1     | 2                       |