
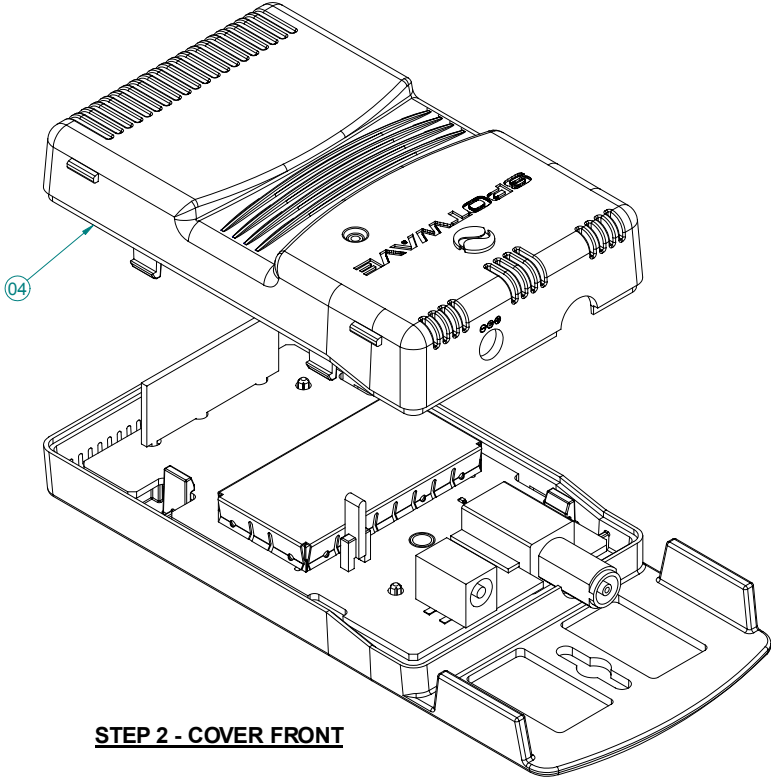


THIS DOCUMENT IS THE PROPERTY OF "Spotwave Wireless Inc." AND MAY BE NEITHER USED, COPIED, REPRODUCED OR OTHERWISE DEALT WITH NOR ITS CONTENTS COMMUNICATED TO OTHERS EXCEPT IN ACCORDANCE WITH WRITTEN INSTRUCTIONS RECEIVED FROM "Spotwave Wireless Inc."

REVISIONS			
REV.	DESCRIPTION	DATE	BY
01	INITIAL RELEASE FOR QUOTING	25NOV'05	MJS

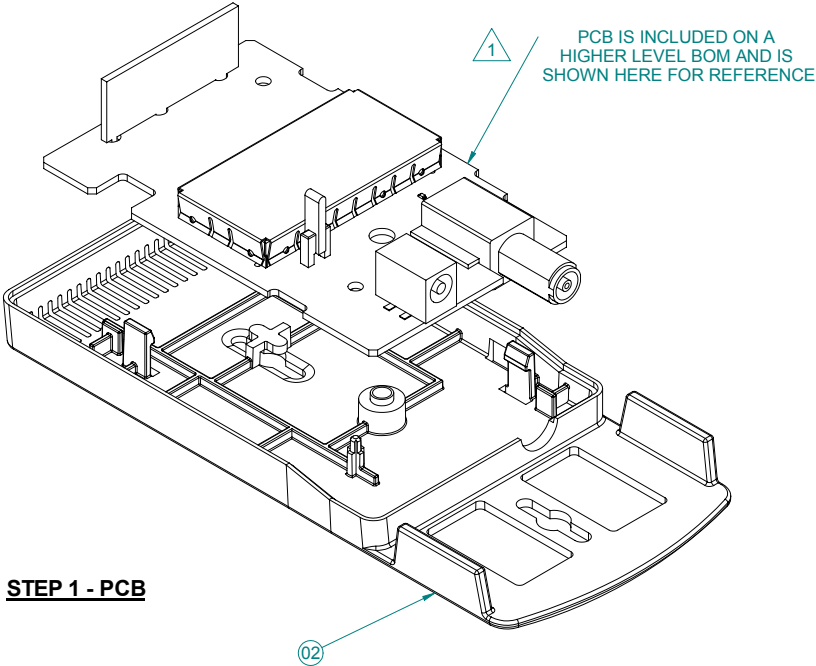


NOTES:

1. PCB IS INCLUDED ON A HIGHER LEVEL BOM AND IS SHOWN HERE FOR REFERENCE
2. ATTACH BAR CODE LABEL ENCODED WITH MANUFACTURER'S SERIAL NUMBER.

TOLERANCES			MATERIAL:	ALL DIMENSIONS INCHES		Spotwave Wireless Inc.		
.XX	.XXX	ANG		3rd ANGLE PROJECTION		OTTAWA, CANADA		
±. 01	±. 005	± 5 °	X		LCM ASSEMBLY			
NEXT ASSY				DRAWN BY:				DATE 10NOV'05
X			X	ENG. APPROVAL:	DATE ??NOV'05	DWG NO. 111-00034-01		REV 01
				PROJ. APPROVAL:	DATE			
					SCALE 1:1 NCAGE L1156		SHEET 1 OF 3	



FILENAME: 111-00034-01-01 LCM FULL ASSEMBLY.dft

STEP 3 - SCREW

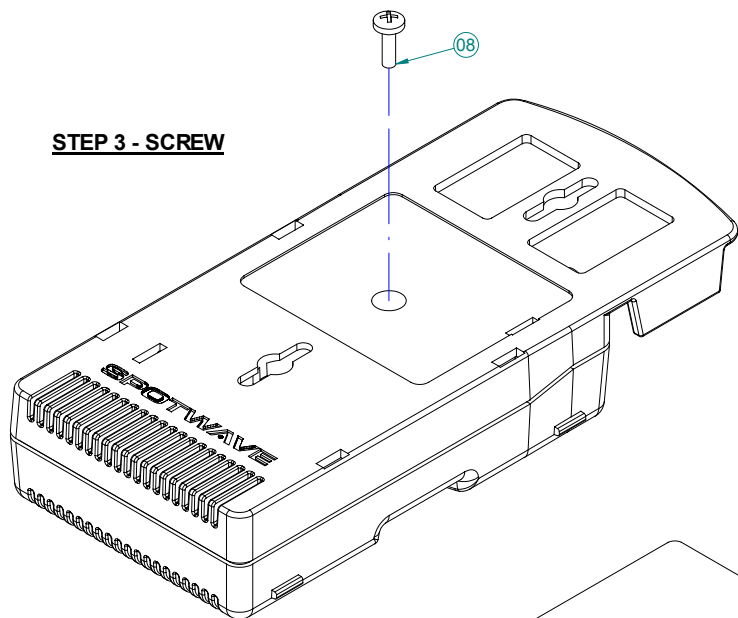

ENSURE SURFACE IS CLEAN AND FREE OF ANY RESIDUE. APPLY FINGER PRESSURE ACROSS LABEL ONCE PLACED AND HOLD PRESSURE FOR A FEW SECONDS.




STEP 4 - LABEL(S)

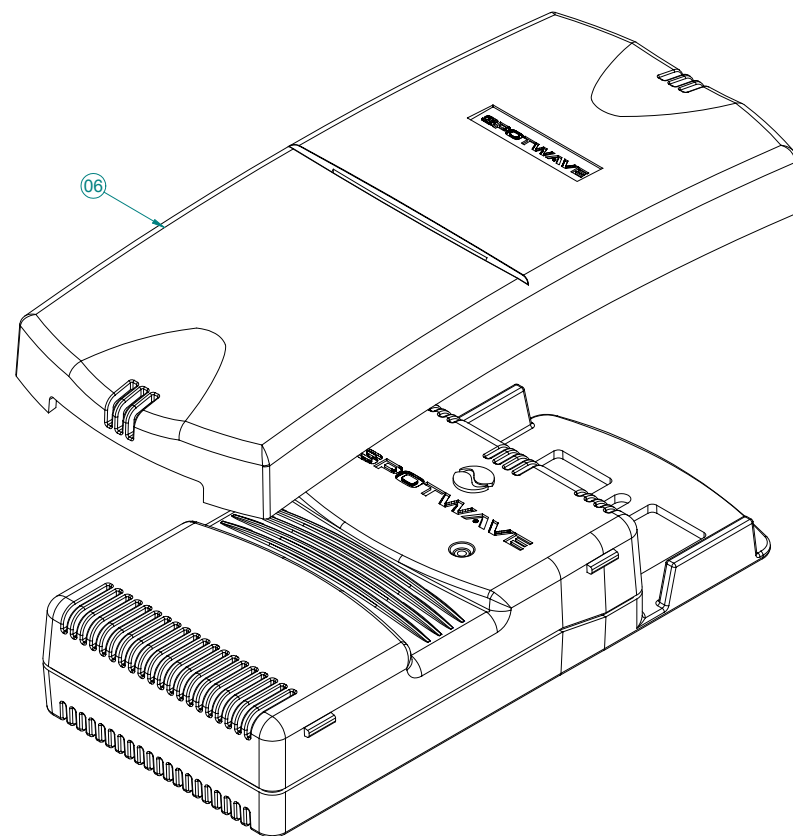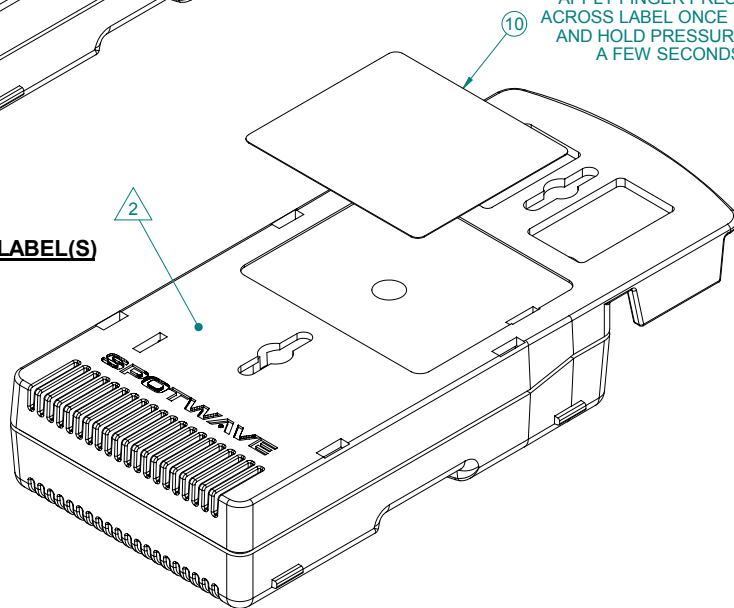

STEP 5 - FASCIA

THIS DOCUMENT IS THE PROPERTY OF "Spotwave Wireless Inc." AND MAY BE
NEITHER USED, COPIED, REPRODUCED OR OTHERWISE DEALT WITH NOR
ITS CONTENTS COMMUNICATED TO OTHERS EXCEPT IN ACCORDANCE WITH
WRITTEN INSTRUCTIONS RECEIVED FROM "Spotwave Wireless Inc."

THESE VIEWS ARE
PROVIDED FOR
REFERENCE ONLY.

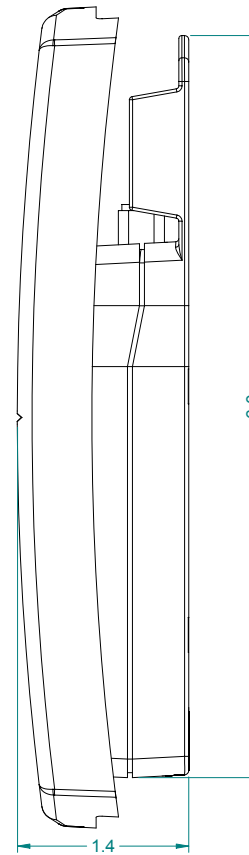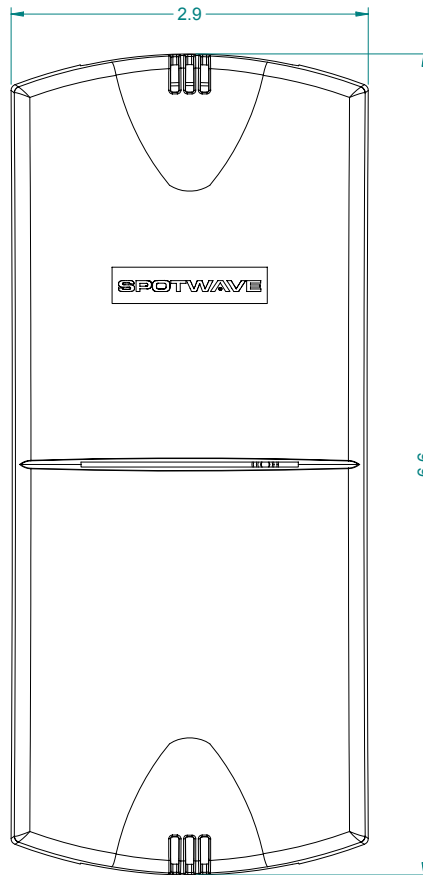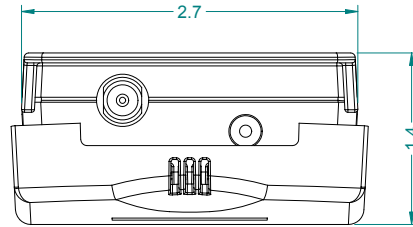

D	DWG NO.	111-00034-01	REV.	01
	SCALE	NCAGE L1156	SHEET 3 OF 3	

FILENAME: 111-00034-01-01 LCM FULL ASSEMBLY.dft