



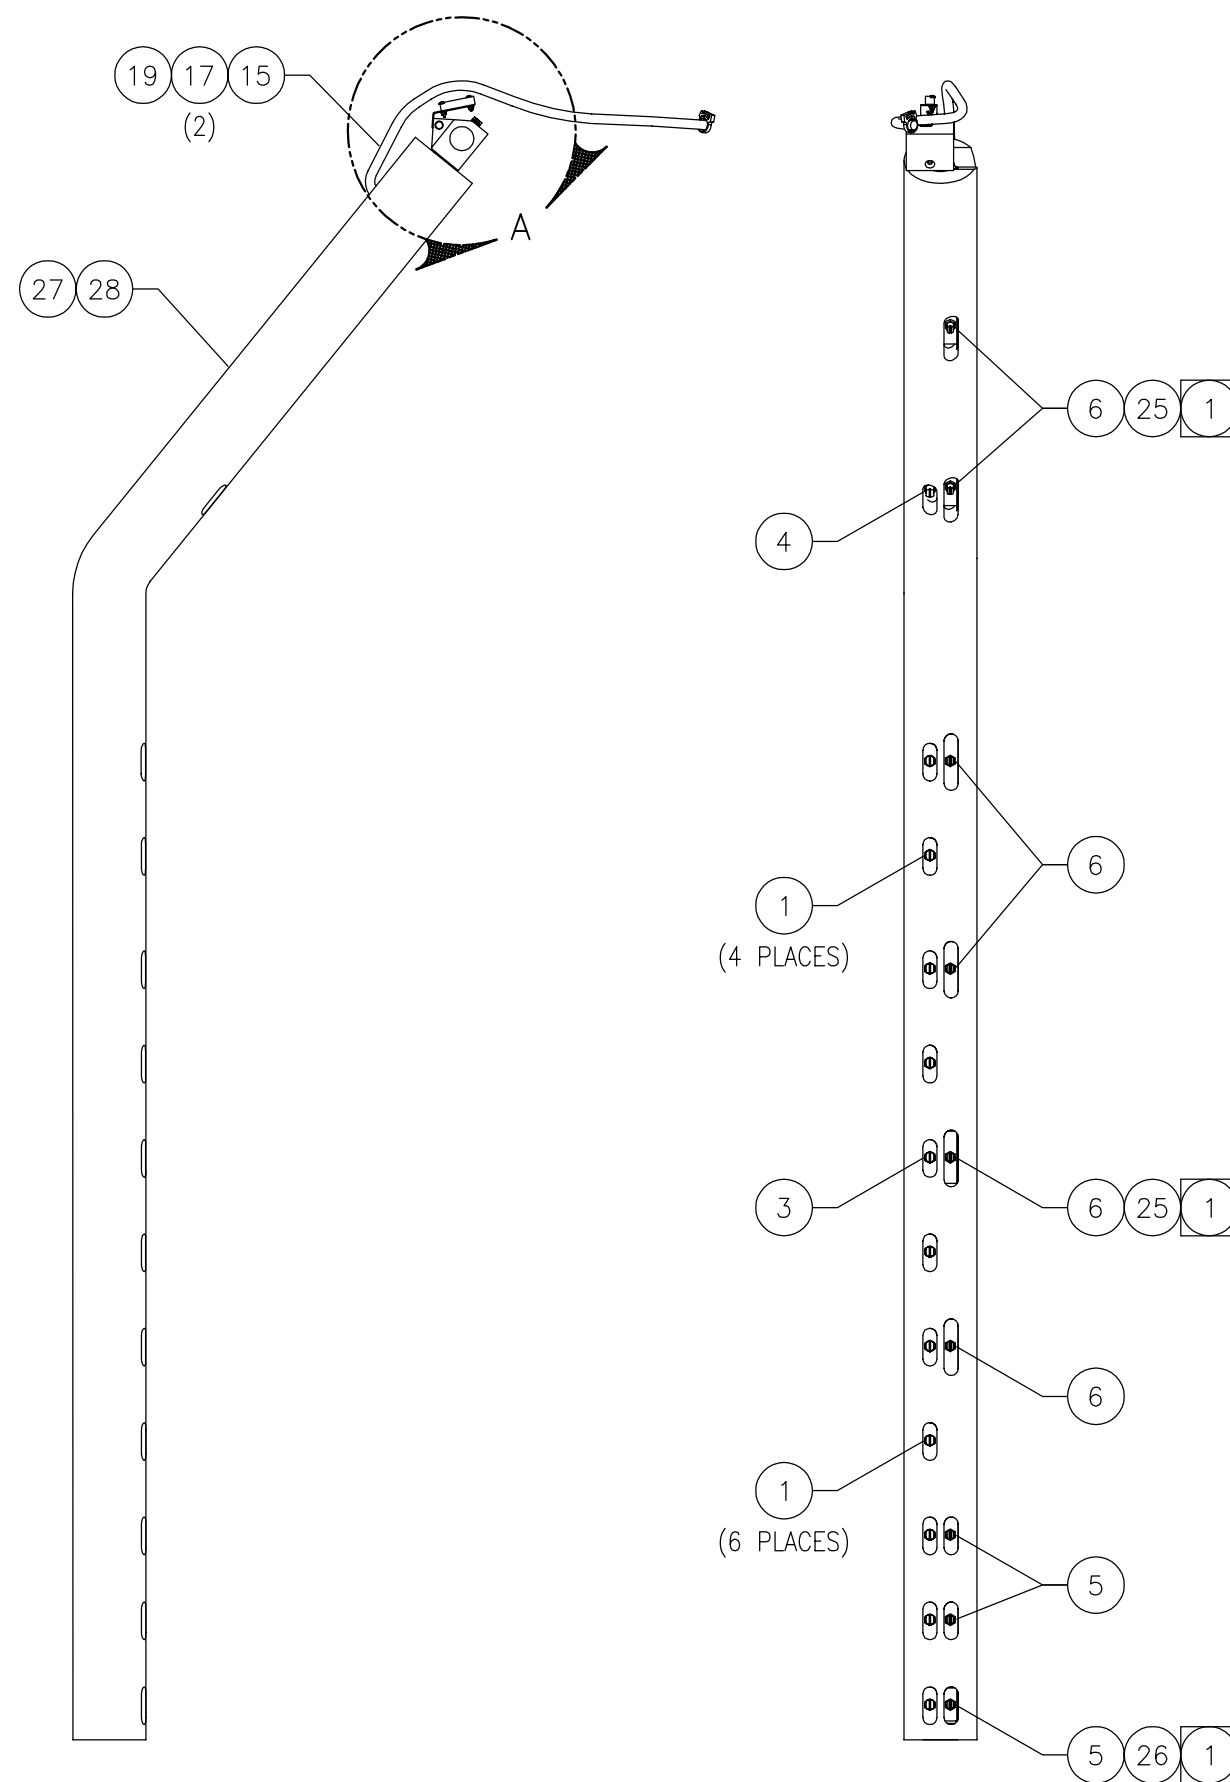

NOTE:

- 1 PUT THE SUPPORT/FOAM,COVER INTO THE CUTOUT OF THE FOAM COVER. INSERT THE PLASTIC NOZZLE THROUGH THE HOLE IN THE SUPPORT/FOAM,COVER AND THREAD NOZZLE INTO MANIFOLD. ALIGN NOZZLE SPRAY WITH THE SIDES OF THE CUTOUT IN THE FOAM.

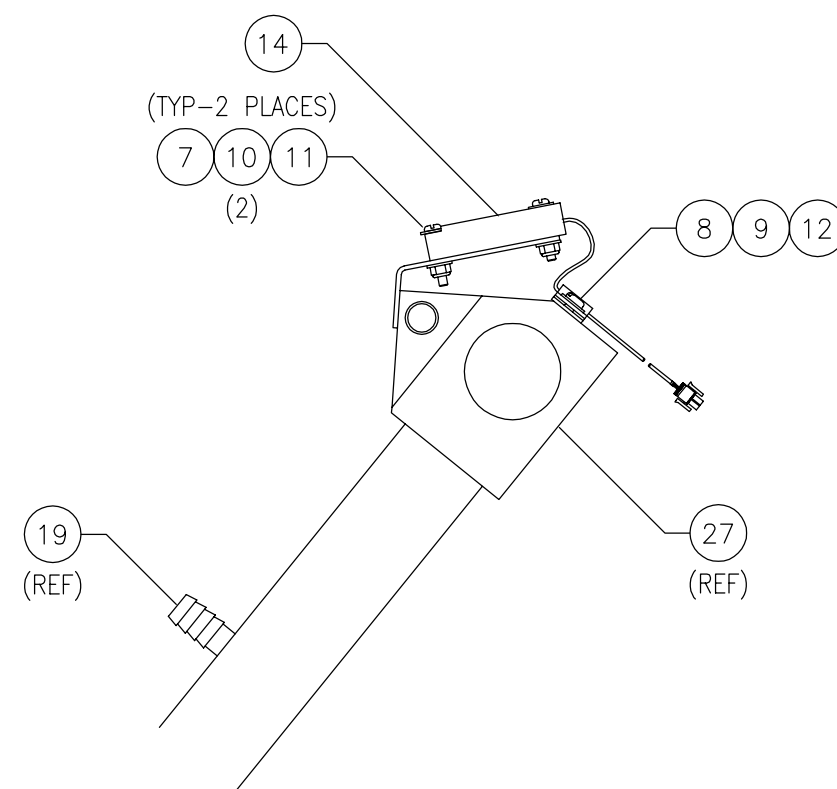

DETAIL A
(ENLARGED FOR CLARITY)

RYKO® MFG. CO. GRIMES, IOWA 50111		MATERIAL SEE PRODUCT STRUCTURE		TOLERANCES UNLESS OTHERWISE SPECIFIED		PRODUCT					
SPRAY ARCH ASSY/ SIDE, W/BRK, 90"		SCALE NONE	DATE 6/14/02			US2001—OHD					
		DRAWN BEERENDS	CHK'D MS/GA			LIBERTY					
REV.	DWG. NO.	APVD		DATE		1. ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.					
—	25018—000	GDL	6/28/02			—		0502—125	RELEASING	DRAWING	6/28/02
						LTR		ECO	DESCRIPTION	BY	DATE
										APVD	