

Photos of Test Setup

For WCDMA&LTE

1. Radiated Spurious Emissions



Radiated Spurious Emission (below 1GHz)



Radiated Spurious Emission (1GHz to18GHz)



Radiated Spurious Emission (18GHz to26.5GHz)

For WLAN/BT

2. Radiated Spurious Emissions



Radiated Spurious Emission (below 1GHz)




Radiated Spurious Emission (1GHz to 18GHz)



Radiated Spurious Emission (above 18GHz)


Conducted Emissions

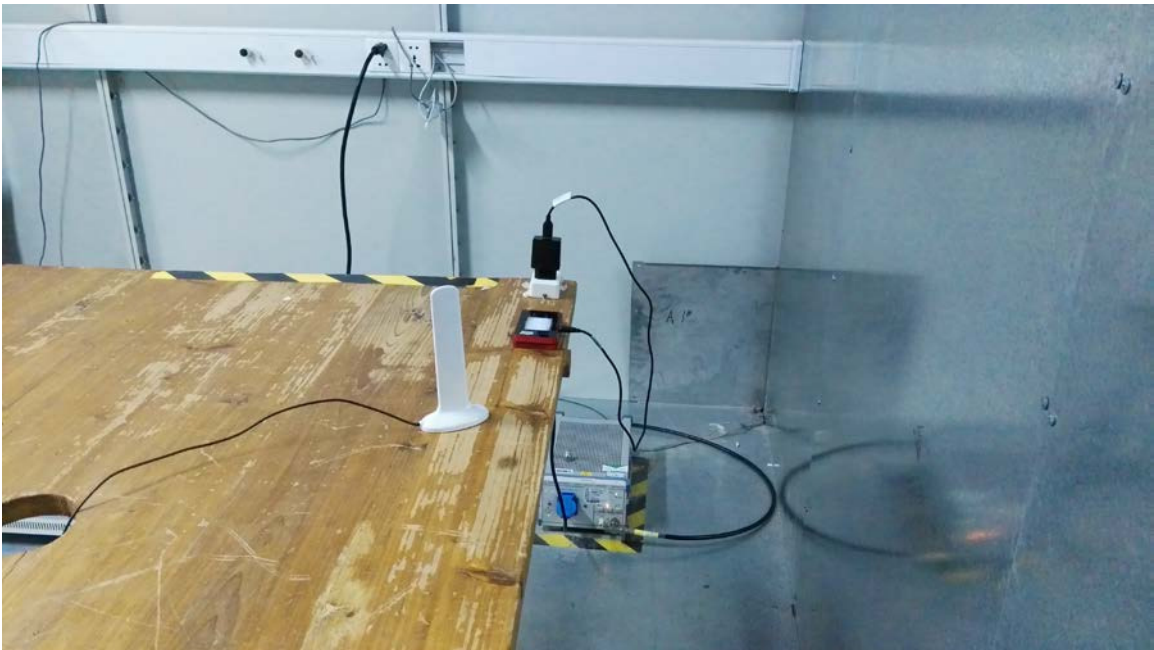

Photos of Test Setup from BTL Laboratory

For 5G WLAN


2. Radiated Spurious Emissions

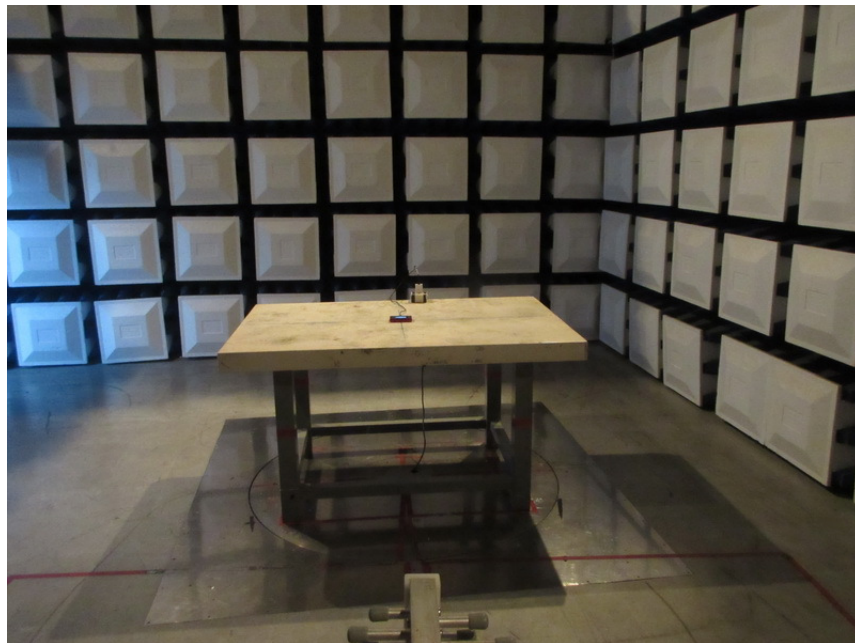

Radiated Spurious Emission (below 1GHz)




Radiated Spurious Emission (1GHz to18GHz)

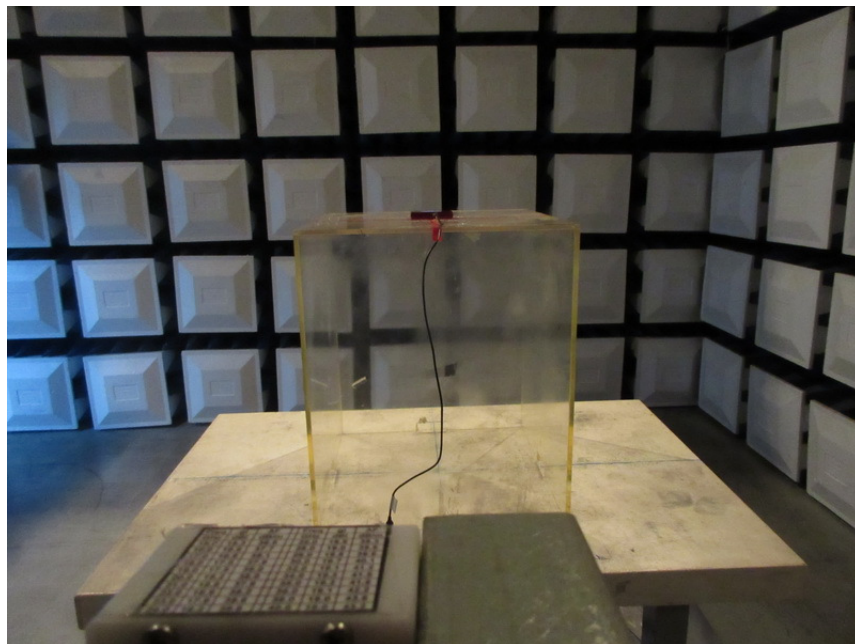

Radiated Spurious Emission (above 18GHz)

Conducted Emissions

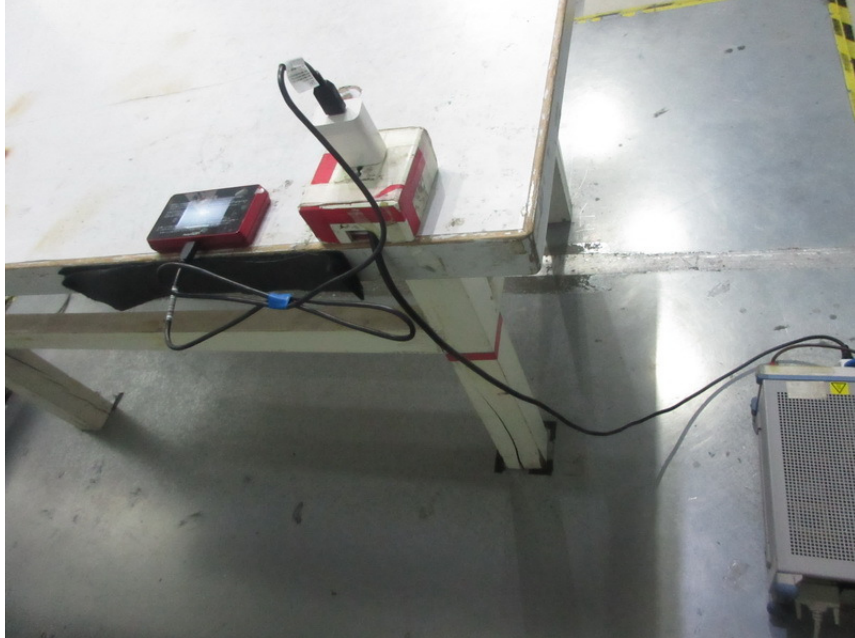

-----The END-----