



Photos of Test Setup

For GSM&WCDMA&LTE


1. Radiated Spurious Emissions

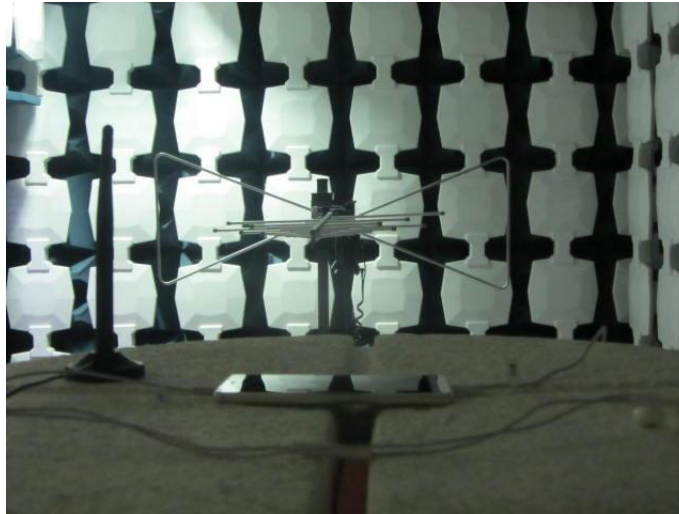

Radiated Spurious Emission (below 3GHz)

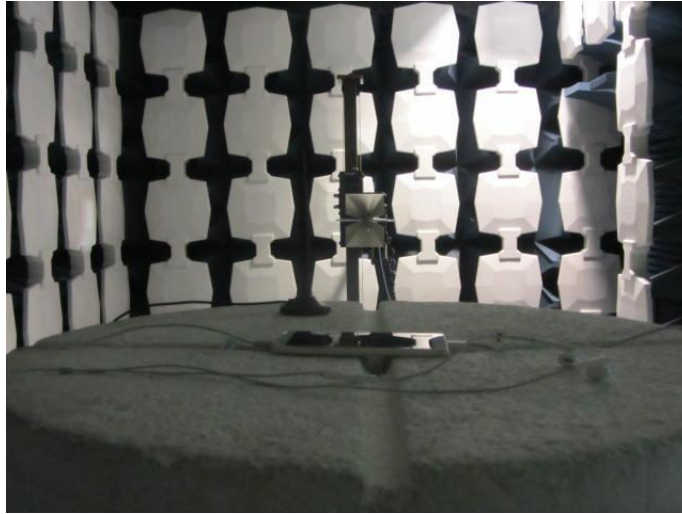

Radiated Spurious Emission (3GHz to18GHz)

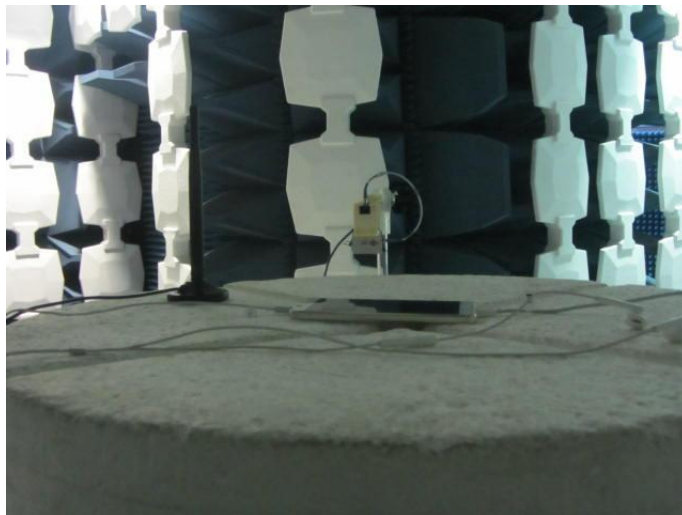


Radiated Spurious Emission (18GHz to26.5GHz)

For Wlan/BT

2. Radiated Spurious Emissions



Radiated Spurious Emission (below 1GHz)

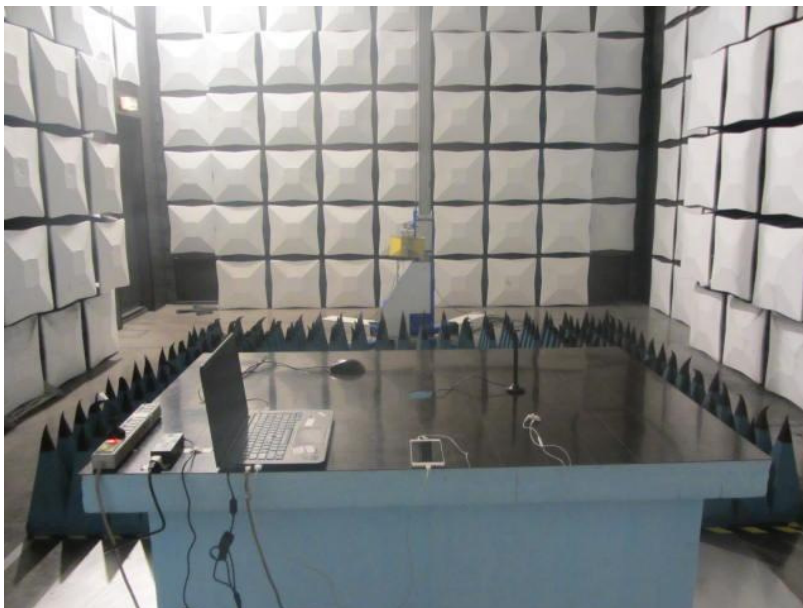


Radiated Spurious Emission (1GHz to 18GHz)




Radiated Spurious Emission (above 18GHz)


Conducted Emissions

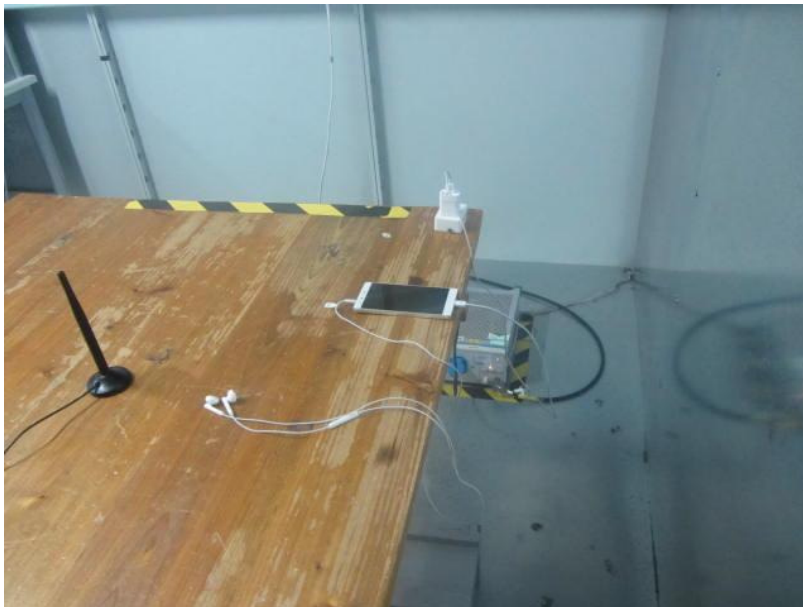

For NFC

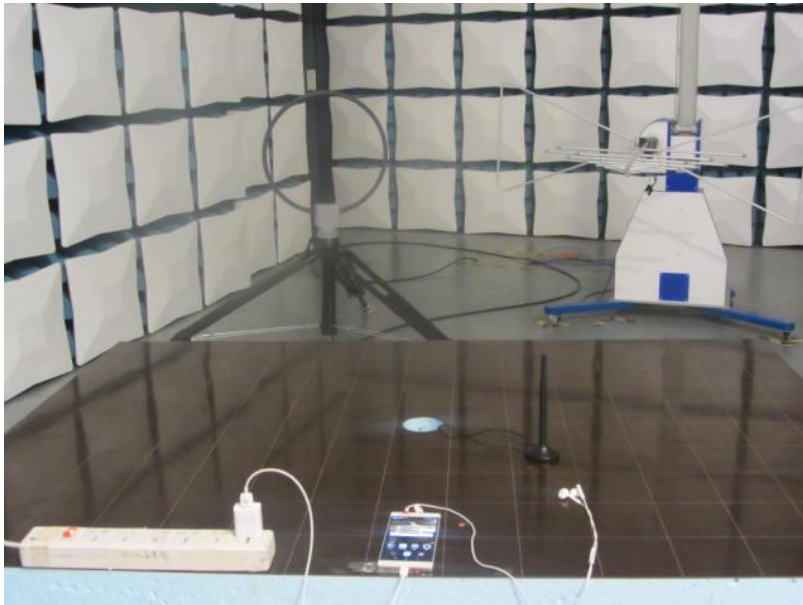

9kHz-30MHz

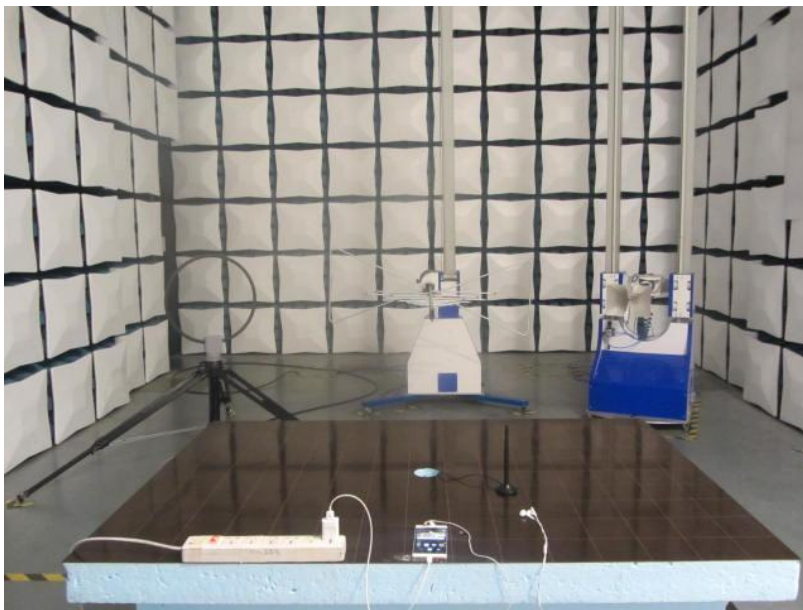

30MHz-1GHz

-----The END-----