


Photos of Test Setup

For GSM&WCDMA&LTE

1. Radiated Spurious Emissions

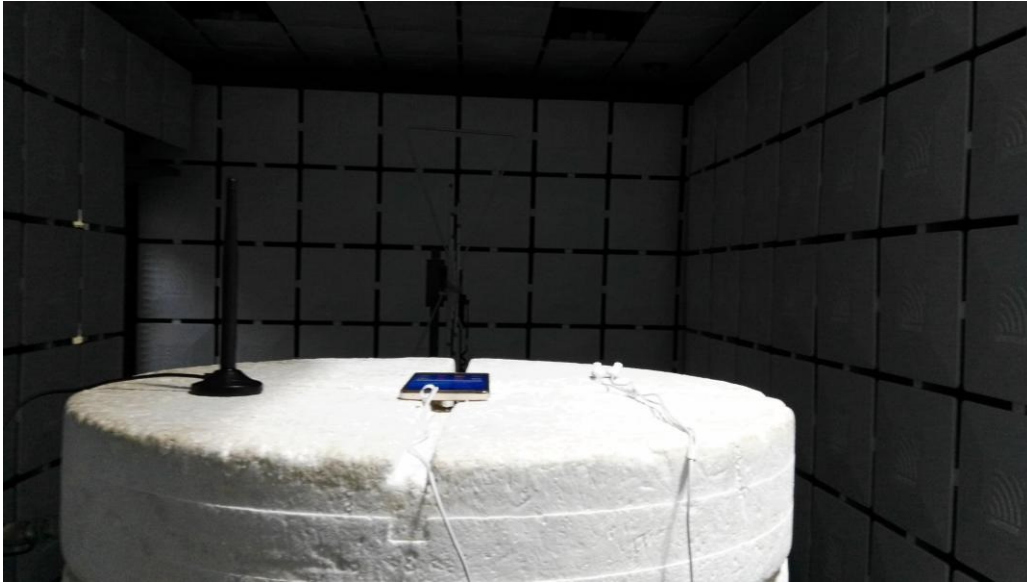

Radiated Spurious Emission (below 1GHz)



Radiated Spurious Emission (1GHz to 18GHz)



Radiated Spurious Emission (18GHz to26.5GHz)

For Wlan/BT

2. Radiated Spurious Emissions



Radiated Spurious Emission (below 1GHz)



Radiated Spurious Emission (1GHz to 18GHz)



Radiated Spurious Emission (above 18GHz)

Conducted Emissions



-----The END-----