




Photos of Test Setup

For GSM&WCDMA&LTE

1. Radiated Spurious Emissions

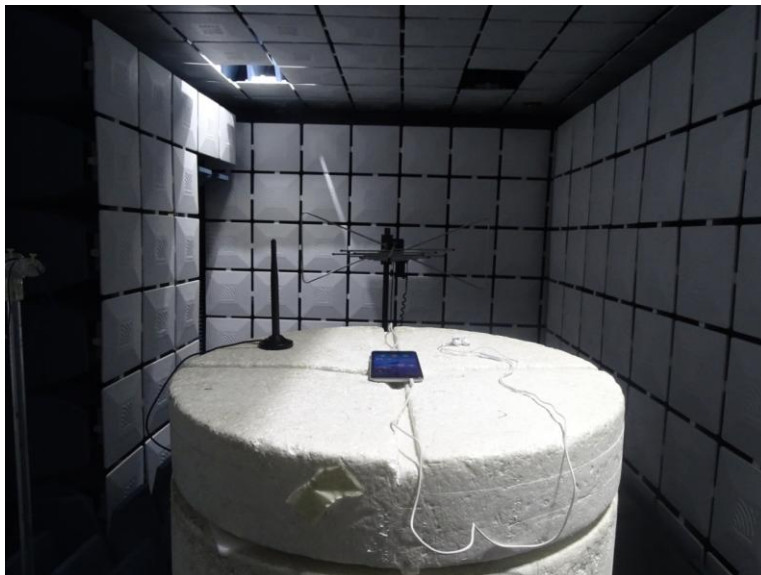


Radiated Spurious Emission (below 3GHz)




Radiated Spurious Emission (3GHz to 18GHz)

For Wlan/BT


2. Radiated Spurious Emissions

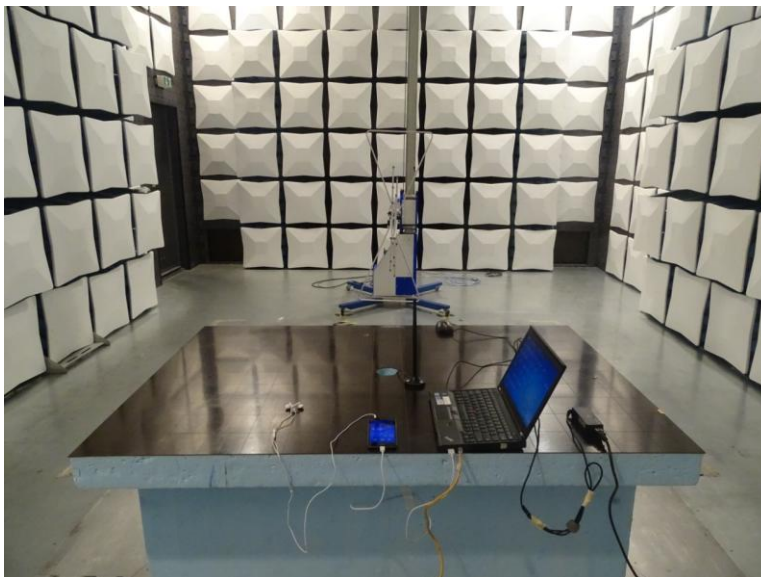

Radiated Spurious Emission (below 1GHz)

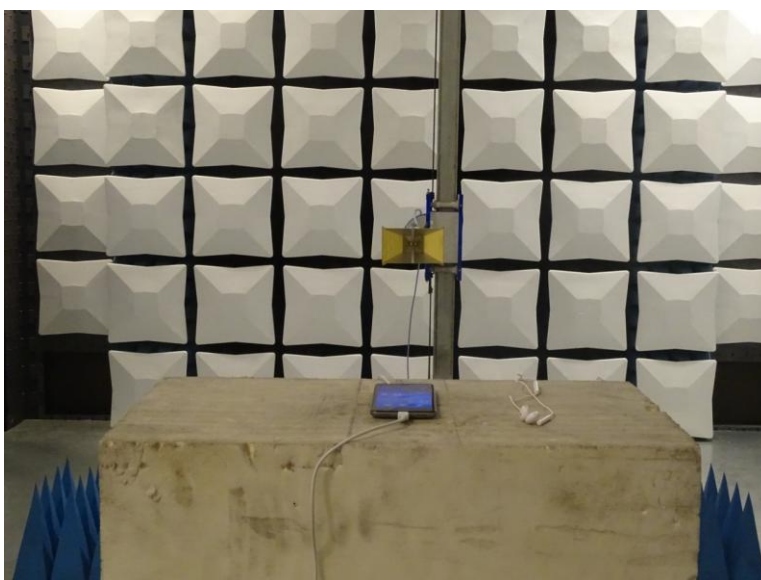

Radiated Spurious Emission (1GHz to 18GHz)

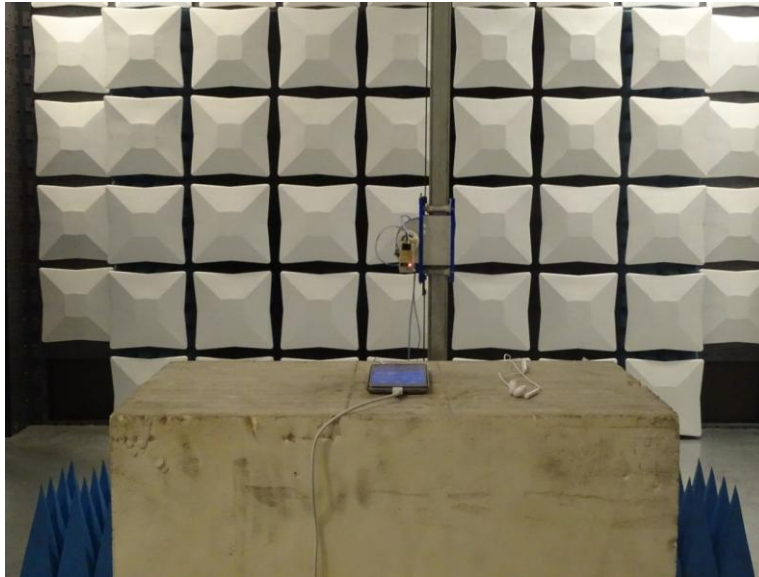

Radiated Spurious Emission (above 18GHz)

Conducted Emissions



-----The END-----