




Photos of Test Setup

For GSM&WCDMA&LTE

1. Radiated Spurious Emissions

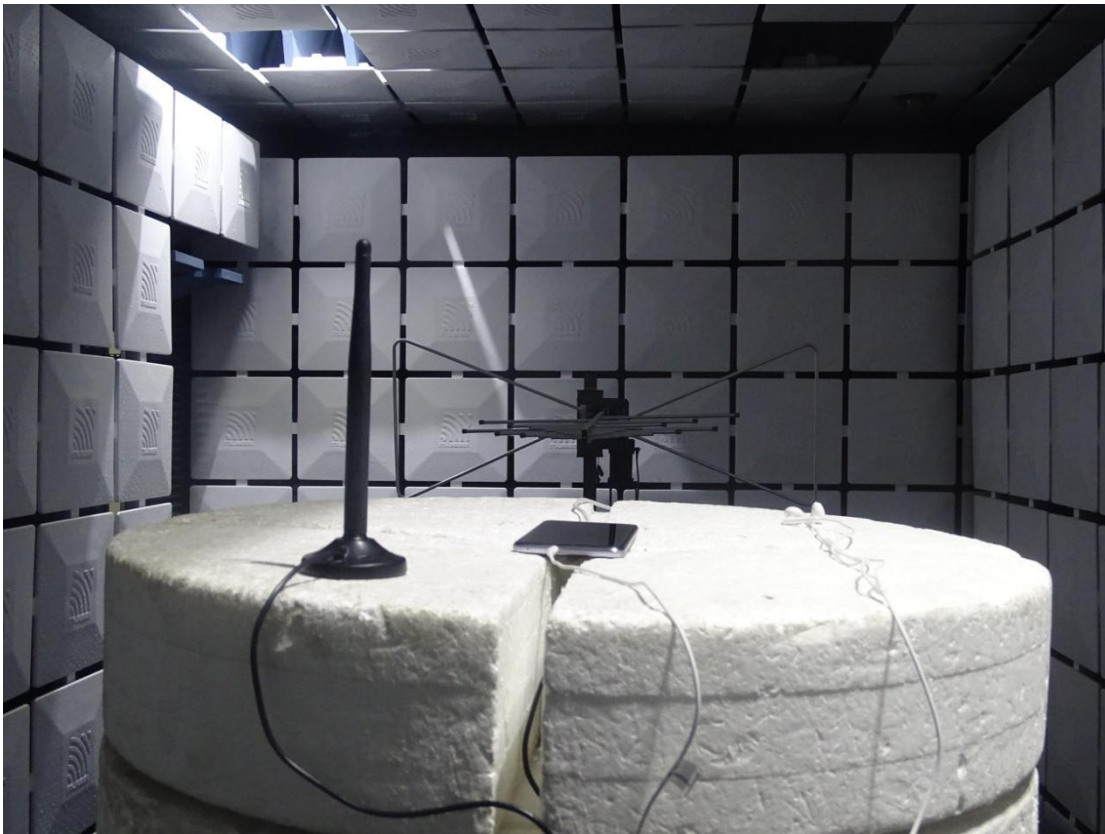

Radiated Spurious Emission (below 3GHz)



Radiated Spurious Emission (3GHz to18GHz)




Radiated Spurious Emission (18GHz to26.5GHz)


For Wlan/BT

2. Radiated Spurious Emissions

Radiated Spurious Emission (below 1GHz)

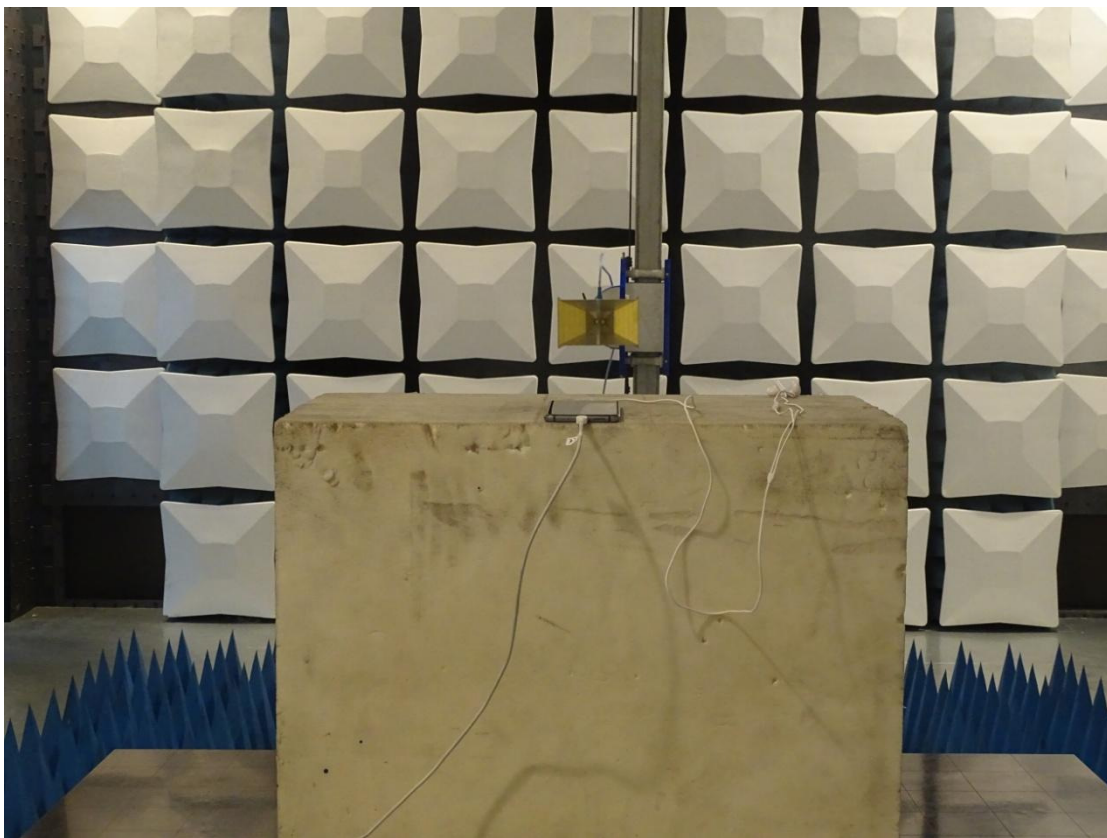


Radiated Spurious Emission (1GHz to 18GHz)

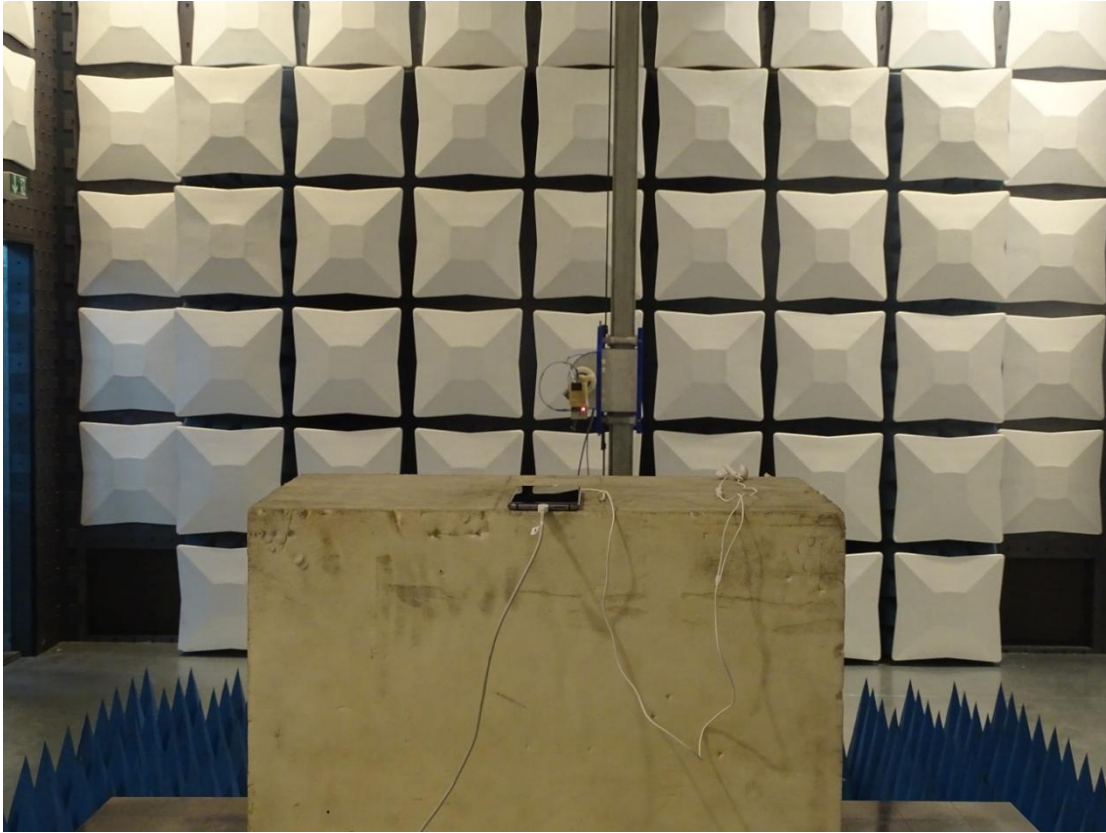

Radiated Spurious Emission (above 18GHz)

For NFC


3. Radiated Spurious Emissions

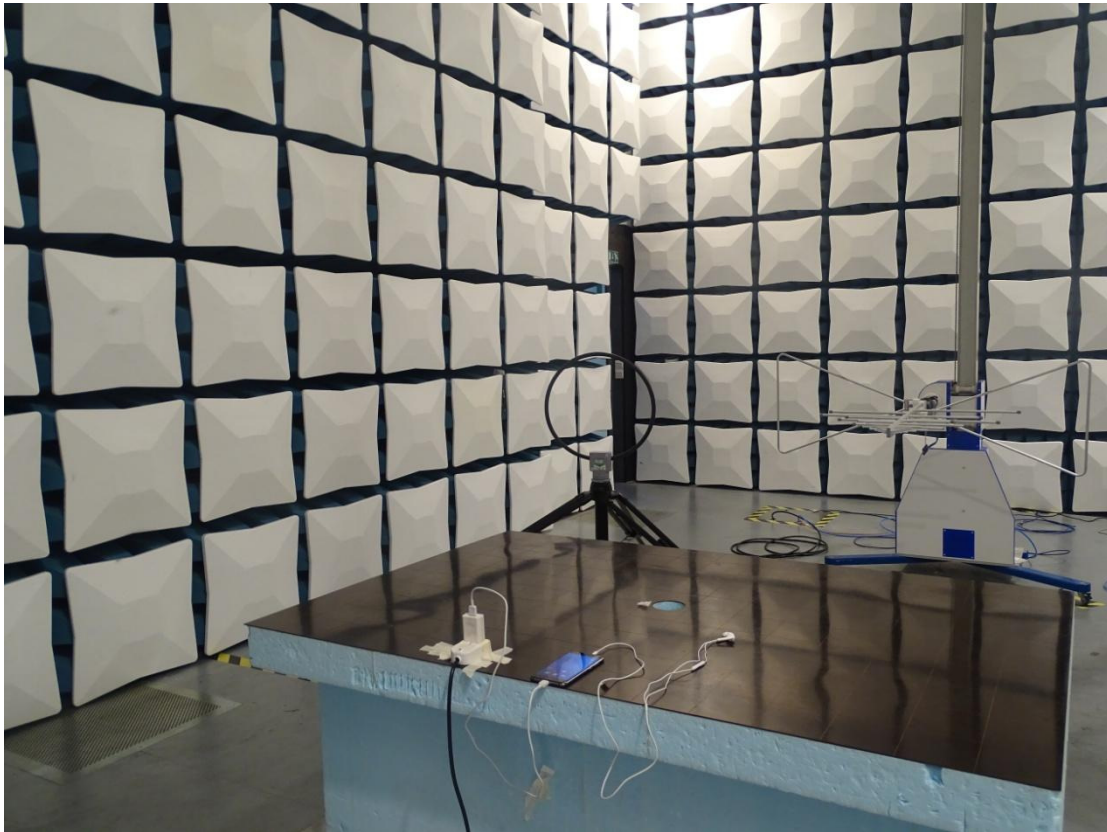

Radiated Spurious Emission (9K-30MHz)

Radiated Spurious Emission (30MHz-1GHz)

Conducted Emissions

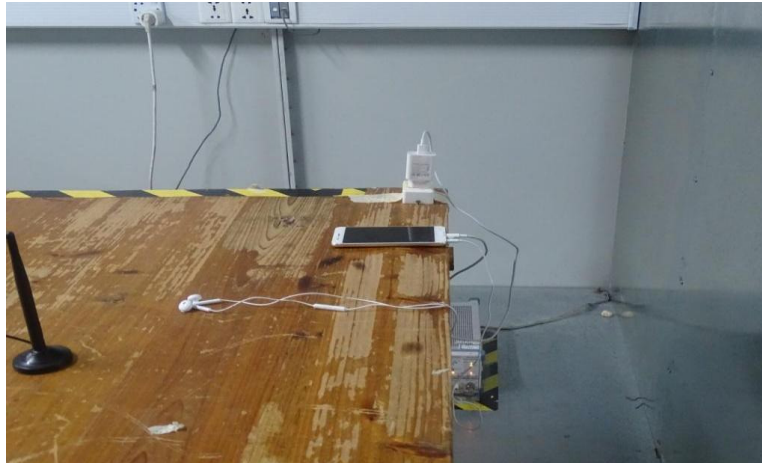

-----The END-----