

D-Link Quick Installation Guide

DWL-G520I Internal Antenna Installation

Before You Begin

- Make sure to turn off your computer and unplug the power cord.

1

Remove the front plastic cover from the computer.



2

Identify an antenna installation location:


- A. High on the metal front of the chassis.
- B. Use a clearance area which will not interfere with the plastic cover.

3

Carefully guide the antenna cable through the desired aperture towards the PCI slots.



4

Verify proper clearance exists between the metal and front plastic cover.

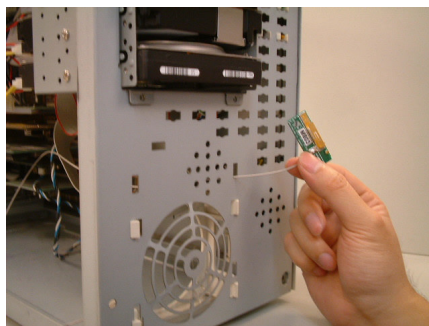

5




Pull the cable taut, expose the adhesive on the antenna, and affix the antenna less than 2cm from the cable hole on the clean metal surface.

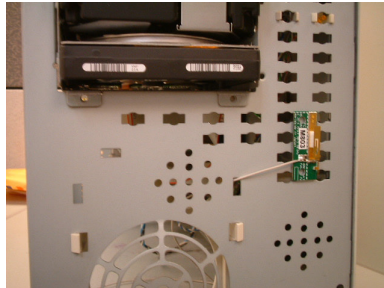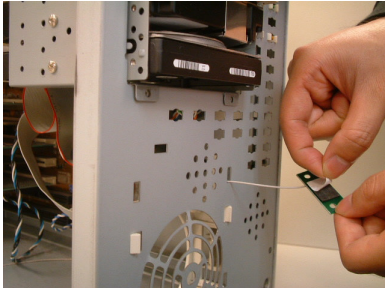

6

Attach the antenna cable to the DWL-G520I by gently pushing it into the on-board connector.

Attach the antenna cable

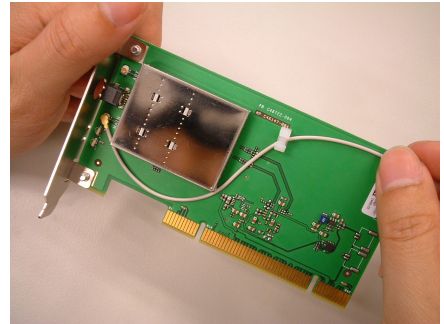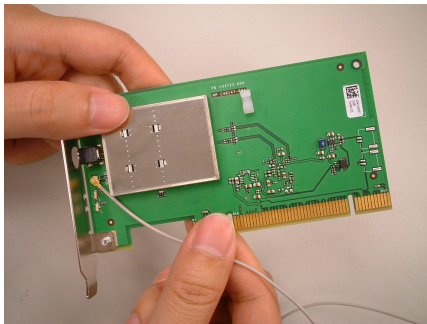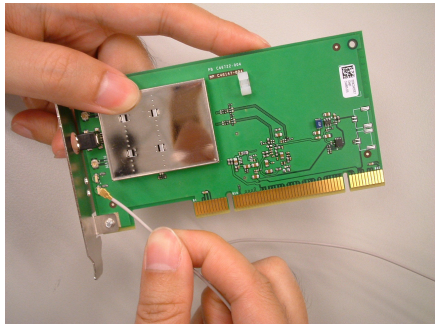

7

Install the DWL-G520I carefully and firmly seat it into an available PCI slot (may require removing an existing bracket on the computer back panel).



8

Secure the DWL-G520I PCI bracket to the computer back panel.

9

Ensure the cable is clear of sharp corners or edges, away from wide ribbon cables, and secure as needed.

10

Replace the computer front plastic cover.

