


SONIXIQV2 Module Label

- 1.) DO NOT INSTALL SHIELD LIDS UNTIL AFTER PCBA IS CONFORMAL COATED.
- 2.) IF PCBA WILL NOT BE CONFORMAL COATED, INSTALL SHIELD LIDS AFTER PCBA SUCCESSFULLY PASSES FUNCTIONAL TEST.
- 3.) DO NOT USE PCBA COMPONENTS AS A FULCRUM (PRY POINT) TO REMOVE SHIELD LIDS.
- 4.) WHEN INSTALLING SHIELD LID PRESS ONLY ON THE EDGES OR CORNERS.
- 5.) DO NOT PRESS IN CENTER OF LID OR INSTALL LID AT AN ANGLE.
- 6.) VERIFY SHIELD LID SNAPS ARE FULLY ENGAGED.
- 7.) PLACE LABEL LBL1 (FCC) IF INCLUDED ON SHIELD LID. LABEL MUST NOT OVERHANG SHIELD LID PERIMETER.

Model: SONIXIQV2
FCC ID: SDBSONIXIQV2
IC: 2220A-SONIXIQV2

LBL1 (FCC) CONTENT

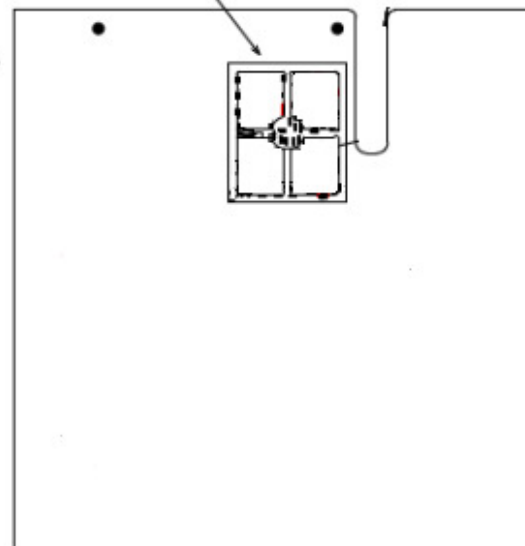

AS VIEWED FROM BOTTOM SIDE