



Annex A Photographs

Remark: The yellow wire visible on the photographs below is the trigger output, which will be used for several transmitter test cases. It will be not installed for mass production.

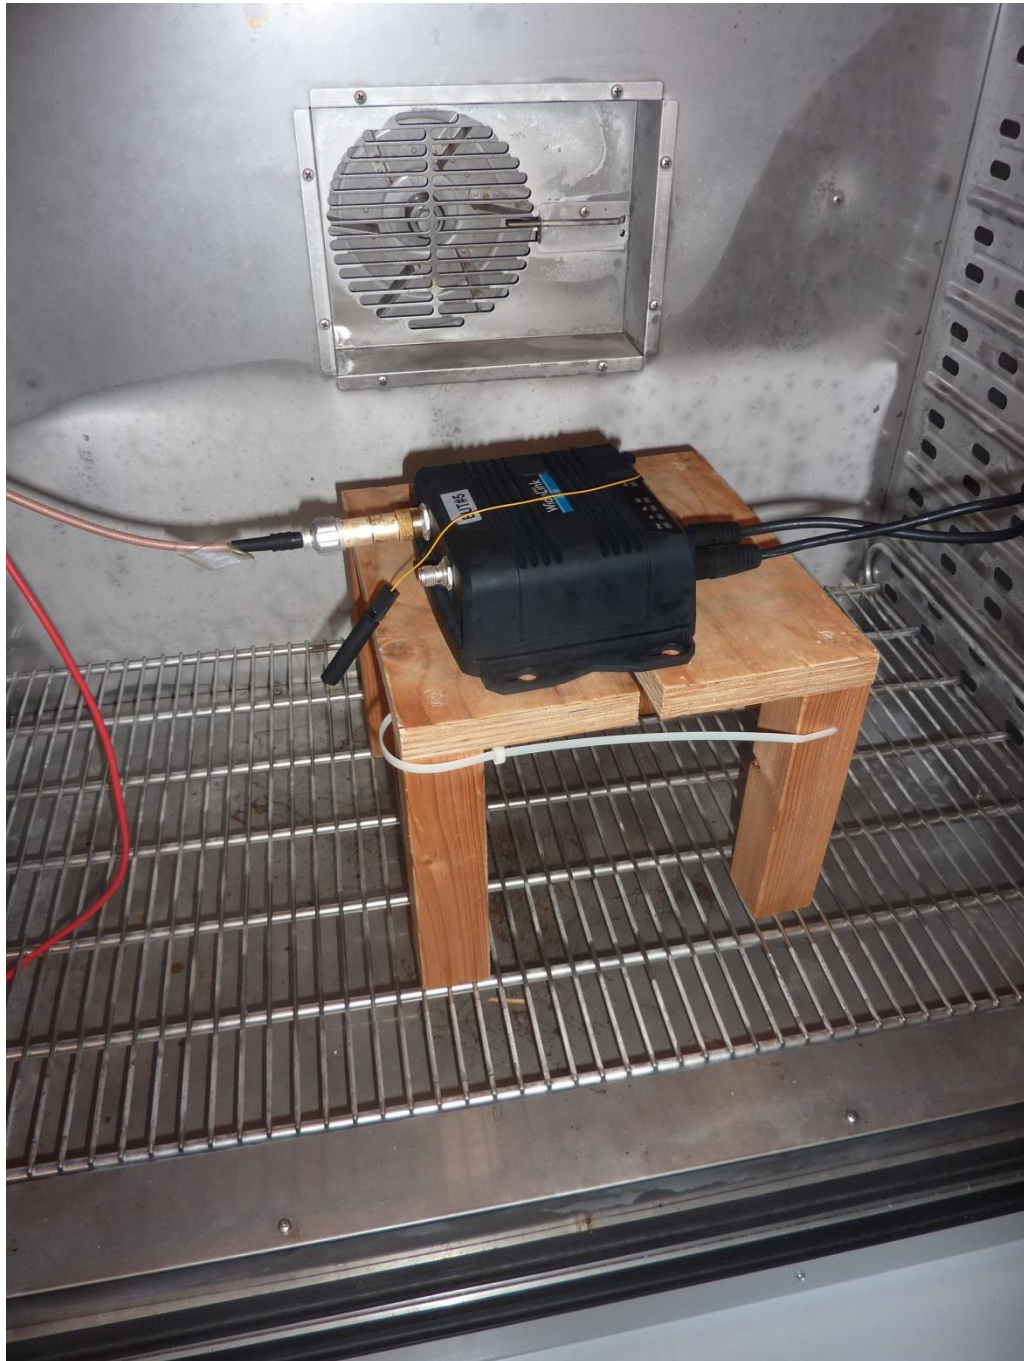

161141_a.jpg: WideLink B600, test setup temperature chamber

Annex A Photographs

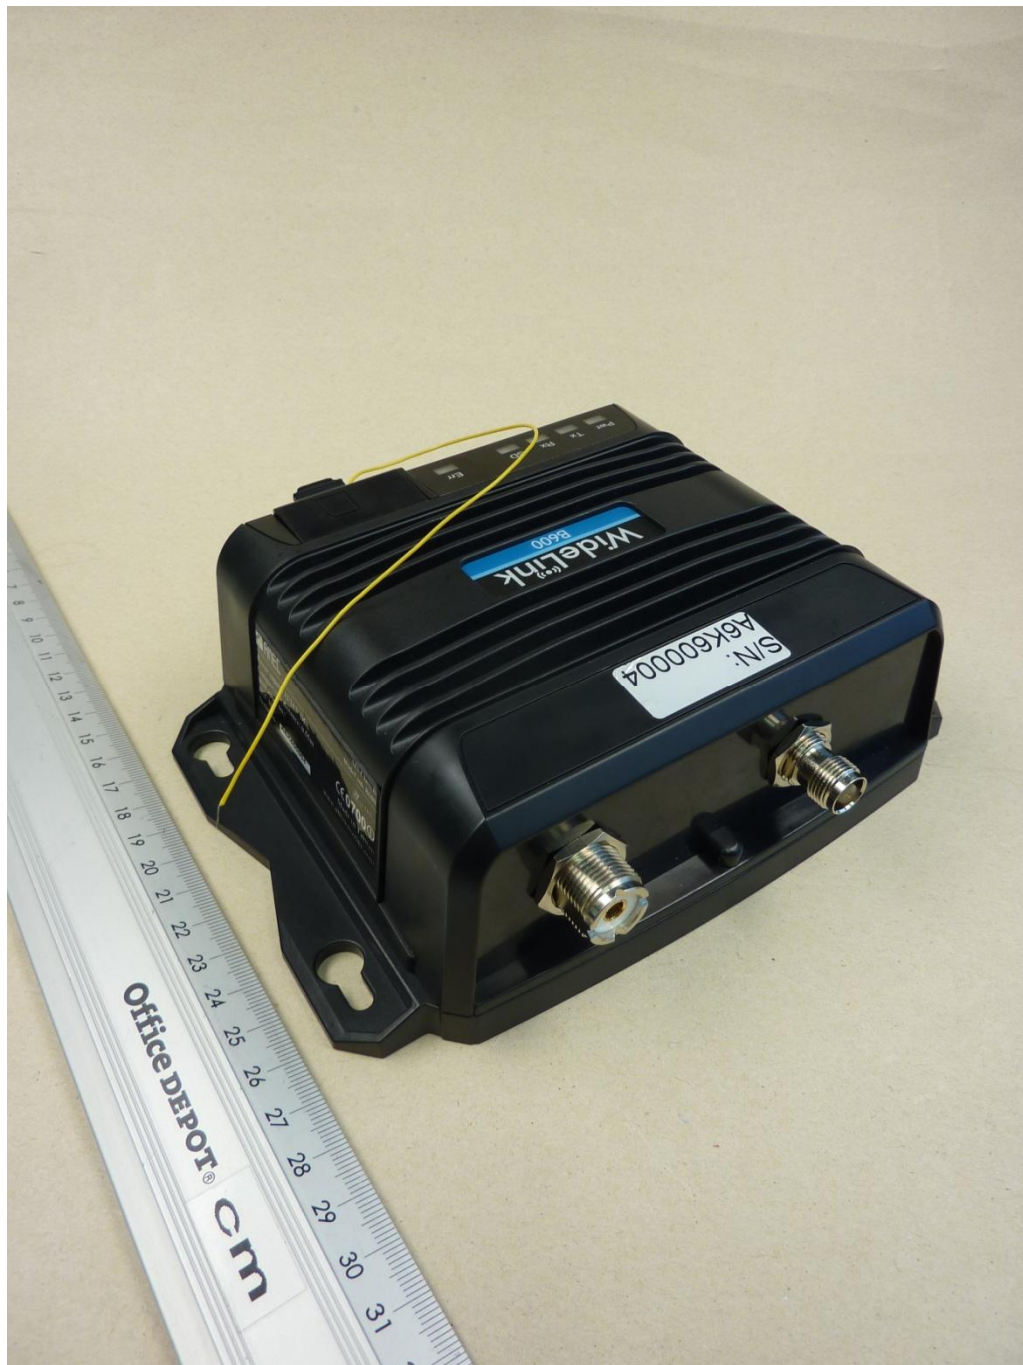

161141_1.jpg: WideLink B600, 3D-view 1

Annex A Photographs



161141_2.jpg: WideLink B600, 3D-view 2

Annex A Photographs



161141_3.jpg: WideLink B600, connector view 1

Annex A Photographs




161141_4.jpg: WideLink B600, connector view 2

Annex A Photographs




161141_6.jpg: WideLink B600, type plate view

Annex A Photographs

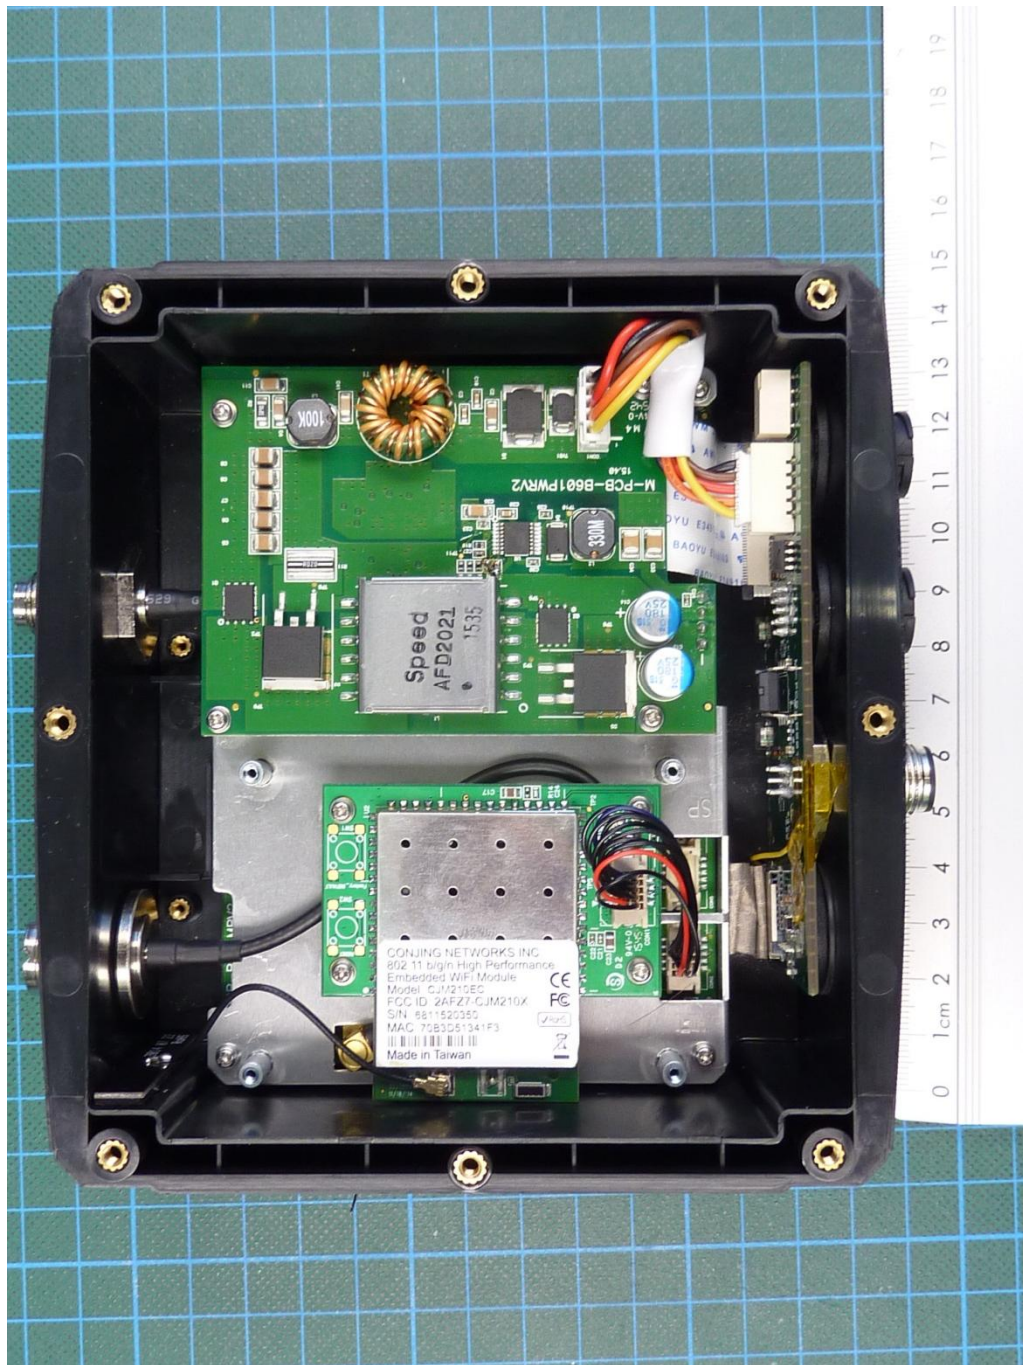


161141_7.jpg: WideLink B600, internal view

Annex A Photographs

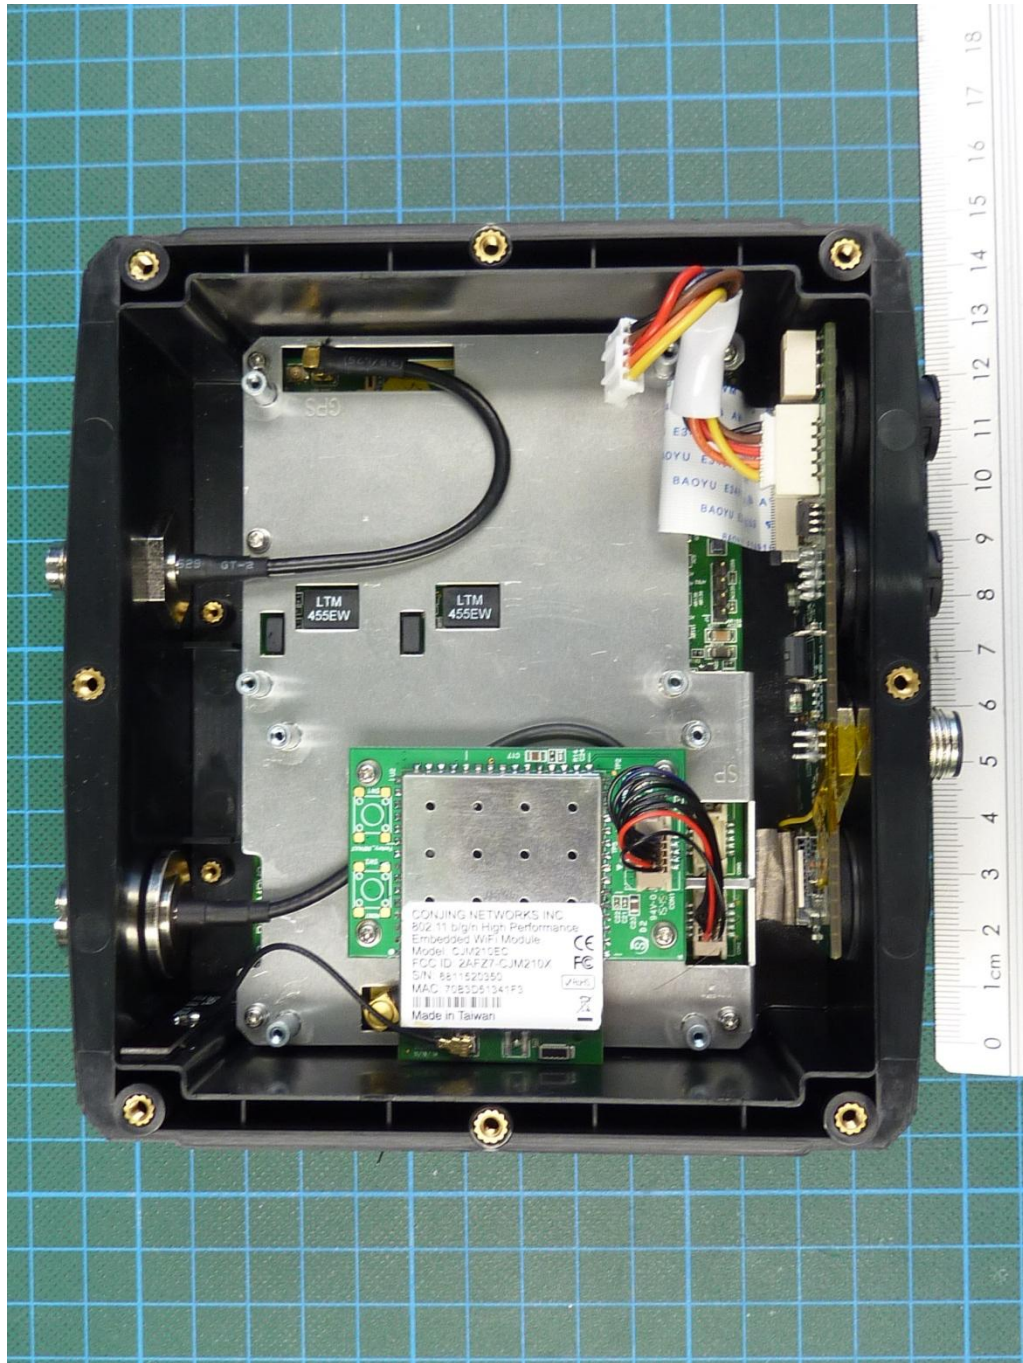


161141_8.jpg: WideLink B600, internal view, PCB 1 removed

Annex A Photographs

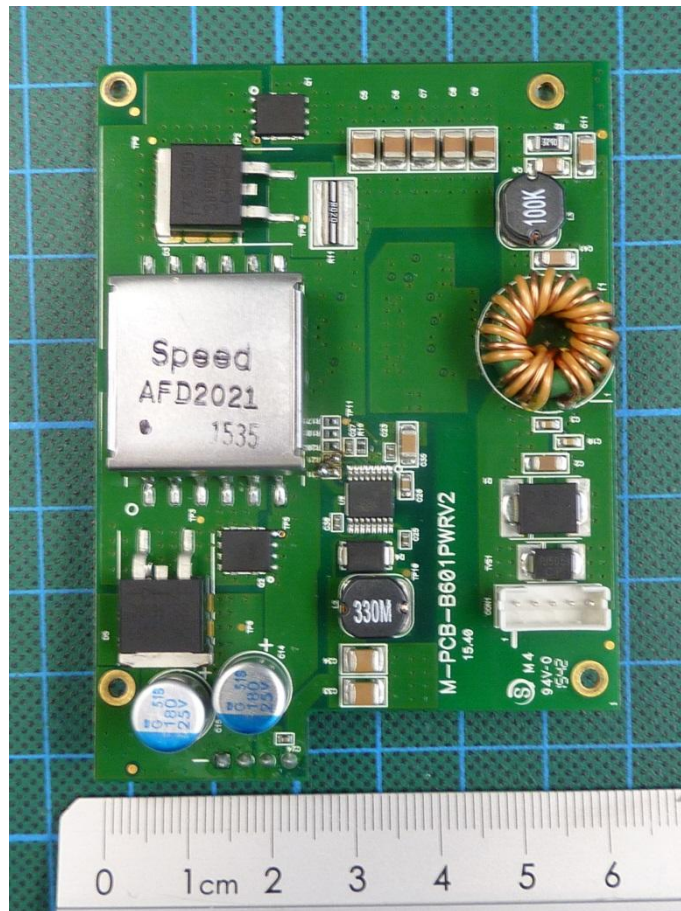


161141_12.jpg: WideLink B600, PCB 1, top view

Annex A Photographs

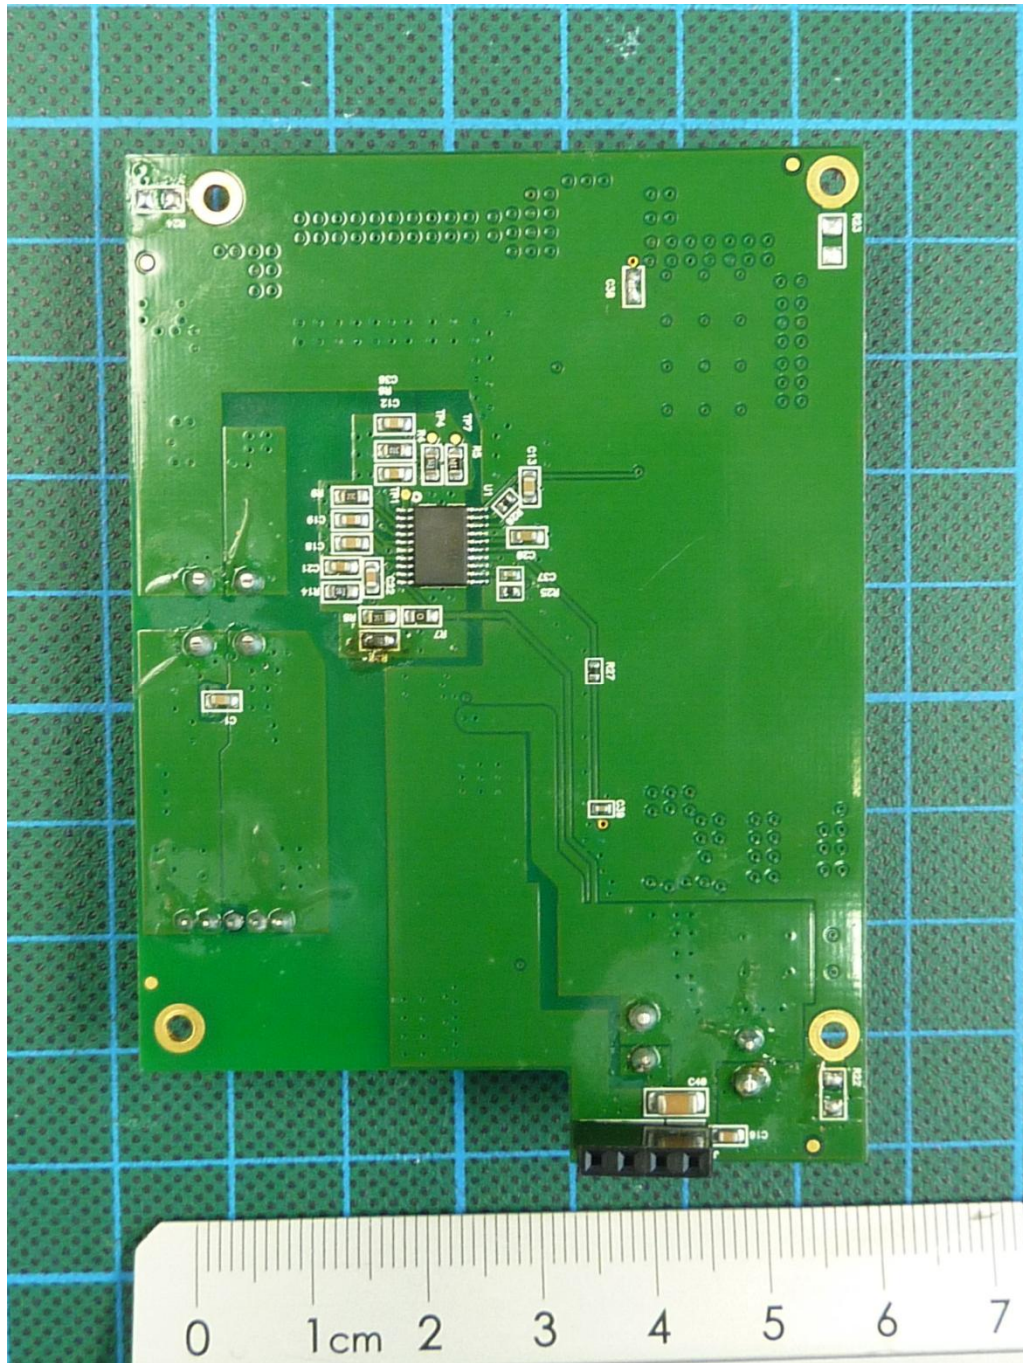


161141_13.jpg: WideLink B600, PCB 1, bottom view

Annex A Photographs

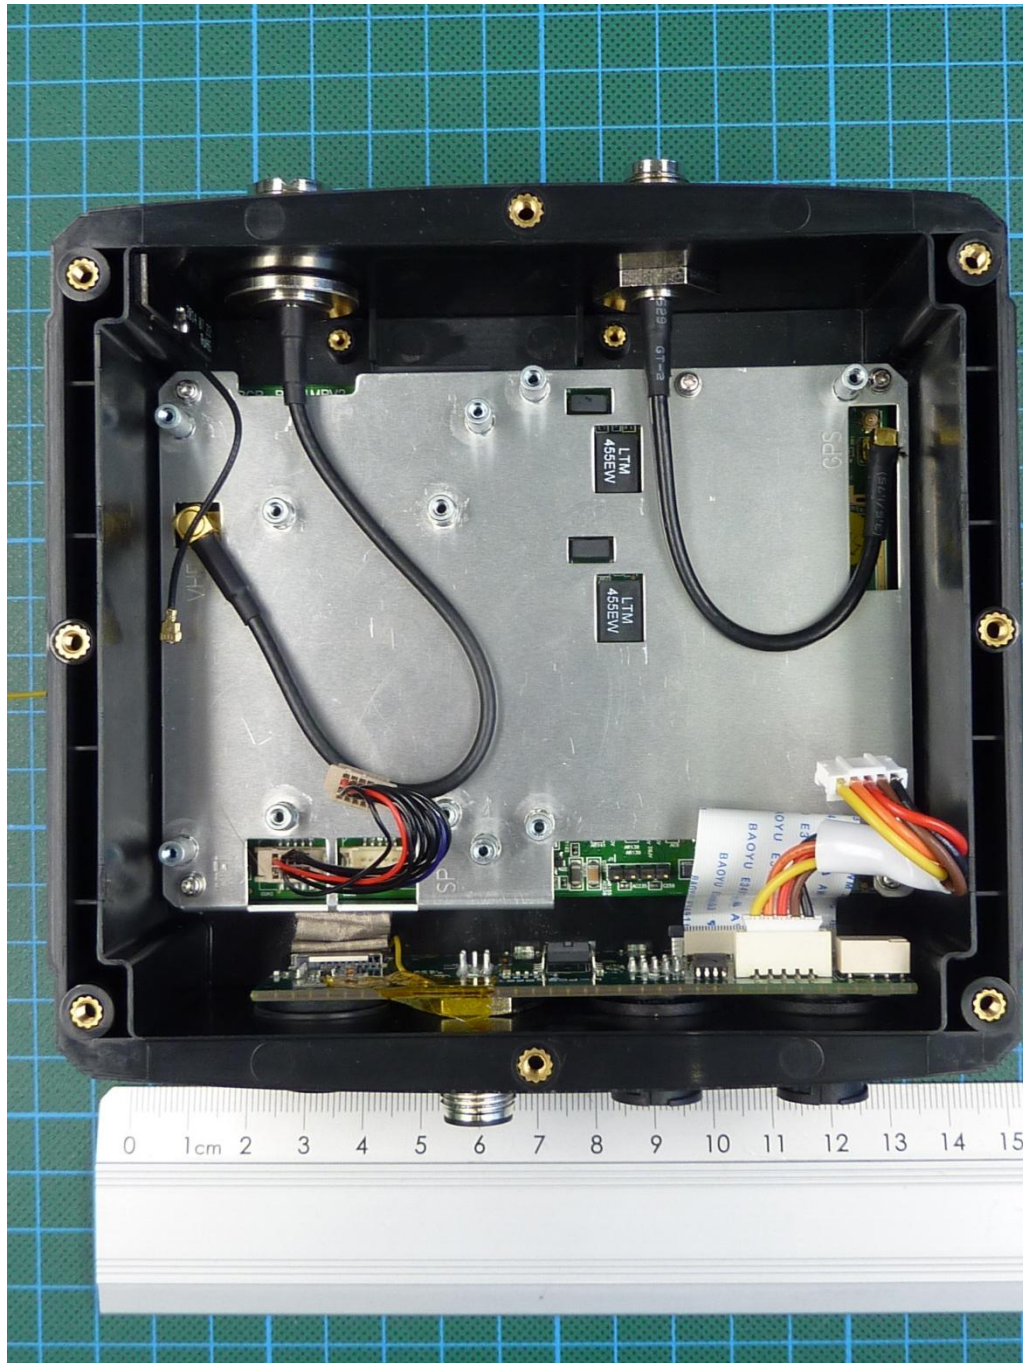


161141_9.jpg: WideLink B600, internal view, PCB 2 removed

Annex A Photographs

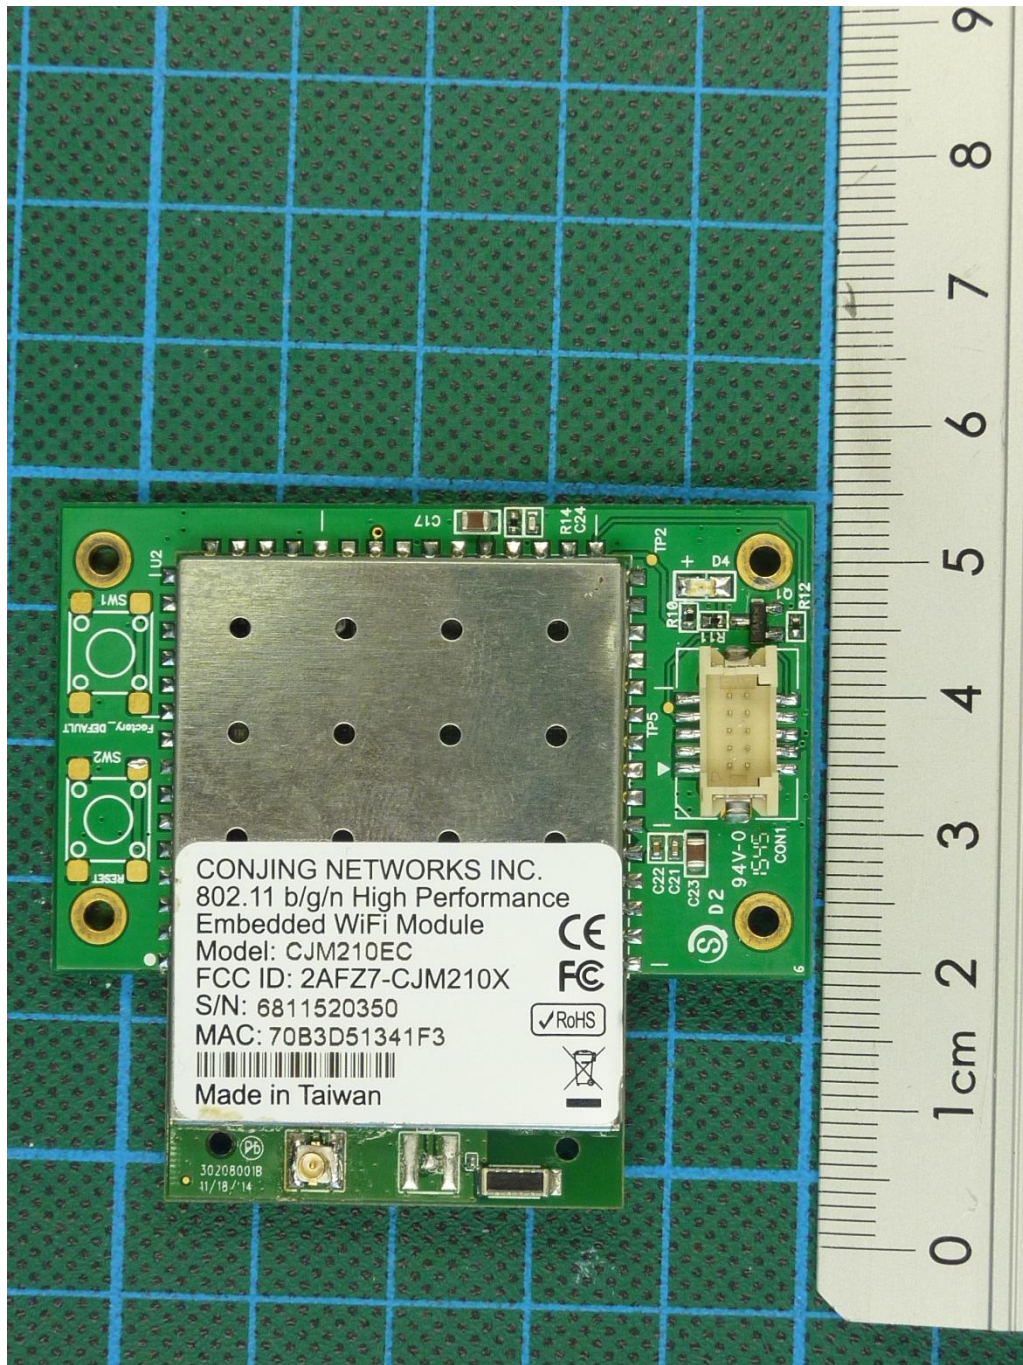


161141_14.jpg: WideLink B600, PCB 2, top view

Annex A Photographs

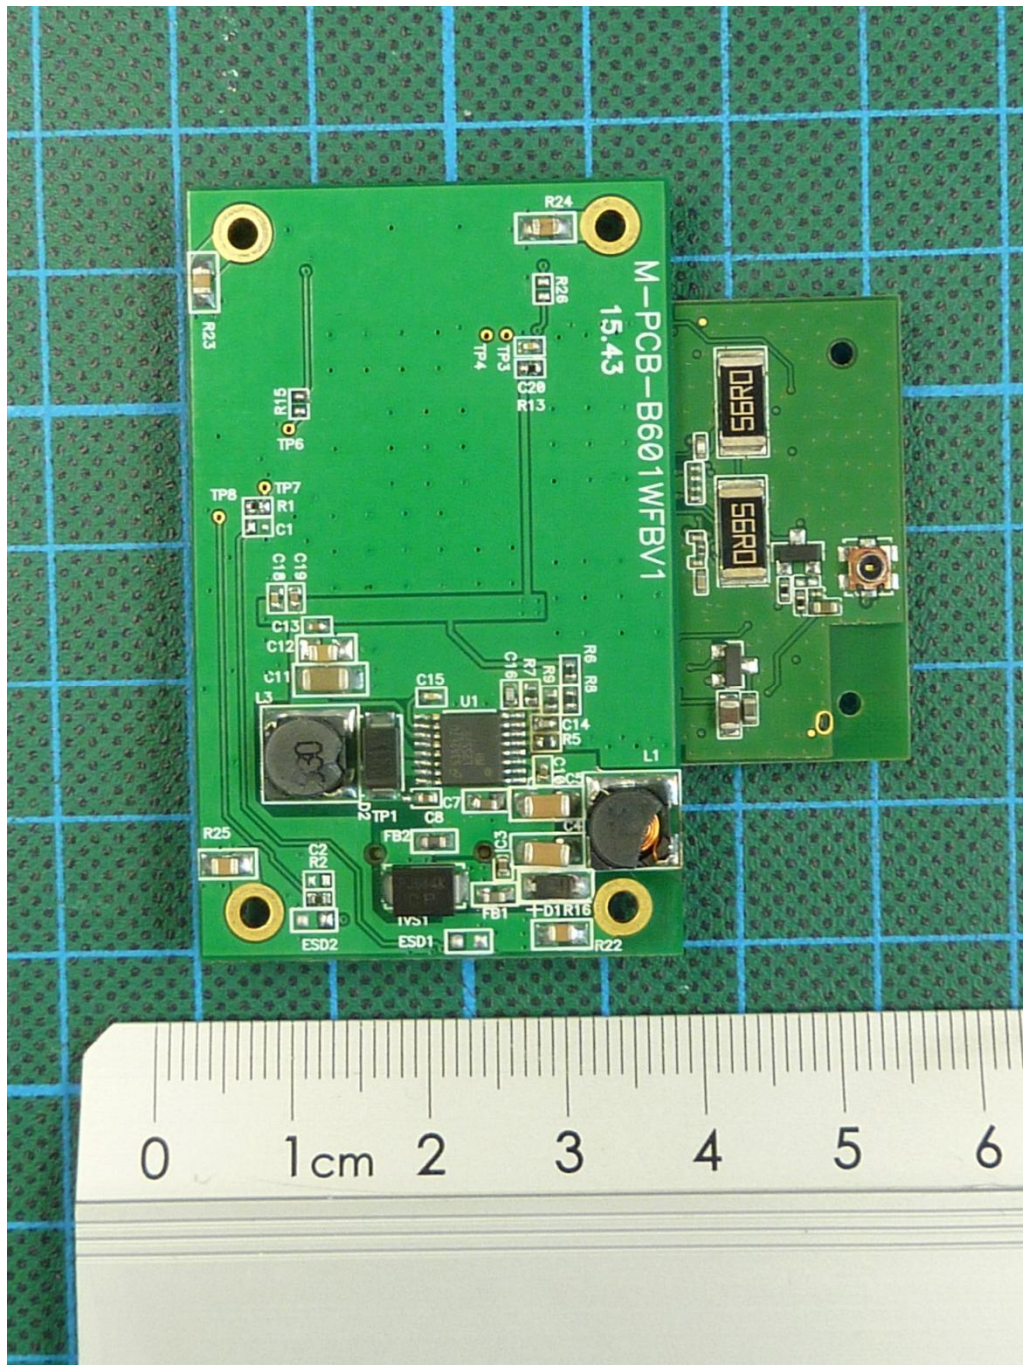


161141_15.jpg: WideLink B600, PCB 1, bottom view

Annex A Photographs

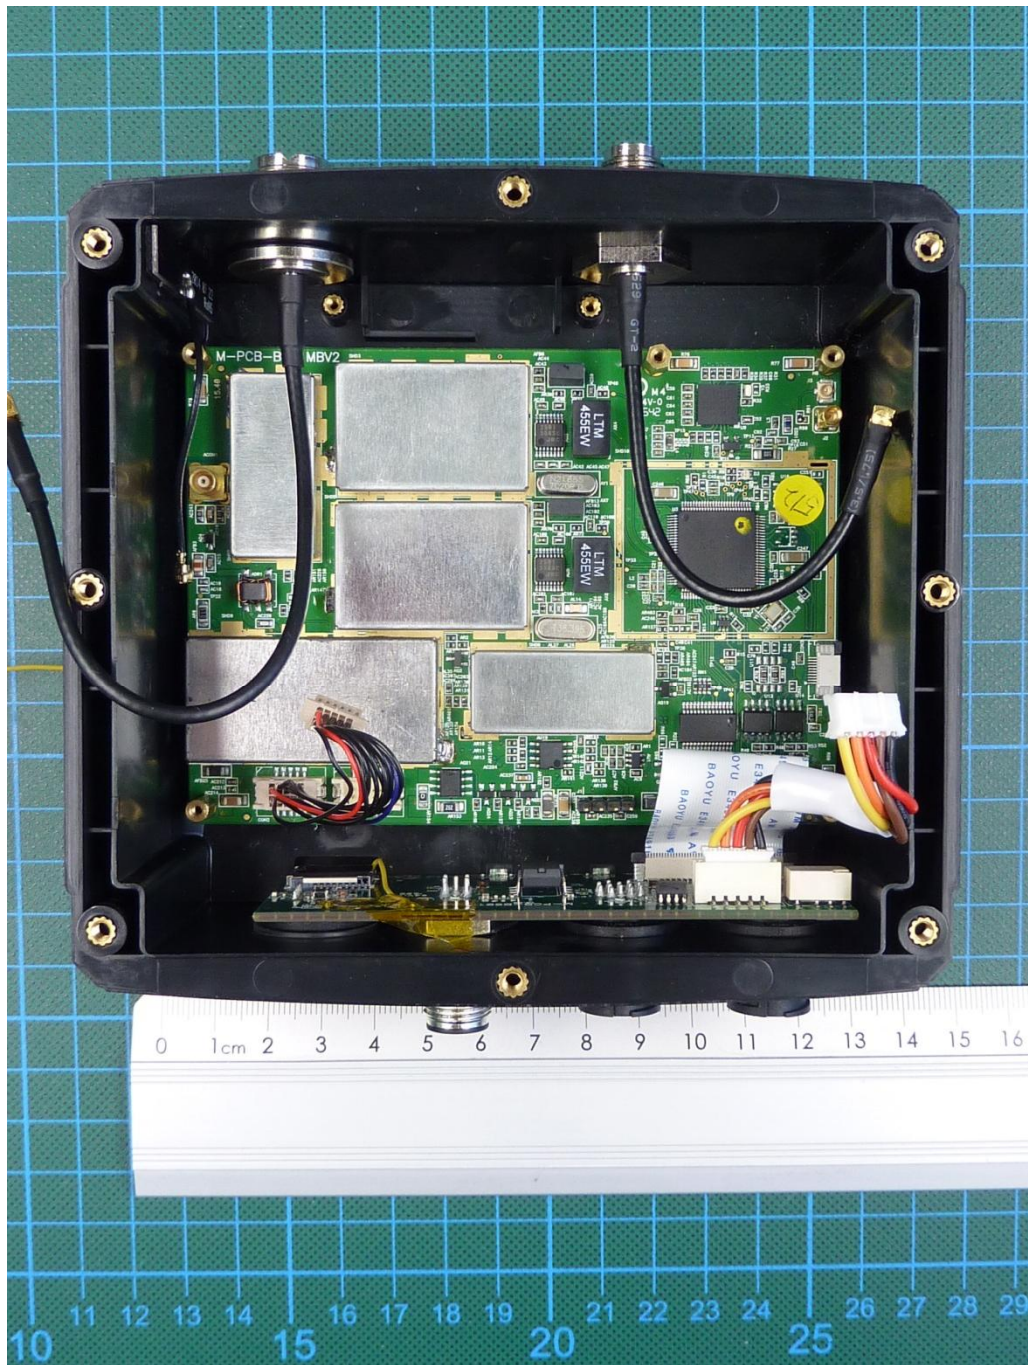


161141_11.jpg: WideLink B600, internal view, shielding removed

Annex A Photographs

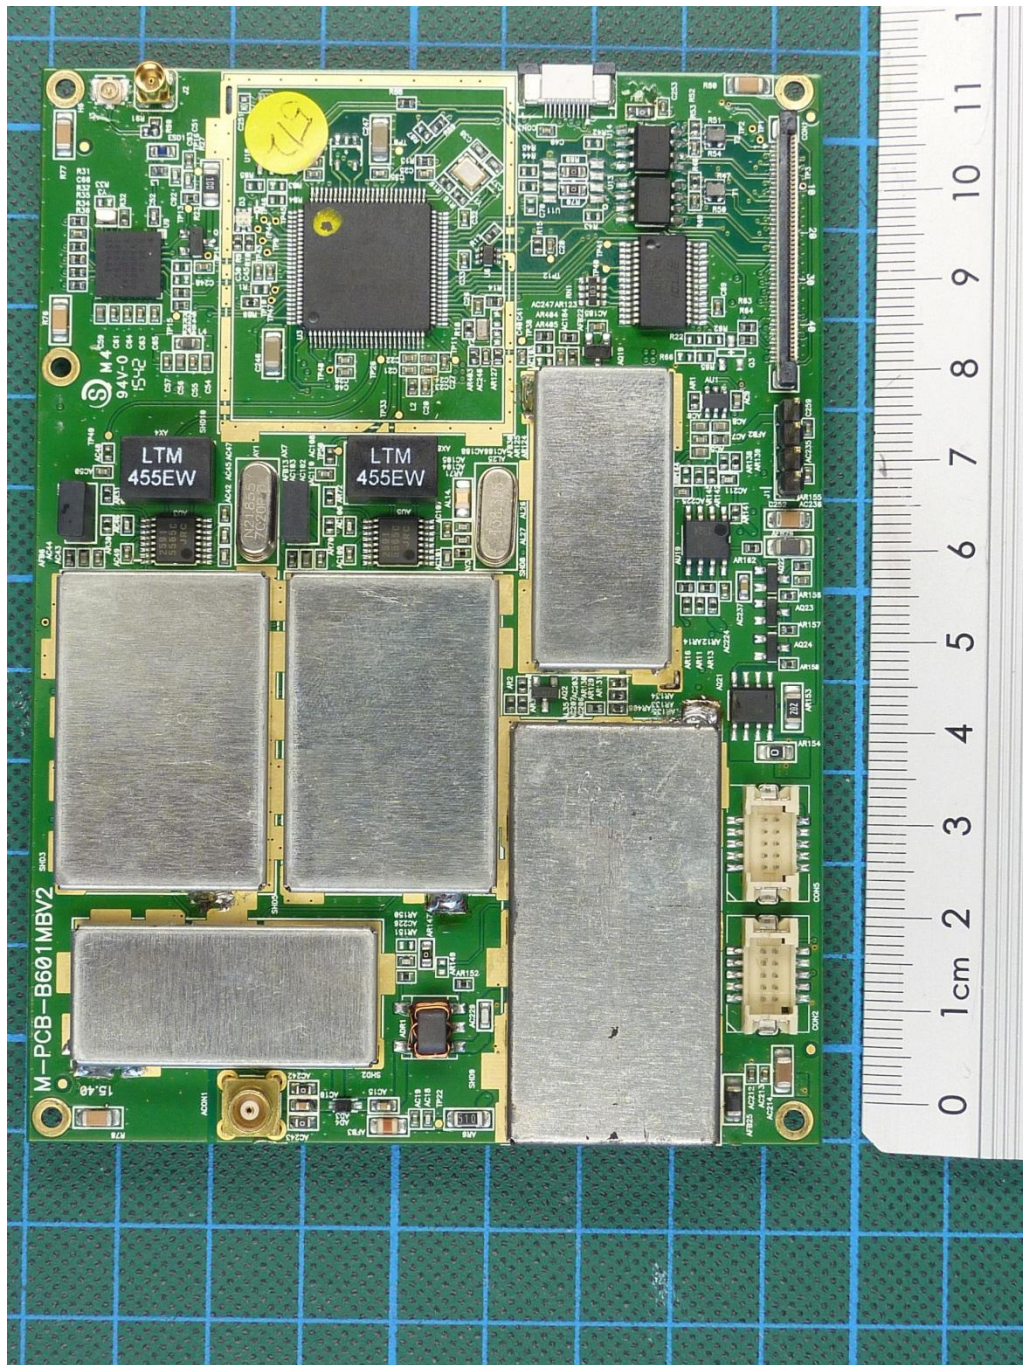


161141_16.jpg: WideLink B600, PCB 3, top view

Annex A Photographs

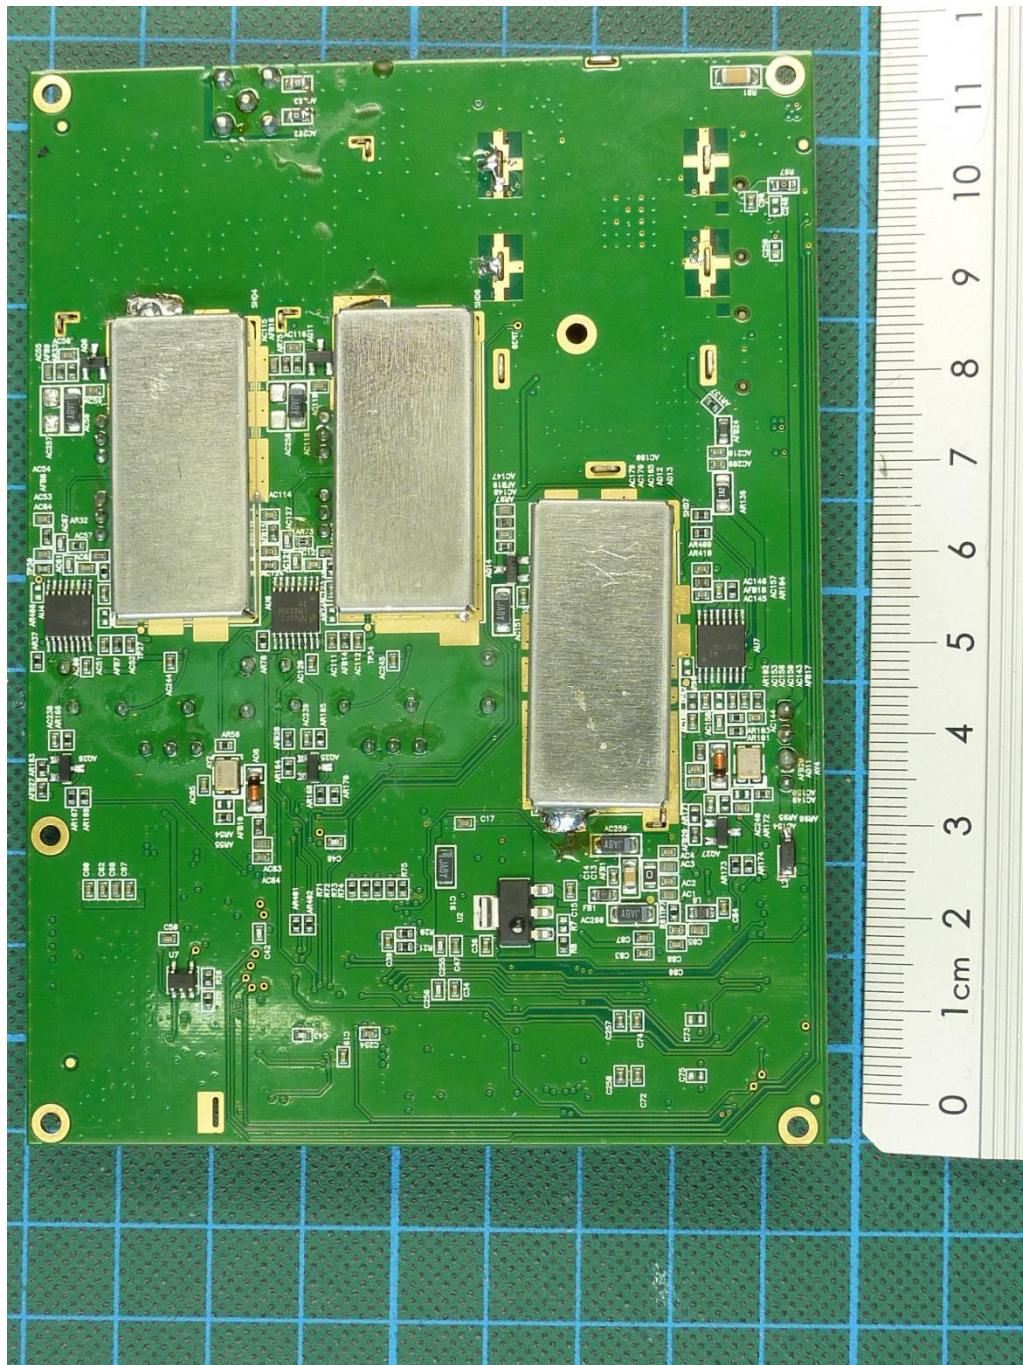


161141_17.jpg: WideLink B600, PCB 3, bottom view

Annex A Photographs

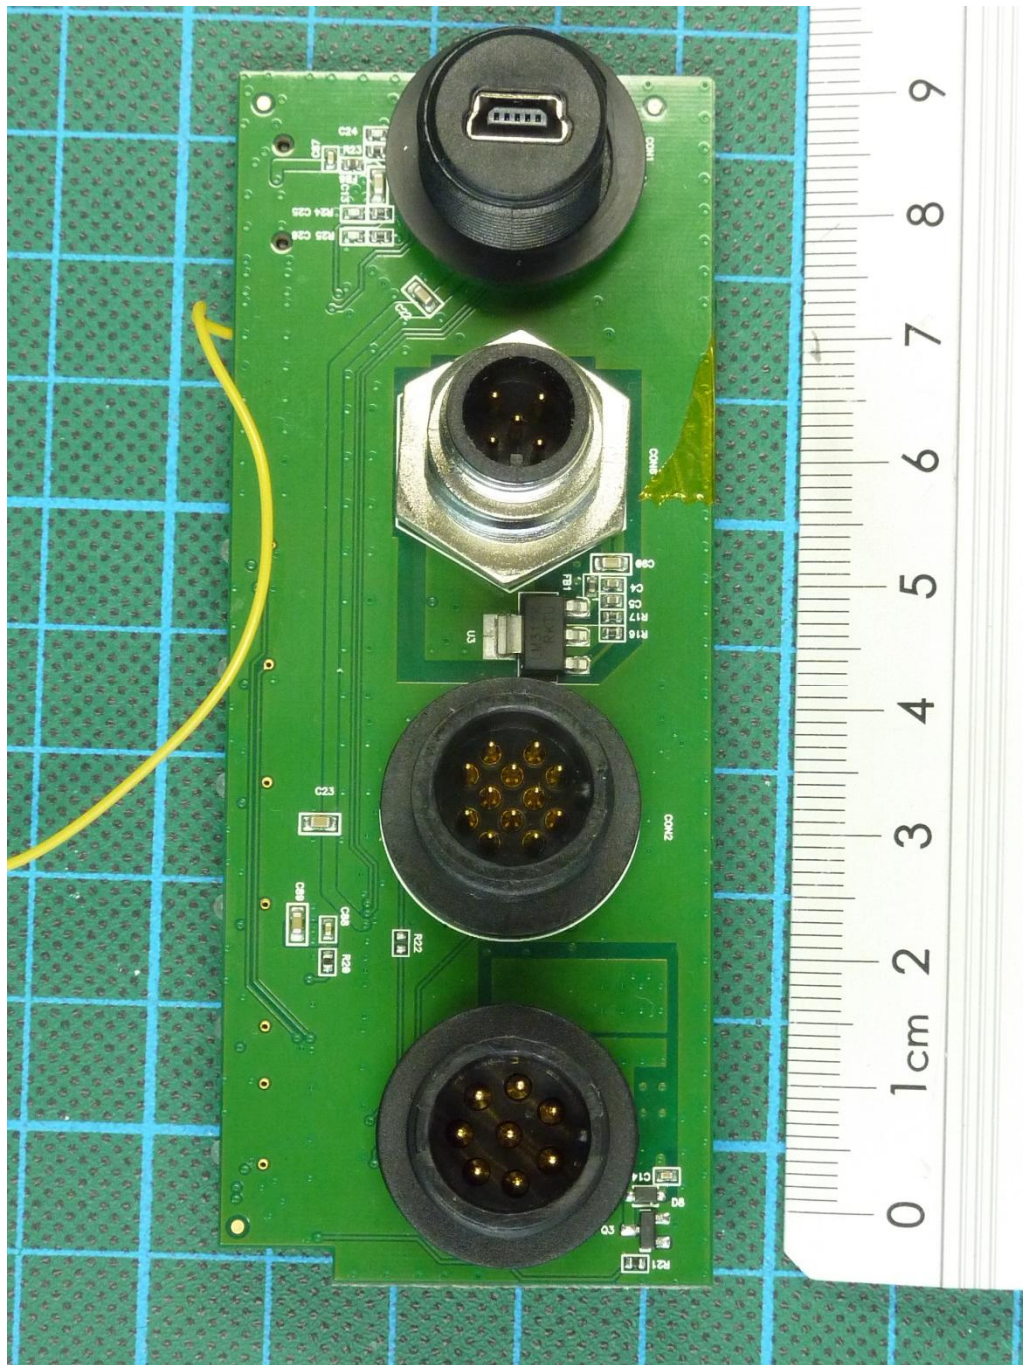


161141_18.jpg: WideLink B600, PCB 3, top view

Annex A Photographs

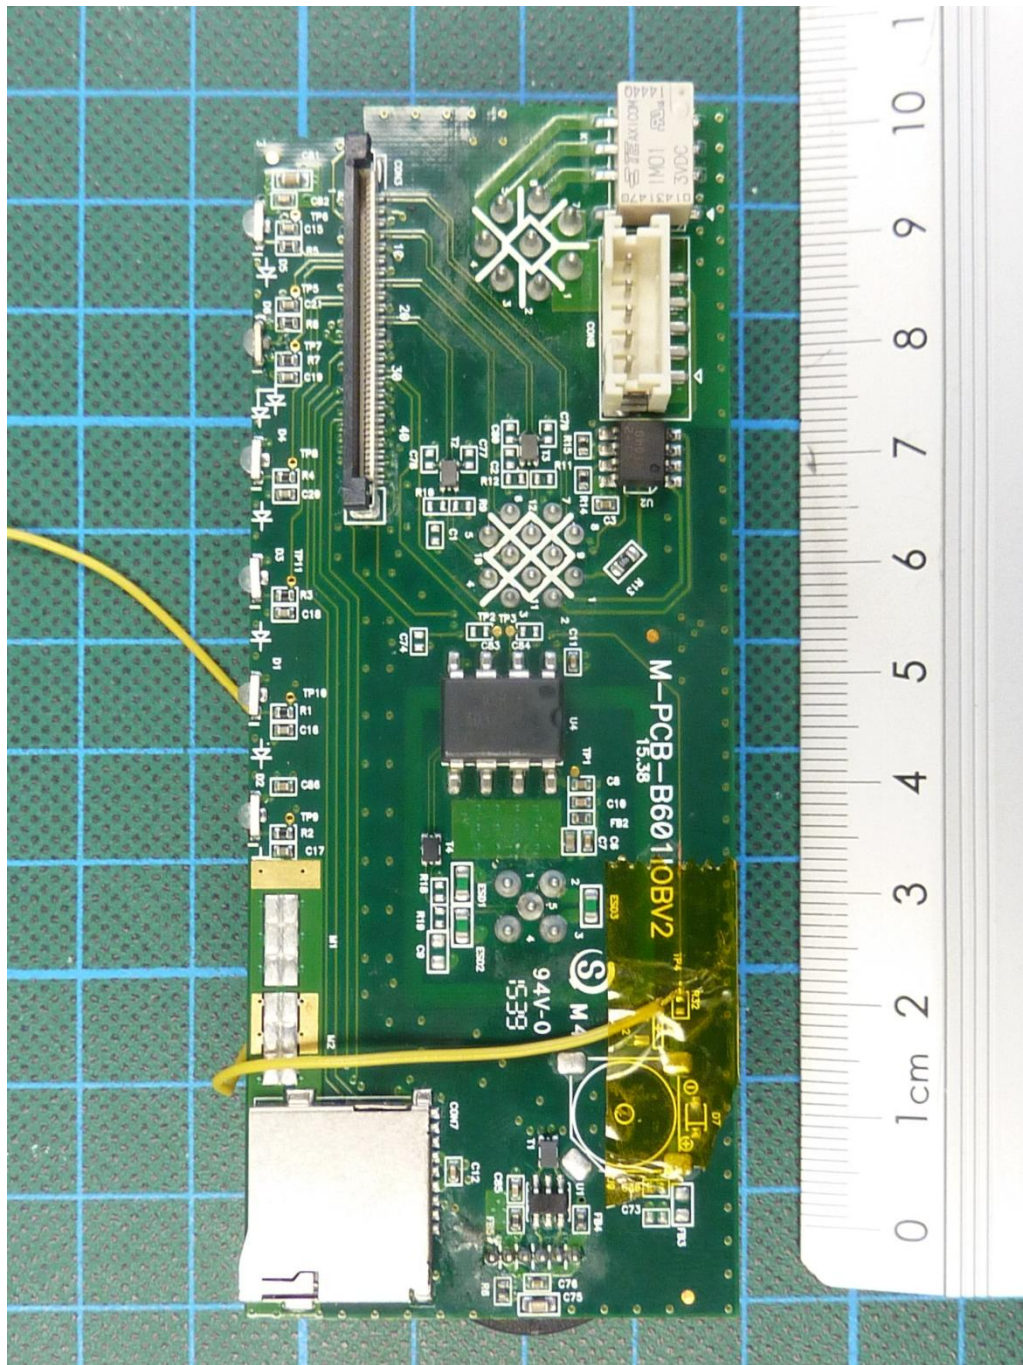

161141_19.jpg: WideLink B600, PCB 3, bottom view

Annex A Photographs

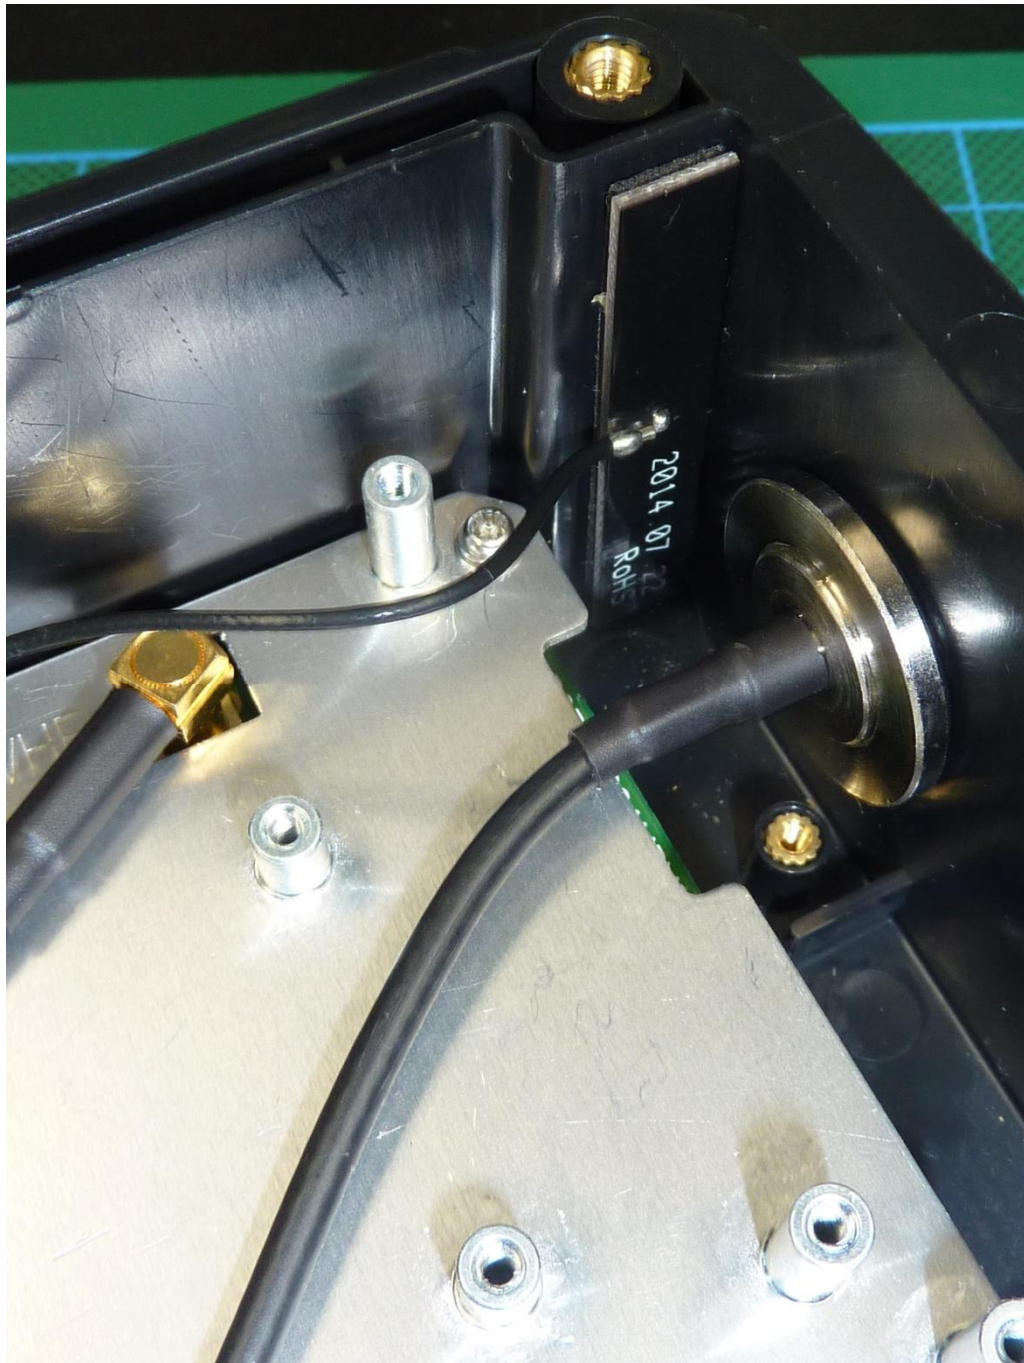

161141_10.jpg: WideLink B600, detail view to WIFI antenna