

Project No.		Sales Rep.	Holy	Engineer	Samuel	Dhýala
Project Name	Dhyala_KJ03空净	Design View	Outside	Output Date	2026/1/6	

名称： KJ03_说明书EN+DE

材质： 铜版纸128g

印刷： 单色印刷

工艺： 骑马钉，封面封底覆哑膜

用量： 1

公差： +/- 0.5 mm




Note: The components with fit-relationship conform to the rules of finished-dimension tolerances and meet the tightness-requirements from customer between these parts simultaneously.										For Prototyping!										05	
																				04	
																				03	
																				02 更新文案——2026.01.06	
																				01 更新电压和功率——2025.12.18	
																				00 2025.12.10	
																				Rev Ver.1.2	

GENERAL TOLERANCE TABLE (Unless otherwise specified) (mm)					Cut Crease V-groove Partial cut Annotation Generic perf		Glue on outside Glue on inside	
	Rigid Box	Card board/ plastic sheet/film	Single wall board	Double wall board				
(0~100)								
(100~200)								
(200~300)								
(300~500)								
(500~600)								
(600~1000)								
>1000								

Flute/Grain Direction (Unless otherwise specified)		Drawing No.	
		Pack Style	
		Version	
		Unitmm	
		O.D Assem.	

Scale		1: 1	
-------	--	------	--

Dhýala

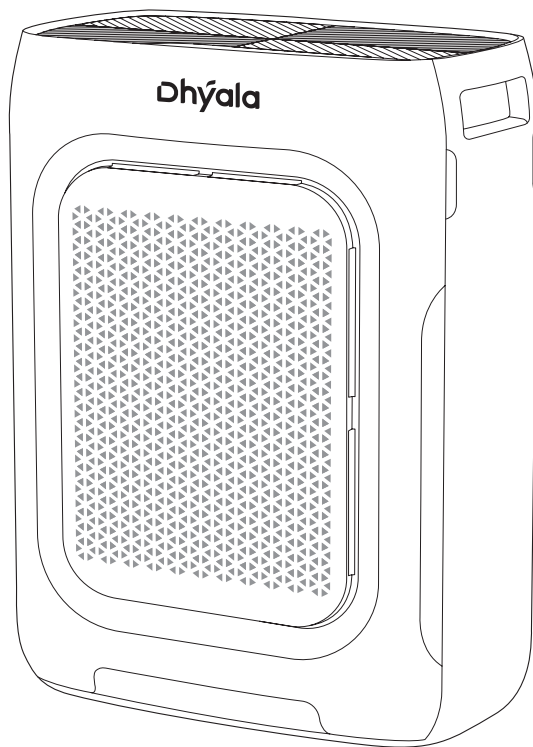

USER MANUAL

KJ03 AIR PURIFIER

Thank you for purchasing our product. In order to bring you the best experience, please read the instruction manual carefully before using and keep it for future reference.

Notices & Warnings

Usage Restrictions

To prevent electric shock or fire, do NOT use this device in the following conditions.

- Keep the main unit, especially its air intake vents, away from open flames (e.g., candles, incense burners, stoves, fireplaces, cigarettes, firecrackers, lighters, electronic ignition torches, fire pits).
- Keep the unit away from high-heat appliances (e.g., electric heaters, radiators, foot warmers, electric stoves, irons) and prevent flammable materials from entering the unit.
- Avoid unstable surfaces prone to tipping.
- Do not use in high-temperature, humid, or water-exposed areas (e.g., bathrooms).
- Not intended for users with limited physical, sensory, mental capabilities, or experience/knowledge (including children) unless supervised by a responsible adult.
- Store out of children's reach to prevent tampering.
- **WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

Transportation Notice

- When moving the unit, ensure it is powered off and unplug the power cord from the outlet.

Installation Notice

- The unit will not start if the filter cover or lower intake grille is improperly installed.
- Maintain at least 10 cm (4 inches) of clearance between the air intake vents and walls/obstacles.

Cleaning Notice

- Regularly clean the filter to remove dust, hair, and debris to minimize bacterial growth.
- When unused for extended periods, cover the top outlet to prevent dust accumulation on the grille.

Power Notice

- Use only compatible power cords and outlets to prevent fire, electric shock, or damage.
- Do not excessively bend, twist, or pull the power cord (risk of wire exposure or breakage).
- Use only the original power adapter; third-party adapters are prohibited.
- Always unplug before maintenance or relocation.
- Replace damaged cords immediately with manufacturer-approved replacements.
- **WARNING:** following or the equivalent: To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer)

Notice During Operation


- Immediately stop use if abnormal conditions occur (e.g., unusual noises, odors, overheating, irregular fan rotation).
- Do not insert fingers or objects into vents, movable parts, or protective components.
- Never sit, lean, or tilt the unit.
- Ensure proper ventilation when operating near gas appliances (e.g., stoves, water heaters) to prevent carbon monoxide exposure.
- Avoid pouring liquids, powders, or small particles into the outlet or vents.

Machine Spare Parts & Components of Product

1.Product components



Air Purifier Device

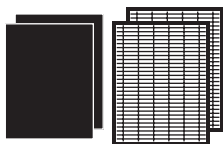

Filters (inside the product)




User Manual



Power Cord
(on the base)

2.Product structure introduction

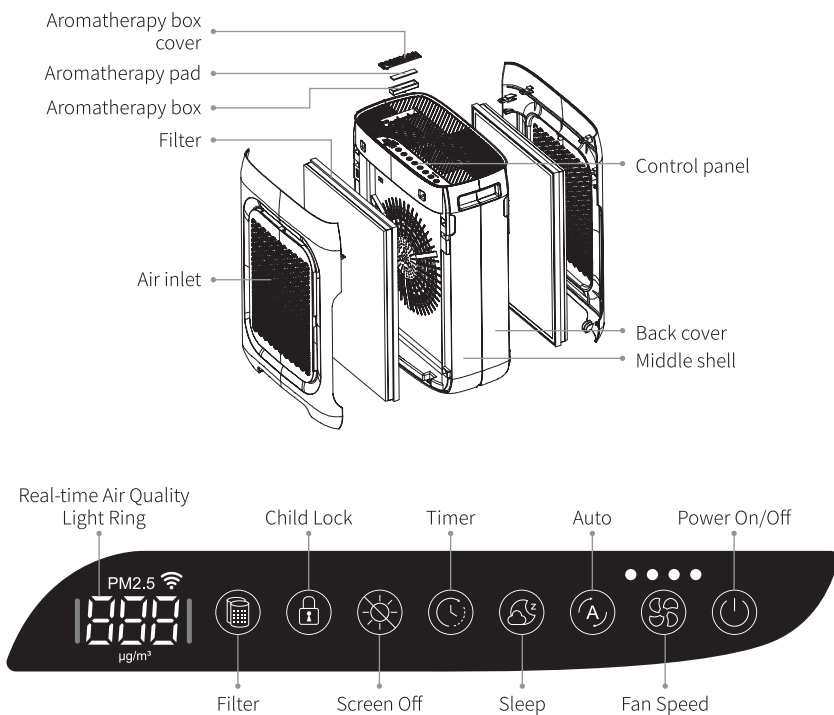

Guide for Usage

1. Standby Mode

After the machine is powered on, it emits a "beep" and enters the self-test program (during self-test, the red, yellow, and green LEDs of the light bar flash once each, while the remaining LEDs flash three times). Once the self-test is completed, the machine enters standby mode. The power icon "☺" illuminates dimly red, and all other indicators remain off.

2. Power On/Off Button ☺

a. Touch this button to turn on the machine, and the machine will enter automatic mode. The automatic icon "⌚" and the power icon "☺" will be highlighted in white, and the other buttons will be dimly lit in white.

At the same time, the air quality indicator light ring and PM2.5 value will be displayed. When not connected to the internet, the Wi-Fi icon "📶" will flash for 30 seconds before turning off; when successfully paired and connected, the "📶" icon will light up.

b. Touch this button again to turn off the machine. In any mode, press and hold this button for 3 seconds to shut down the machine and enter standby, with the power icon glowing dim red.

3. Fan Speed Button ⚙

a. Touch this button to enter the speed adjustment mode. You can cycle through low, medium, high and super high speed in sequence. The corresponding speed indicator lights up. Low speed lights up 1 dot, medium gear lights up 2 dots, high gear lights up 3 dots, and super high gear lights up 4 dots.

b. In auto mode or sleep mode, press this button to enter manual mode. At the same time, the wind speed button icon "⚙" is highlighted.

4. Sleep Button ⌚

Touch this button to enter sleep mode. The "⌚" icon will be highlighted and all indicators on the panel will turn off after 10 seconds. Touch any button again to wake up the panel indicator lights, with the fan speed remaining at the sleep mode level.

5. Auto Button ⌚

Touch this button to enter auto mode. The auto icon "⌚" icon will be highlighted in white and the machine will automatically adjust the wind speed according to the real-time air quality index.

When $PM_{2.5} > 75$, the fan will automatically operate at gear 4, and the display panel will not show the gear indicator.

When $PM_{2.5} < 36$, the fan will automatically operate at gear 2, gear 1, or sleep mode, and the display panel will not show the gear indicator.

6.Timer Button

Tap this button to enter timer mode, where you can cycle through 1 to 12-hour intervals or disable the timer. When set to 2 hours, the digital display will show "2H". The timer duration remains visible for 10 seconds before automatically reverting to PM2.5 readings.

If the timer is active:

- a. A single tap shows remaining time
- b. Subsequent taps increase duration by 1-hour increments
- c. The icon " " glows white during operation
- d. When the timing ends, the machine shuts down and enters the standby mode, and the power icon " " is slightly bright red.

Note: Timer settings (max 12 hours) can be adjusted through both the APP and control panel.

7.Filter Button

a. When the filter usage reaches the set time, the " " icon is highlighted in red to remind the user to replace the filter; after replacing the filter, press and hold this key for 3 seconds. After the air quality indicator ring and " " flash 3 times, the " " icon turns slightly bright white, and the filter life is reset.

b. Reset mode: Press and hold this button for 3 seconds to enter the setting mode. The icon " " is highlighted in red and flashes for 10 seconds. Press and hold this button again for 3 seconds within 10 seconds to reset the filter timer. The light feedback is the same as described in step (a). if this button is not pressed within 10 seconds, the setting mode will be exited.

8.Screen Off Button

Touch this button and all the indicators on the panel will turn off. When any button is touched, the indicator lights on the panel will light up and the machine operation mode will not change.

9.Child Lock Button

a. Lock: Press and hold this button for 3 seconds, the icon " " turns bright red, the machine enters the child lock state, all the buttons on the panel are locked, and the machine does not respond when you touch the buttons.

b. Unlock: Press and hold this key for 3 seconds, the icon " " turns slightly bright white, and all the buttons on the panel return to normal; the child lock mode can be released by turning off the power again.

Note: The child lock can only be deactivated using the Child Lock button; pressing and holding the power button will not shut down the device while in child lock mode.

10. Panel Indicator Lights

- a. Button Indicator Lights: 5 white indicator lights for the buttons; the Power, Filter, and Child Lock buttons have dual-color red and white indicator lights.
- b. Gear Indicator Lights: 4 white indicator lights. Ultra-high gear lights up all 4 lights, high gear lights up 3 lights, medium gear lights up 2 lights, and low gear lights up 1 light.
- c. Wi-Fi Status Indicator: 1 white light, which illuminates during pairing and when successfully connected, otherwise remains off.
- d. Air Quality Indicator Lights: 2 white lights for numerical values, 1 white light for the unit of measurement, and 1 white light for PM2.5.
- e. Air Quality Indicator Lights: 6 RGB tri-color lights that change color based on the Air Quality Index.

Air Quality Indicator Light	AQI
Green	0~35
Yellow	36~75
Red	>75

11. Wi-Fi Display

The Wi-Fi status is shown when the device is powered on and hidden when the device is off.

12. Motor Control

Speed is adjusted through gear control.

13. Power Recovery Function

- a. When the power is turned off and then on again in the on state, the machine starts the self-check procedure, and automatically turns on after the self-check is completed. The unit will resume its previous operating mode, and the timing and child lock are reset.
- b. When the power is turned off in the standby state and then on again, the machine starts the self-check procedure, and is in the standby state after the self-check is completed.
- c. When the power is turned off and then on again in the sleep or auto mode, the machine starts the self-check procedure, and after the self-check is completed, the machine starts in the running state before the power outage, exits the timing, screen off and child lock mode, and the timing, screen off and child lock are reset.

14. Filter Timer Rule:

When the usage time of the corresponding filter reaches the set duration (2160 hours), the Air Quality Indicator Light will breathe and flash. After a successful reset, the indicator will return to its normal display and restart the timer.

15.Wi-Fi Setup

When the device is powered on, long press the "  " icon to reset the WIFI. The WIFI icon "  " starts flashing for 3 minutes, and then wait for network pairing with the mobile phone. The icon for unsuccessful network pairing turns off, and the icon for successful network pairing turns on.

Note: After the APP connects to the internet, the machine name will be displayed as "KJ03".

16.Buzzer

The Wi-Fi status is shown when the device is powered on and hidden when the device is off.

17.Tip-Over Protection

The device is equipped with a 45-degree tilt switch. If the unit tilts beyond 45 degrees, the fan will stop running and the digital indicator on the panel will continuously flash "EEE". At this point, pressing any button will have no effect. To restore the machine to its pre-error state, unplug either the adapter or the connector at the bottom of the unit to cut off power. Ensure the machine is placed in its normal upright position, then reconnect the unplugged adapter or bottom connector to restore power. Once powered on, the device will return to its state before the error occurred.

(Special note: To prevent the machine from operating when it has tipped over and is not in the normal upright position, this safety design requires that the adapter or bottom connector be unplugged, the unit be properly repositioned, and then power be reconnected before normal operation can resume.)

Troubleshooting

Phenomenon	Solution
The machine won't start.	Please make sure the device is powered off first, then check whether it has been installed correctly according to the installation steps, and then reconnect the power adapter. When the red power icon appears on the screen, the device can be turned on. If the problem still cannot be solved, please contact customer service
The purifier is noisy	Please check whether the filter packaging is removed and whether there is any foreign matter entering.
The purifier has a strong odor	The filtered pollutants, water vapor, etc. accumulate on the filter, which may produce odor. Please check the filter status and replace the filter in time.
The equipment is operating normally, but the air volume is significantly reduced	Please check whether there are any foreign objects blocking the air outlet and air inlet, and check whether the filter has been replaced as prompted.
The device did not remind me to replace the filter, and how can I replace it with a new one by myself.	After replacing a new filter, turn on the machine, press and hold "  " for 3 seconds to enter the reset mode, "  " lights up in red and flashes for 10 seconds, press and hold the key again for 3 seconds within 10 seconds, the icon flashes 3 times, and the filter life is reset successfully.

Technical parameters

Product Name	Air Purifier	Model No.	KJ03
Rated Voltage	DC 24V	Rated Wattage	48W
Product Size		12.2×6.69×16.22 inch	
Net Weight/Gross Weight		9lb	
Power Cord Length		72inch	

WARRANTY

1.The 2 Year Warranty

Our Dhyala machine has a 2 year warranty against original defects in material and workmanship, when used for private household purposes in accordance with the Dhyala Instruction Manual.

This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.

2.What is covered?

Only applies to purchases made from authorized retailers of Dhyala.

This warranty will only be valid if the machine is used in the country in which it was sold.

3.How to claim?

Please keep your proof of purchase. To make a claim under our warranty, you need to provide your original purchase receipt with the purchase date and order number on it. If your machine is not functioning properly, or you still have any questions after reading this manual carefully, please feel free to contact us, we will reply to you in 24 hours and try our best to provide you with a satisfactory solution.

Hinweise & Warnhinweise

Gebrauchseinschränkungen

Um Stromschlag oder Brand zu vermeiden, darf dieses Gerät NICHT unter folgenden Bedingungen verwendet werden

- Halten Sie das Hauptgerät, insbesondere seine Luftansaugöffnungen, ausreichend Abstand zu offenen Flammen (z. B. Kerzen, Räucherstäbchen, Öfen, Kaminen, Zigaretten, Feuerwerkskörpern, Feuerzeugen, elektronischen Zündfackeln, Feuerstellen).
- Halten Sie das Gerät von Geräten mit hoher Hitzeentwicklung (z. B. Elektroheizern, Heizkörpern, Wärmekissen, Elektroherden, Bügeleisen) fern und verhindern Sie, dass brennbare Materialien in das Gerät eindringen.
- Vermeiden Sie wackelige, zur Kippen neigende Oberflächen.
- Verwenden Sie das Gerät nicht in Umgebungen mit hoher Temperatur, hoher Luftfeuchtigkeit oder in Wassernähe (z. B. in Badezimmern).
- Nicht für Benutzer mit eingeschränkten körperlichen, sensorischen oder geistigen Fähigkeiten oder mangelnder Erfahrung/Kenntnis (einschließlich Kindern) geeignet, es sei denn, sie werden von einer verantwortlichen Aufsichtsperson beaufsichtigt.
- Außerhalb der Reichweite von Kindern aufbewahren, um unbefugtes Hantieren zu verhindern.
- **WARNUNG:** Zur Verringerung des Brand- oder Elektroschockrisikos darf dieser Ventilator nicht mit einem Halbleiter-Drehzahlregler verwendet werden.

TRANSPORTHINWEIS

- Beim Verschieben des Geräts stellen Sie sicher, dass es ausgeschaltet ist und ziehen Sie das Netzkabel aus der Steckdose.

MONTAGEHINWEIS

- Das Gerät startet nicht, wenn der Filterdeckel oder das untere Ansauggitter nicht korrekt angebracht ist.
- Halten Sie einen Mindestabstand von 10 cm (4 Zoll) zwischen den Luftansaugöffnungen und Wänden/Hindernissen ein

REINIGUNGSHINWEIS

- Reinigen Sie den Filter regelmäßig, um Staub, Haare und Schmutz zu entfernen und so Bakterienwachstum zu minimieren.
- Decken Sie den oberen Auslass ab, wenn das Gerät längere Zeit nicht genutzt wird, um Staubansammlungen auf dem Gitter zu verhindern.

STROMVERSORGUNG-HINWEIS

- Verwenden Sie nur kompatible Netzkabel und Steckdosen, um Brand, elektrischen Schlag oder Schäden zu verhindern.
- Beugen, verdrehen oder ziehen Sie das Netzkabel nicht übermäßig (Risiko von freiliegenden Drähten oder Kabelbruch).
- Verwenden Sie nur das original Netzteil; Drittanbieter-Netzteile sind nicht zulässig.
- Ziehen Sie den Stecker stets vor Wartungsarbeiten oder einem Standortwechsel.
- Ersetzen Sie beschädigte Kabel sofort durch herstellergenehmigte Ersatzteile.
- **WARNUNG** (oder gleichwertiger Text): Um das Risiko von Brand, elektrischem Schlag oder Personenschäden zu verringern, verwenden Sie keine Ersatzteile, die nicht vom Hersteller empfohlen wurden (z.B. privat mit einem 3D-Drucker angefertigte Teile).

HINWEIS WÄHREND DES BETRIEBS


- Beenden Sie die Nutzung sofort, wenn abnormale Zustände auftreten (z.B. ungewöhnliche Geräusche, Gerüche, Überhitzung, unregelmäßige Lüfterdrehung).
- Stecken Sie keine Finger oder Gegenstände in die Öffnungen, beweglichen Teile oder Schutzvorrichtungen.
- Setzen Sie sich niemals auf das Gerät, lehnen Sie sich nicht daran oder kippen Sie es.
- Sorgen Sie für ausreichende Belüftung, wenn das Gerät in der Nähe von Gasgeräten (z.B. Herden, Warmwasserbereitern) betrieben wird, um eine Kohlenmonoxid-Exposition zu verhindern.
- Vermeiden Sie das Einbringen von Flüssigkeiten, Pulvern oder kleinen Partikeln in den Auslass oder die Lüftungsöffnungen.

Geräte-Ersatzteile & Produktkomponenten

1. Produktkomponenten



Luftreinigungsgerät

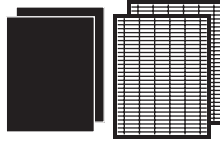

Filter (im Gerät)




Bedienerhandbuch



Netzkabel
(auf der Basis)

2. Product structure introduction

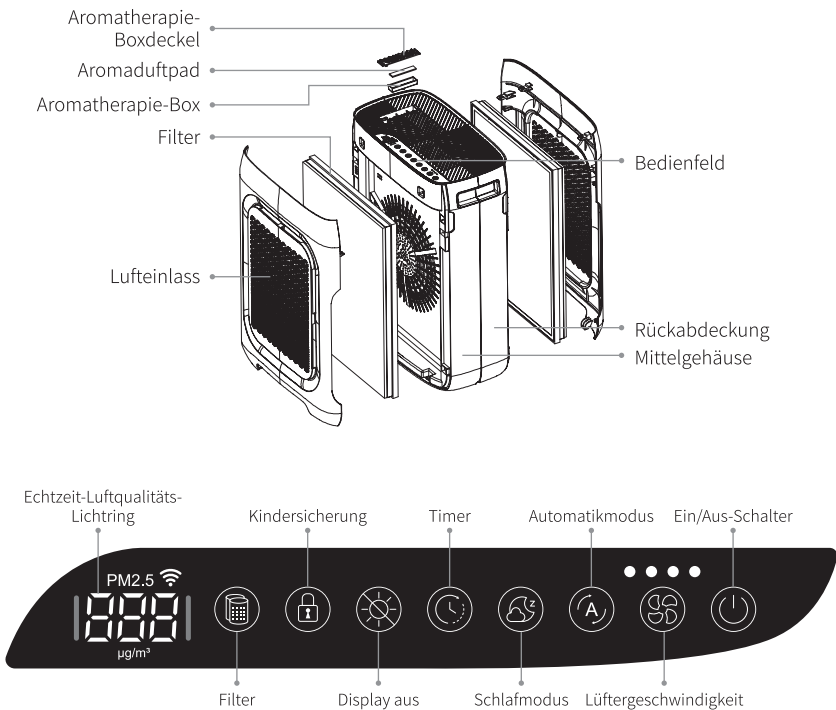

BEDIENUNGSANLEITUNG

1. Standby-Modus

Sobald das Gerät mit Strom versorgt wird, gibt es einen „Piepton“ von sich und startet das Selbsttestprogramm (während des Selbsttests blinken die roten, gelben und grünen LEDs der Lichtleiste jeweils einmal, die restlichen LEDs blinken dreimal). Nach Abschluss des Selbsttests geht das Gerät in den Standby-Modus über. Das Stromsymbol [] leuchtet schwach rot, alle anderen Anzeigen bleiben aus.

2. Ein-/Aus-Taste

a. Berühren Sie diese Taste, um das Gerät einzuschalten. Das Gerät startet im Automatikmodus. Das Automatiksymbol [] und das Stromsymbol [] leuchten weiß auf, während die übrigen Tasten schwach weiß hinterleuchtet sind.

Gleichzeitig werden der Luftqualitäts-Anzeiger und der PM2.5-Wert angezeigt. Wenn keine Internetverbindung besteht, blinkt das WLAN-Symbol [] 30 Sekunden lang und erlischt dann. Bei erfolgreicher Kopplung und Verbindung leuchtet das Symbol [] dauerhaft.

b. Berühren Sie diese Taste erneut, um das Gerät auszuschalten. In jedem Modus kann das Gerät durch 3-sekündiges Gedrückthalten dieser Taste ausgeschaltet werden und wechselt in den Standby-Modus, wobei das Stromsymbol [] gedämpft rot leuchtet.

3. Lüftergeschwindigkeits-Taste

a. Berühren Sie diese Taste, um in den Geschwindigkeits-Einstellmodus zu gelangen. Sie können nacheinander zwischen niedriger, mittlerer, hoher und extrem hoher Geschwindigkeit wechseln. Die entsprechende Geschwindigkeitsanzeige leuchtet auf: Niedriggeschwindigkeit zeigt 1 Punkt, Mittelstufe 2 Punkte, Hochstufe 3 Punkte und extrem hohe Stufe 4 Punkte.

b. Im Automatikmodus oder Schlafmodus drücken Sie diese Taste, um in den manuellen Modus zu wechseln. Gleichzeitig leuchtet das Lüftergeschwindigkeits-Symbol [] auf.

4. Schlafmodus-Taste

Berühren Sie diese Taste, um den Schlafmodus zu aktivieren. Das Symbol [] leuchtet auf und alle Anzeigen auf dem Bedienfeld werden nach 10 Sekunden abgeschaltet. Berühren Sie erneut eine beliebige Taste, um die Anzeigen auf dem Bedienfeld wieder einzuschalten, wobei die Lüftergeschwindigkeit im Schlafmodus bleibt.

5. Automatik-Taste

Berühren Sie diese Taste, um den Automatikmodus zu aktivieren. Das Automatiksymbol [] leuchtet weiß auf, und das Gerät passt die Lüftergeschwindigkeit automatisch anhand des aktuellen Luftqualitätsindex an.

Wenn PM2.5 > 75 ist, arbeitet der Lüfter automatisch auf Stufe 4, und das Anzeigefeld zeigt keine Stufenanzeige an.

Wenn PM2.5 < 36 ist, arbeitet der Lüfter automatisch auf Stufe 2, Stufe 1 oder im Schlafmodus, und das Anzeigefeld zeigt keine Stufenanzeige an.

6.Timer-Taste

Berühren Sie diese Taste, um in den Timer-Modus zu gelangen. Hier können Sie Intervalle von 1 bis 12 Stunden durchschalten oder den Timer deaktivieren. Bei einer Einstellung von 2 Stunden zeigt die digitale Anzeige „2H“. Die Timer-Dauer bleibt für 10 Sekunden sichtbar, bevor automatisch wieder zur PM2.5-Anzeige zurückgekehrt wird.

Wenn der Timer aktiviert ist:

- a. Ein kurzes Antippen zeigt die verbleibende Zeit an.
- b. Jedes weitere Antippen erhöht die Dauer in 1-Stunden-Schritten.
- c. Das Symbol [] leuchtet während des Betriebs weiß.
- d. Wenn die Zeit abgelaufen ist, schaltet sich das Gerät aus und wechselt in den Standby-Modus. Das Stromsymbol [] leuchtet dabei leicht hellrot.

Hinweis: Timer-Einstellungen (max. 12 Stunden) können sowohl über die APP als auch über das Bedienfeld angepasst werden.

7.Filter-Taste

a. Wenn die Filterlebensdauer die voreingestellte Nutzungsdauer erreicht hat, leuchtet das Symbol [] rot auf, um den Nutzer zum Filterwechsel zu erinnern. Nach dem Austausch des Filters halten Sie diese Taste 3 Sekunden lang gedrückt. Nachdem der Luftqualitätsanzeige-Ring und [] dreimal geflackert haben, leuchtet das Symbol [] leicht hellweiß auf und die Filterlebensdauer wird zurückgesetzt.

b. Rücksetzmodus: Halten Sie diese Taste 3 Sekunden lang gedrückt, um in den Einstellmodus zu gelangen. Das Symbol [] leuchtet rot auf und blinkt 10 Sekunden lang. Drücken Sie die Taste innerhalb von 10 Sekunden erneut 3 Sekunden lang, um den Filterzeitgeber zurückzusetzen. Die Lichtrückmeldung entspricht der unter Schritt (a) beschriebenen. Wenn die Taste innerhalb von 10 Sekunden nicht gedrückt wird, wird der Einstellmodus verlassen.

8.Bildschirm-Taste

Berühren Sie diese Taste und alle Anzeigen auf dem Bedienfeld leuchten aus. Sobald eine beliebige Taste berührt wird, leuchten die Anzeigen auf dem Bedienfeld wieder auf, ohne dass sich der Betriebsmodus des Geräts ändert

9.Kindersicherungstaste

a. Sperren: Halten Sie diese Taste 3 Sekunden lang gedrückt, das Symbol [] leuchtet hellrot auf, das Gerät wechselt in den Kindersicherungsmodus. Alle Tasten auf dem Bedienfeld werden gesperrt und das Gerät reagiert nicht auf Berührungen.

b. Entsperren: Halten Sie diese Taste 3 Sekunden lang gedrückt, das Symbol [] leuchtet leicht hellweiß auf, und alle Tasten auf dem Bedienfeld funktionieren wieder normal. Der Kindersicherungsmodus kann auch durch erneutes Ausschalten des Geräts aufgehoben werden.

Hinweis: Die Kindersicherung kann nur über die Kindersicherungstaste deaktiviert werden. Das Gerät kann im Kindersicherungsmodus nicht durch langes Drücken der Ein-/Aus-Taste ausgeschaltet werden.

10. Bedienfeld-Anzeigeleuchten

a. Knopf-Anzeigeleuchten:

5 weiße Anzeigeleuchten für die Tasten; die Ein/Aus-, Filter- und Kindersicherung-Tasten besitzen Dual-Farben-Anzeigeleuchten (rot und weiß).

b. Gang-Anzeigeleuchten:

4 weiße Anzeigeleuchten. Ultrahoher Gang: alle 4 Lichter leuchten, Hoher Gang: 3 Lichter leuchten, Mittlerer Gang: 2 Lichter leuchten, Niedriger Gang: 1 Licht leuchtet.

c. WLAN-Statusanzeige:

1 weißes Licht, das während der Kopplung und bei erfolgreicher Verbindung leuchtet, ansonsten aus bleibt.

d. Luftqualitäts-Anzeigeleuchten:

2 weiße Lichter für die numerischen Werte, 1 weißes Licht für die Maßeinheit und 1 weißes Licht für PM2.5.

e. Luftqualitäts-Farbanzeige:

6 RGB Dreifarben-LEDs, die ihre Farbe basierend auf dem Luftqualitätsindex (AQI) ändern.

Luftqualitäts-Anzeigeleuchte	AQI
Grün	0~35
Gelb	36~75
Rot	>75

11. WLAN-Anzeige

Der WLAN-Status wird eingeblendet, wenn das Gerät eingeschaltet ist, und ausgeblendet, wenn das Gerät ausgeschaltet ist.

12. Motorsteuerung

Die Geschwindigkeit wird über eine Gangregelung angepasst.

13. Netzwiederherstellungsfunktion

a. Wird das Gerät im eingeschalteten Zustand stromlos und dann wieder mit Strom versorgt, startet es eine Selbsttest-Prozedur und schaltet sich nach deren Abschluss automatisch wieder ein. Das Gerät nimmt den vorherigen Betriebsmodus wieder auf, Timer und Kindersicherung werden jedoch zurückgesetzt.

b. Wird das Gerät im Standby-Modus stromlos und dann wieder mit Strom versorgt, startet es eine Selbsttest-Prozedur und befindet sich nach deren Abschluss im Standby-Zustand.

c. Wird das Gerät im Schlaf- oder Automatikmodus stromlos und dann wieder mit Strom versorgt, startet es eine Selbsttest-Prozedur. Nach deren Abschluss startet es im Betriebszustand, der vor dem Stromausfall aktiv war, verlässt den Timer-, Display-Ausschalt- und Kindersicherungsmodus, und Timer, Display-Ausschaltung sowie Kindersicherung werden zurückgesetzt.

14. Filter-Zeitsteuerungsregel:

Wenn die Nutzungsdauer des entsprechenden Filters die voreingestellte Zeit (2160 Stunden) erreicht, zeigt die Luftqualitäts-Anzeigeleuchte ein pulsierendes und blinkendes Licht. Nach einem erfolgreichen Reset kehrt die Anzeige zur normalen Darstellung zurück und startet den Timer neu.

15. Wi-Fi-Einrichtung

Wenn das Gerät eingeschaltet ist, halten Sie das [] Symbol lange gedrückt, um das WIFI zurückzusetzen. Das WIFI-Symbol [] blinkt 3 Minuten lang, danach warten Sie auf die Netzwerkpaarung mit dem Mobiltelefon. Bei erfolgloser Netzwerkpaarung erlischt das Symbol, bei erfolgreicher Paarung leuchtet es auf.

Hinweis: Nachdem die APP mit dem Internet verbunden wurde, wird der Gerätenamen als „KJ03“ angezeigt.

16. Summer

Der Buzzer gibt bei Knopfdruck einen Bestätigungston von sich.

17. Kippschutzfunktion

Das Gerät ist mit einem Neigungsschalter (45-Grad) ausgestattet. Wenn das Gerät über 45 Grad gekippt wird, stoppt der Lüfter und die digitale Anzeige auf dem Bedienfeld blinkt kontinuierlich „EEE“. In diesem Zustand reagiert das Gerät nicht auf Tastendruck. Um den vorherigen Betriebszustand wiederherzustellen, muss der Netzstecker des Adapters oder der Steckverbinder am Geräteboden gezogen werden, um die Stromversorgung zu trennen. Stellen Sie sicher, dass das Gerät wieder stabil und aufrecht steht. Stecken Sie dann den zuvor gezogenen Adapter oder Gerätestecker wieder ein, um die Stromversorgung herzustellen. Nach dem Einschalten arbeitet das Gerät wieder wie vor der Störung.

(**Hinweis:** Dieses Sicherheitskonzept verhindert, dass das Gerät nach einem Umkippen im gekippten Zustand weiterlaufen kann. Ein Neustart ist erst möglich, nachdem der Netzstecker gezogen, das Gerät wieder ordnungsgemäß aufgestellt und der Strom erneut angeschlossen wurde.)

Fehlerbehebung

Phänomen	Lösung
Das Gerät startet nicht.	Bitte stellen Sie zunächst sicher, dass das Gerät ausgeschaltet ist. Überprüfen Sie dann, ob es gemäß den Montageschritten korrekt installiert wurde, und schließen Sie das Netzteil wieder an. Wenn das rote Stromsymbol auf dem Bildschirm erscheint, kann das Gerät eingeschaltet werden. Wenn das Problem weiterhin besteht, wenden Sie sich bitte an den Kundendienst.
Der Luftreiniger ist laut.	Bitte überprüfen Sie, ob die Filterverpackung entfernt wurde und ob Fremdkörper eingedrungen sind.
Der Luftreiniger verbreitet einen starken Geruch.	Bitte prüfen Sie, ob die Luftauslässe oder -einträge blockiert sind und ob der Filter wie angezeigt ausgetauscht wurde.
Das Gerät funktioniert normal, aber die Luftleistung ist deutlich verringert.	Please check whether there are any foreign objects blocking the air outlet and air inlet, and check whether the filter has been replaced as prompted.
Das Gerät hat nicht zum Filterwechsel aufgefordert. Wie kann ich den Filter selbst wechseln?	Nach dem Einbau eines neuen Filters schalten Sie das Gerät ein, drücken und halten Sie die Filtertaste [] für 3 Sekunden, um in den Reset-Modus zu gelangen. [] leuchtet rot und blinkt 10 Sekunden lang. Drücken und halten Sie die Taste innerhalb dieser 10 Sekunden erneut für 3 Sekunden – das Symbol blinkt dreimal, und die Filterlebensdauer wurde erfolgreich zurückgesetzt.

Technical parameters

Produktbezeichnung	Luftreiniger	Modell-Nr	KJ03
Nennspannung	DC 24V	Nennleistung	48W
Produktabmessungen		31 × 17 × 41.2 cm	
Nettogewicht / Bruttogewicht:		4.1 kg	
Netzkabellänge		183 cm	

GARANTIE

1.Die 2-Jahres-Garantie

Unser Dhyala-Gerät genießt eine 2-jährige Garantie für originale Material- und Verarbeitungsfehler, wenn es gemäß der Dhyala-Bedienungsanleitung für private Haushaltszwecke verwendet wird.

Diese Garantie umfasst alle Arbeits- und Ersatzteile, die erforderlich sind, um sicherzustellen, dass Ihr Gerät während der Garantiezeit ordnungsgemäß funktioniert – ohne zusätzliche Kosten für Sie.

2.Was ist abgedeckt?

Gilt nur für Käufe bei autorisierten Dhyala-Händlern.

Diese Garantie ist nur gültig, wenn das Gerät in dem Land verwendet wird, in dem es verkauft wurde.

3.Wie machen Sie einen Garantieanspruch geltend?

Bitte bewahren Sie Ihren Kaufnachweis auf. Um einen Garantieanspruch geltend zu machen, müssen Sie Ihren Original-Kaufbeleg mit Kaufdatum und Bestellnummer vorlegen. Falls Ihr Gerät nicht einwandfrei funktioniert oder Sie nach sorgfältigem Lesen dieser Anleitung noch Fragen haben, kontaktieren Sie uns bitte. Wir antworten Ihnen innerhalb von 24 Stunden und bemühen uns, Ihnen eine zufriedenstellende Lösung anzubieten.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

 **support@dhyala.com**

— Email Our Customer Service —

Declaration of Conformity

We (EU based importer is responsible for this declaration)

SUCCESS COURIER SL
(Company name)

CALLE RIO TORMES NUM.1, PLANTA 1, DERECHA, OFICINA 3, Fuenlabrada, Madrid,
28947 Spain
(Company address)

declare under our sole responsibility that the product

Trade name:Dhyala
Equipment: Air purifier
Model No. : KJ03

to which this declaration relates is in conformity with the essential requirement set out in the Council Directive on the Approximation of the laws of the Member States relating to LVD Directive(2014/35/EU) & EMC Directive(2014/30/EU) & RoHS(2011/65/EU) product is responsible to affix CE marking, the following standards were applied:

EN 60335-2-65:2003+A1:2008+A11:2012
EN 60335-1:2012 + A11:2014+A13:2017+A1:2019+A14:2019+A2:2019
EN 62233:2008
EN 55014-1:2017
EN 55014-2:2015
EN IEC 61000-3-2:2019
EN 61000-3-3:2013+A1:2019
IEC62321-3-1:2013
IEC62321-4:2013
IEC62321-5:2013
IEC62321-6:2015
IEC62321-7-1:2015
IEC62321-7-2:2017
IEC62321-8:2017

Full Name: George.wang

Position: Approbation Manager

Signature: 

Place/Date: Shenzhen, China/Dec.8-2025

Dhyāla